

BCTV Zoom Lens

INFORMATION DISPLAY

取扱説明書（情報ディスプレイ編）

OPERATION MANUAL (DISPLAY)

使用说明书（信息显示屏汇编）

ご使用の前に必ずこの取扱説明書をお読みください。

なお、取扱説明書は必要に応じてご覧になれるよう大切に保管してください。

Read this operation manual before using the product.

Keep the manual in place for future reference.

在使用本产品之前，请务必先仔细阅读本使用说明书。

请务必妥善保管好本书，以便日后能随时查阅（保留备用）。请在充分理解内容的基础上，正确使用。

ENGLISH

Introduction

Thank you for purchasing a Canon BCTV zoom lens.

This documentation includes the Lens Manual and Information Display CD-ROM.

This Information Display Manual describes operating instructions and procedures for the information display. Refer to the manual as needed.

Contents

Introduction E3

General Safety Information E7

Handling the Product..... E8

Dealing with Abnormalities E9

Maintenance and Inspection E9

Storage..... E9

Legal Notices E10

Manual Layout..... E11

Manual Conventions E12

Part Names E13

Part Names and Functions..... E13

Using the Control Keys E13

Basic Sequence of Operations E14

Screen Organization E15

1.1 Top Screen..... E16

1.2 Menu Screen E18

Mode Selection E21

2.1 Modes E22

Operation in Basic Mode E23

3.1 Configuration from the Top Screen..... E24

3.1.1 Selecting Basic Mode E25

3.1.2 Top Screen..... E26

3.1.3 Specifying Auto Iris Gain..... E28

3.1.4	Switching the IS Mode of the Horizontal Direction	E29
3.1.5	Switching the IS Mode of the Vertical Direction	E30
3.1.6	Zoom Tracking ON/OFF	E31
3.1.7	Assigning Functions to the AUX Switch	E32
3.1.8	Assigning Functions to the AUX1 Switch	E33
3.1.9	Assigning Functions to the AUX2 Switch	E34
3.1.10	Specifying Iris Torque	E35
3.1.11	Specifying Zoom Curve Mode	E36
3.2	Configuration from the Menu Screen	E38
3.2.1	User Screen Settings	E39
3.2.2	Switch Screen Settings	E45
3.2.3	IS Screen Settings	E49
3.2.4	Preset Screen Settings	E61
3.2.5	Iris Screen Settings	E65
3.2.6	Zoom Screen Settings	E71
3.2.7	Focus Screen Settings	E75
3.2.8	Info Screen Settings	E77
3.2.9	Fol. Screen Settings	E80
3.3	List of Settings	E82

Operation in Full Mode

E85

4.1	Configuration from the Top Screen.....	E86
4.1.1	Selecting Full Mode	E87
4.1.2	Top Screen	E88
4.1.3	Switching Users	E90
4.1.4	Switching to Basic Mode	E91
4.1.5	Zoom Tracking ON/OFF	E92
4.1.6	Switching the IS Mode of the Horizontal Direction	E93
4.1.7	Switching the IS Mode of the Vertical Direction	E94
4.1.8	Assigning Functions to the AUX Switch	E95
4.1.9	Specifying Iris Gain	E96
4.1.10	Assigning Functions to the AUX1 Switch	E98
4.1.11	Assigning Functions to the VTR Switch	E99
4.1.12	Assigning Functions to the AUX2 Switch	E100
4.1.13	Assigning Functions to the RET Switch	E101
4.1.14	Specifying Iris Torque	E102
4.1.15	Specifying Zoom Curve Mode	E103

4.1.16 Specifying Iris A/M Switch	E105
4.1.17 Assigning Functions to the Seesaw	E106
4.1.18 Escape Operation	E107
4.2 Configuration from the Menu Screen	E108
4.2.1 User Screen Settings	E109
4.2.2 Switch Screen Settings	E126
4.2.3 IS Screen Settings	E134
4.2.4 Preset Screen Settings	E146
4.2.5 Iris Screen Settings	E152
4.2.6 Zoom Screen Settings.....	E158
4.2.7 Focus Screen Settings.....	E169
4.2.8 Info Screen Settings.....	E171
4.2.9 Fol. Screen Settings.....	E174
4.3 List of Settings	E176

Operation in Analog Mode E179

5.1 Configuration from the Top Screen.....	E180
5.1.1 Selecting Analog Mode	E181
5.1.2 Top Screen	E182
5.1.3 Specifying Auto Iris Gain	E183
5.1.4 Switching to Basic Mode	E184
5.2 Configuration from the Menu Screen	E185
5.2.1 User Screen Settings	E186
5.3 List of Settings	E191

Index END



General Safety Information

The safety warnings and cautions provided on the product or in this operation manual must be observed. Failure to observe these warnings and cautions provided to guard against hazards may result in injury or accident. Read this manual carefully to familiarize yourself with its contents and to ensure proper operation of this product. Also, keep this manual in a safe place where it can easily be referenced whenever required.

This manual uses the following symbols and terms in the warning and caution notices for preventing accidents and protecting the safety of the customer and others.

 Warning	<p>This indicates a potentially hazardous situation which, if not heeded, may result in death or serious injury to you or others.</p> <p>Be sure to heed all warning notices to ensure safe operation at all times.</p>
 Caution	<p>This indicates a potentially hazardous situation which, if not heeded, may result in a minor injury to you or others, or damage to property.</p> <p>Be sure to heed all caution notices to ensure safe operation at all times.</p>
Note	<p>This indicates cautions and recommendations for operation.</p> <p>It contains information which, if not heeded, may result in this product failing to function properly.</p> <p>These notices also contain useful information for operation.</p>

Handling the Product



Warning

1. Do not get this product wet or allow liquid inside. If water gets inside, stop using the product immediately. Continuing to use the product under this condition may cause a fire or electric shocks.
2. Do not stare at the sun or other bright objects through the lens. It may injure your eyes.
3. Be sure to hold the connector when disconnecting the cable. Pulling on the cable may sever or damage it and pose a risk of a fire or electric shocks from a short circuit.



Caution

1. Be careful not to drop the product when carrying it. Dropping the product may cause injury.
2. Ensure that all mountings are securely tightened. If a mounting becomes loose, parts may fall off and cause injury.
3. Inspect mountings regularly (about every six months to one year) to ensure they are securely tightened. If a mounting becomes loose, parts may fall off and cause injury.
4. When this product is used under a blazing sun, the inside of the unit may be heated to high temperature. When it is expected that the unit is exposed to elevated temperature, take measures against heat as appropriate on the customer's side.

Note

1. Striking or dropping the lens may cause the malfunction of the product.
2. This product is not waterproof. Take measures to avoid direct contact with rain, snow, or moisture. Otherwise it may cause the malfunction of the product.
3. In dusty environments, cover the lens mount when using, attaching or removing the lens. If dust enters inside, it may cause the malfunction of the product.
4. Take measures to avoid sudden changes in temperature where the lens is used, which may prevent operation temporarily if condensation forms in the lens.
5. Before use in particular environments, such as places where chemical products are used, contact your Canon representative. Otherwise it may cause the malfunction of the product.

Dealing with Abnormalities



Warning

If any of the following situations occurs, immediately disconnect the lens cable from the camera and contact your dealer or a Canon representative listed on the next page.

- Smoke, fumes, or unusual noises
- Entry of foreign objects (such as liquid or metal objects) inside the product

Maintenance and Inspection



Warning

Be sure to disconnect the cable and remove the lens from the camera before cleaning outside of the lens. Do not use benzene, thinner, or other flammable substances to clean the product. This may cause fire or electric shocks.

Note

1. Clean off any dust on the lens surface using a lens blower or a soft lens brush. In case of getting fingerprints or stains on the lens, use a clean cotton cloth moistened with commercial lens cleaning fluid, or use lens cleaning paper. Gently wipe in a spiral pattern from the center of the lens. Be careful not to rub dust across the lens, which may scratch the lens surface.
2. Routine inspection about once a year is recommended, depending on the conditions and environment of use. Request overhaul, if needed.

Storage



Caution

Always attach the lens cap, hood cap, dust cap or covers before storage. Storing the lens without the caps or covers attached poses a risk of fire if the lens concentrate light in direct sunlight.

Note

Immediately wipe off any moisture on the lens from misty or foggy environments, using a dry cloth. Seal the lens in a plastic bag with a desiccant (preferably new) to prevent moisture inside. Otherwise it may cause the mold or the malfunction of the product.

Legal Notices

1. Canon shall bear no responsibility for damage resulting from improper operation of this product by the customer.
2. Canon shall make no guarantees about the product quality, functions, or operation manual and its marketability and suitability for the customer's purpose.
Moreover, Canon shall bear no responsibility for any damage, direct or incidental, that results from usage for the customer's purpose.
3. Canon shall make no guarantees about the results obtained using this product.
4. The product specifications, configuration, and appearance are subject to change without prior notice.
5. For further information on repairs, maintenance, or adjustments not mentioned in this operation manual, contact your Canon dealer or your Canon sales representative.
6. Note that Canon may be unable to undertake servicing or repair of a product if it is modified without consulting Canon or your Canon sales representative.

CANON INC.

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan


Canon Europe Ltd.

3 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET UK

The copyright for this manual is retained by Canon Inc.
Unauthorized copying or reproduction in whole or part is prohibited.

Manual Layout

Pages with instructions are organized as follows.

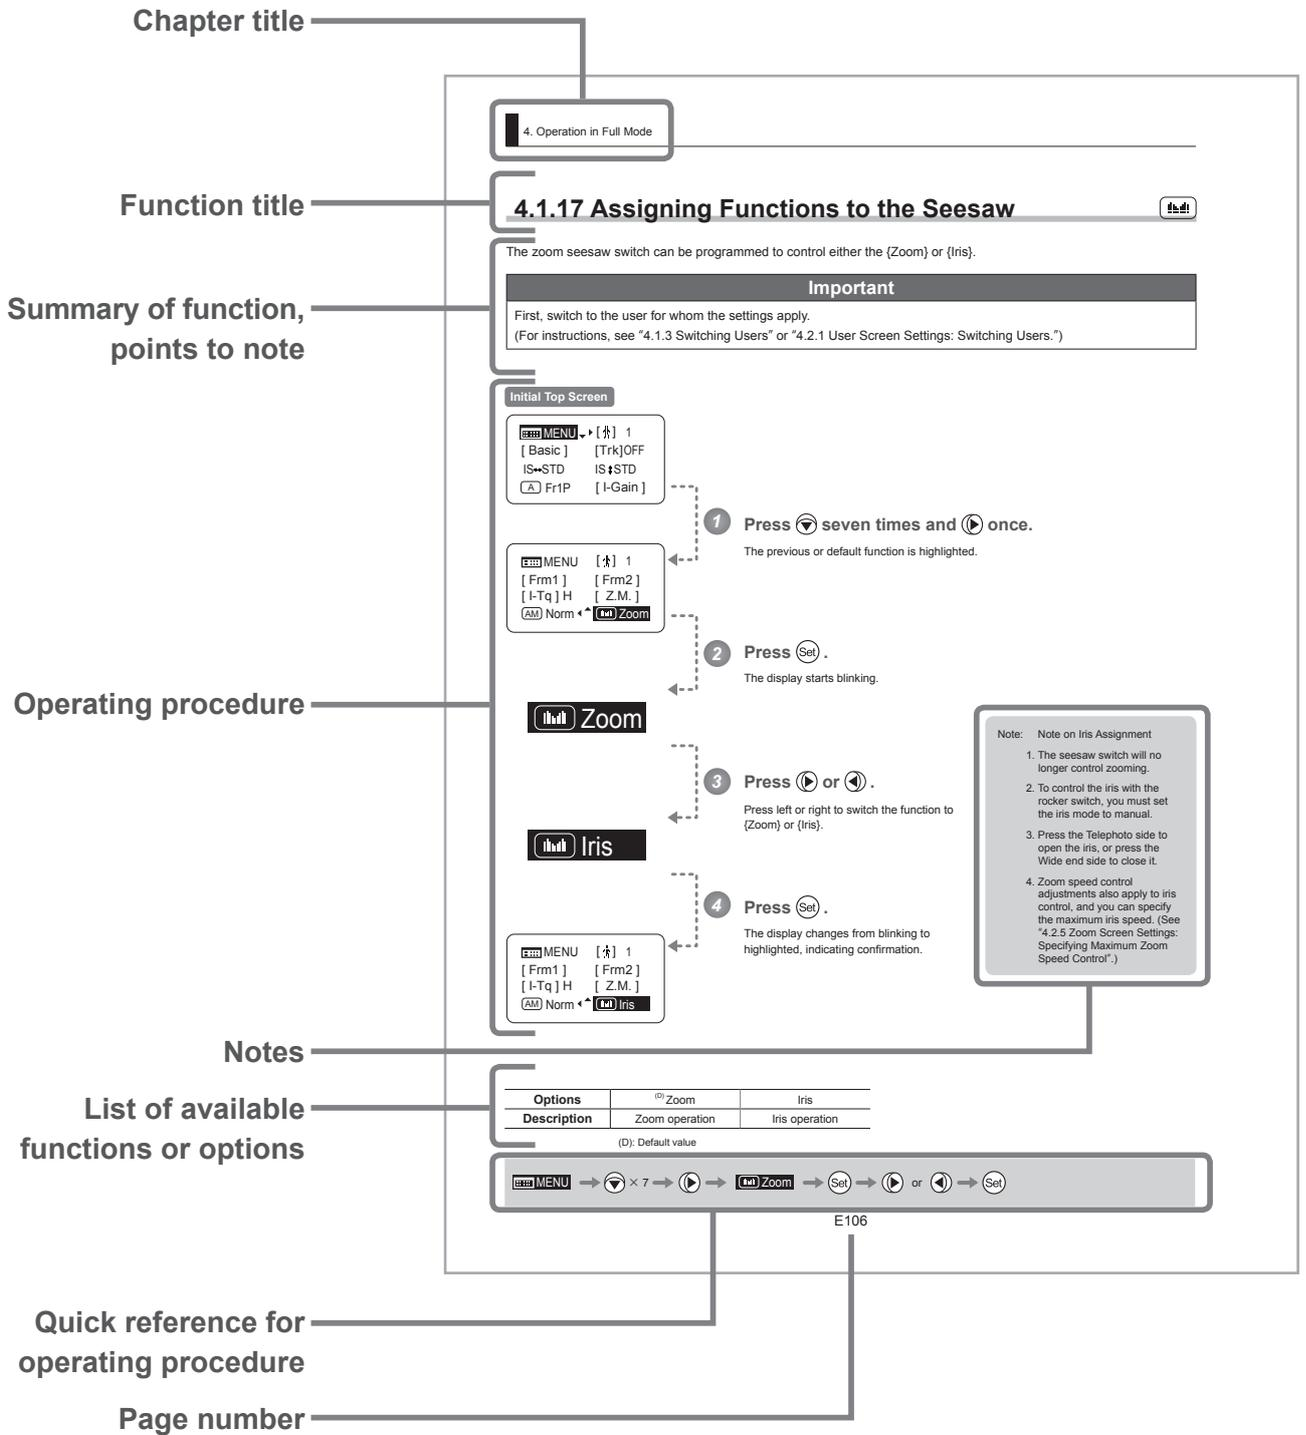


Manual Conventions

The following conventions are used in this manual.

Convention	Description	Example
<u>** screen</u>	Names of screens are underlined.	The <u>Top screen</u> is displayed.
[]	Names of setting items are enclosed in square brackets.	[Frame 1] is underlined.
{ }	Names of options are enclosed in curly brackets.	Select {Sped}.

Part Names

Part Names and Functions

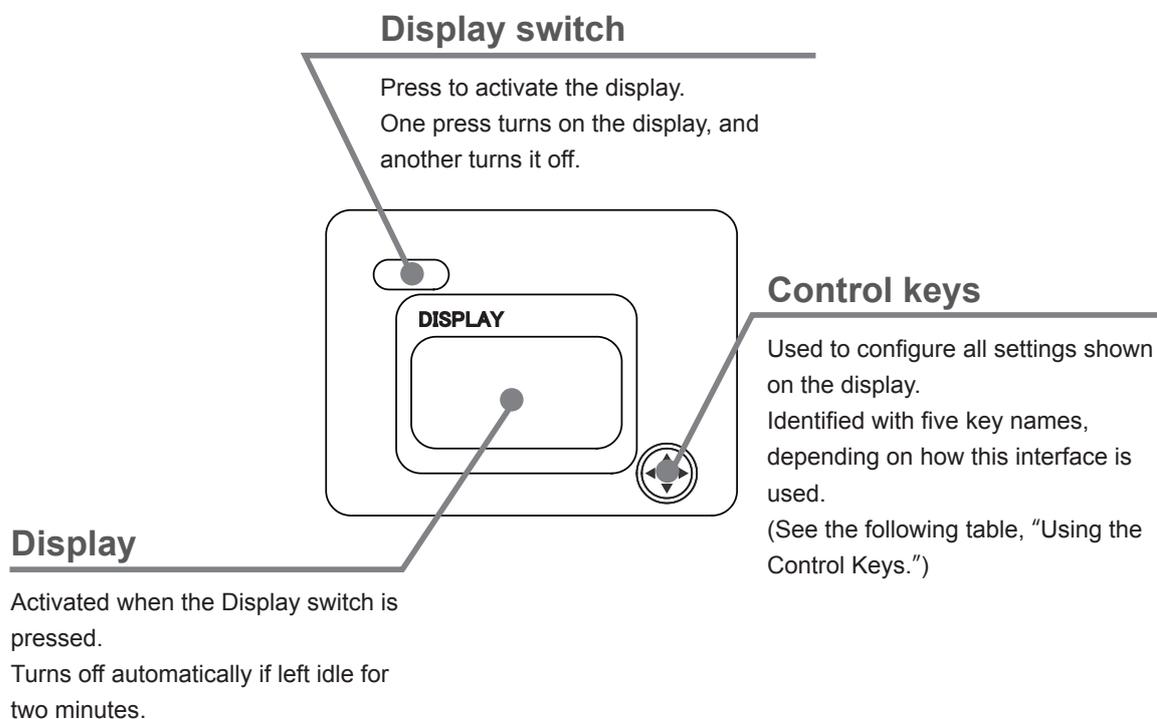

Using the Control Keys


Key	Operation	Details	Manual Convention
Set key	Press 	Pressed when {  } is displayed, or when entering a selection.	
Right key	Move right 	Can be used when {  } is displayed.	
Left key	Move left 	Can be used when {  } is displayed.	
Up key	Move up 	Can be used when {  } is displayed.	
Down key	Move down 	Can be used when {  } is displayed.	

Basic Sequence of Operations

1 Turn on the lens.


Note: For instructions on turning the lens on, refer to the camera manual.

2 Press the Display switch.

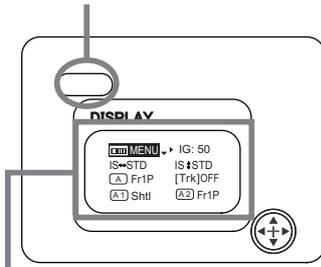


The display is now illuminated.

3 Use the control keys to complete settings.

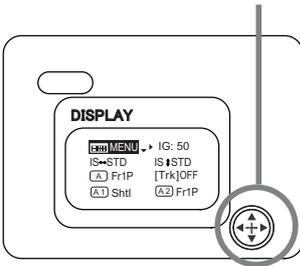

Note: The display turns off automatically after two minutes if no control keys are pressed. (Auto Off.) However, the display remains active as long as the Fol. screen is shown. In this case, it is only deactivated when you press the Display switch.

4 Press the Display switch.

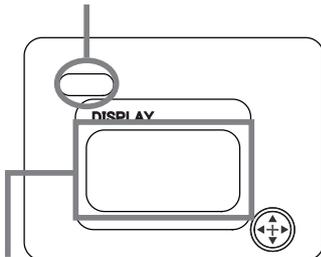

The display is turned off.

Changes are saved.

Note: Any changes to settings are saved even if the display is automatically deactivated, just as they are when it is switched off manually.


When the display is deactivated manually, changes to settings are saved and the display is turned off.

However, if the lens is turned off while the display is on, changes to settings may not be saved.


Important

For Reference: Display appearance when restoring original settings

Basic Mode

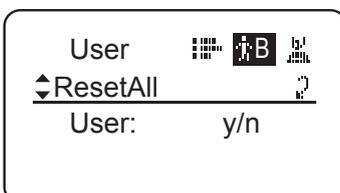

Full Mode

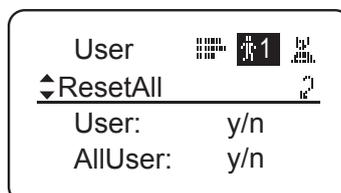

Restoring the Original Settings

The original settings can be restored, in the case of incorrect settings or if you have tried some settings tentatively.

For details, see "Resetting Values" in "3. Operation in Basic Mode" or "4. Operation in Full Mode."

1

Screen Organization

1. Screen Organization


Screens contain 22 setting items in Basic mode, 35 in Full mode, and 3 in Analog mode, with Basic and Full modes also including a “follow” screen containing three setting items that have relative values. Frequently used items are displayed on the **Top screen** (the screen displayed by pressing the Display switch). All settings can be configured from the **Menu screen**, which also includes advanced settings. (See “Menu Screen” in “1. Screen Organization.”)

1.1 Top Screen

(For instructions on configuring the settings, see “Configuration from the Top Screen” in each mode.)


The **Top screen** contains 10 setting items in Basic mode, 16 in Full mode, and 3 in Analog mode.



Initial Top Screen in Basic Mode

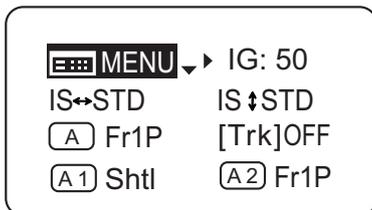

Top Screen in Basic Mode

1. Go to Menu screen
2. Auto iris gain settings
3. IS mode switching (horizontal direction)
4. IS mode switching (vertical direction)
5. AUX switch assignment
6. Zoom Tracking ON/OFF
7. AUX1 switch assignment
8. AUX2 switch assignment
9. Iris torque settings
10. Zoom curve mode settings

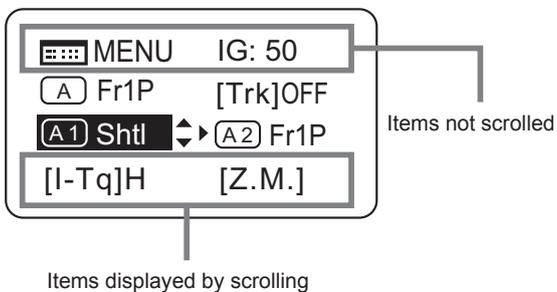

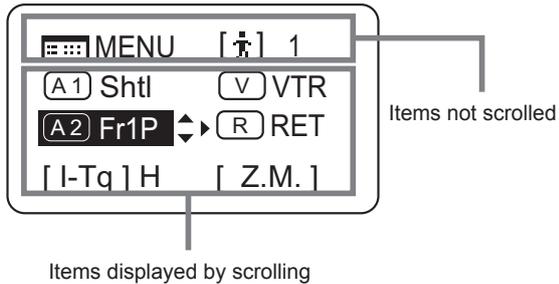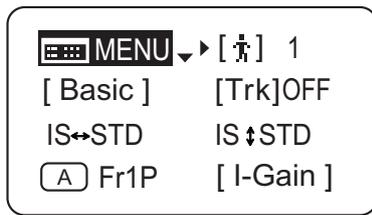Initial Top Screen in Full Mode**Top Screen in Full Mode**

Of the 14 setting items in Full mode, the 8 most common are shown on the Top screen. The other 6 can be accessed by pressing down to scroll down the screen.

1. Go to Menu screen
2. Switch users
3. Switch to Basic mode
4. Zoom TrackingON/OFF
5. IS mode switching (horizontal direction)
6. IS mode switching (vertical direction)
7. AUX switch assignment
8. Iris gain settings
9. AUX1 switch assignment
10. VTR switch assignment
11. AUX2 switch assignment
12. RET switch assignment
13. Iris torque settings
14. Zoom curve mode settings
15. Iris A/M switch setting
16. Seesaw switch assignment

Initial Top Screen in Analog Mode**Top Screen in Analog Mode**

1. Go to Menu screen
2. Auto iris gain settings
3. Switch to Basic mode


1.2 Menu Screen

(For instructions on configuring the settings, see the "Menu Screen" section in the descriptions of each mode.)

Setting items in each mode and on the "follow" screen are organized by function. All of these screens are collectively referred to as the **Menu screen**.^{*1}

Menu Screen in Basic Mode

In Basic mode, the 22 setting items and three "follow" settings with relative values are organized by function into the following 9 screens.

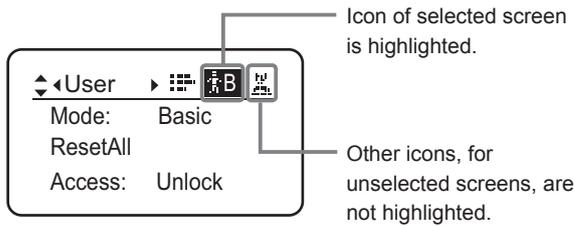

1. User screen
2. Switch screen
3. IS screen
4. Preset screen
5. Iris screen
6. Zoom screen
7. Focus screen
8. Info screen
9. Fol. screen


^{*1}: There is no single **Menu screen**. Instead, these 9 screens are collectively referred to as the **Menu screen**. To access these screens, select [MENU] on the **Top screen** and press the Set key. Initially, the **User screen** is displayed. To access other screens, press left or right.

Menu Screen in Basic Mode

<p>User screen</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀User ▶ </p> <p>Mode: Basic</p> <p>ResetAll</p> <p>Access: Unlock</p> </div>	<p>Switch screen</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀Switch ▶ </p> <p>(A) AUX: Fr1P</p> <p>(A1) AUX1: Shtl</p> <p>(A2) AUX2: Fr1P</p> </div>	<p>IS screen*1</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀IS ▶ </p> <p>Mech. Lock : OFF</p> <p>Mode</p> <p>Offstate : OFF</p> </div>
<p>IS screen*2</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀IS ▶ </p> <p>Mode</p> <p>Offstate : OFF</p> <p>SwSetting</p> </div>	<p>Preset screen</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀Preset ▶ </p> <p>Frame1: Zoom</p> <p>Frame2: Zoom</p> <p>ZSpeed: 800</p> </div>	<p>Iris screen</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀Iris ▶ </p> <p>[I-Gain]</p> <p>Torque: High</p> <p>Comp: OFF</p> </div>
<p>Zoom screen</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀Zoom ▶ </p> <p>CurveMode</p> <p>VR-Dem: ON</p> </div>	<p>Focus screen</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀Focus ▶ </p> <p>CurveMode</p> </div>	<p>Info screen</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀Info ▶ </p> <p>3D OFF</p> <p>Encoder: OFF</p> <p>CamSeri: ON</p> </div>
<p>Fol. screen</p> <div style="border: 1px solid black; padding: 5px;"> <p>◀Fol. ▶ </p> <p>Iris: 1000</p> <p>Zoom: 0000</p> <p>Focus: 0000</p> </div>	<p>Note</p> <p>IS screen varies according to models.</p> <p>IS screen*1: CJ45ex9.7B IASE-V H</p> <p style="padding-left: 20px;">CJ45ex13.6B IASE-V H</p> <p>IS screen*2: HJ40ex10B IASE-V H</p> <p style="padding-left: 20px;">HJ40ex14B IASE-V H</p>	

Menu Screen in Full Mode

In Full mode, the 35 setting items and three “follow” settings with relative values are organized by function into the following 9 screens.










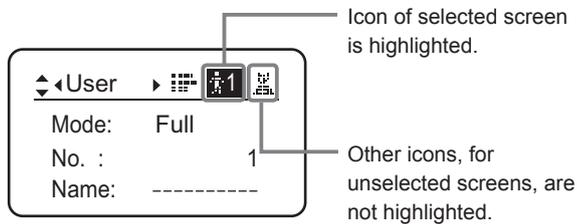


1. User screen 
2. Switch screen 
3. IS screen 
4. Preset screen 
5. Iris screen 
6. Zoom screen 
7. Focus screen 
8. Info screen 
9. Fol. screen 

*1: There is no single **Menu screen**. Instead, these 9 screens are collectively referred to as the **Menu screen**.


To access these screens, select [MENU] on the **Top screen** and press the Set key. Initially, the **User screen** is displayed. To access other screens, press left or right.

Menu Screen in Full Mode
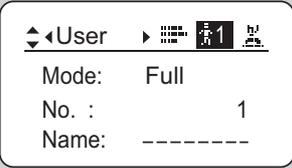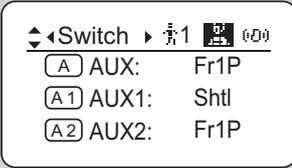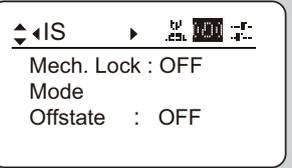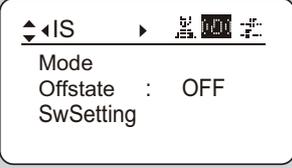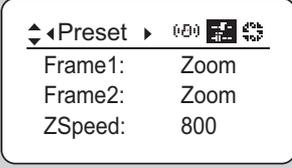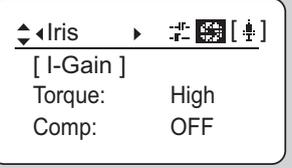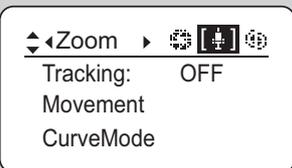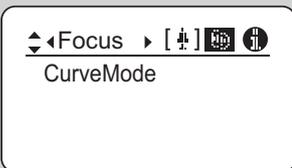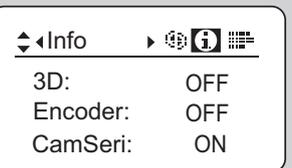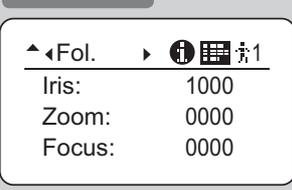
<p>User screen</p> 	<p>Switch screen</p> 	<p>IS screen*1</p> 
<p>IS screen*2</p> 	<p>Preset screen</p> 	<p>Iris screen</p> 
<p>Zoom screen</p> 	<p>Focus screen</p> 	<p>Info screen</p> 
<p>Fol. screen</p> 	<p>Note IS screen varies according to models. IS screen*1: C.J45ex9.7B IASE-V H C.J45ex13.6B IASE-V H IS screen*2: H.J40ex10B IASE-V H H.J40ex14B IASE-V H</p>	

Menu Screen in Analog Mode

In Analog mode, 2 setting items are presented as the **User screen**.

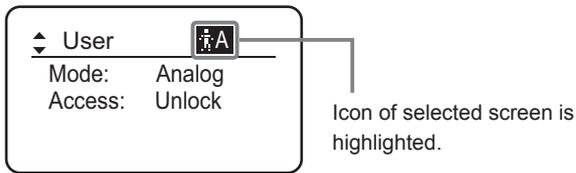

1. User Screen

*1: There is no single **Menu screen**. Instead, these screens displayed by selecting [Menu] are collectively referred to as the **Menu screen**.

To access this screen, select [MENU] on the **Top screen** and press the Set key. The **User screen** is now displayed.

Menu Screen in Analog Mode



2

Mode Selection

2. Mode Selection

2.1 Modes

The following 3 modes are available. Choose a mode that suits your purpose or preference.

- 1. Basic Mode:** Restricted settings and information. Recommended for users who do not require sophisticated settings. This is the default mode.
- 2. Full Mode:** All settings and information are available.
- 3. Analog Mode:** This mode is selected when the digital functions are not used at all.

For details, see "3. Operation in Basic Mode," "4. Operation in Full Mode," or "5. Operation in Analog Mode."

3

Operation in Basic Mode


3. Operation in Basic Mode

3.1 Configuration from the Top Screen

The screen displayed by pressing the Display switch is referred to as the **Top screen**.

A total of 10 items can be configured on the **Top screen** in Basic mode. The first screen displayed is referred to as the **Initial Top screen**. Status of some items can be checked simply by accessing this screen.


Initial Top Screen in Basic Mode

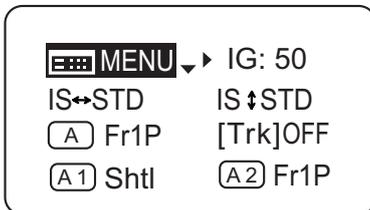

3.1.1 Selecting Basic Mode

Basic mode is the default mode, but it can also be accessed from other modes as follows.


Switching from Full to Basic Mode

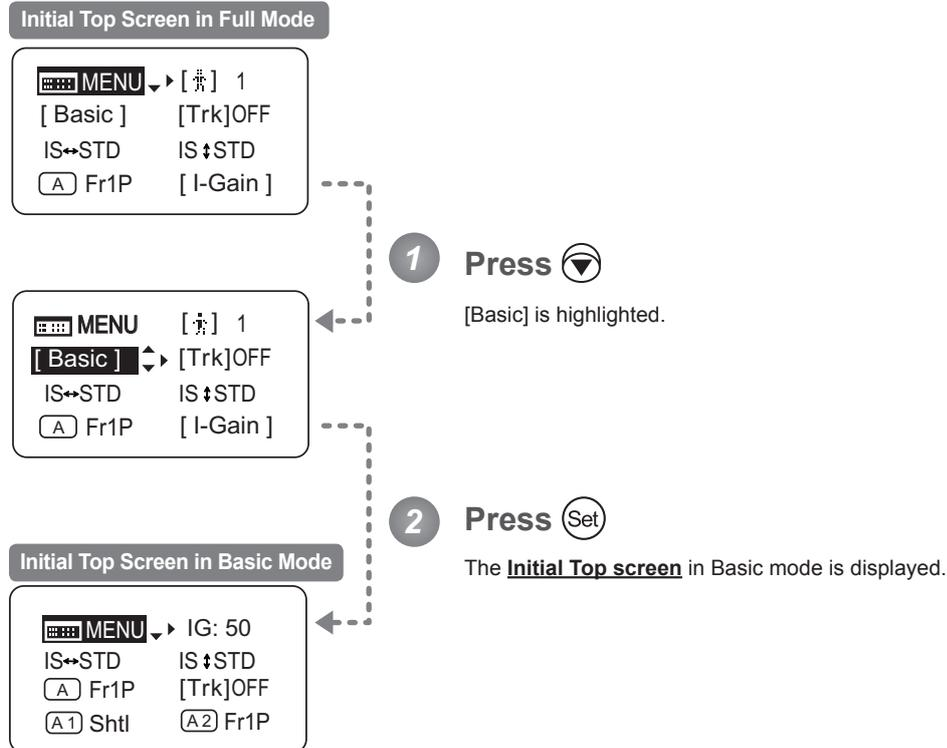

3.1.2 Top Screen

A total of 10 items can be configured on the **Top screen** in Basic mode, and the first screen shown is referred to as the Initial **Top screen**, which displays 8 items. The other items can be displayed by pressing down to scroll down the screen. (See the following figure.)

Status of some items can be checked simply by accessing this screen. (Shown in the figure below.^{*1})

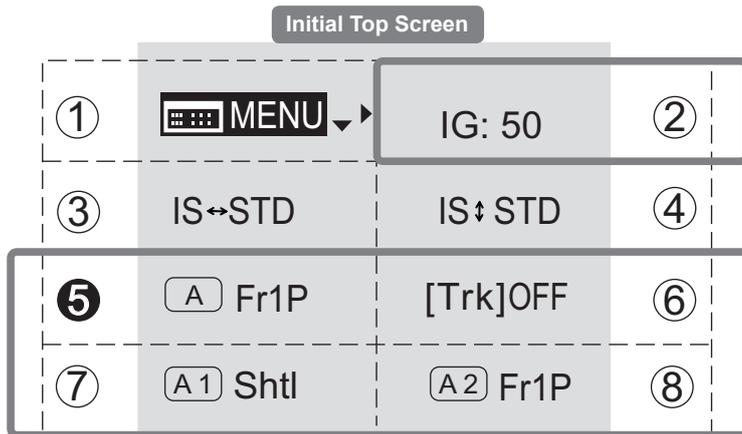


*1

Inside  : Items that show the current setting status.

Example:  Shtl indicates that the AUX1 switch is assigned to the Shuttle function.

⑤: White numbers against a black background indicate the number of the switch on a drive unit to which the function is assigned.

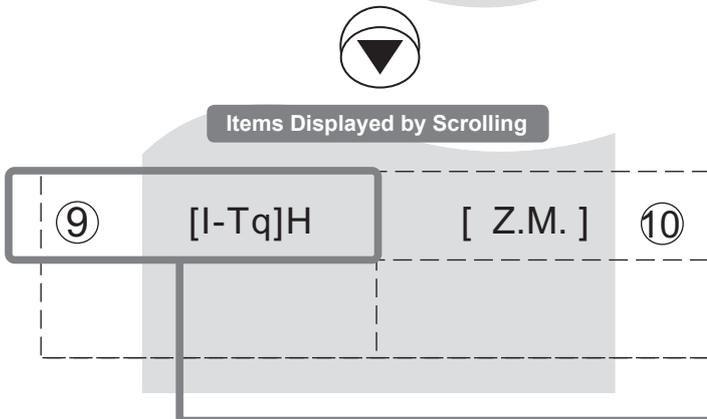

①  **Menu screen**

See "3.2 Configuration from the Menu Screen."

② **IG Auto iris gain**

Adjust the auto iris gain value.

See "3.1.3 Specifying Auto Iris Gain."

③ **IS↔**

Switch the IS mode of the horizontal direction.

See "3.1.4 Switching the IS Mode of the Horizontal Direction."

④ **IS↑**

Switch the IS mode of the vertical direction.

See "3.1.5 Switching the IS Mode of the Vertical Direction."

⑤ **A AUX switch**

By default, the AUX switch for a drive unit is assigned to the "Frame Preset 1" function, but it can be reassigned as needed.

See "3.1.7 Assigning Functions to the AUX Switch."

⑥ **[Trk] Zoom tracking**

Switch to ON when using zoom tracking.

See "3.1.6 Zoom Tracking ON/OFF."

⑦ **A 1 AUX1 switch**

By default, the AUX1 switch for a zoom demand is assigned to the {Shuttle} function, but it can be reassigned as needed.

See "3.1.8 Assigning Functions to the AUX1 Switch."

⑧ **A 2 AUX2 switch**

By default, the AUX2 switch for a zoom demand is assigned to the {Frame Preset 1} function, but it can be reassigned as needed.

See "3.1.9 Assigning Functions to the AUX2 Switch."

⑨ **[I-Tq] Iris torque**

Adjust the level of torque in manual control of the iris ring as needed.

See "3.1.10 Specifying Iris Torque."

⑩ **[Z.M.] Zoom curve mode**

Adjust zoom speed in response to pressing the zoom seesaw switch or tilting the analog demand thumb ring.

See "3.1.11 Specifying Zoom Curve Mode."

3.1.3 Specifying Auto Iris Gain


[IG]

Although this value is factory-set, it can be adjusted as needed.

To adjust the value, use either the auto iris gain adjustment trimmer (refer to the Lens Manual) or display operations.

Regardless of the method of adjustment used, the most recent setting takes precedence.

The same auto iris gain value applies to all users.

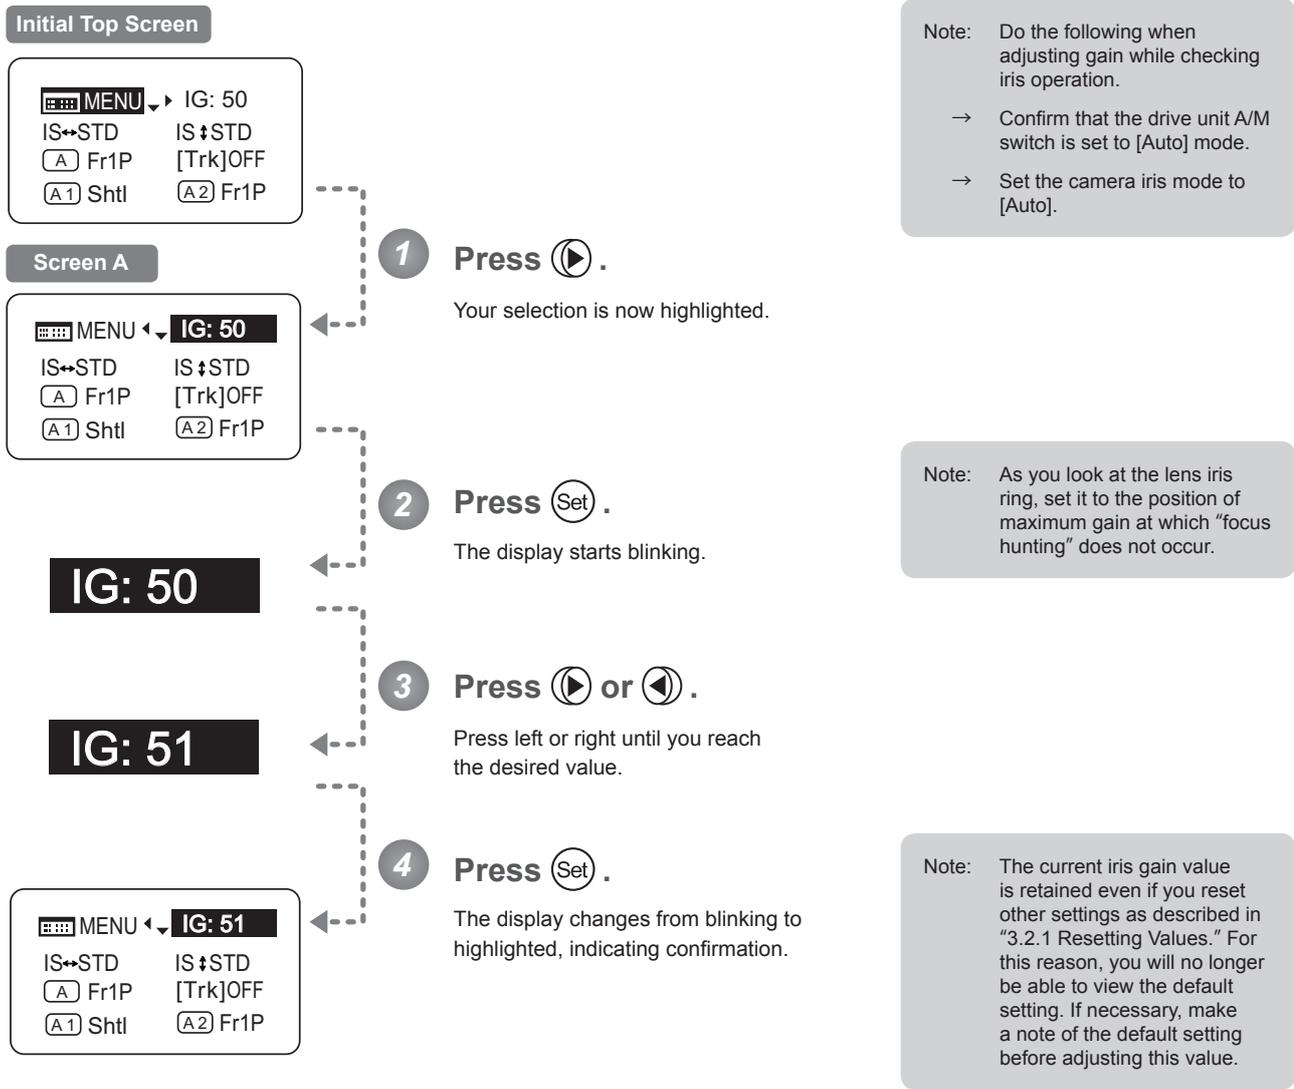

Options	01	to	99
Description	Minimum gain		Maximum gain

Default: Varies depending on the factory-set value, but corresponds to the value determined with the iris gain adjustment trimmer.





3.1.4 Switching the IS Mode of the Horizontal Direction

[IS ↔]


Switch the IS mode of the horizontal direction.

Initial Top Screen

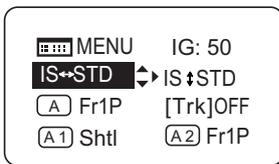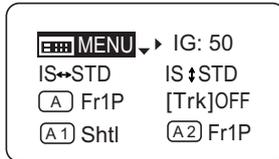

IS↔STD

IS↔HIGH

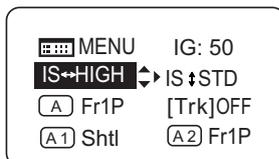

1 Press .

The previous or default value is highlighted.

2 Press .

The display starts blinking.

3 Press  or .

Press left or right until you reach the desired mode.

4 Press .

The display changes from blinking to highlighted, indicating confirmation.

Options	^(D) STD	HIGH	OFF


(D): Default value




3.1.5 Switching the IS Mode of the Vertical Direction[IS ⇅]

Switch the IS mode of the vertical direction.

Initial Top Screen

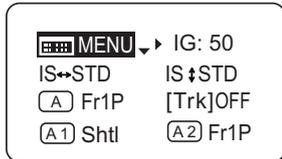

1 Press and then .
The previous or default value is highlighted.

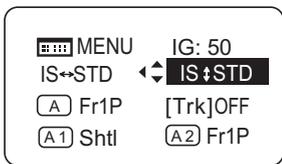


2 Press .
The display starts blinking.



3 Press or .
Press left or right until you reach the desired mode.



4 Press .
The display changes from blinking to highlighted, indicating confirmation.

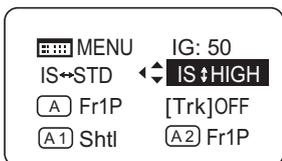

Options	^(D) STD	HIGH	OFF
---------	--------------------	------	-----

(D): Default value



3.1.6 Zoom Tracking ON/OFF


[Trk]

Activate or deactivate zoom tracking as needed.

Important


In Basic mode, any adjustments to this setting are not retained when the lens is turned off, and the default value is restored on startup.

Initial Top Screen

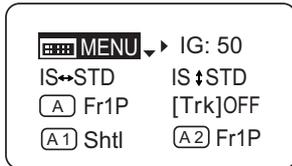

1 Press twice and once.

The default function is highlighted.

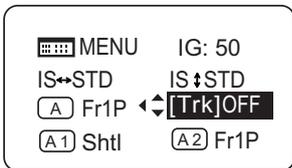

2 Press .

The display starts blinking.

[Trk]OFF


3 Press or .

Press left or right to switch the function {ON} or {OFF}.

[Trk]ON

4 Press .

The display changes from blinking to highlighted, indicating confirmation.

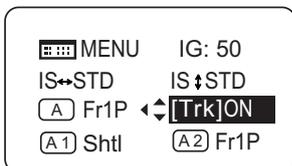

Options	^(D) OFF	ON
---------	--------------------	----

(D): Default value




3.1.7 Assigning Functions to the AUX Switch

A


Assign your desired functions to the AUX switch.

Initial Top Screen

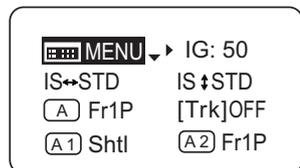

1 Press twice.

The default function is highlighted.

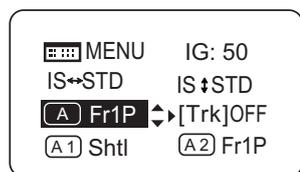

2 Press .

The display starts blinking.




3 Press or .

Press left or right until you reach the desired function.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

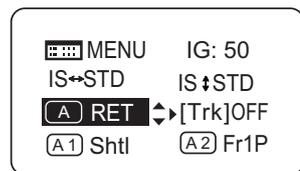

Options	^(D) Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value




3.1.8 Assigning Functions to the AUX1 Switch

A1


Assign your desired functions to the AUX1 switch.

Initial Top Screen

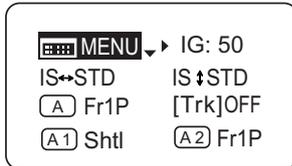

1 Press three times.

The default function is highlighted.

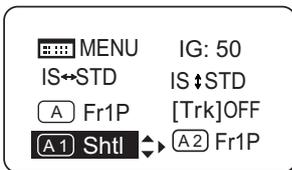

2 Press .

The display starts blinking.




3 Press or .

Press left or right until you reach the desired function.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

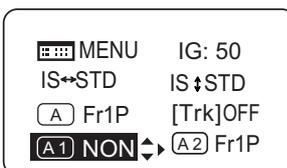

Options	Fr1P	Fr1F	Fr2P	Fr2F	Sped	^(D) Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value




3.1.9 Assigning Functions to the AUX2 Switch

A2


Assign your desired functions to the AUX2 switch.

Initial Top Screen

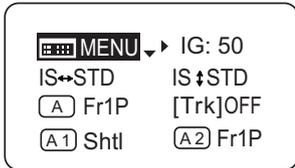

- 1 Press three times and once.

The default function is highlighted.

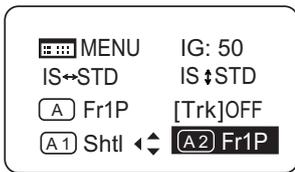

- 2 Press .

The display starts blinking.




- 3 Press or .

Press left or right until you reach the desired function.



- 4 Press .

The display changes from blinking to highlighted, indicating confirmation.

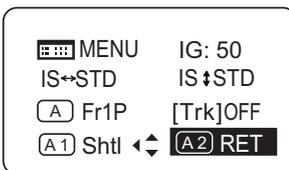

Options	^(D) Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value




3.1.10 Specifying Iris Torque

[I-Tq]


Specify the desired level of torque in manual control of the iris ring.

Initial Top Screen

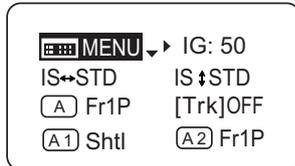

1 Press four times.

The default function is highlighted.

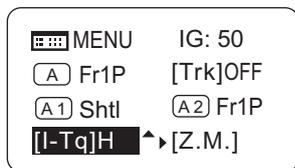

2 Press .

The display starts blinking.

[I-Tq] H


3 Press or .

Press left or right to switch the function to {H} or {L}.

[I-Tq] L

4 Press .

The display changes from blinking to highlighted, indicating confirmation.

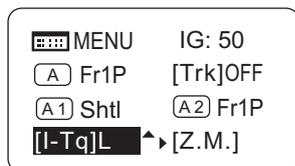

Options	^(D) H	L
Description	High torque	Low torque

(D): Default value





3.1.11 Specifying Zoom Curve Mode

[Z.M.]

Specifying Seesaw Switch Responsiveness

Configure the responsiveness of zoom speed adjustment in response to pressing the zoom seesaw switch.
 (Note: Another screen is displayed when this setting is configured.)

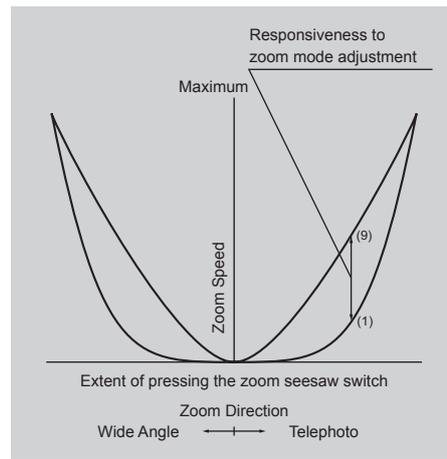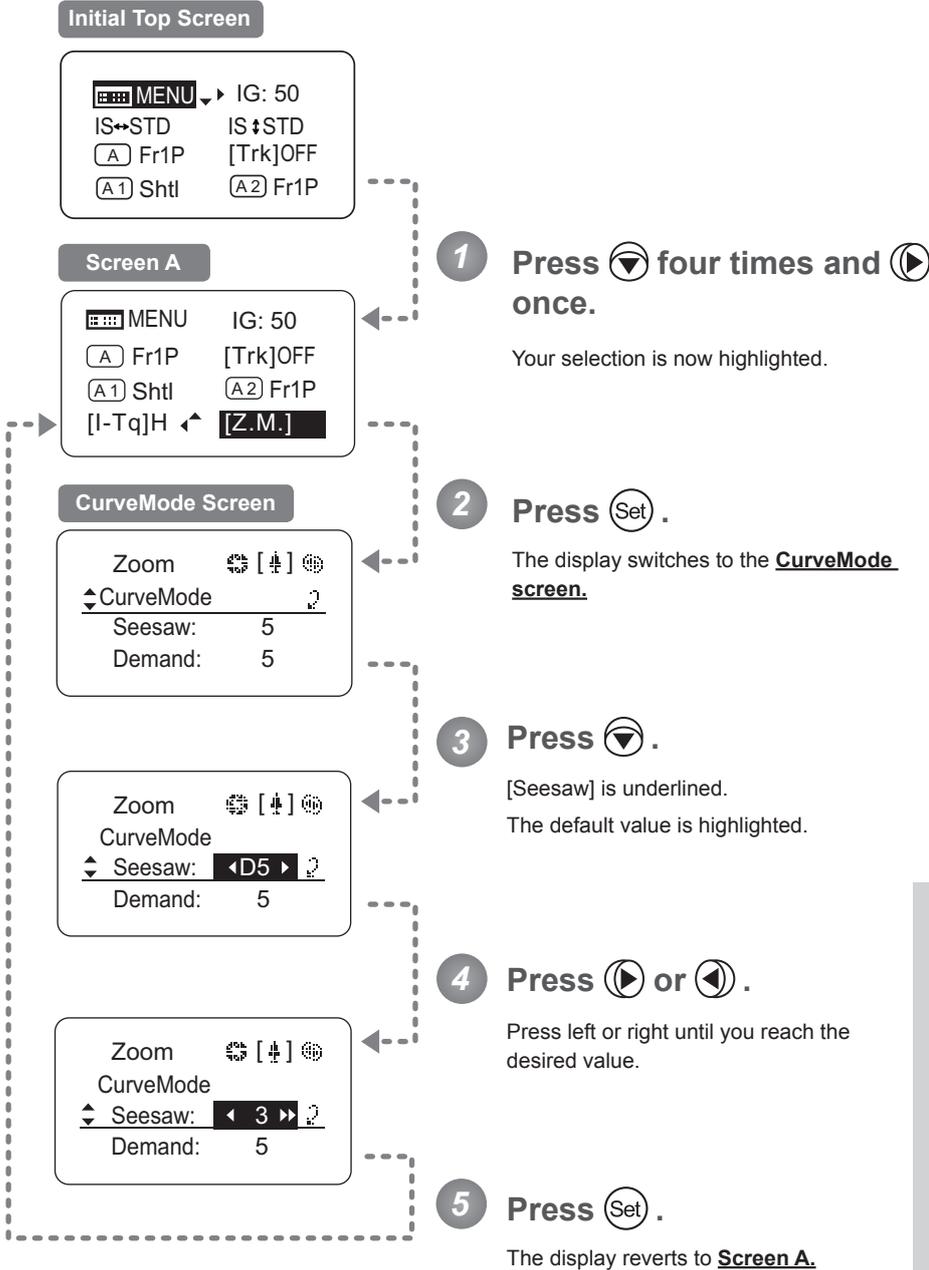

Options	1	2	3	4	(D) 5	6	7	8	9
---------	---	---	---	---	-------	---	---	---	---


(D): Default value




Specifying Analog Demand Responsiveness

Configure the responsiveness of zoom speed adjustment in response to pressing the analog demand thumb ring.
 (Note: Another screen is displayed when this setting is configured.)




Initial Top Screen

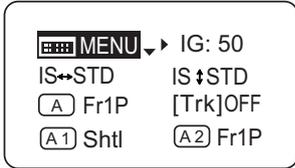

Screen A

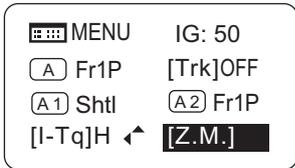

CurveMode Screen

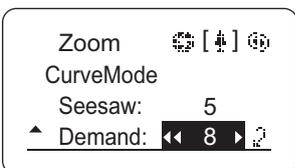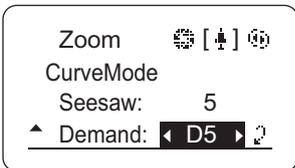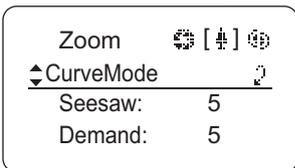

1 Press four times and once.

Your selection is now highlighted.

2 Press .

The display switches to the **CurveMode screen**.

3 Press twice.


[Demand] is underlined.
The default value is highlighted.

4 Press or .

Press left or right until you reach the desired value.


5 Press .

The display reverts to **Screen A**.

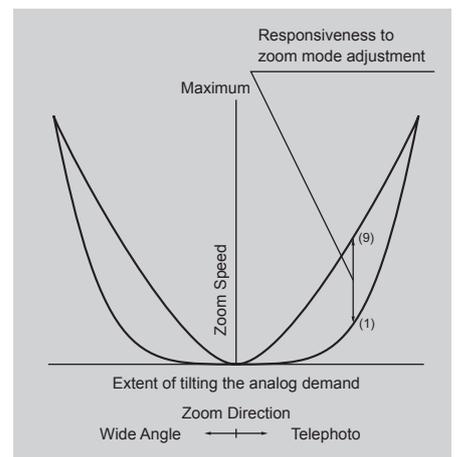

Options	1	2	3	4	(D) 5	6	7	8	9
---------	---	---	---	---	-------	---	---	---	---

 (D): Default value



3.2 Configuration from the Menu Screen

In Basic mode, you can view and configure 22 setting items and a “follow” screen with three setting items that have relative values from the **Menu screen***

Specifically, the **Menu screen** in Basic mode is organized into 9 screens by function: **User screen**, **Switch screen**, **IS screen**, **Preset screen**, **Iris screen**, **Zoom screen**, **Focus screen**, **Info screen**, and **Fol. screen**.

Select [MENU] on the **Top screen** and press the Set key to access the **User screen** initially. Press left or right to access the 8 other screens.

*: There is no single **Menu screen**. Instead, these 9 screens are collectively referred to as **Menu screen**.

Setting items labeled **Top** next to the function title can also be configured from **Top screen**.


3.2.1 User Screen Settings

User B is the user in Basic mode.

The following setting items can be configured on the **User screen**.

Switching Modes
Resetting Values
Locking Functions

User Screen in Basic Mode

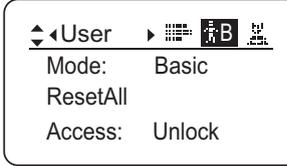


Switching Modes

Switch to Full or Analog mode as needed.




Important

The new mode setting is retained even after the lens is turned off.

Initial Top Screen

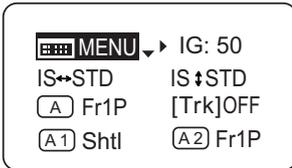

User Screen

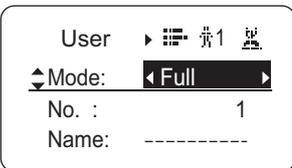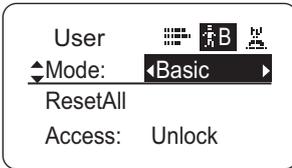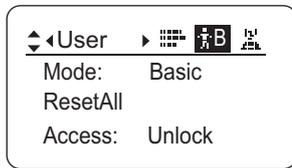

1 Press .

The display switches to the User screen.

2 Press .

[Mode] is underlined.

The previous mode is highlighted.

3 Press or .

Press left or right until you reach the desired mode.

Options	^(D) Basic	Full	Analog
Save Settings	Basic Mode	Full Mode	Analog Mode


(D): Default value



Resetting Values


Reset a user's settings to default values as needed.

Initial Top Screen

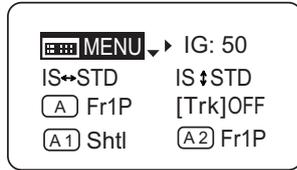


Note: Iris gain values are not reset. The current value is retained.

User Screen

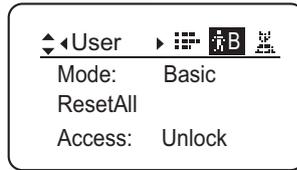

1 Press **Set**.
The display switches to the **User screen**.


Title: Reset

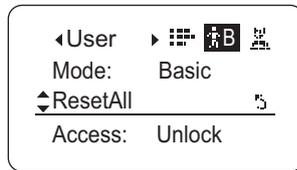


2 Press **Down Arrow** twice.
[ResetAll] is underlined.

Note: You can cancel resetting and restore the original values at any time before pressing **Set** in step 5. To return to the previous screen, press up. To cancel resetting and turn off the display, press the Display switch.


Reset Screen

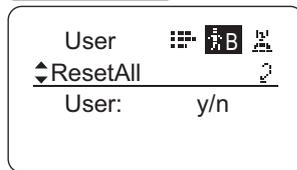

3 Press **Set**.
The display switches to the **Reset screen**.

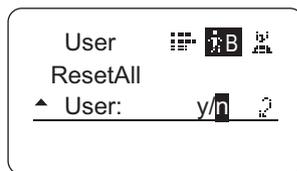


4 Press **Down Arrow**.
A confirmation message is displayed about resetting information for the selected user.

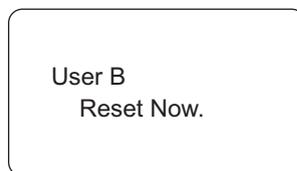

5 Press **Right Arrow** and then **Set**.

After a message is displayed indicating that resetting is in progress, the display reverts to **Title: Reset**. The settings have now been reset.


Title: Reset

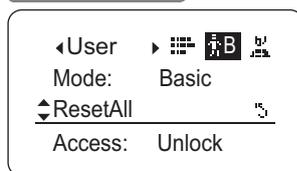


Locking Functions

To ensure that configured functions cannot easily be changed, you can lock the settings of certain functions.

Unlocked

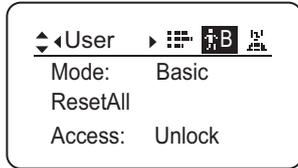

Locked

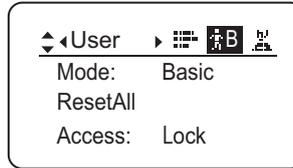


Note

In lock mode, only the following items can still be configured, and other settings are locked.



- Preset data (Shuttle shot position, Frame preset position, Preset speed)
- Auto iris gain setting

(1) Locking Settings

Initial Top Screen

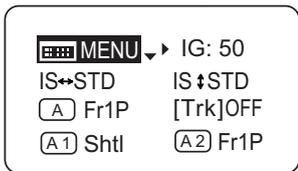

User Screen

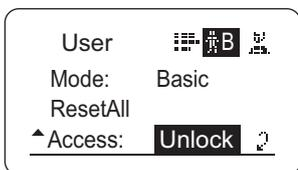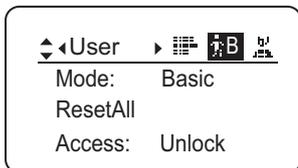

1 Press **Set**.

The display switches to the **User screen**.


2 Press **Down Arrow** three times.

The previous or default value is highlighted.

3 Press **Set**.

Continued on next page


Continued from previous page

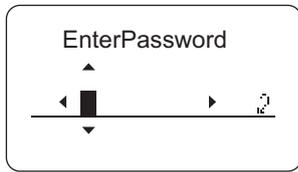

4 Enter the password and press (Set).


Entering Passwords

Press up/down to find characters and left/right to move the cursor or make corrections. Be careful not to press the Set key until you are finished entering the password.

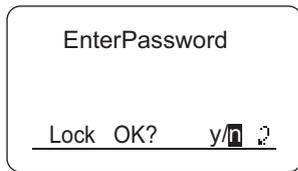

5 Press (Left Arrow) and then (Set).

The settings are now locked.

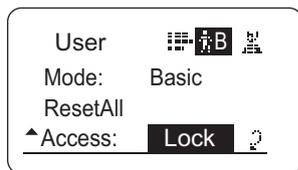

Note

Passwords

No master password is used on this model. The password you enter each time to lock settings is the password used to unlock them. For this reason, we recommend making a note of the password each time. If you forget the password, contact Canon or your dealer. Passwords can be blank or up to 8 digits.


Characters supported in passwords

Options	^(D) _-ABCDEFGHIJKLMN OPQRSTUVWXYZ abcdefghijklmnopqrstuvwxy z0123456789
Max. Digits	8

(D): Default value
_: Space


Options	^(D) Unlock	Lock
----------------	-----------------------	------

 (D): Default value








(2) Unlocking Settings

Initial Top Screen

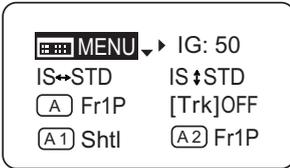

User Screen

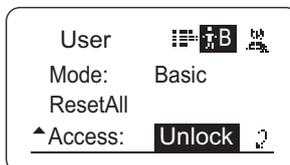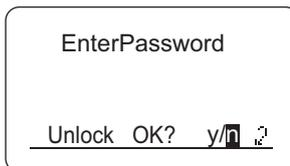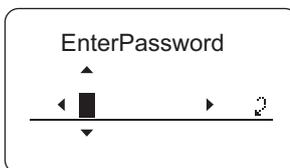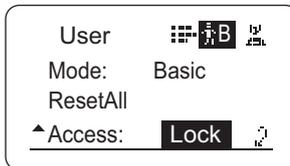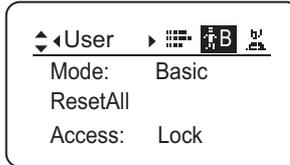

1 Press .

The display switches to the User screen.

2 Press three times.

The previous or default value is highlighted.

3 Press .

4 Enter the password and press .

The password you entered to lock settings is the password used to unlock them.

5 Press and then .

The settings are now unlocked.



3.2.2 Switch Screen Settings

The following setting items can be configured on the Switch screen.

Assigning Functions to the AUX Switch **Top**

Assigning Functions to the AUX1 Switch **Top**

Assigning Functions to the AUX2 Switch **Top**


Items labeled **Top** can also be modified from the Top screen.

Assigning Functions to the AUX Switch




Top

The AUX switch can be programmed to activate a function of your choice.

Initial Top Screen

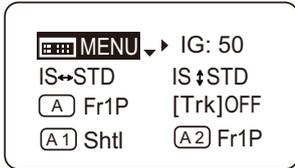

Switch Screen

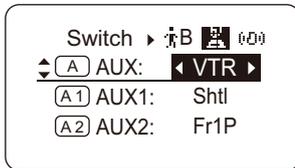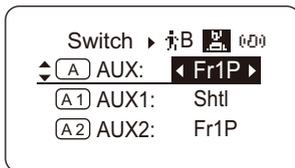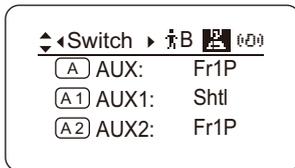

1 Press **Set** and then **▶**.

The display switches to the **Switch screen**.

2 Press **▼**.


[AUX] is underlined.
The previous or default function is highlighted.

3 Press **▶** or **◀**.

Press left or right until you reach the desired function.


Options	(D) Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

 (D): Default value



Assigning Functions to the AUX1 Switch Top

The AUX1 switch for a zoom demand can be programmed to activate a function of your choice.

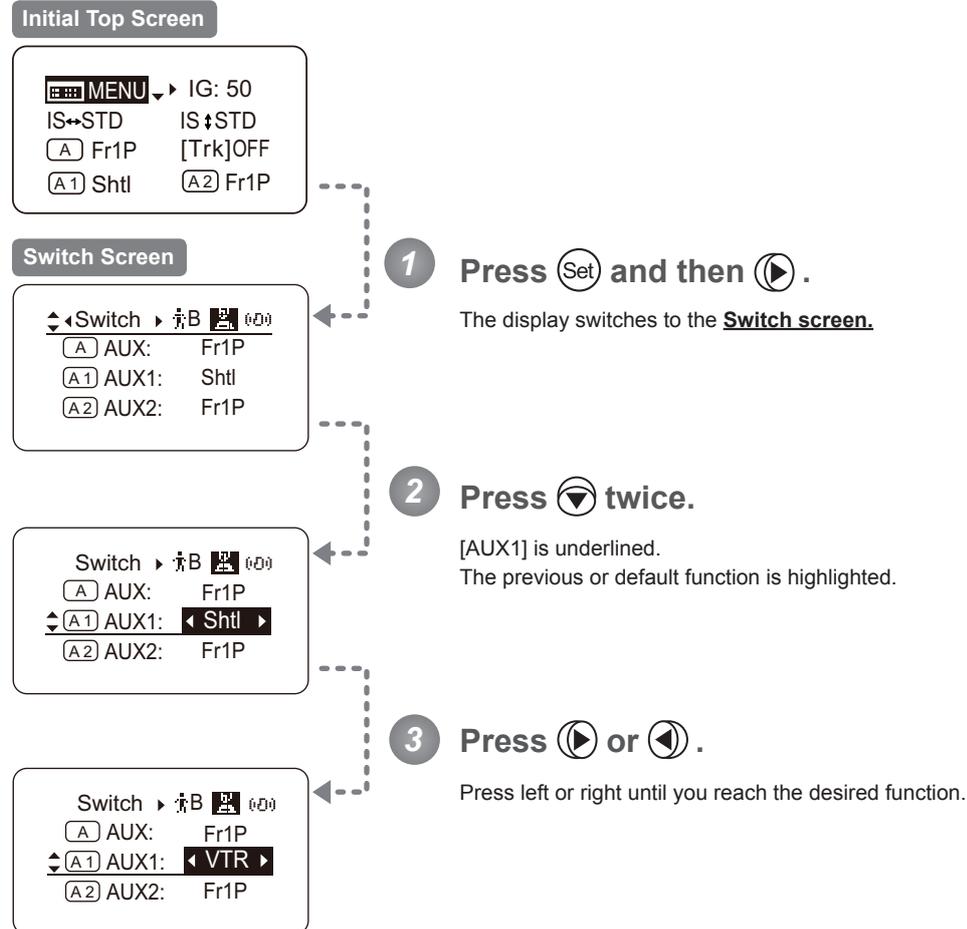

Options	Fr1P	Fr1F	Fr2P	Fr2F	Sped	^(D) Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value






Assigning Functions to the AUX2 Switch Top

The AUX2 switch for a zoom demand can be programmed to activate a function of your choice.

Initial Top Screen



Switch Screen

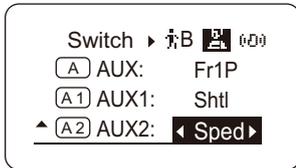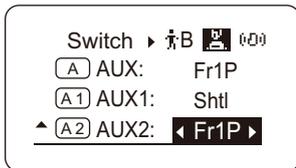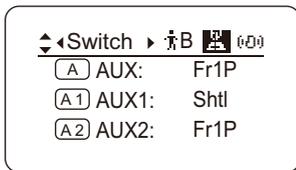

1 Press and then .

The display switches to the **Switch screen**.

2 Press three times.

[AUX2] is underlined.
The previous or default function is highlighted.

3 Press or .

Press left or right until you reach the desired function.

Options	(D) Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value



3.2.3 IS Screen Settings

Note

The indication of IS Screen changes depending on the models.
Refer to the applicable pages after checking the model name of your lens.


The following setting items can be configured on the **IS screen**.

	CJ45ex9.7B CJ45ex13.6B	HJ40ex10B HJ40ex14B
Switch ON/OFF of Mechanical Lock	P.50	-
Switching IS Mode	P.51	P.56
(1) Switching the IS Mode of the Horizontal Direction	P.51	P.56
(2) Switching the IS Mode of the Vertical Direction	P.52	P.57
Specifying the Mode of when IS is OFF	P.53	P.57
Specifying IS Switch Functions	P.54	P.59
(1) Specifying the Method of IS ON/OFF Selection	P.54	P.59
(2) Switching the Polarity of the IS Switch	P.55	P.60

Items labeled **Top** can also be modified from the **Top screen**.


Switch ON/OFF of Mechanical Lock (CJ45ex9.7B, CJ45ex13.6B)

The IS function during shooting can be invalidated forcibly. Switch setting to OFF to validate the IS function and to ON to invalidate the IS function.

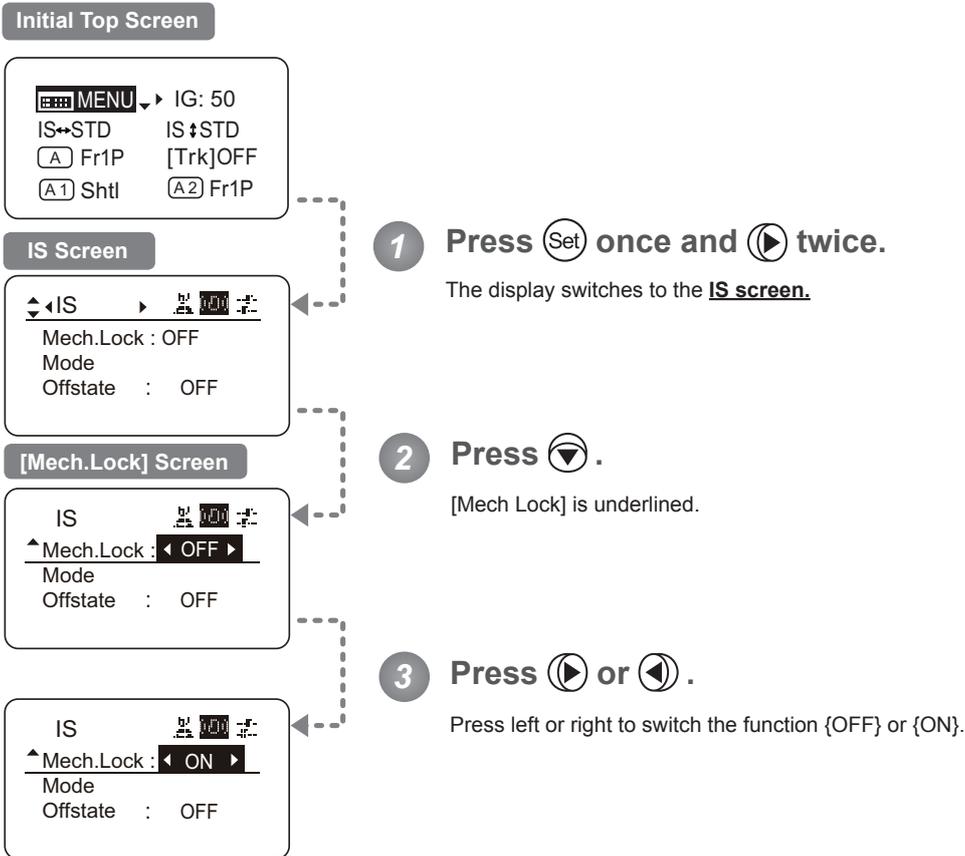

Options	^(D) OFF	ON
Description	Releasing the Mechanical Lock (IS ON)	Applying the Mechanical Lock (IS OFF)

 
(D):Default value



Switching IS Mode (CJ45ex9.7B, CJ45ex13.6B)

(1) Switching the IS Mode of the Horizontal Direction Top

Switch the IS mode of the horizontal direction as needed.

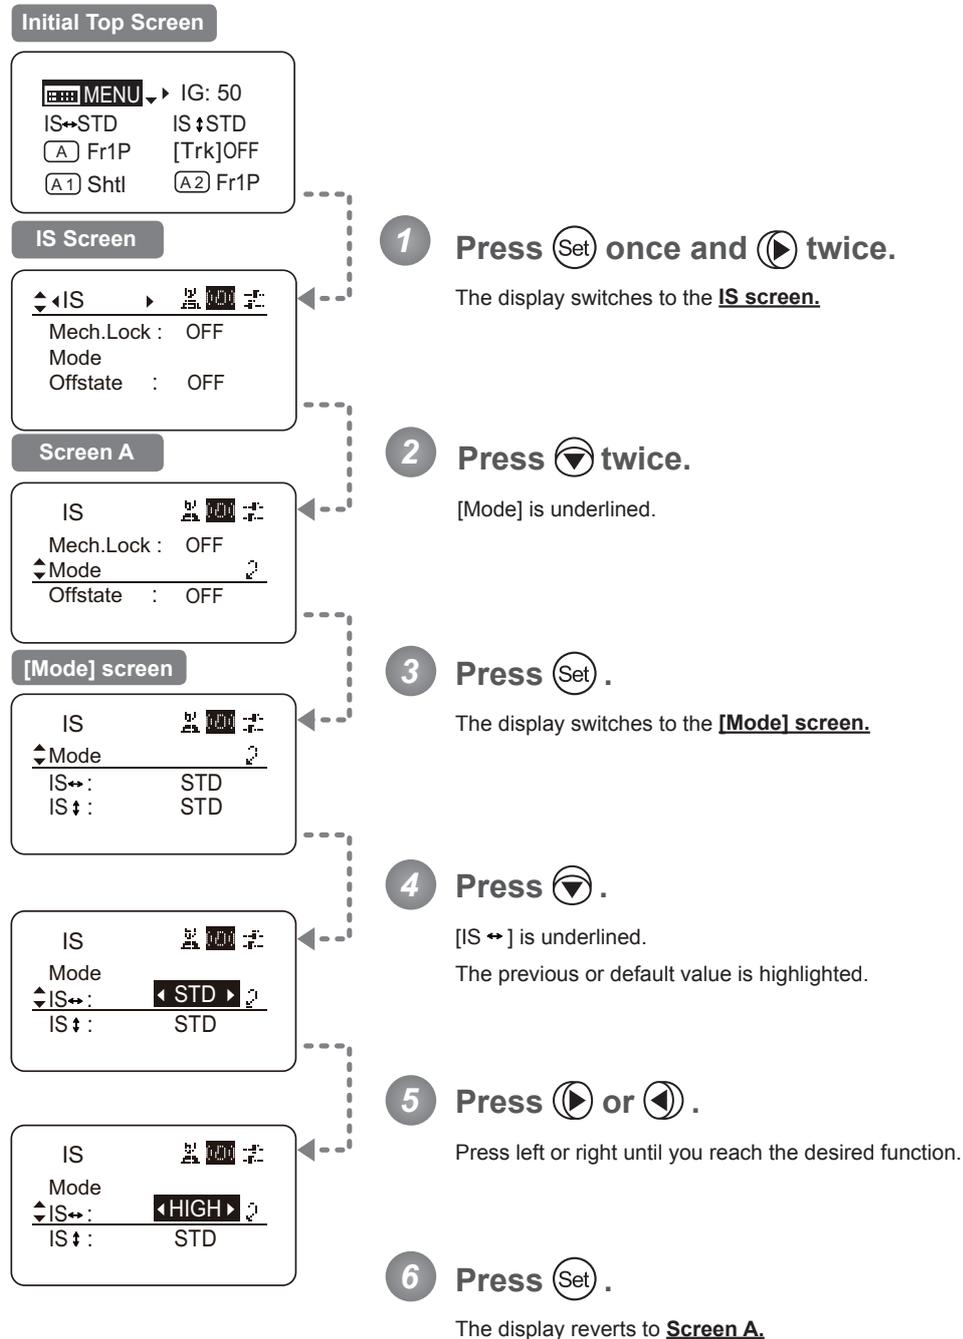


Options	^(D) STD	HIGH	OFF
Description	Mode that provides good panning operability	Mode that provides high vibration control performance from low frequencies to high frequencies	Disabled

(D):Default value




(2) Switching the IS Mode of the Vertical Direction Top

Switch the IS mode of the vertical direction as needed.

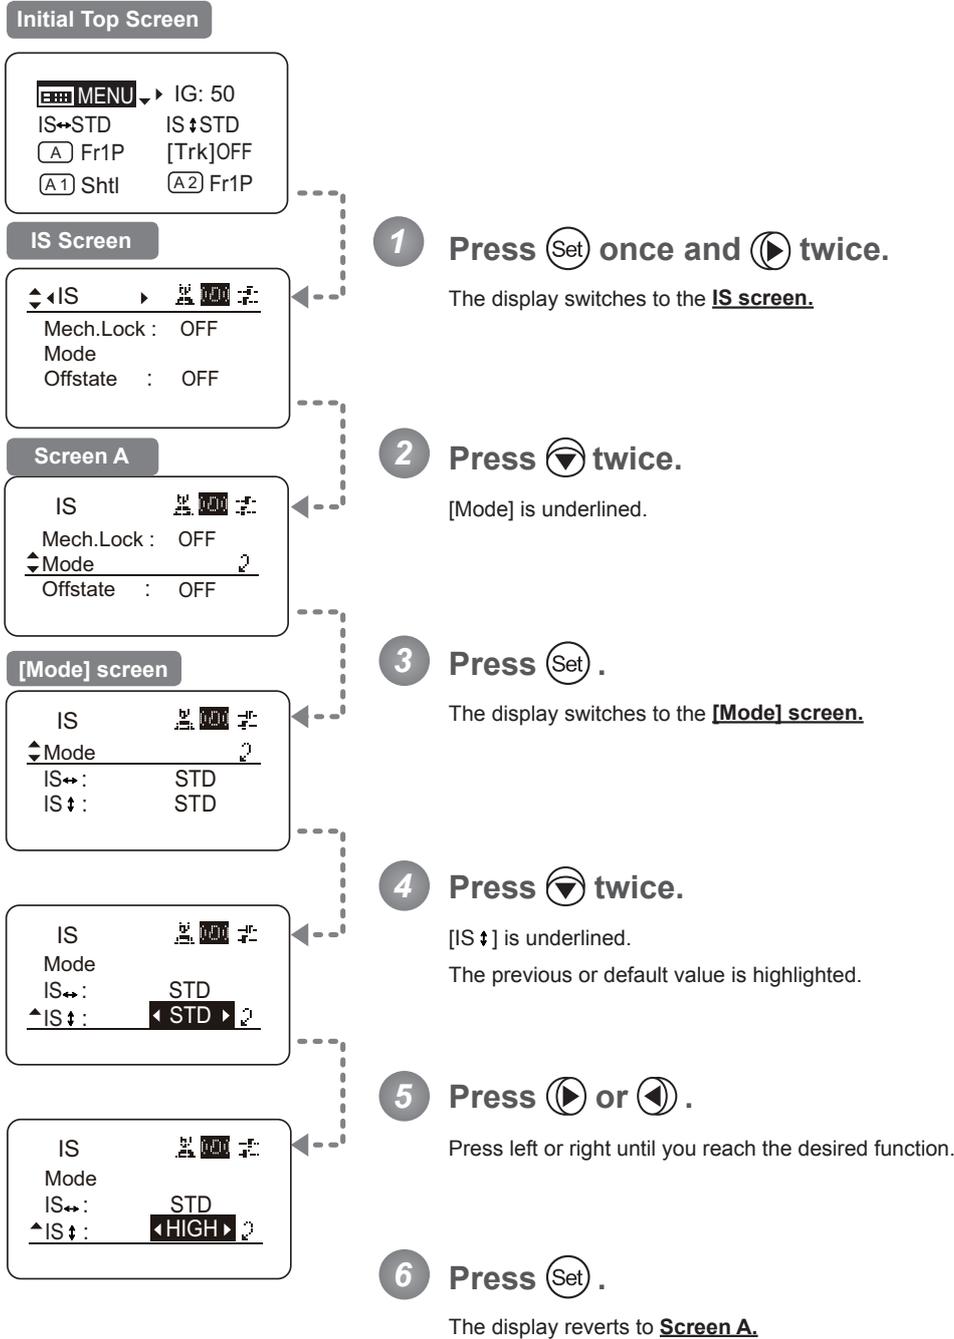


Options	^(D) STD	HIGH	OFF
Description	Mode that provides good panning operability	Mode that provides high vibration control performance from low frequencies to high frequencies	Disabled

 (D) : Default value



Switching the Mode of when IS is OFF (CJ45ex9.7B, CJ45ex13.6B)

Specify the IS function of when the IS mode is switched to OFF, as needed.

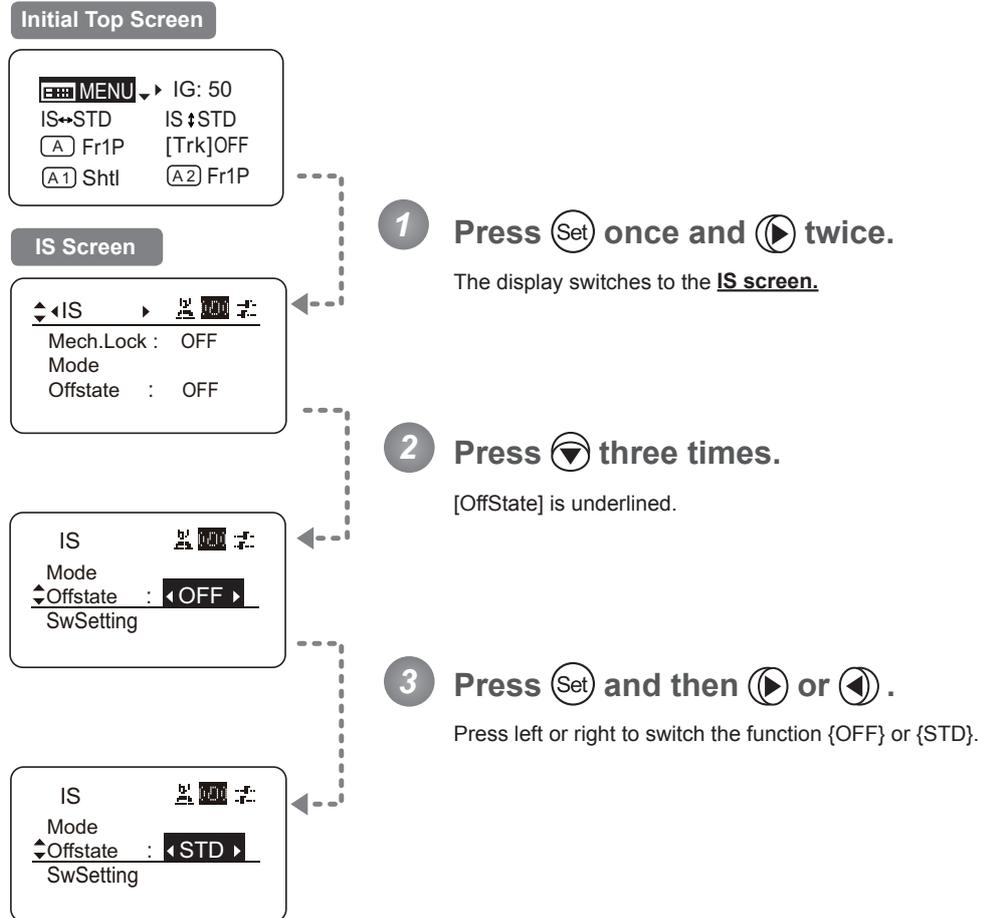

Options	STD	^(D) OFF
Description	Mode that provides good panning operability	Disabled


(D):Default value



Specifying IS Switch Functions (CJ45ex9.7B, CJ45ex13.6B)

(1) Specifying the Method of IS ON/OFF Selection

Specify the method of IS ON/OFF selection of when pressing the IS switch and the switch to which the IS functions are assigned, as needed.

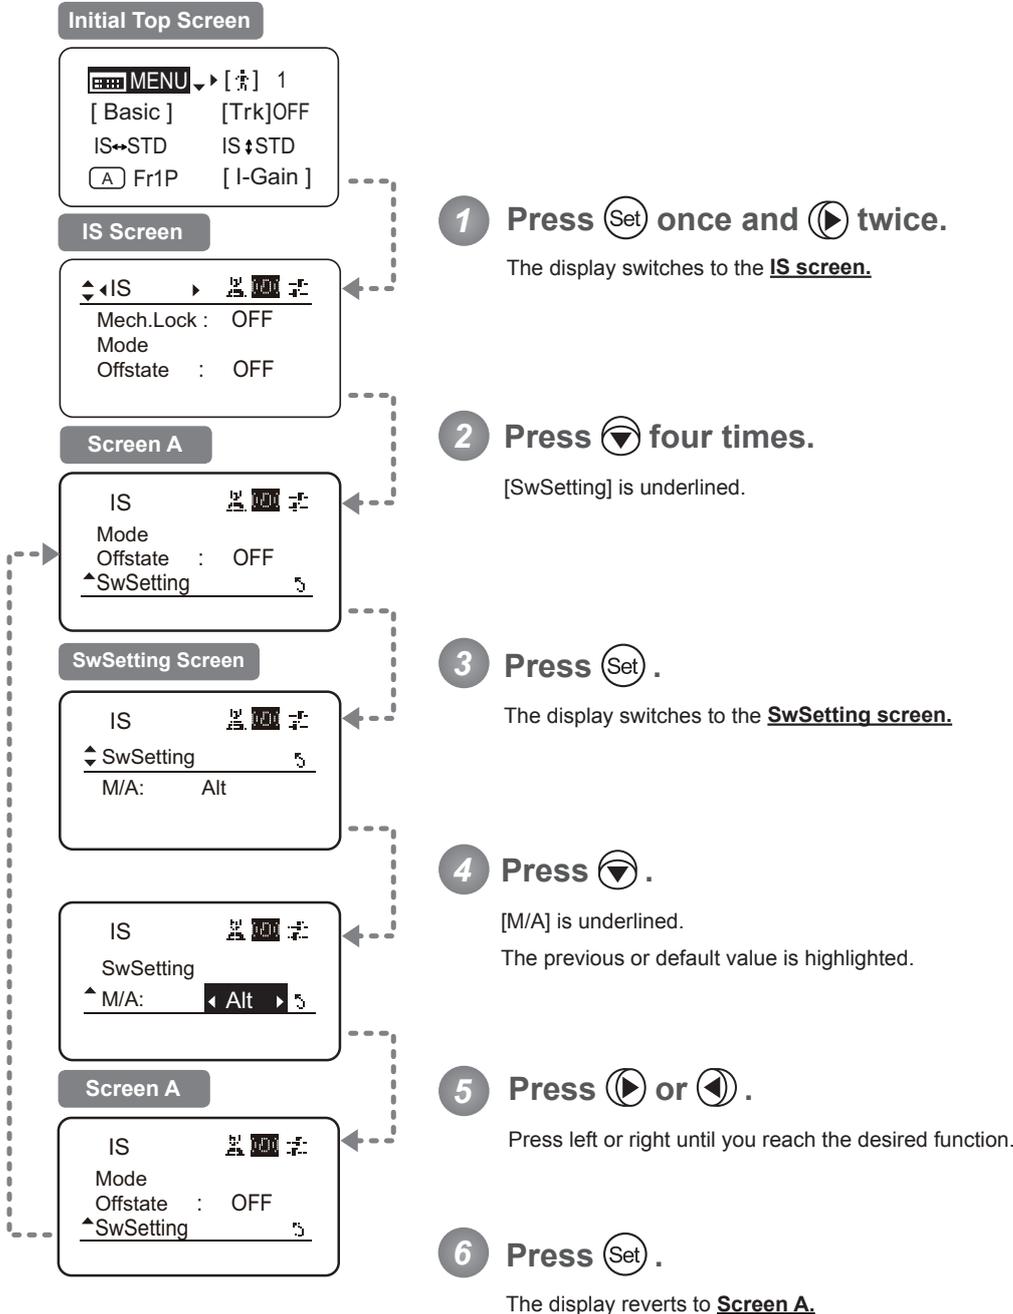

Options	^(D) Alt	Mom	(D):Default value
Description	Alternate action in which ON/OFF is switched each time the switch is pressed	Momentary action in which the switch is turned ON only while being pressed	




(2) Switching the Polarity of the IS Switch

Switch the polarity of the IS switch and the switch to which the IS functions are assigned, as needed.


Important

First, specify Mom as the method of IS ON/OFF selection of when pressing the IS switch and the switch to which the IS functions are assigned.
(For instructions, see "Specifying the Method of IS ON/OFF Selection" on the previous page.)


Initial Top Screen

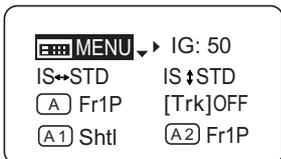



IS Screen

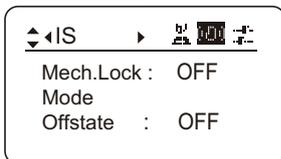


Screen A

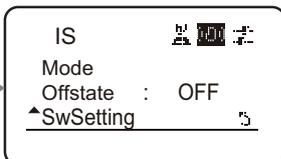

SwSetting Screen

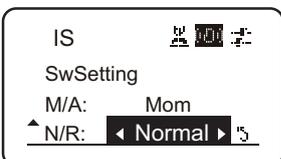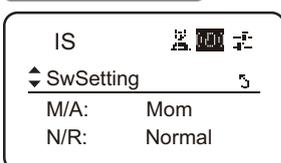

Screen A

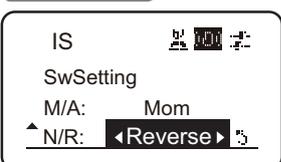

1 Press (Set) once and (Right Arrow) twice.

The display switches to the **IS screen**.

2 Press (Down Arrow) four times.

[SwSetting] is underlined.

3 Press (Set).

The display switches to the **SwSetting screen**.

4 Press (Down Arrow) twice.

[N/R] is underlined.

The previous or default value is highlighted.

5 Press (Right Arrow) or (Left Arrow).

Press left or right until you reach the desired function.

6 Press (Set).

The display reverts to **Screen A**.

Options	^(D) Normal	Reverse
Description	Momentary action in which the switch is turned ON only while being pressed	Momentary action in which the switch is turned OFF only while being pressed


(D):Default value



Switching IS Mode (HJ40ex10B, HJ40ex14B)


(1) Switching the IS Mode of the Horizontal Direction Top

Switch the IS mode of the horizontal direction as needed.

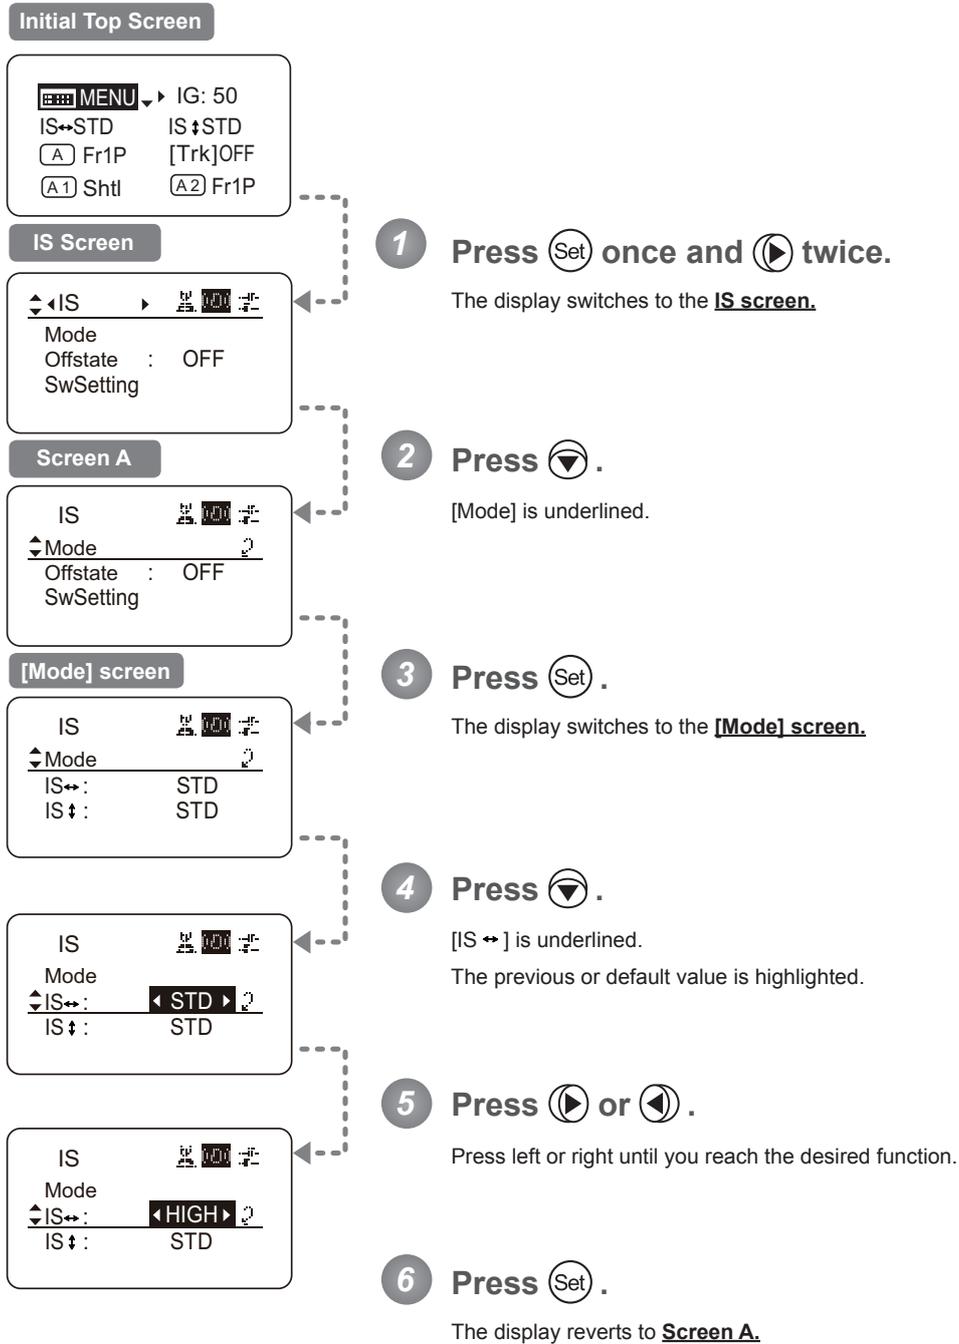


Options	^(D) STD	HIGH	OFF
Description	Mode that provides good panning operability	Mode that provides high vibration control performance from low frequencies to high frequencies	Disabled

 ((D):Default value




(2) Switching the IS Mode of the Vertical Direction Top

Switch the IS mode of the vertical direction as needed.

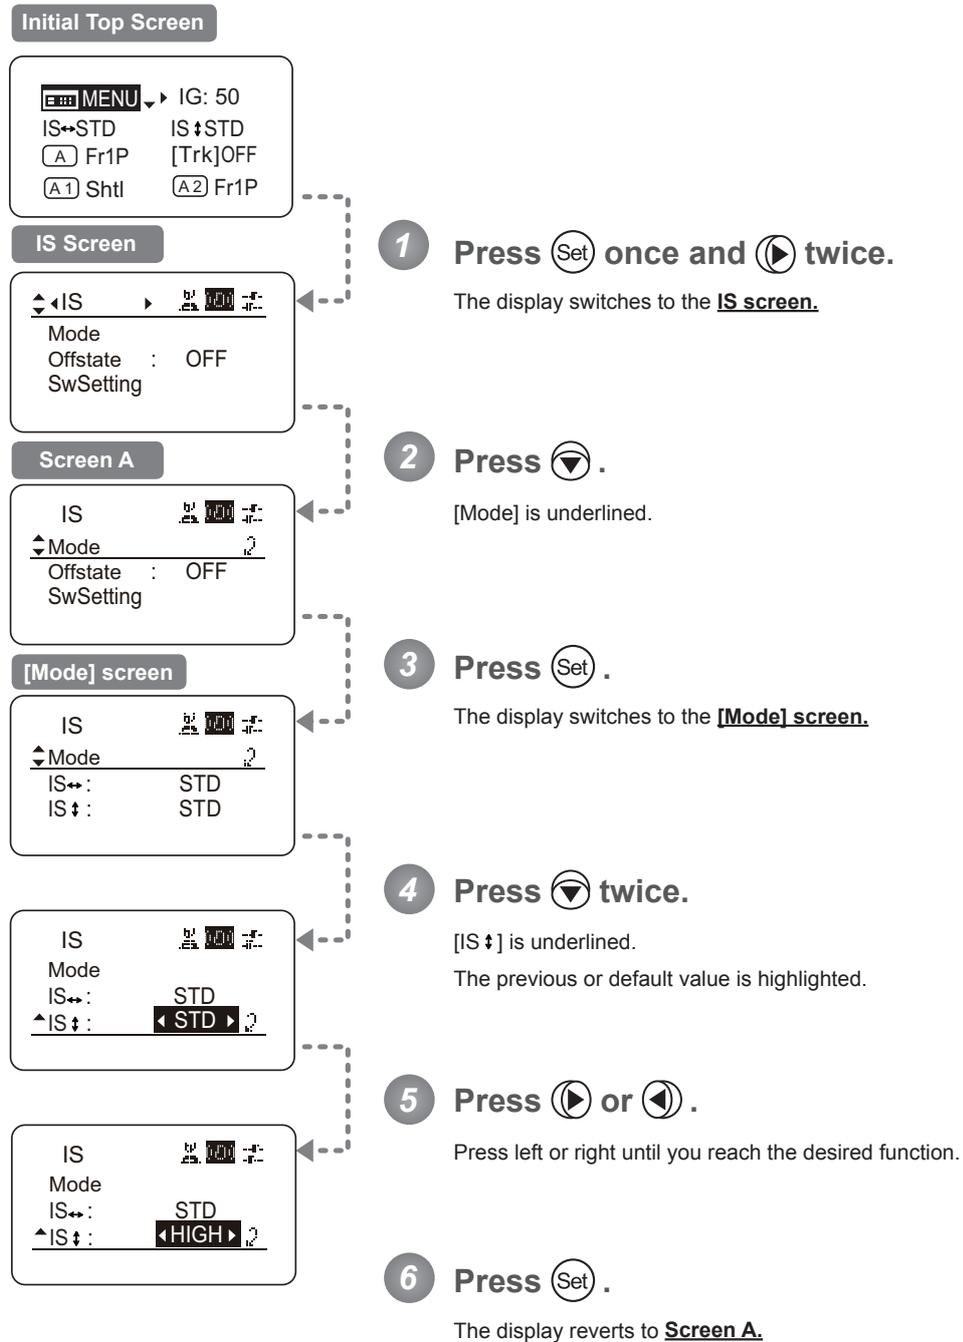

Options	^(D) STD	HIGH	OFF
Description	Mode that provides good panning operability	Mode that provides high vibration control performance from low frequencies to high frequencies	Disabled

 
(D) : Default value






Switching the Mode of when IS is OFF (HJ40ex10B, HJ40ex14B)

Specify the IS function of when the IS mode is switched to OFF, as needed.

Initial Top Screen

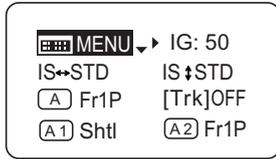

IS Screen

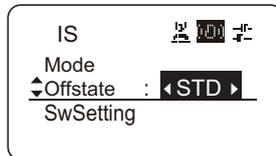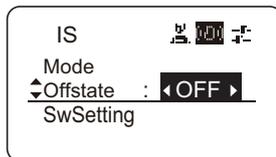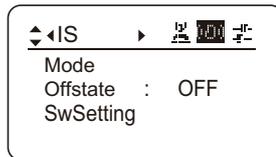

1 Press **Set** once and **▶** twice.

The display switches to the **IS screen**.

2 Press **▼** twice.

[OffState] is underlined.

3 Press **Set** and then **▶** or **◀**.

Press left or right to switch the function {OFF} or {STD}.

Options	STD	^(D) OFF
Description	Mode that provides good panning operability	Disabled


(D):Default value



Specifying IS Switch Functions (HJ40ex10B, HJ40ex14B)

(1) Specifying the Method of IS ON/OFF Selection

Specify the method of IS ON/OFF selection of when pressing the IS switch and the switch to which the IS functions are assigned, as needed.

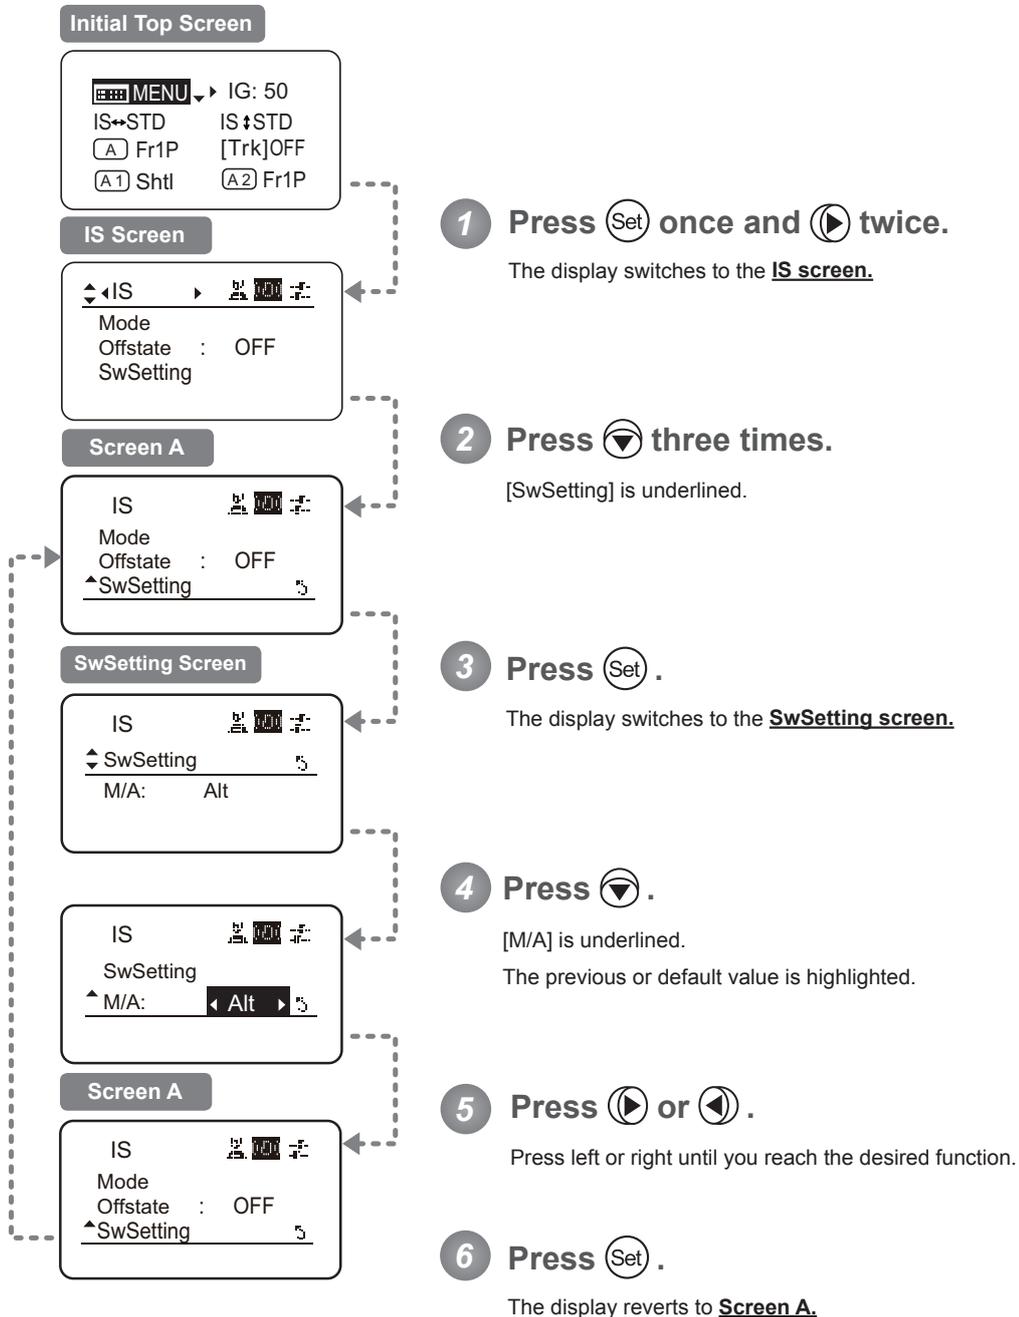

Options	^(D) Alt	Mom
Description	Alternate action in which ON/OFF is switched each time the switch is pressed	Momentary action in which the switch is turned ON only while being pressed

(D):Default value




(2) Switching the Polarity of the IS Switch

Switch the polarity of the IS switch and the switch to which the IS functions are assigned, as needed.


Important

First, specify Mom as the method of IS ON/OFF selection of when pressing the IS switch and the switch to which the IS functions are assigned.
(For instructions, see "Specifying the Method of IS ON/OFF Selection" on the previous page.)


Initial Top Screen

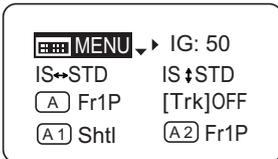



IS Screen

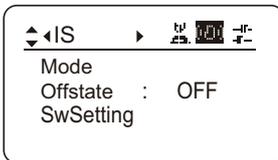


Screen A

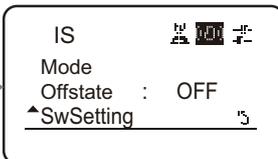

SwSetting Screen

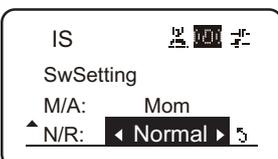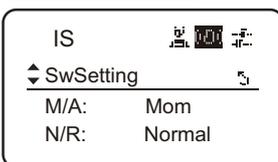

Screen A

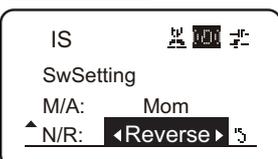

1 Press **Set** once and **▶** twice.

The display switches to the **IS screen**.

2 Press **▼** three times.

[SwSetting] is underlined.

3 Press **Set**.

The display switches to the **SwSetting screen**.

4 Press **▼** twice.

[N/R] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

Options	^(D) Normal	Reverse
Description	Momentary action in which the switch is turned ON only while being pressed	Momentary action in which the switch is turned OFF only while being pressed

(D):Default value



3.2.4 Preset Screen Settings

The following setting items can be configured on the Preset screen.

Switching What Frame Preset 1 Controls


Switching What Frame Preset 2 Controls

Specifying the Preset Mode Zoom Speed

Switching What Frame Preset 1 Controls

Switch what frame preset 1 controls, as needed.

- Zoom : Move the zoom position to the position in memory
- Focus : Move the focus position to the position in memory
- Z+F : Move the zoom and focus position to the position in memory

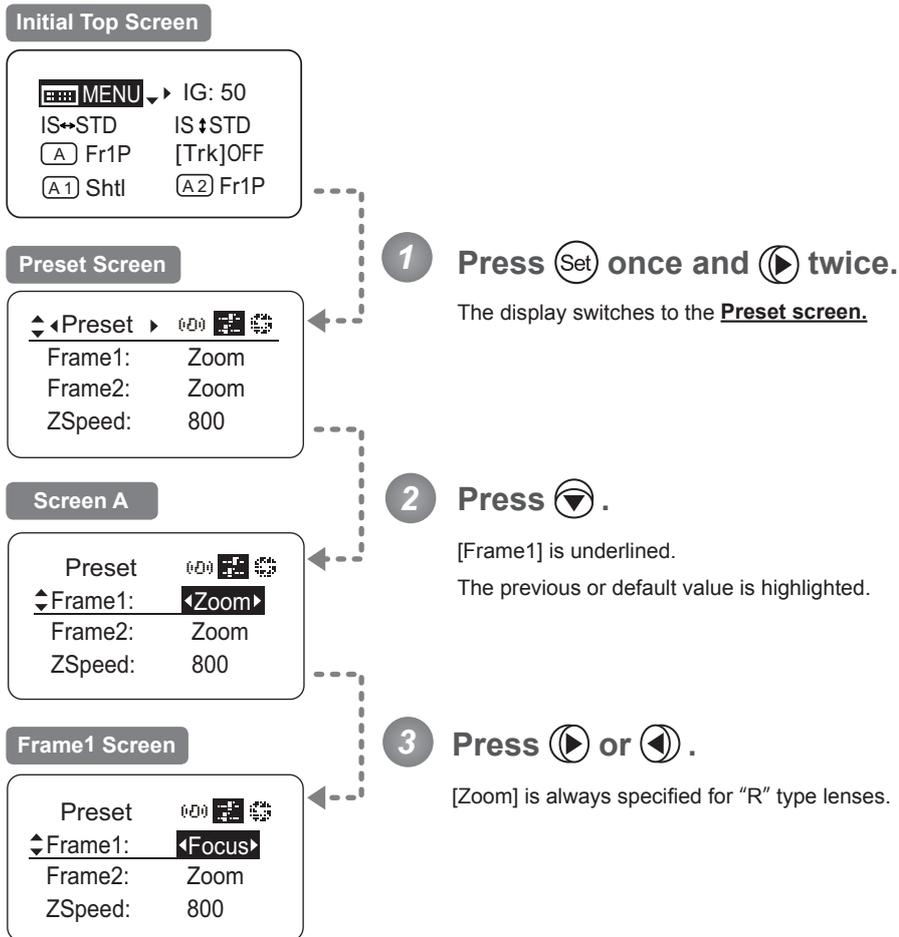

Options	^(D) Zoom	Focus	Z+F
Description	Control zooming	Control focusing	Control zooming and focusing


(D): Default value



Switching What Frame Preset 2 Controls

Switch what frame preset 2 controls, as needed.

- Zoom : Move the zoom position to the position in memory
- Focus : Move the focus position to the position in memory
- Z+F : Move the zoom and focus position to the position in memory

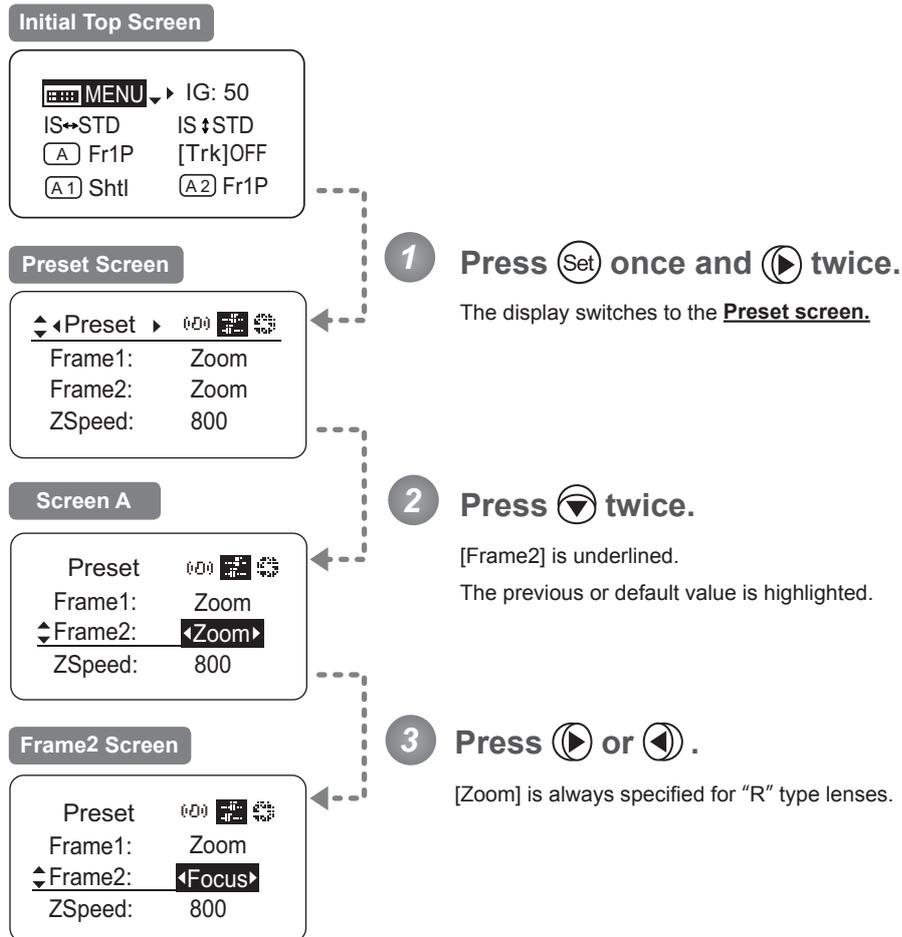

Options	^(D) Zoom	Focus	Z+F
Description	Control zooming	Control focusing	Control zooming and focusing

(D): Default value




Specifying the Preset Mode Zoom Speed

Configure the zoom speed from any position to the position in memory, as needed.

To adjust the value, use either the Memo button (refer to the Lens Manual) or display operations.

Regardless of the method of adjustment used, the most recent setting takes precedence.

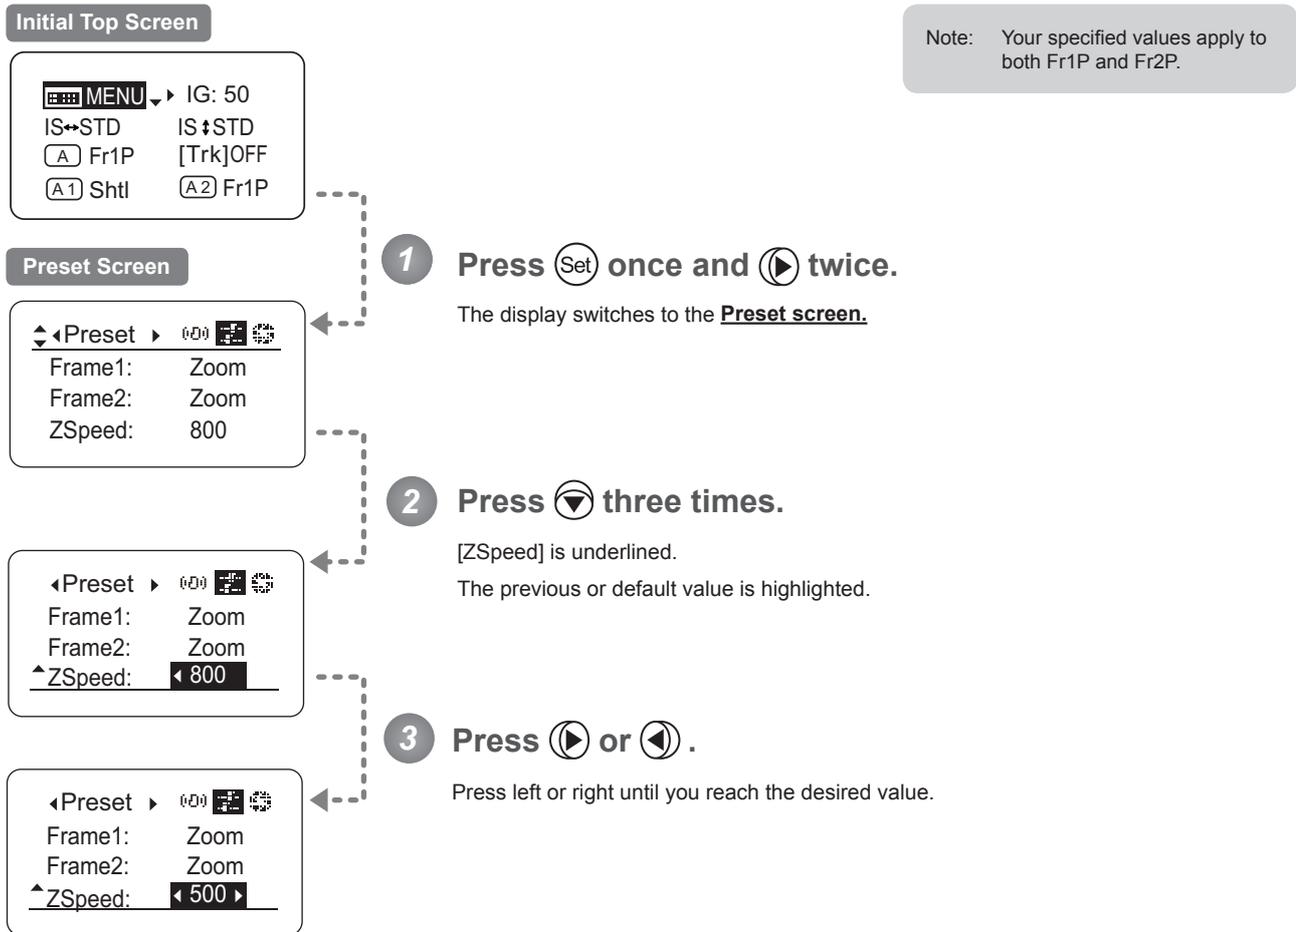

Options	1	to	(D) 800
Description	Slowest		Fastest

(D): Default value



3.2.5 Iris Screen Settings

The following setting items can be configured on the Iris screen.

Specifying Iris Gain

(1) Specifying Auto Iris Gain

Top

(2) Specifying Remote Iris Gain

Specifying Iris Torque

Top

Iris Compensation ON/OFF

Iris Close Detection ON/OFF

Items labeled **Top** can also be modified from the Top screen.

Specifying Iris Gain

(1) Specifying Auto Iris Gain

Top


Although this value is factory-set, it can be adjusted as needed.

To adjust the value, use either the auto iris gain adjustment trimmer (refer to the Lens Manual) or display operations.

Regardless of the method of adjustment used, the most recent setting takes precedence.

The same auto iris gain value applies to all users.


Initial Top Screen

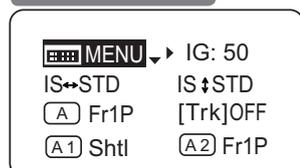




Iris Screen



Screen A

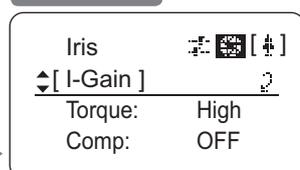

[I-Gain] Screen

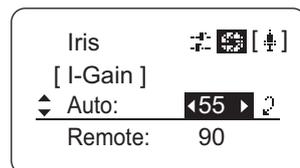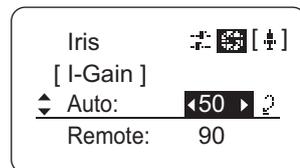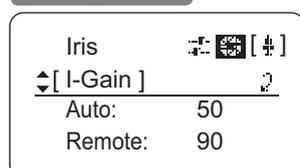

1 Press **Set** once and **▶** three times.

The display switches to the Iris screen.

2 Press **▼**.

[I-Gain] is underlined.

3 Press **Set**.

The display switches to the [I-Gain] screen.

4 Press **▼**.

[Auto] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to Screen A.

Note: Do the following when adjusting gain while checking iris operation.

- Confirm that the drive unit A/M switch is set to [Auto] mode.
- Set the camera iris mode to [Auto].

Note: As you look at the lens iris ring, set it to the position of maximum gain at which "focus hunting" does not occur.

Note: The current iris gain value is retained even if you reset other settings as described in "3.2.1 Resetting Values." For this reason, you will no longer be able to view the default setting. If necessary, make a note of the default setting before adjusting this value.

Options	01	to	99
Description	Minimum gain		Maximum gain


Default: Varies depending on the factory-set value, but corresponds to the value determined with the iris gain adjustment trimmer.




(2) Specifying Remote Iris Gain

Although this value is factory-set, it can be adjusted as needed.
The same remote iris gain value applies to all users.


Initial Top Screen

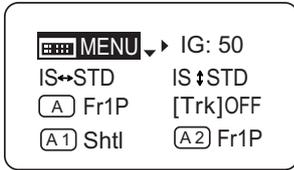




Iris Screen

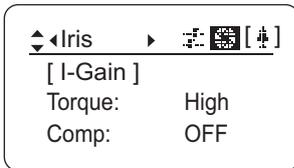

Screen A

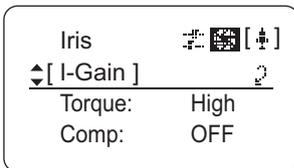

[I-Gain] Screen

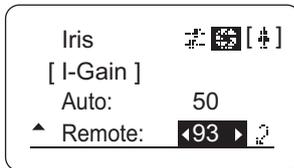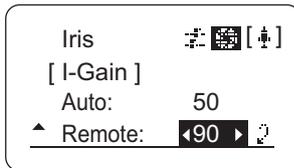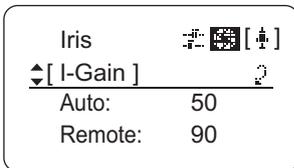

1 Press **Set** once and **▶** three times.

The display switches to the **Iris screen**.

2 Press **▼**.

[I-Gain] is underlined.

3 Press **Set**.

The display switches to the **[I-Gain] screen**.

4 Press **▼** twice.

[Remote] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.


The display reverts to **Screen A**.

Note: Do the following when adjusting gain while checking iris operation.
→ Confirm that the drive unit A/M switch is set to [Auto] mode.
Set the camera iris mode to [Remote].

Note: The current iris gain value is retained even if you reset other settings as described in "3.2.1 Resetting Values." For this reason, you will no longer be able to view the default setting. If necessary, make a note of the default setting before adjusting this value.

Options	01	to	99
Description	Minimum gain		Maximum gain

 
Default value: 90






Specifying Iris Torque Top

Specify the desired level of torque in manual control of the iris ring.

Initial Top Screen

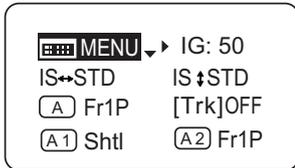

Iris Screen

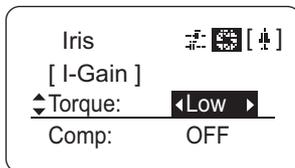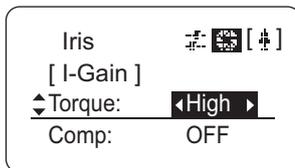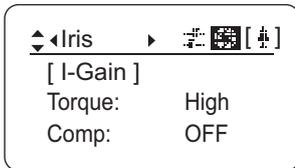

1 Press once and three times.

The display switches to the **Iris screen**.

2 Press twice.

[Torque] is underlined.

The previous or default function is highlighted.

3 Press or .

Press left or right to switch the function to {High} or {Low}.

Options	^(D) High	Low
Description	High torque	Low torque


(D): Default value






Iris Compensation ON/OFF

The amount of light decreases when an extender (2.0x) is used. You can specify a function that compensates by opening the iris by an amount equivalent to $f/2$.

Initial Top Screen

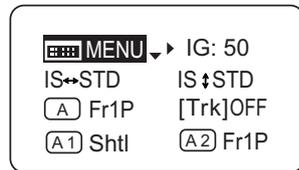

Iris Screen

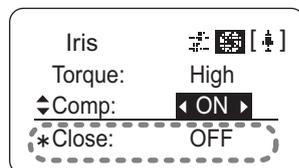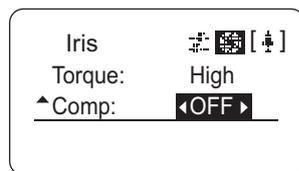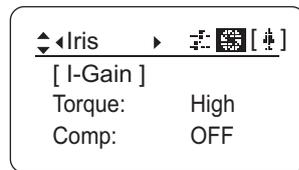

1 Press **Set** once and **▶** three times.

The display switches to the **Iris screen**.

2 Press **▼** three times.

[Comp] is underlined.

The previous or default function is highlighted.

3 Press **▶** or **◀**.


Press left or right to switch the function {ON} or {OFF}.

Note: The iris may not fully close in some cases when the iris compensation is set to ON while an extender (2.0x) is used. If so, activate detection as described in "Iris Close Detection ON/OFF."

*: Displayed when {Comp} is set to ON.

Options	ON	^(D) OFF
Description	Iris compensation	No iris compensation

 
(D): Default value





Iris Close Detection ON/OFF

The iris cannot be fully closed when correction is active and an extender (2.0x) is used. As a countermeasure, you can specify a function to detect iris close and close the iris as needed.

Initial Top Screen

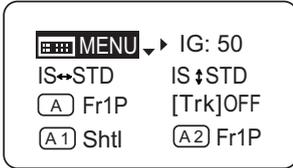

Iris Screen

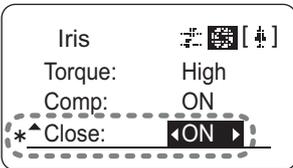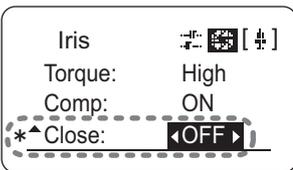

1 Press **Set** once and **▶** three times.

The display switches to the Iris screen.

2 Press **▼** four times.

[Close] is underlined.

The previous or default function is highlighted.

3 Press **▶** or **◀**.

Press left or right to switch the function {ON} or {OFF}.

Note: With some cameras, iris compensation may conflict with iris control by the camera, preventing correct iris close detection. If so, deactivate iris close detection.

*: Displayed when {Comp} is set to ON.

Note: Iris close is detected only when iris compensation is enabled.

Options	^(D) OFF	ON
Description	No close detection	Close detection

(D): Default value



3.2.6 Zoom Screen Settings


The following setting items can be configured on the Zoom screen.

- Specifying Seesaw Curve Responsiveness
- Specifying Analog Demand Curve Responsiveness
- Demand-Based Zoom Speed Adjustment ON/OFF


Specifying Seesaw Switch Responsiveness

Configure the responsiveness of zoom speed adjustment in response to pressing the zoom seesaw switch.
 (Note: Another screen is displayed when this setting is configured.)


Initial Top Screen

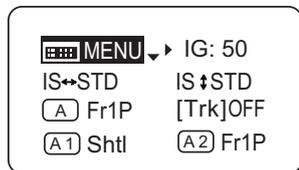




Zoom Screen

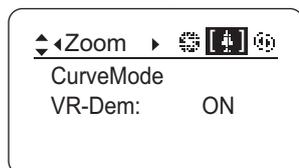

Screen A

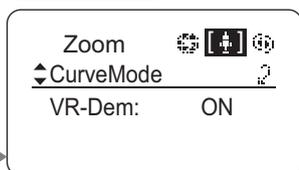

CurveMode Screen

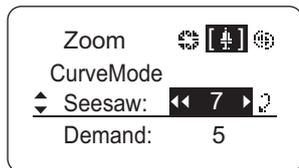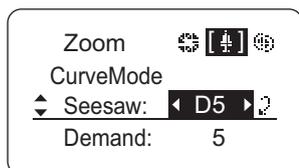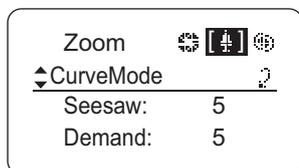

1 Press **Set** once and **▶** four times.

The display switches to the **Zoom screen**.

2 Press **▼**.

[CurveMode] is underlined.

3 Press **Set**.

The display switches to the **CurveMode screen**.

4 Press **▼**.


[Seesaw] is underlined.
 The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

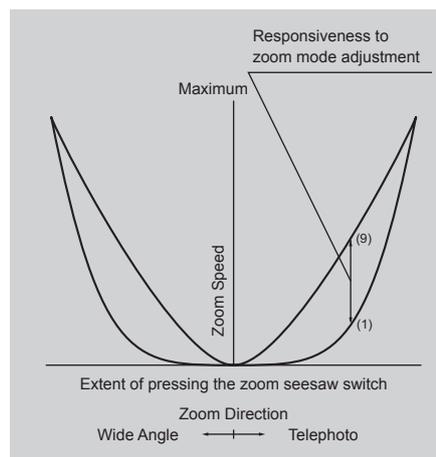

Options	1	2	3	4	(D) 5	6	7	8	9
---------	---	---	---	---	-------	---	---	---	---


(D): Default value




Specifying Analog Demand Responsiveness

Configure the responsiveness of zoom speed adjustment in response to pressing the analog demand thumb ring.
 (Note: Another screen is displayed when this setting is configured.)


Initial Top Screen

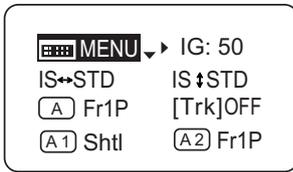




Zoom Screen

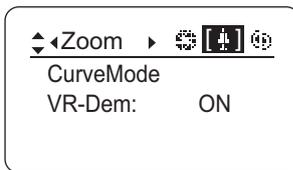

Screen A

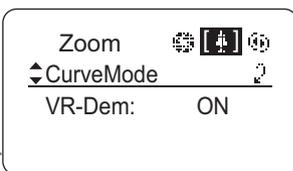

CurveMode Screen

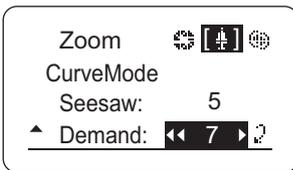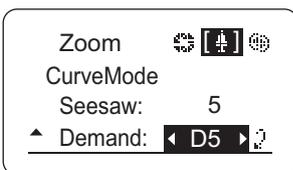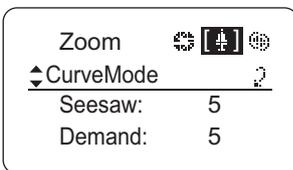

1 Press **Set** once and **▶** four times.

The display switches to the **Zoom screen**.

2 Press **▼**.

[CurveMode] is underlined.

3 Press **Set**.

The display switches to the **CurveMode screen**.

4 Press **▼** twice.


[Demand] is underlined.
 The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

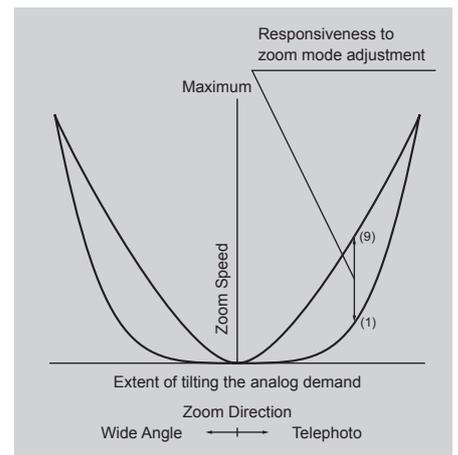

Options	1	2	3	4	(D) 5	6	7	8	9
---------	---	---	---	---	-------	---	---	---	---


(D): Default value






Demand-Based Zoom Speed Adjustment ON/OFF

Enable or disable adjustment of the maximum drive unit zoom speed based on the zoom demand.

Initial Top Screen

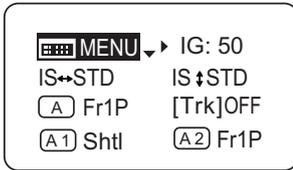

Zoom Screen

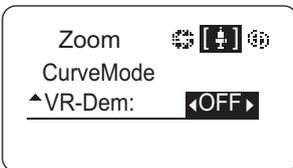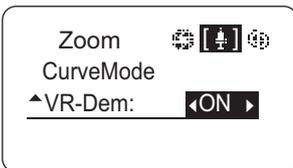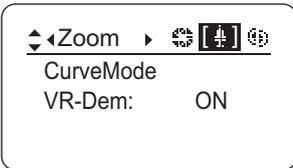

1 Press **Set** once and **▶** four times.

The display switches to the **Zoom screen**.

2 Press **▼** twice.

[VR-Dem] is underlined.

The previous or default function is highlighted.

3 Press **▶** or **◀**.

Press left or right to switch the function {ON} or {OFF}.

Options	^(D) ON	OFF
Description	Enabled	Disabled

(D): Default value



3.2.7 Focus Screen Settings

The following setting items can be configured on the Focus screen.


Specifying Focus Demand Curve Responsiveness

Specifying Focus Demand Responsiveness


Specify responsiveness in analog focus demand operations as needed.

Note: These settings take effect when the curve selection switch on the focus demand is set toward FAR.


Initial Top Screen

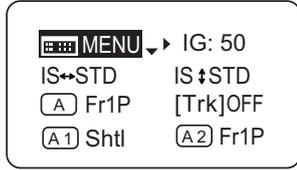




Focus Screen

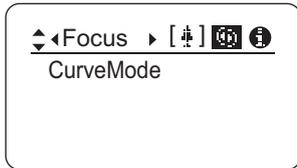

Screen A

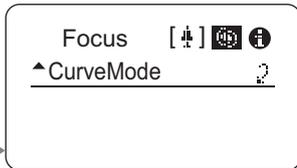

CurveMode Screen

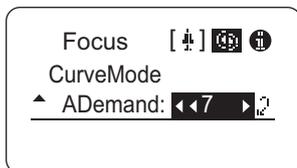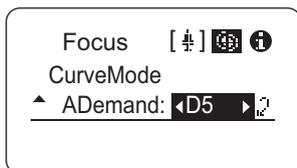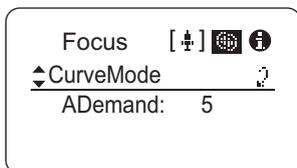

1 Press **Set** once and **Left Arrow** three times.

The display switches to the **Focus screen**.

2 Press **Down Arrow**.

[CurveMode] is underlined.

3 Press **Set**.

The display switches to the **CurveMode screen**.

4 Press **Down Arrow**.


[ADemand] is underlined.
The previous or default value is highlighted.

5 Press **Right Arrow** or **Left Arrow**.

Press left or right until you reach the desired function.


6 Press **Set**.

The display reverts to **Screen A**.

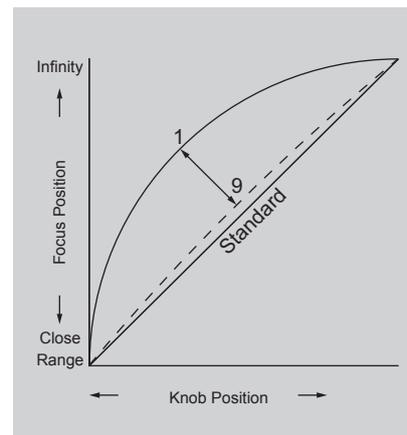

Options	1	to	9
Description	Large curve		Small curve

 Default value: 5



3.2.8 Info Screen Settings

The following setting items can be configured on the **Info screen**.

Specifying the 3D Function (For information on specifying the 3D function, see the instruction manual of the BC-100 3D cable.)


Specifying Encoder Output

Serial Communication with Camera ON/OFF




Specifying Encoder Output

Enable or disable encoder output as needed. Enabling output enables virtual connector output. For details, contact Canon or your dealer.

Initial Top Screen

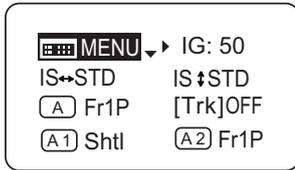

Info Screen

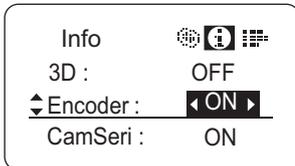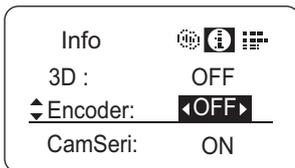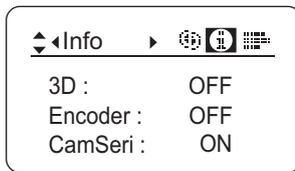

1 Press **Set** once and **Left Arrow** twice.

The display switches to the **Info screen**.

2 Press **Down Arrow** twice.


[Encoder] is underlined.

3 Press **Right Arrow** or **Left Arrow**.

Press left or right to switch the function {ON} or {OFF}.

Options	^(D) OFF	ON
Description	Output disabled	Output enabled

 (D): Default value




Serial Communication with Camera ON/OFF

Two types of camera–lens interfaces are available: analog control or control via serial communication. This setting enables you to switch between auto control detection and analog control.


By default, this setting is ON, enabling auto detection of whether serial or analog control is used.

To restrict the interface to analog control, set it to OFF.

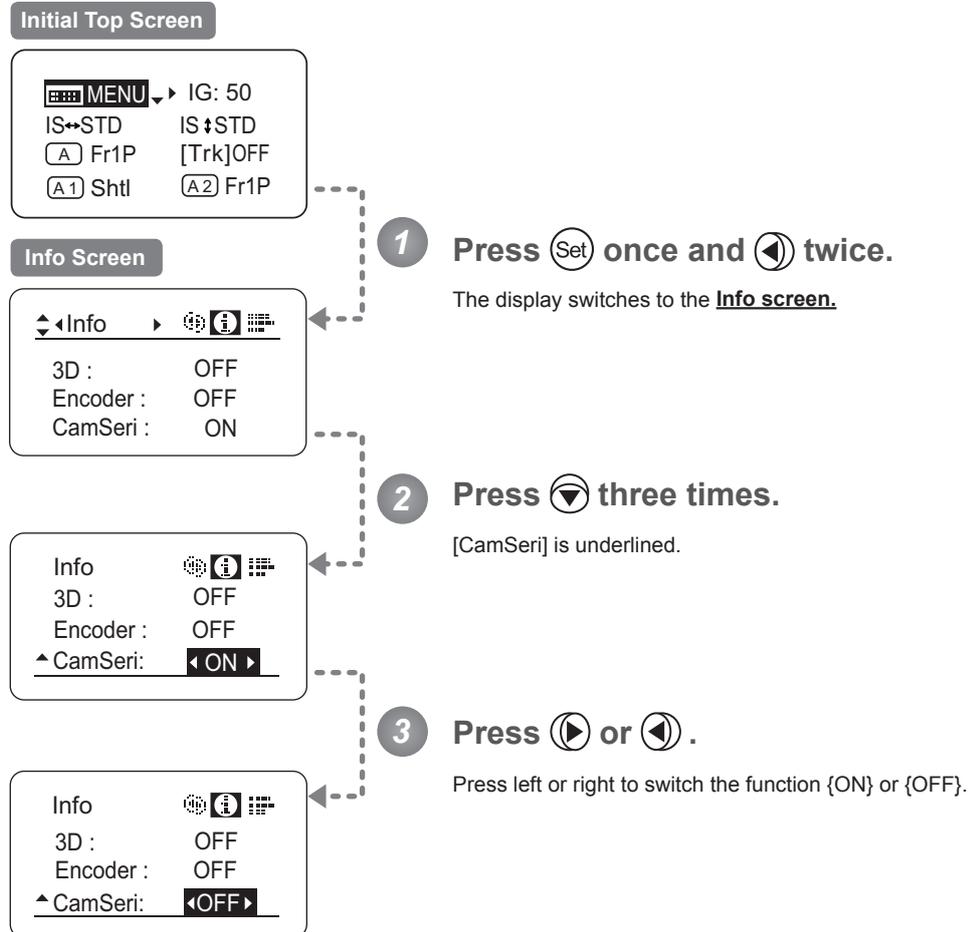

Options	^(D) ON	OFF
Description	Serial communication with the camera Enabled	Serial communication with the camera Disabled

 (D): Default value



3.2.9 Fol. Screen Settings


The following setting items can be configured on the **Fol. screen.**

Viewing Lens Follow Settings (Iris, Zoom, Focus)


Viewing Lens Follow Settings (Iris, Zoom, Focus)

Indicates values in the full range of mechanical iris, zoom, and focus operations, expressed as relative values in the range of 0–1000.

Initial Top Screen

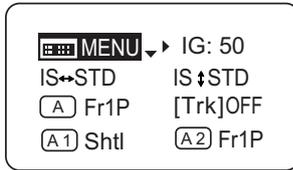

Fol. Screen

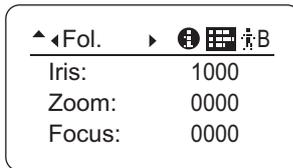

1

Press **Set** and then **◀**.

The display switches to the **Fol. screen**, showing relative follow iris, zoom, and focus values.


Note: As long as the **Fol. screen** is shown, the display will not turn off automatically after 2 minutes even if it is left idle. To turn off the display, press the Display switch.



3.3 List of Settings

	Default Value	Options
Top		
MENU		To *1 on the next page
IG	50	01-99
IS ↔	STD	STD / HIGH / OFF
IS ⇕	STD	STD / HIGH / OFF
[A]	Fr1P	VTR / RET / Fr1P/ Fr1F / Fr2P / Fr2F / Sped / Shtl / IS / NON
[Trk]	OFF	OFF / ON
[A1]	Shtl	VTR / RET / Fr1P/ Fr1F / Fr2P / Fr2F / Sped / Shtl / IS / NON
[A2]	Fr1P	VTR / RET / Fr1P/ Fr1F / Fr2P / Fr2F / Sped / Shtl / IS / NON
[I-Tq]	H	H / L
[Z.M.]		
		To *2 on the next page

Escape Operation	Jump to user 0 setting status	Hold down both the Display switch and Set key for at least 2 seconds.
------------------	-------------------------------	---

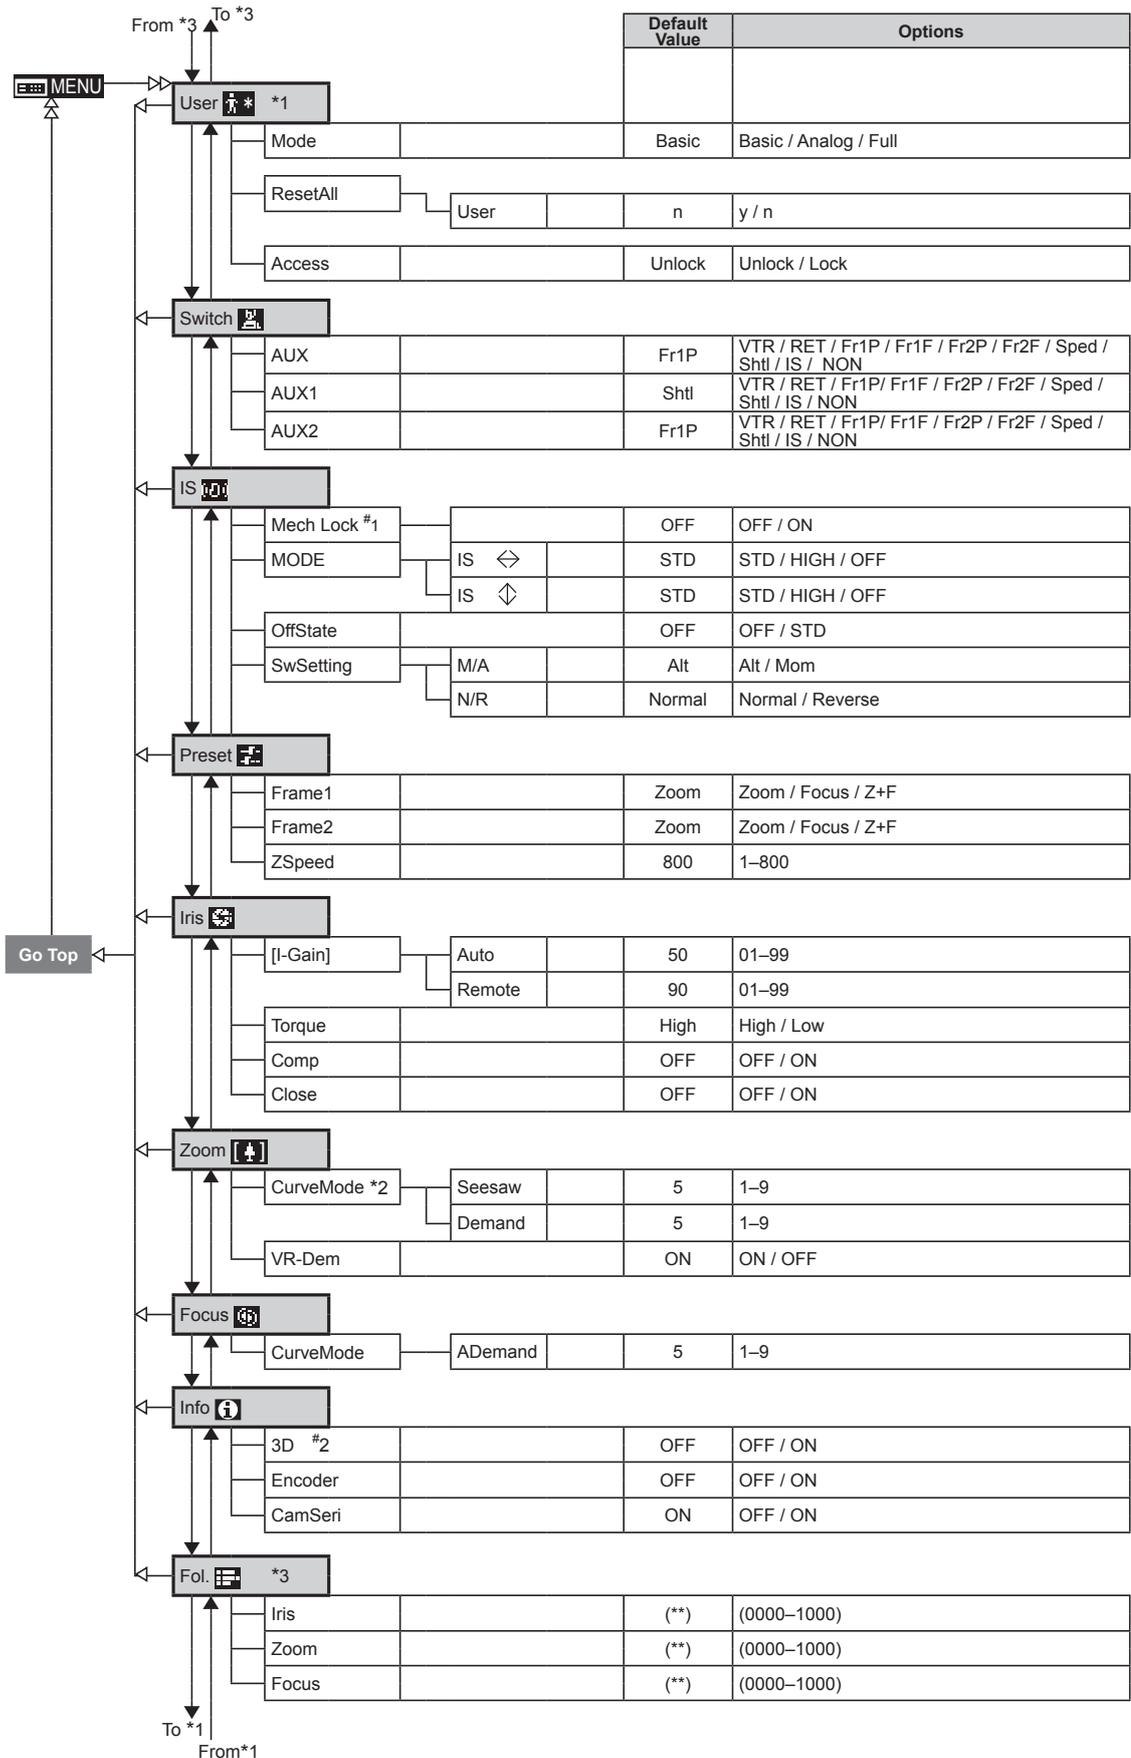

⏪ : Set key operation	↓ : Right key operation
⏩ : Up key operation	↑ : Left key operation

#1 : Only for CJ45ex9.7B, CJ45ex13.6B
#2 : For information on specifying the 3D communication, see the "3D Cable Instruction Manual."
() : Indicates values that cannot be changed.

Memo

4

Operation in Full Mode



4. Operation in Full Mode

4.1 Configuration from the Top Screen

To access the **Top screen**, press the Display switch.

A total of 16 items can be configured on the **Top screen** in Full mode. The first screen displayed is referred to as the **Initial Top screen**. Status of some items can be checked simply by accessing this screen.


Initial Top Screen in Full Mode

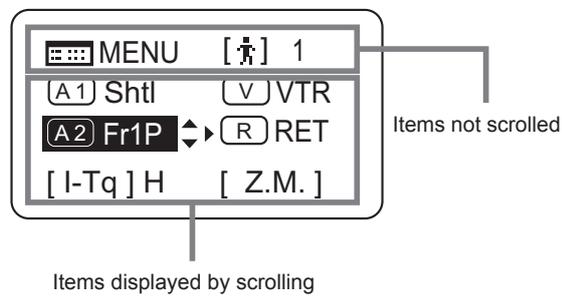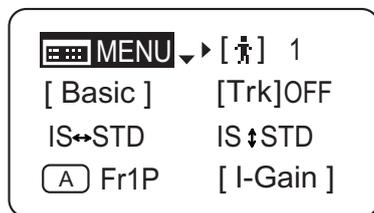

4.1.1 Selecting Full Mode

Basic mode is the default mode, but Full mode can be accessed as follows.


Switching from Basic to Full Mode

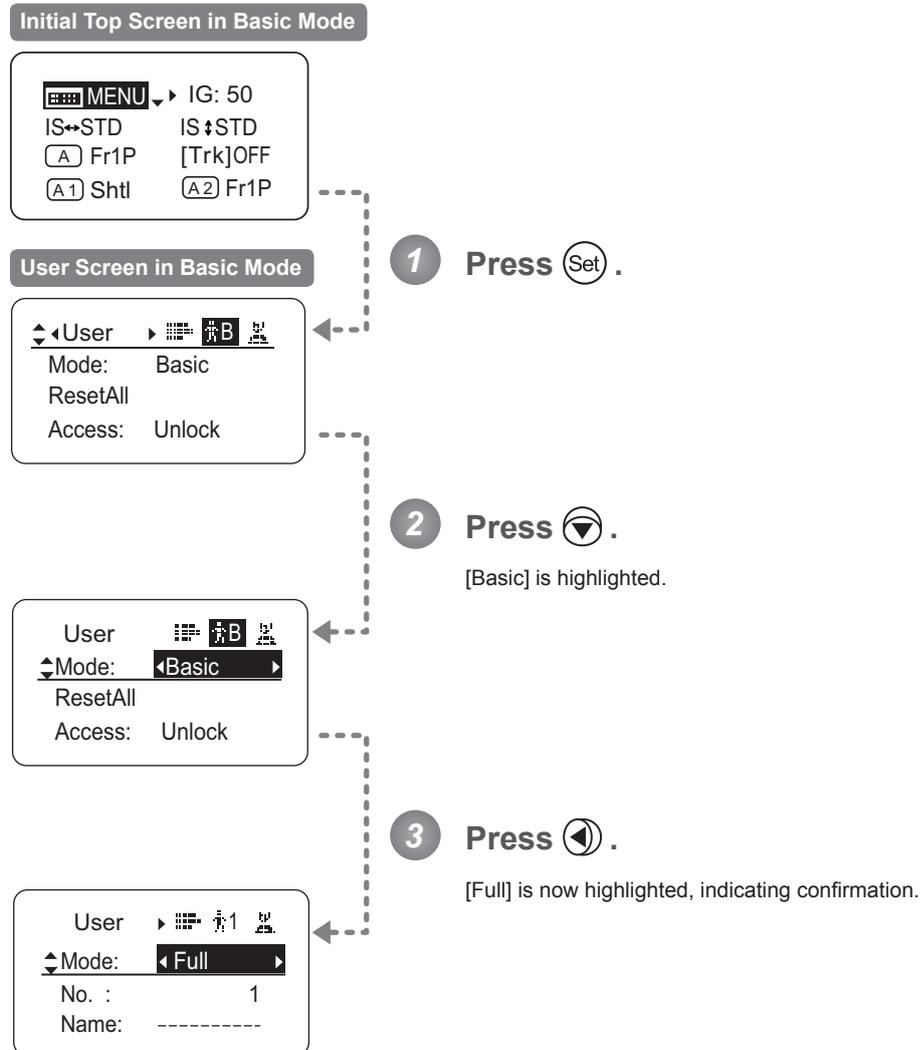

4.1.2 Top Screen

A total of 16 items can be configured on the **Top screen** in Full mode, and the first screen shown is referred to as the **Initial Top screen**, which displays 8 items.

The other 8 can be accessed by pressing down to scroll down the screen. (See the following figure.)
 Status of some items can be checked simply by accessing this screen. (Shown in the figure below.^{*1})

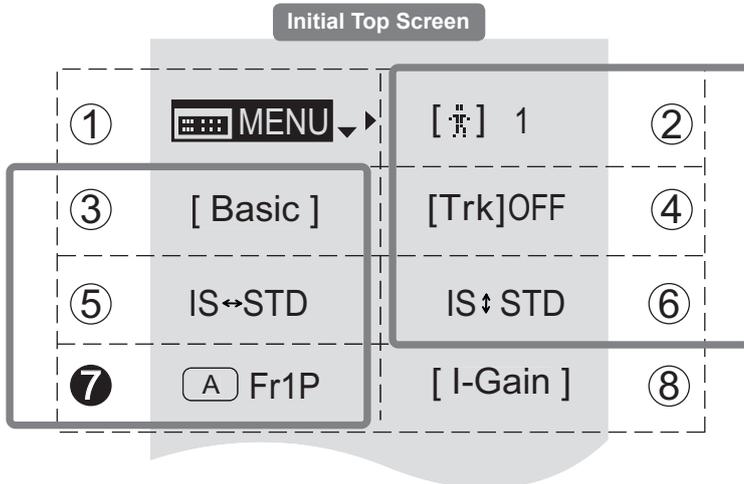


*1

Inside  : Items that show the current setting status.

Example:  **Shtl** indicates that the AUX1 switch is assigned to the Shuttle function.

 : White numbers against a black background indicate the number of the switch on a drive unit to which the function is assigned.

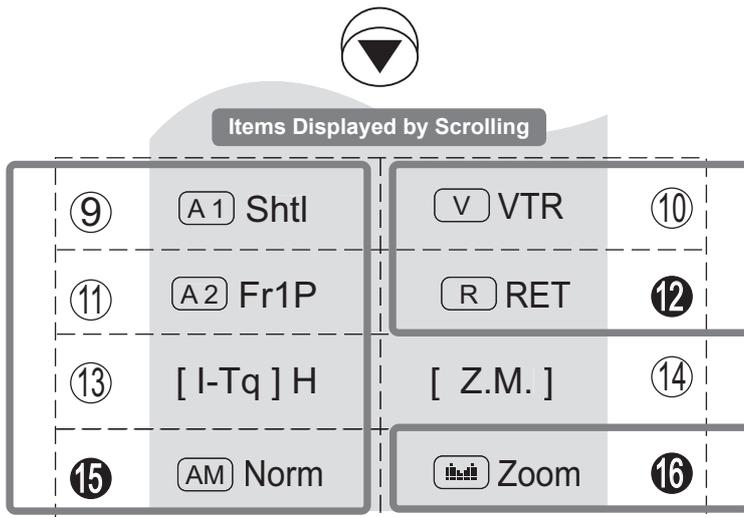

①  **Menu screen**

See "4.2 Configuration from the Menu Screen."

②  **User**

Adjust settings for up to ten users (0–9), to distinguish settings by user. Switch users from this screen, either to use or change the settings.

See "4.1.3 Switching Users."

③ **[Basic] Switching to Basic Mode**

Switch to Basic mode as needed.

See "4.1.4 Switching to Basic Mode."

④ **[Trk] Zoom tracking**

Switch to ON when using zoom tracking.

See "4.1.5 Zoom Tracking ON/OFF."

⑤ **IS↔**

Switch the IS mode of the horizontal direction.

See "4.1.6 Switching the IS Mode of the Horizontal Direction."

⑥ **IS↑**

Switch the IS mode of the vertical direction.

See "3.1.7 Switching the IS Mode of the Vertical Direction."

⑦ **A AUX switch**

By default, the AUX switch for a drive unit is assigned to the "Frame Preset 1" function, but it can be reassigned as needed.

See "4.1.8 Assigning Functions to the AUX Switch."

⑧ **[I-Gain] Iris gain**

Adjust the auto iris gain or the remote iris gain value as needed.

See "4.1.9 Specifying Auto Iris Gain."

⑨ **A 1 AUX1 switch**

By default, the AUX1 switch for a zoom demand is assigned to the {Shuttle} function, but it can be reassigned as needed.

See "4.1.10 Assigning Functions to the AUX1 Switch."

⑩ **V VTR switch**

By default, the VTR switch for a drive unit is assigned to the {VTR} function, but it can be reassigned as needed.

See "4.1.11 Assigning Functions to the VTR Switch."

⑪ **A 2 AUX2 switch**

By default, the AUX2 switch for a zoom demand is assigned to the {Frame Preset 1} function, but it can be reassigned as needed.

See "4.1.12 Assigning Functions to the AUX2 Switch."

⑫ **R RET switch**

By default, the RET switch for a drive unit is assigned to the {Return} function, but it can be reassigned as needed.

See "4.1.13 Assigning Functions to the RET Switch."

⑬ **[I-Tq] Iris torque**

Adjust the level of torque in manual control of the iris ring as needed.

See "4.1.14 Specifying Iris Torque."

⑭ **[Z.M.] Zoom curve mode**

Adjust zoom speed in response to pressing the zoom seesaw switch or tilting the analog demand thumb ring.

See "4.1.15 Specifying Zoom Curve Mode."

⑮ **AM Iris A/M switch**

Adjust movement of the iris A/M switch on the drive unit.

See "4.1.16 Specifying Iris A/M Switch."

⑯  **Seesaw**

Enable iris control using the zoom seesaw switch.

See "4.1.17 Assigning Functions to the Seesaw."

4.1.3 Switching Users



Settings for users 0–9 can be configured in Full mode.

User 1–9

Configure advanced settings for each user needed. Settings for the users can then be saved.

User 0


User 0 is the default user. Thus, for this user you can adjust settings temporarily but not save them.

Setting information is cleared when you switch to users 1–9 or turn the lens off. User 0 is used if you perform an escape operation. For details, see “4.1.16 Escape Operation.” Selecting user 0 restores the default settings, except for the auto and remote iris gain values and encoder output setting.

Switch to the desired user (0–9) from the **Top screen**.


Configure advanced settings for these users from the **Menu screen**. See “4.2 Configuration from the Menu Screen.”

Initial Top Screen

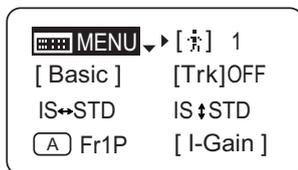

1 Press .

The previous or default value is highlighted.

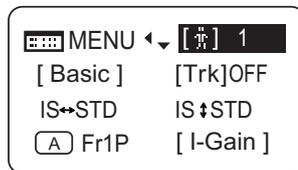

2 Press .

The display starts blinking.




3 Press or .

Press left or right until you reach the desired value.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

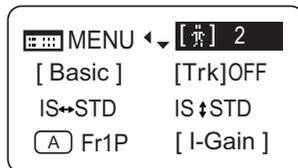

Options	0	(D) 1	2	3	4	5	6	7	8	9
Save Settings	Not supported Although settings cannot be saved, they can be changed temporarily. Switching users or turning the lens off will restore default values.	Can be saved for each user								

(D): Default value




4.1.4 Switching to Basic Mode

[Basic]

Switch to Basic mode from the **Top screen** as needed.

Switching from Full to Basic Mode

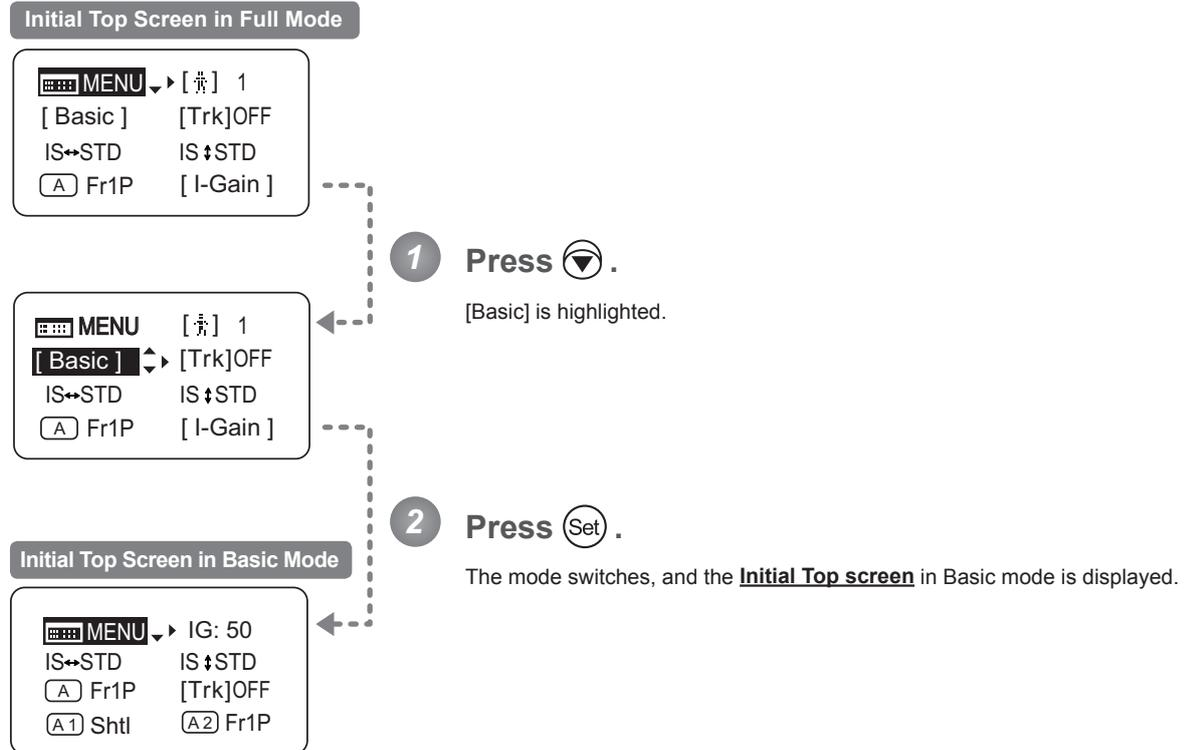

4.1.5 Zoom Tracking ON/OFF

[Trk]


Activate or deactivate zoom tracking as needed.

Important

First, switch to the user for whom the settings apply.


(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

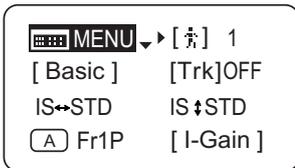

1 Press and then .

The previous or default value is highlighted.

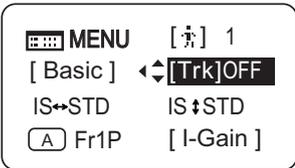

2 Press .

The display starts blinking.

[Trk]OFF


3 Press or .

Press left or right to switch the function {ON} or {OFF}.

[Trk]ON

4 Press .

The display changes from blinking to highlighted, indicating confirmation.

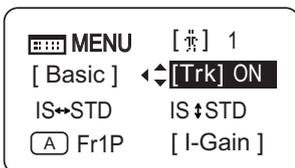

Options	^(D) OFF	ON
---------	--------------------	----

(D): Default value





4.1.6 Switching the IS Mode of the Horizontal Direction

[IS ↔]


Switch the IS mode of the horizontal direction.

Initial Top Screen

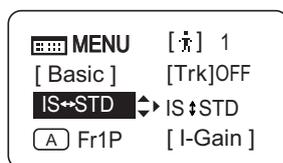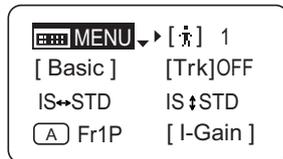

IS↔STD

IS↔HIGH

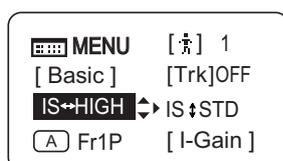

1 Press twice.

The previous or default value is highlighted.

2 Press .

The display starts blinking.

3 Press or .

Press left or right until you reach the desired mode.

4 Press .

The display changes from blinking to highlighted, indicating confirmation.

Options	^(D) STD	HIGH	OFF
---------	--------------------	------	-----



(D): Default value



4.1.7 Switching the IS Mode of the Vertical Direction[IS ⇅]


Switch the IS mode of the vertical direction.

Initial Top Screen

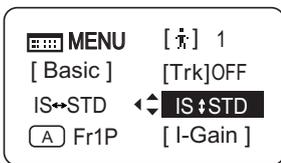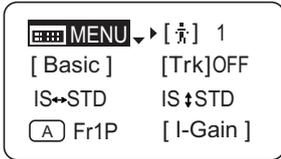

IS⇅STD

IS⇅HIGH

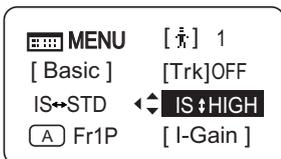

1 Press **twice and** **once.**

The previous or default function is highlighted.

2 Press .

The display starts blinking.

3 Press **or** .

Press left or right until you reach the desired mode.

4 Press .

The display changes from blinking to highlighted, indicating confirmation.

Options	^(D) STD	HIGH	OFF
---------	--------------------	------	-----

(D): Default value



4.1.8 Assigning Functions to the AUX Switch


A

Assign your desired functions to the AUX switch.

Important


First, switch to the user for whom the settings apply.
(For instructions, see “4.1.3 Switching Users” or “4.2.1 User Screen Settings: Switching Users.”)

Initial Top Screen

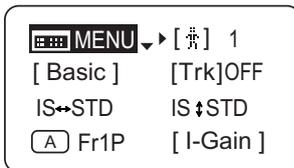

1 Press twice.

The previous or default function is highlighted.

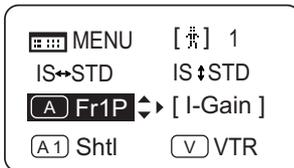

2 Press .

The display starts blinking.




3 Press or .

Press left or right until you reach the desired function.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

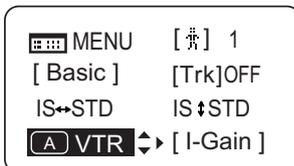

Options	^(D) Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value



4.1.9 Specifying Iris Gain

[I-Gain]

Specifying Auto Iris Gain

Although this value is factory-set, it can be adjusted as needed.

To adjust the value, use either the auto iris gain adjustment trimmer (refer to the Lens Manual) or display operations.

Regardless of the method of adjustment used, the most recent setting takes precedence.

The same auto iris gain value applies to all users, regardless of the current user. Thus, there is no need to switch users in advance. Unlike most other setting adjustments, any changes to this setting also apply to user 0.

Initial Top Screen

```

MENU [ 1
[ Basic ] [Trk]OFF
IS↔STD IS↑STD
[A] Fr1P [ I-Gain ]
            
```

Screen A

```

MENU [ 1
IS↔STD IS↑STD
[A] Fr1P [ I-Gain ]
[A1] Shtl [V] VTR
            
```

[I-Gain] Screen

```

Iris [ 1
↑↓ [ I-Gain ]
Auto: 50
Remote: 90
            
```

```

Iris [ 1
[ I-Gain ]
Auto: 50
Remote: 90
            
```

```

Iris [ 1
[ I-Gain ]
Auto: 71
Remote: 90
            
```

- 1 Press three times and once.
Your selection is now highlighted.
- 2 Press .
The display switches to the **[I-Gain] screen**.
- 3 Press .
[Auto] is underlined.
The previous or default value is highlighted.
- 4 Press or .
Press left or right until you reach the desired value.
- 5 Press .
The display reverts to **Screen A**.

Note: Do the following when adjusting gain while checking iris operation.

- Confirm that the drive unit A/M switch is set to [Auto] mode.
- Set the camera iris mode to [Auto].

Note: As you look at the lens iris ring, set it to the position of maximum gain at which "focus hunting" does not occur.

Note: The current iris gain value is retained even if you reset other settings as described in "4.2.1 Resetting Values." For this reason, you will no longer be able to view the default setting. If necessary, make a note of the default setting before adjusting this value.

Options	01	to	99
Description	Minimum gain		Maximum gain


Default: Varies depending on the factory-set value, but corresponds to the value determined with the iris gain adjustment trimmer.



Specifying Remote Iris Gain

Although this value is factory-set, it can be adjusted as needed.

The same remote iris gain value applies to all users, regardless of the current user. Thus, there is no need to switch users in advance. Unlike most other setting adjustments, any changes to this setting also apply to user 0.

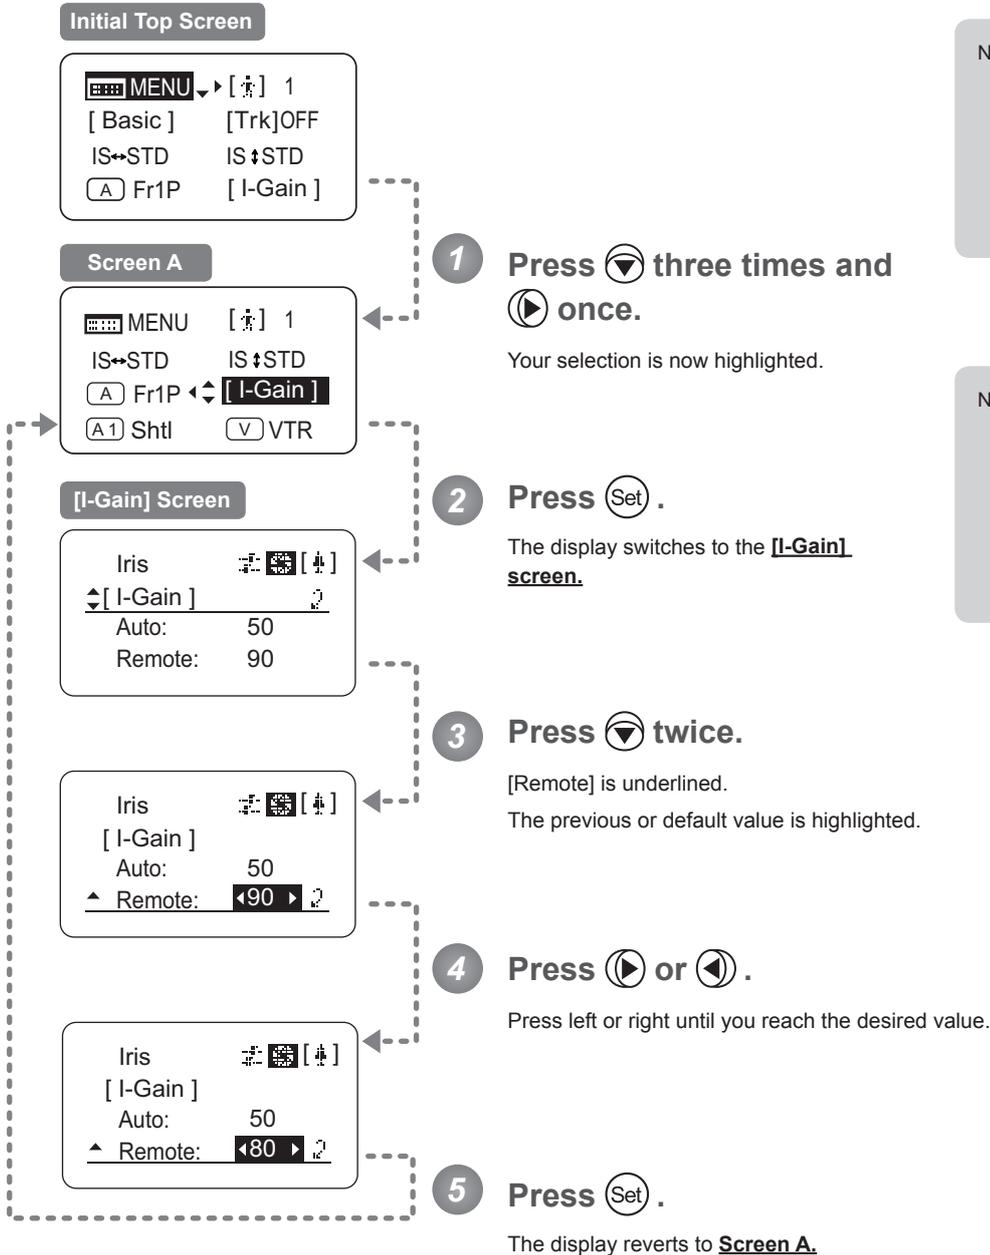

Note: Do the following when adjusting gain while checking iris operation.

- Confirm that the drive unit A/M switch is set to [Auto] mode.
- Set the camera iris mode to [Remote].

Note: The current iris gain value is retained even if you reset other settings as described in "4.2.1 Resetting Values." For this reason, you will no longer be able to view the default setting. If necessary, make a note of the default setting before adjusting this value.

Options	01	to	99
Description	Minimum gain		Maximum gain

Default value: 90



4.1.10 Assigning Functions to the AUX1 Switch


A1

Assign your desired functions to the AUX1 switch.

Important


First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

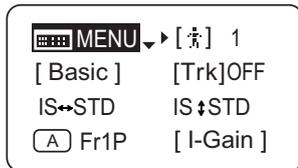

1 Press three times.

The previous or default function is highlighted.

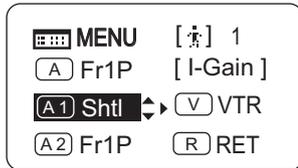

2 Press .

The display starts blinking.




3 Press or .

Press left or right until you reach the desired function.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

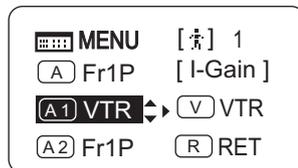

Options	Fr1P	Fr1F	Fr2P	Fr2F	Sped	^(D) Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value



4.1.11 Assigning Functions to the VTR Switch




Assign your desired functions to the VTR switch.

Important


First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

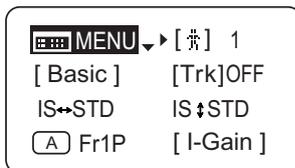

1 Press four times and once.

The previous or default function is highlighted.

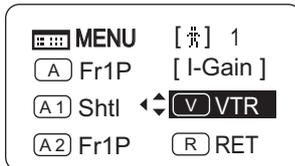

2 Press .

The display starts blinking.




3 Press or .

Press left or right until you reach the desired function.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

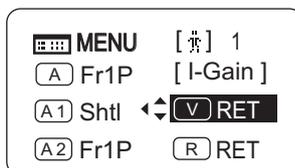

Options	^(D) VTR	RET	Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS
Description	VTR switch	RET switch	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch

(D): Default value



4.1.12 Assigning Functions to the AUX2 Switch


A2

Assign your desired functions to the AUX2 switch.

Important


First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

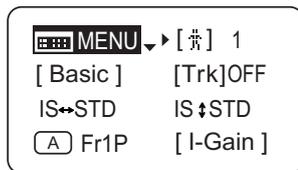

1 Press five times.

The previous or default function is highlighted.

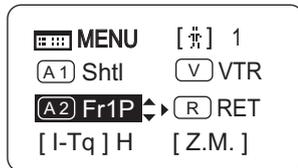

2 Press .

The display starts blinking.




3 Press or .

Press left or right until you reach the desired function.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

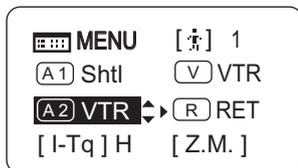

Options	(D) Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value



4.1.13 Assigning Functions to the RET Switch

R


Assign your desired functions to the RET switch.

Important

First, switch to the user for whom the settings apply.


(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

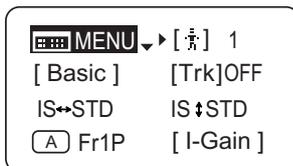

1 Press five times and once.

The previous or default function is highlighted.

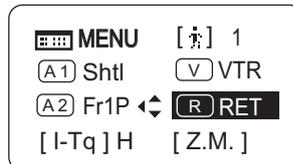

2 Press .

The display starts blinking.




3 Press or .

Press left or right until you reach the desired function.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

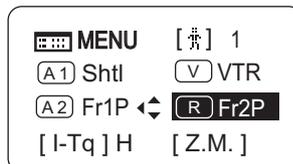

Options	VTR	^(D) RET	Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS
Description	VTR switch	RET switch	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch

(D): Default value



4.1.14 Specifying Iris Torque

[I-Tq]


Specify the desired level of torque in manual control of the iris ring.

Important

First, switch to the user for whom the settings apply.


(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

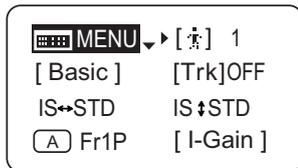

1 Press six times.

The previous or default function is highlighted.

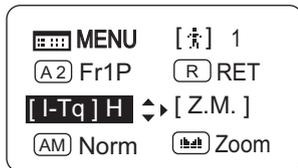

2 Press .

The display starts blinking.

[I-Tq] H


3 Press or .

Press left or right to switch the function to {H} or {L}.

[I-Tq] L

4 Press .

The display changes from blinking to highlighted, indicating confirmation.

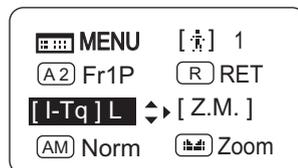

Options	^(D) H	L
Description	High torque	Low torque

(D): Default value



4.1.15 Specifying Zoom Curve Mode

[Z.M.]

Specifying Seesaw Switch Responsiveness

Configure the responsiveness of zoom speed adjustment in response to pressing the zoom seesaw switch.

(Note: Another screen is displayed when this setting is configured.)

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

MENU [] 1
[Basic] [Trk]OFF
IS↔STD IS±STD
[A] Fr1P [I-Gain]

Screen A

MENU [] 1
[A2] Fr1P [R] RET
[I-Tq] H [Z.M.]
[AM] Norm Zoom

CurveMode Screen

Zoom []
CurveMode
Seesaw: 5
Demand: 5

Zoom []
CurveMode
Seesaw: [D5]
Demand: 5

Zoom []
CurveMode
Seesaw: [3]
Demand: 5

1 Press six times and once.

Your selection is now highlighted.

2 Press .

The display switches to the **CurveMode screen**.

3 Press .

[Seesaw] is underlined.


The previous or default value is highlighted.

4 Press or .

Press left or right until you reach the desired value.

5 Press .

The display reverts to **Screen A**.

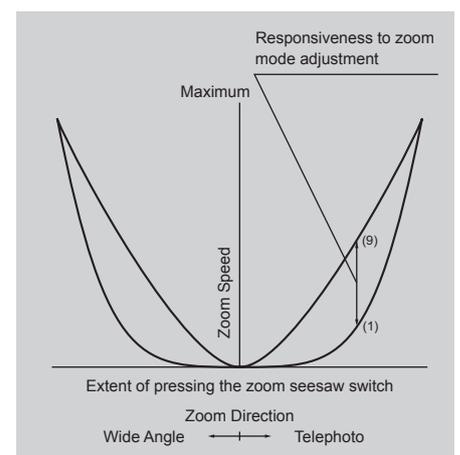

Options	1	2	3	4	(D) 5	6	7	8	9
---------	---	---	---	---	-------	---	---	---	---

(D): Default value

MENU →  × 6 →  → [Z.M.] →  →  →  or  → 


Specifying Analog Demand Responsiveness

Configure the responsiveness of zoom speed adjustment in response to pressing the analog demand thumb ring.
 (Note: Another screen is displayed when this setting is configured.)


Important

First, switch to the user for whom the settings apply.
 (For instructions, see “4.1.3 Switching Users” or “4.2.1 User Screen Settings: Switching Users.”)




Initial Top Screen

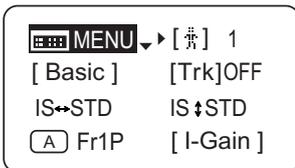

Screen A

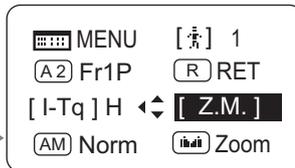

CurveMode Screen

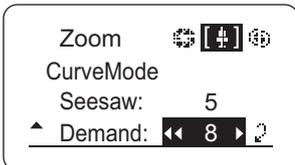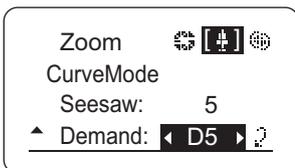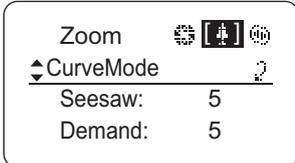

1 Press six times and once.

Your selection is now highlighted.

2 Press .

The display switches to the **CurveMode screen**.

3 Press .


[Demand] is underlined.
 The previous or default value is highlighted.

4 Press or .

Press left or right until you reach the desired value.

5 Press .

The display reverts to **Screen A**.

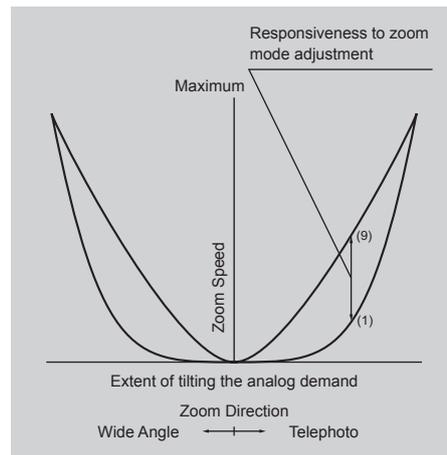

Options	1	2	3	4	(D) 5	6	7	8	9
---------	---	---	---	---	-------	---	---	---	---

(D): Default value



4.1.16 Specifying Iris A/M Switch


AM

The iris A/M switch on the top of the drive unit can be programmed to activate a function of your choice.

Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

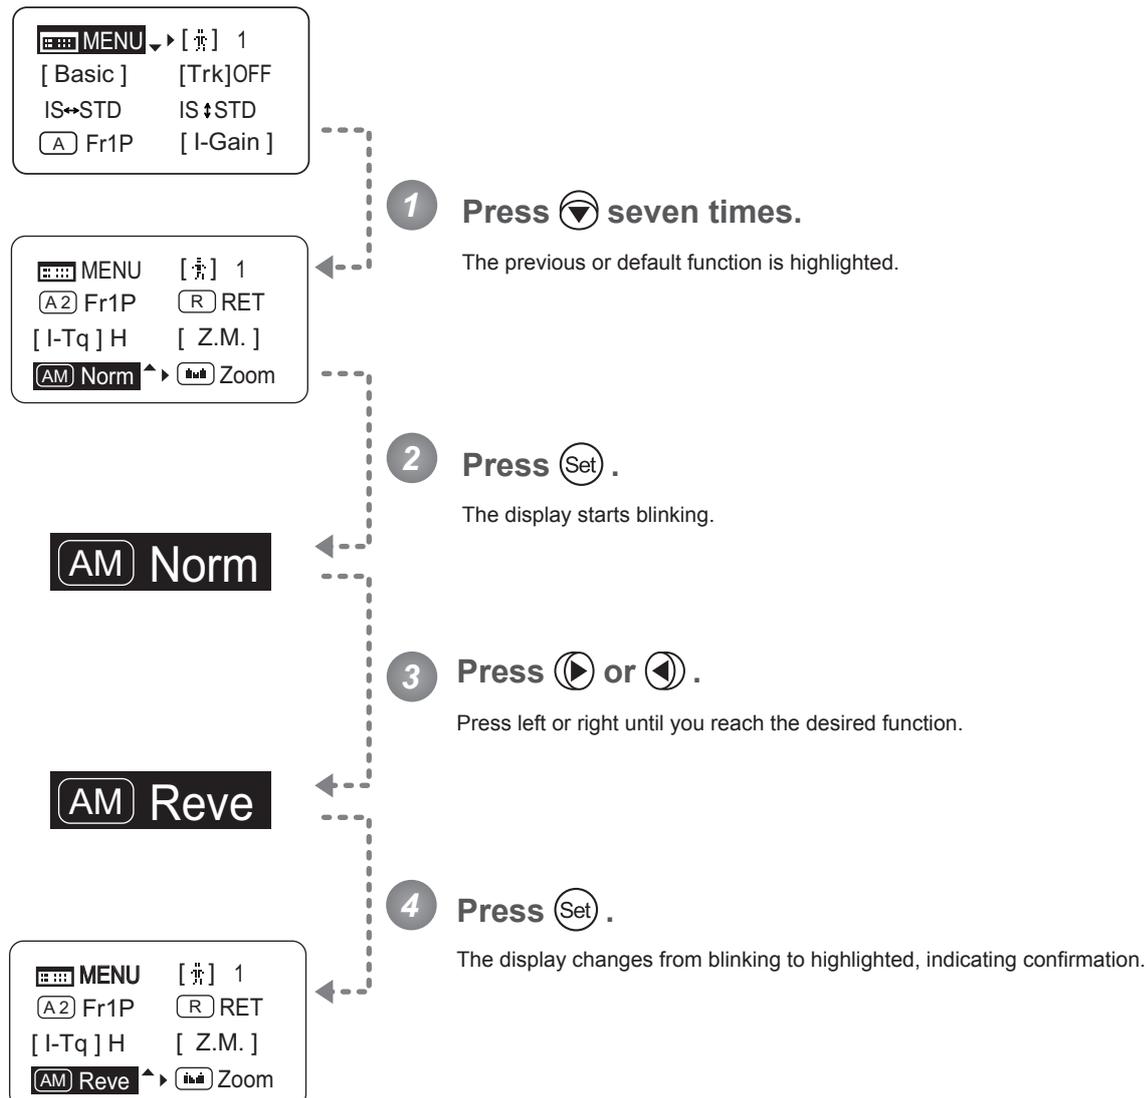

Options	^(D) Norm	Reve	Auto	Manu
Description	Normal operation A: Auto / M: Manual	Reverse operation A: Manual / M: Auto	Auto Only A: Auto / M: Manual	Manual Only A: Manual / M: Auto

(D): Default value



4.1.17 Assigning Functions to the Seesaw




The zoom seesaw switch can be programmed to control either the {Zoom} or {Iris}.

Important


First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

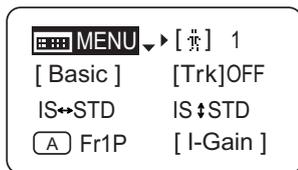

1 Press seven times and once.

The previous or default function is highlighted.

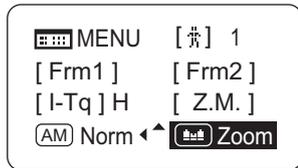

2 Press .

The display starts blinking.




3 Press or .

Press left or right to switch the function to {Zoom} or {Iris}.



4 Press .

The display changes from blinking to highlighted, indicating confirmation.

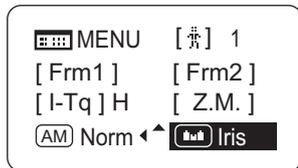

Note: Note on Iris Assignment

1. The seesaw switch will no longer control zooming.
2. To control the iris with the rocker switch, you must set the iris mode to manual.
3. Press the Telephoto side to open the iris, or press the Wide end side to close it.
4. Zoom speed control adjustments also apply to iris control, and you can specify the maximum iris speed. (See "4.2.5 Zoom Screen Settings: Specifying Maximum Zoom Speed Control".)

Options	^(D) Zoom	Iris
Description	Zoom operation	Iris operation

(D): Default value



4.1.18 Escape Operation

Instantly jump to user 0, with default settings, from the current user (0–9).

Note

Not available when settings are locked.

Note


The following settings remain the same even after jumping to user 0.
Auto and remote iris gain values, encoder output setting, and camera follow voltage adjustments

1 Hold down both the Display switch and **Set** for at least 2 seconds.

The following messages is displayed, depending on the current user before the operation.

User0 : User 0 Reset Now
From Users 1–9 : Escape To User 0

Desired screen

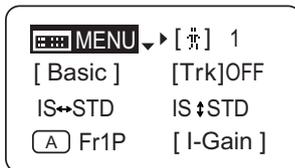

From User 0


User 0
Reset Now

From Users 1–9

Escape To User 0

or

Initial Top Screen

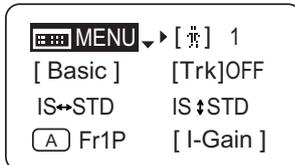

2 The Initial Top screen is displayed.

Note: Initial User When Restarted

After restarting, control reverts to the user before this operation.

However, if you switched users after this operation, control reverts to that user.

[**DISPLAY**] and [**Set**] 2 seconds

4.2 Configuration from the Menu Screen

In Full mode, you can view and configure 35 setting items and a “follow” screen with three setting items that have relative values from the **Menu screen**.*

Specifically, the **Menu screen** in Full mode is organized into 9 screens by function: **User screen**, **Switch screen**, **IS screen**, **Preset screen**, **Iris screen**, **Zoom screen**, **Focus screen**, **Info screen**, and **Fol. screen**.

Select [MENU] on the **Top screen** and press the Set key to access the **User screen** initially. Press left or right to access the 8 other screens. (See the following figure.)

*: There is no single **Menu screen**. Instead, these 9 screens are collectively referred to as **Menu screen**.

Setting items labeled **Top** next to the function title can also be configured from **Top screen**.

4.2.1 User Screen Settings

For details on users available in Full mode, see "4.1.3 Switching Users."

The following setting items can be configured on the **User screen**.

Switching Modes

Switching Users **Top**

Naming Users

Resetting Values

- (1) Resetting One User's Settings
- (2) Resetting All Users' Settings

Copying Settings Between Individual Users

Copying Settings Between Lenses

- (1) Copying One User's Settings to Another Lens
- (2) Copying All Users' Settings to Another Lens
- (3) Responding to Errors

Locking Functions

Items labeled **Top** can also be modified from the **Top screen**.

User Screen in Full Mode

◀User▶	1
Mode:	Full
No.:	1
Name:	-----


Switching Modes

Switch to Basic or Analog mode as needed.




Important

The new mode setting is retained even after the lens is turned off.

Initial Top Screen

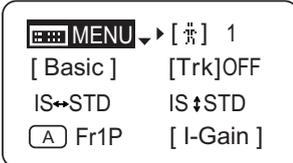

User Screen

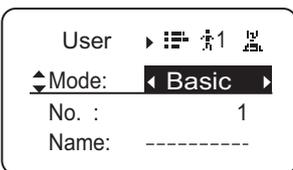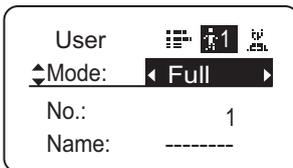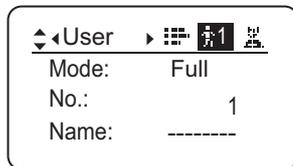

1 Press .

The display switches to the **User screen**.

2 Press .

[Mode] is underlined.
The previous mode is highlighted.

3 Press or .

Press left or right until you reach the desired mode.


Options	^(D) Basic	Full	Analog
Save Settings	Basic Mode	Full Mode	Analog Mode

(D): Default value



Switching Users Top

Switch Users (0–9) as needed. To configure settings for individual users, switch to that user number.

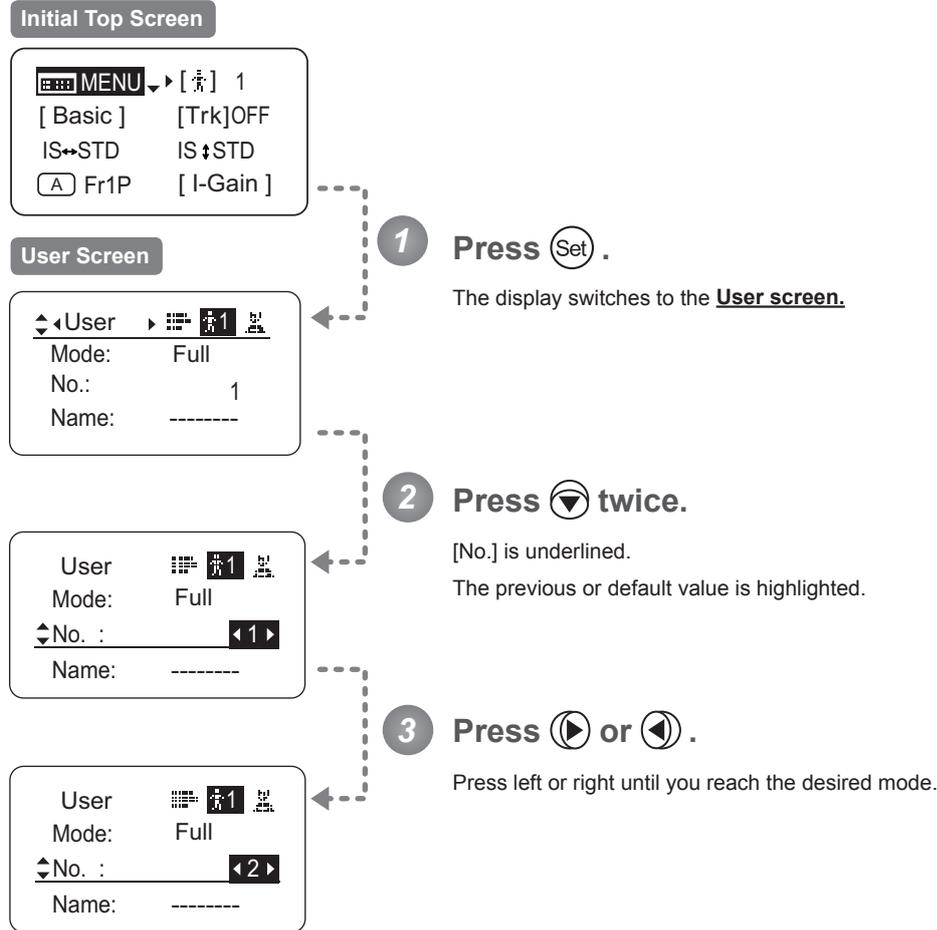

Options	0	(D) 1	2	3	4	5	6	7	8	9
Save Settings	Not supported Although settings cannot be saved, they can be changed temporarily. Switching users or turning the lens off will restore default values.	Can be saved for each user								


(D): Default value




Naming Users

Users can be named, as needed.



Initial Top Screen

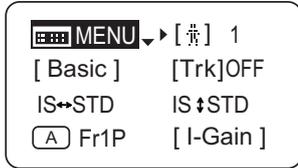


User Screen

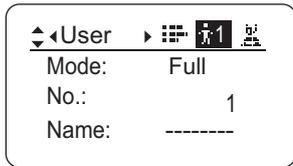

Title: Name

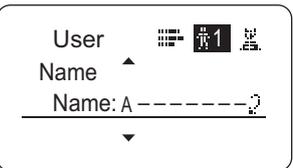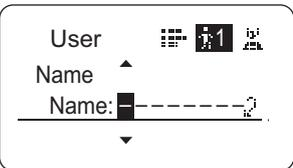

Title: Name

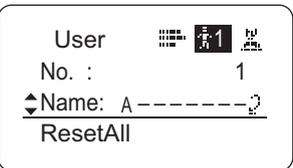

Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

- 1 Press .**
The display switches to the **User screen**.
- 2 Press three times.**
[Name] is underlined.
- 3 Press .**
The first dash is highlighted, indicating that you can edit it.
- 4 Press or .**
Press left or right until you reach the desired value.
- 5 Press the to confirm the name.**
The display reverts to **Title: Name**.

Options	__ (D) __ - ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789
Max. Digits	8

(D): Default value
_: Space



Resetting Values

(1) Resetting One User's Settings

Reset a user's settings to default values as needed.

Initial Top Screen

```

MENU [ ] 1
[ Basic ] [Trk]OFF
IS↔STD IS↑STD
[A] Fr1P [ I-Gain ]

```

User Screen

```

User [ ]
Mode: Full
No.: 1
Name: -----

```

Title: Reset

```

User [ ]
Name: -----
ResetAll [ ]
Copy

```

Reset Screen

```

User [ ]
ResetAll [ ]
User: y/n
AllUser: y/n

```

```

User [ ]
ResetAll [ ]
User: y/n
AllUser: y/n

```

Title: Reset

```

User [ ]
Name: -----
ResetAll [ ]
Copy

```

Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

- 1 Press .**
The display switches to the **User screen**.
- 2 Press  four times.**
[ResetAll] is underlined.
- 3 Press .**
The display switches to the **Reset screen**.
- 4 Press .**
A confirmation message is displayed about resetting information for the selected user.
- 5 Press  and then .**
After a message is displayed indicating that resetting is in progress, the display reverts to **Title: Reset**.
The settings have now been reset.








Note: Iris gain values, encoder output setting, and camera follow voltage adjustments are not reset. The current value is retained.

Note: You can cancel resetting and restore the original values at any time before pressing  in step 5. To return to the previous screen, press up. To cancel resetting and turn off the display, press the Display switch.

 →  →  →  × 4 →  →  →  or  → 

(2) Resetting All Users' Settings

Reset all users' settings to default values as needed.

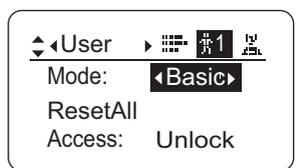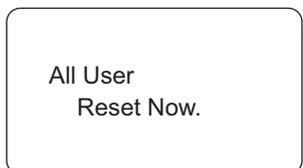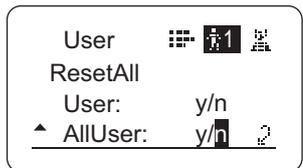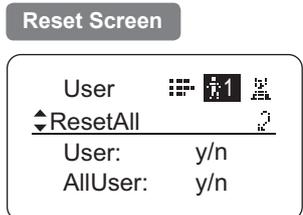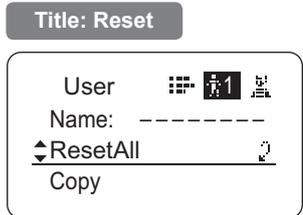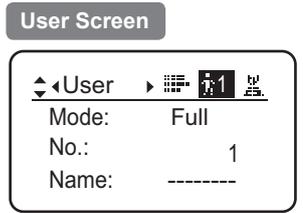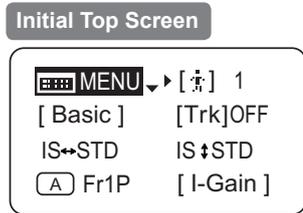

1 Press (Set).
The display switches to the User screen.

2 Press (Down Arrow) four times.
[ResetAll] is underlined.

3 Press (Set).
The display switches to the Reset screen.

4 Press (Down Arrow) twice.
A confirmation message is displayed about resetting information for the all users.

5 Press (Left Arrow) and then (Set).

Resetting is finished once the message during resetting is no longer displayed.

Note: There is no need to switch users.

Note: Iris gain values, encoder output setting, and camera follow voltage adjustments are not reset. The current value is retained.

Note: You can cancel resetting and restore the original values at any time before pressing (Set) in step 5. To return to the previous screen, press up. To cancel resetting and turn off the display, press the Display switch.



Copying Settings Between Individual Users

Settings configured for one user can be copied to another user.

Initial Top Screen

```

MENU [ 1
[ Basic ] [Trk]OFF
IS↔STD IS↓STD
[A] Fr1P [ I-Gain ]

```

User Screen

```

◀ User ▶ [ 1 ]
Mode: Full
No.: 1
Name: -----

```

Screen A

```

User [ 1 ]
ResetAll
◀ Copy ▶
ToOtherLens

```

Copy Screen

```

User [ 1 ]
◀ Copy ▶
To No. : 1
Copy: y/n

```

```

User [ 1 ]
Copy
◀ To No. : 1 ▶
Copy: y/n

```

```

User [ 1 ]
Copy
◀ To No. : 3 ▶
Copy: y/n

```

```

User [ 1 ]
Copy
To No. : 3
Copy: y/n

```

Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")


- 1 Press (Set) .**
The display switches to the User screen.
- 2 Press (Down Arrow) five times.**
[Copy] is underlined.
- 3 Press (Set) .**
The display switches to the Copy screen.
- 4 Press (Down Arrow) .**
[To No.] is underlined.
- 5 Press (Right Arrow) or (Left Arrow) .**
Press left or right until you reach the user to copy settings to.
- 6 Press (Down Arrow) .**
[Copy] is underlined, and you can select {y} (yes) or {n} (no).

Note: You can cancel copying and restore the original values at any time before pressing (Set) in step 7. To return to the previous screen, press up. To cancel copying and turn off the display, press the Display switch.


Continued from previous page

7 Press  and then .

Screen A

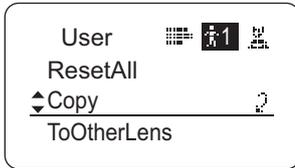

Settings are copied to the specified user number, and the display reverts to **Screen A**.

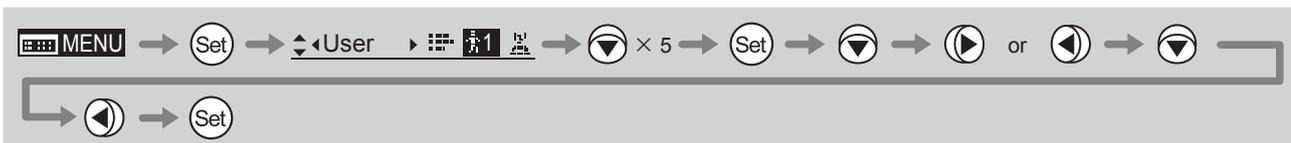

Copying Settings Between Lenses


Setting information can be copied between information displays of drive units mounted on the display. You can copy either settings for individual users or for all users. Copying requires a dedicated cable, sold separately. For details, contact Canon or your dealer.

(1) Copying One User's Settings to Another Lens


Note: Required Preparation

1. Plug one end of the dedicated cable (20 pin–20 pin) into the source lens and the other end into the 20-pin connector of the zoom/focus remote of the target lens.
2. Turn on the source and target lenses.
3. Press the Display switch on the source lens to turn on the display. (Leave the source lens display off.)


Initial Top Screen

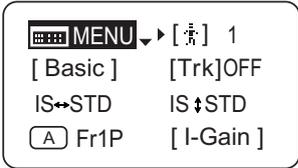



User Screen

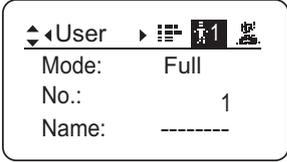


Screen A

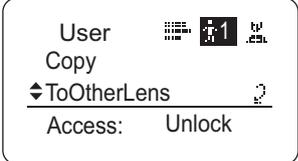

ToOtherLens Screen

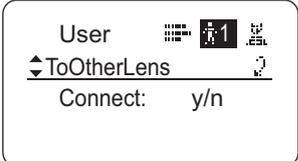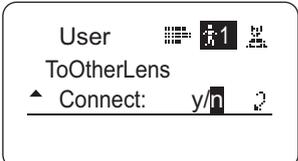Screen B

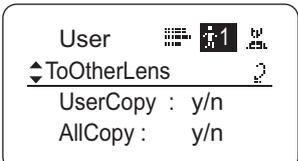

1 Press .

The display switches to the **User screen.**

2 Press  six times.

[ToOtherLens] is underlined.

3 Press .

The display switches to the **ToOtherLens screen.**

4 Press .

[Connect] is underlined, and you can select {y} (yes) or {n} (no).

5 Press  and then .

The display switches to **Screen B.**

6 Press .


Important

First, switch to the user for whom the settings apply. (For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Note: You can cancel copying and restore the original values at any time before pressing  in step 11. To return to the previous screen, press up. To cancel copying and turn off the display, press the Display switch.


Continued from previous page

Copy Selection Screen

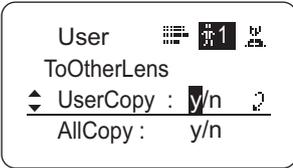


The display switches to the Copy selection screen.

Target User Selection Screen

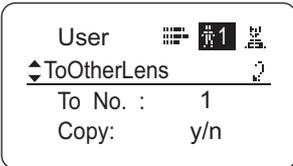


7 Press **Set**.

The display switches to the Target user selection screen.

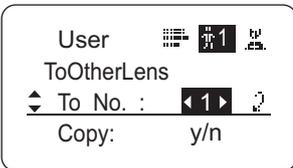


8 Press **Down Arrow**.

[To No.] is underlined.

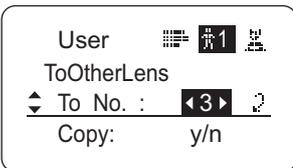


9 Press **Left Arrow** or **Right Arrow**.

Press left or right until you reach the number of the user on the target lens to copy settings to.

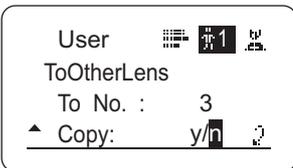

10 Press **Down Arrow**.

[Copy] is underlined, and you can select {y} (yes) or {n} (no).

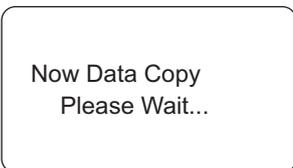


11 Press **Left Arrow** and then **Set**.¹

¹: Pressing the Set key in this step begins the copying process. Note that once copying begins, you cannot restore the original settings.

²: To avoid problems during copying, do not operate controls or press the Display switch on the source or target lenses. Do not perform other operations.


Screen A

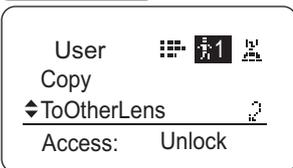

After a message is displayed indicating that copying is in progress, the display reverts to Screen A.

The settings have now been copied between lenses.²

Note: If copying fails, an error message is displayed. Respond as described in "(3) Responding to Errors."

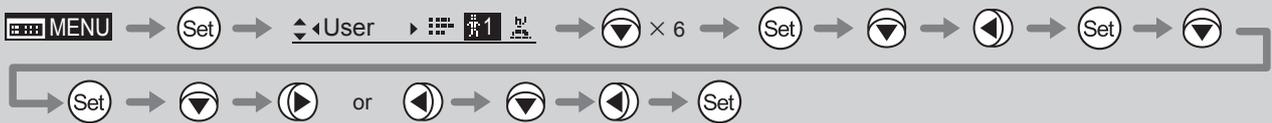

(2) Copying All Users' Settings to Another Lens

Copying requires a dedicated cable, sold separately. For details, contact Canon or your dealer.

Note: Required Preparation

1. Plug one end of the dedicated cable (20 pin–20 pin) into the source lens and the other end into the 20-pin connector of the zoom/focus remote of the target lens.
2. Turn on the source and target lenses.
3. Press the Display switch on the source lens to turn on the display. (Leave the source lens display off.)

Initial Top Screen

```

MENU [ 1
[ Basic ] [Trk]OFF
IS↔STD IS↕STD
(A) Fr1P [ I-Gain ]
  
```

User Screen

```

User
Mode: Full
No.: 1
Name: -----
  
```

Screen A

```

User
Copy
ToOtherLens
Access: Unlock
  
```

ToOtherLens Screen

```

User
ToOtherLens
Connect: y/n
  
```

Final Screen

```

User
ToOtherLens
Connect: y/n
  
```


- 1 Press .**
The display switches to the **User screen**.
- 2 Press  six times.**
[ToOtherLens] is underlined.
- 3 Press .**
The display switches to the **ToOtherLens screen**.
- 4 Press .**
[Connect] is underlined, and you can select {y} (yes) or {n} (no).
- 5 Press  and then .**

Note: You can cancel copying and restore the original values at any time before pressing  in step 9. To return to the previous screen, press up. To cancel copying and turn off the display, press the Display switch.

Continued on next page

Continued from previous page


Screen B

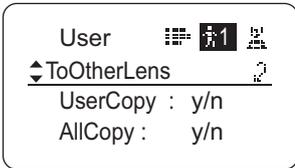

The display switches to **Screen B**.


6 Press **twice.**

[AllCopy] is underlined, and you can select {y} (yes) or {n} (no).

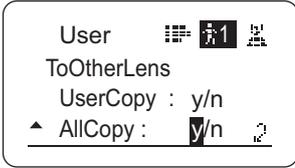


7 Press **.**

The display switches to the **AllCopy screen**.

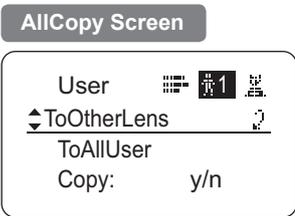


8 Press **.**

[Copy] is underlined, and you can select {y} (yes) or {n} (no).

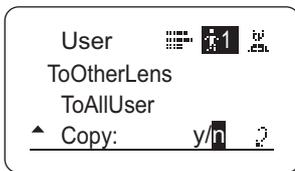


9 Press **and then** **.**¹

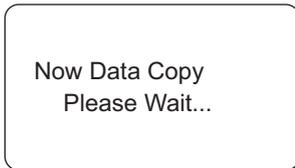

After a message is displayed indicating that copying is in progress, the display reverts to **Screen A**.

The settings have now been copied between lenses.²


Screen A

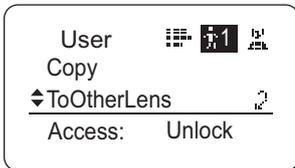

¹: Pressing the Set key in this step begins the copying process. Note that once copying begins, you cannot restore the original settings.


²: To avoid problems during copying, do not operate controls or press the Display switch on the source or target lenses. Do not perform other operations.

Note: If copying fails, an error message is displayed. Respond as described in "(3) Responding to Errors."

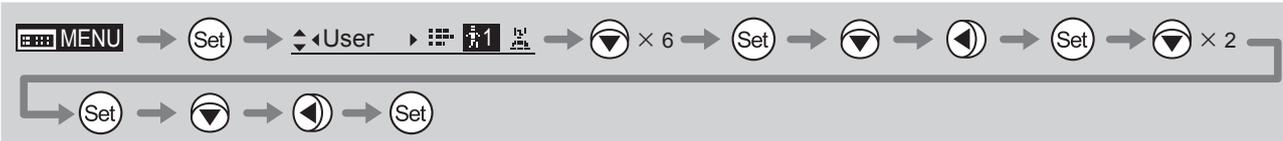

(3) Responding to Errors

If copying between lenses fails, check the following.

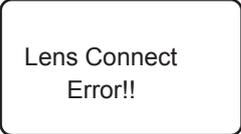
Error Screen	Checking Item	Problem	Responding
	Confirm that the dedicated cable (20 pin–20 pin) is connected.	Settings cannot be copied between lenses unless the cable is connected.	Securely connect the cable between the source and target lenses, and follow the steps to copy again, from the start.
	Confirm that the target lens is on.	Settings cannot be copied unless both the source and target lenses are on.	Turn on both the source and target lenses, and follow the steps to copy again, from the start.
	Confirm that the drive unit of the target lens is the same model.	Settings cannot be copied between lenses of different generations of drive units.	Contact Canon or your dealer for details on models of drive unit that can be used to copy settings.
	Confirm that the dedicated cable (20 pin–20 pin) is connected.	The message at left is displayed if the lenses are disconnected during copying, if a power outage occurs, or if a lens is turned off. In this case, copying is interrupted, which prevents the settings from being copied correctly.	Confirm that the source and target lenses are on, and that the cable is securely connected. Press the Display switch to return to Screen A , and follow the steps to copy again, from the start. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center; background-color: #cccccc; margin: 0;">Screen A</p> <div style="display: flex; justify-content: space-between; align-items: center;"> User ☰ 1 👤 </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Copy ↕ </div> <div style="display: flex; justify-content: space-between; align-items: center;"> ↕ ToOtherLens ↕ </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Access: Unlock </div> </div>
	Confirm that the source and target lenses are on.		

Locking Functions


To ensure that configured functions cannot easily be changed, you can lock the settings of certain functions. Once functions are locked, they are locked for all users.

For instructions on locking settings in Analog mode, see "5. Operation in Analog Mode."

Unlocked

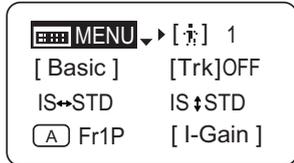

Locked

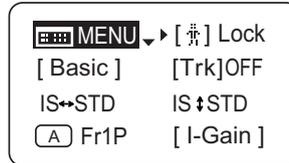

Note

User numbers 0–9 in the user number field indicate users that are unlocked.
 "Lock" in the user number field indicate users that are locked.


Note

In lock mode, only the following items can still be configured, and other settings are locked.


- Preset data (Shuttle shot position, Frame preset position, Preset speed)
- Zoom tracking position, on/off
- Auto iris gain setting
- Specifying encoder output
- Camera follow voltage adjustments

(1) Locking Settings

Initial Top Screen

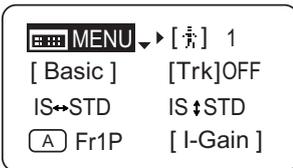

User Screen

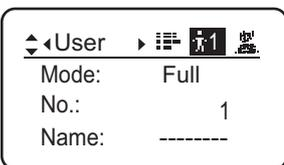

1 Press (Set).

The display switches to the User screen.


2 Press (Down Arrow) seven times.

The previous or default value is highlighted.

3 Press (Set).

Continued on next page


Continued from previous page

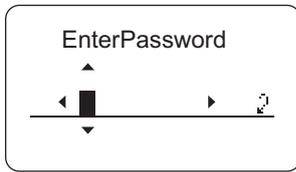

4 Enter the password and press (Set).


Entering Passwords

Press up/down to find characters and left/right to move the cursor or make corrections. Be careful not to press the Set key until you are finished entering the password.

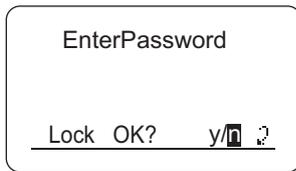

5 Press (Left Arrow) and then (Set).

The settings are now locked.

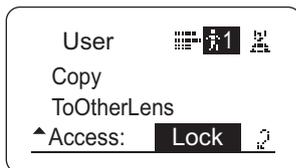

Note

Passwords

No master password is used on this model. The password you enter each time to lock settings is the password used to unlock them. For this reason, we recommend making a note of the password each time. If you forget the password, contact Canon or your dealer. Passwords can be blank or up to 8 digits.


Characters supported in passwords

Options	(D) _-ABCDEFGHIJKLMN OPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789
Max. Digits	8

(D): Default value
_: Space

Options	(D) Unlock	Lock
----------------	------------	------

 (D): Default value




(2) Unlocking Settings

Settings can be unlocked in two ways, as follows.

(Unlocking Setting 1)







Initial Top Screen

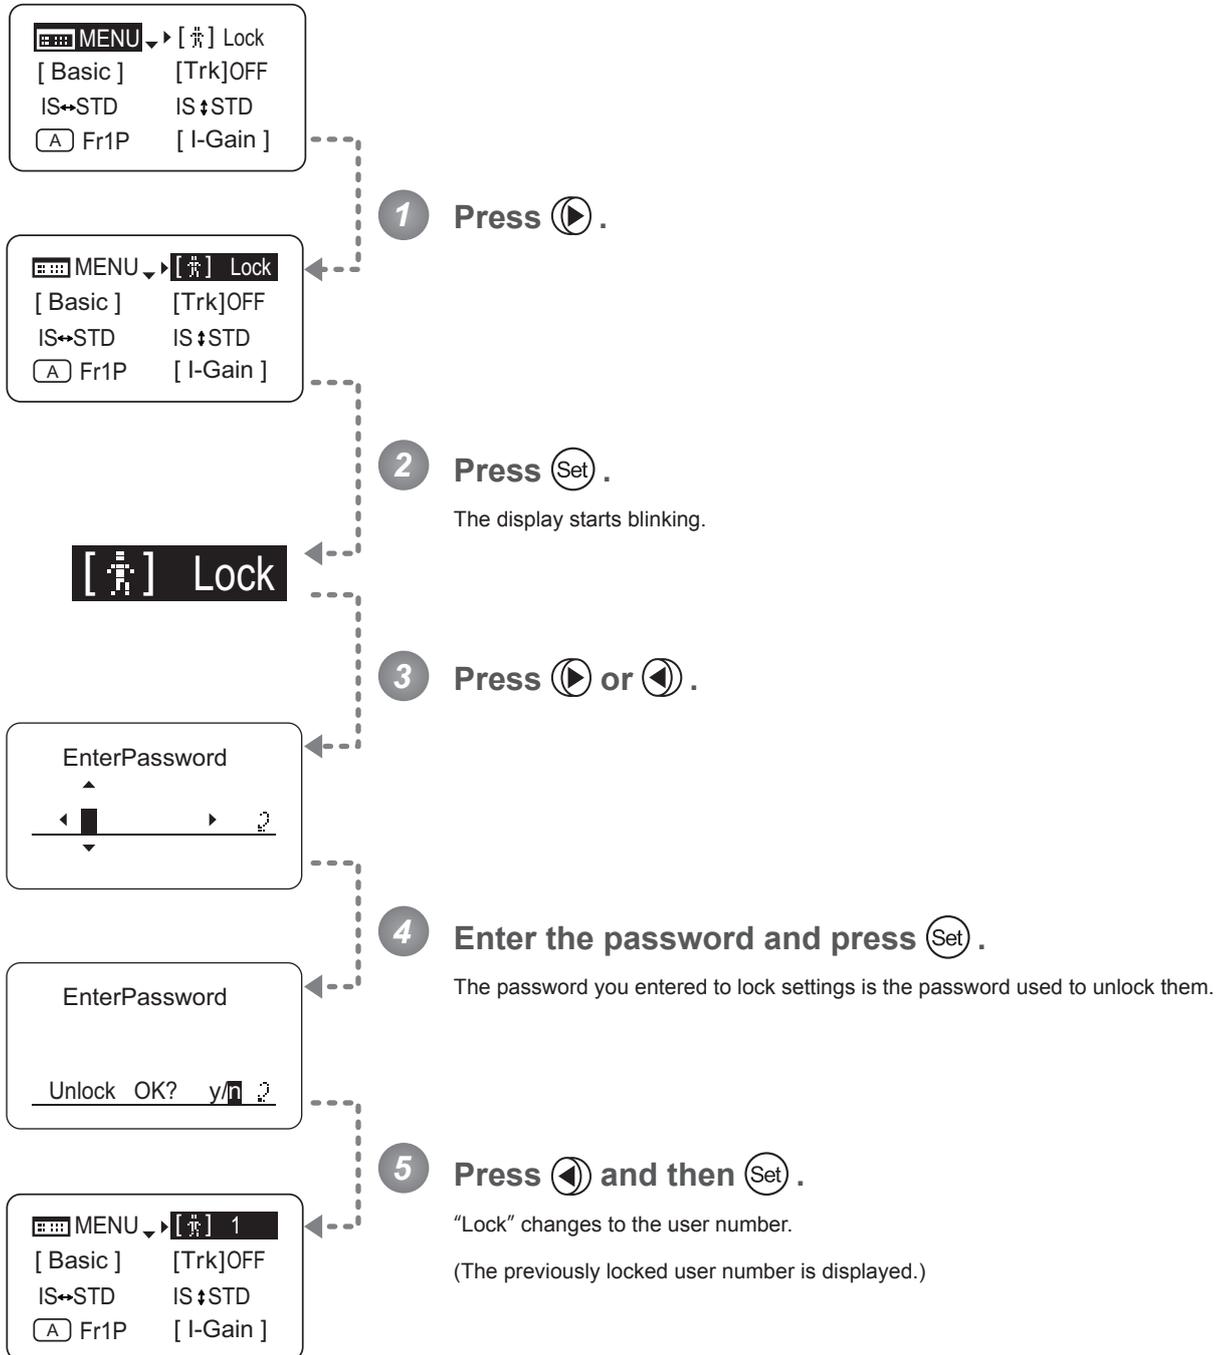

Options	^(D) Unlock	Lock
---------	-----------------------	------

(D): Default value

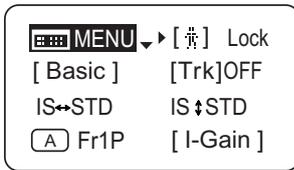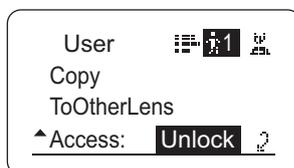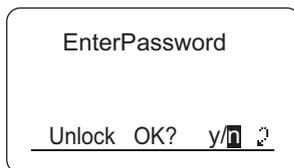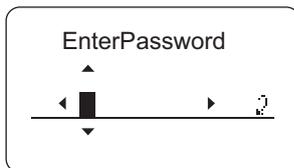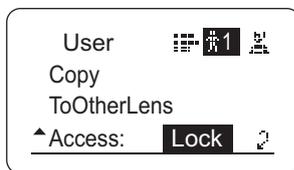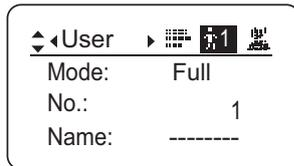

(Unlocking Setting 2)**Initial Top Screen****User Screen**

1 Press **Set**.

The display switches to the **User screen**.

2 Press **Down Arrow** seven times.

3 Press **Set**.

4 Enter the password and press **Set**.

The password you entered to lock settings is the password used to unlock them.

5 Press **Left Arrow** and then **Set**.

The settings are now unlocked.



4.2.2 Switch Screen Settings

The following setting items can be configured on the **Switch screen**.

Assigning Functions to the AUX Switch	Top
Assigning Functions to the AUX1 Switch	Top
Assigning Functions to the AUX2 Switch	Top
Assigning Functions to the VTR Switch	Top
Assigning Functions to the RET Switch	Top
Specifying Iris A/M Switch	Top
Assigning Functions to the Seesaw	Top

Items labeled **Top** can also be modified from the **Top screen**.

Assigning Functions to the AUX Switch Top


The AUX switch can be programmed to activate a function of your choice.

Important




First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

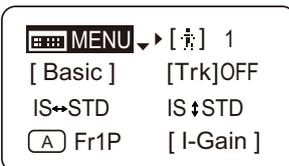

Switch Screen

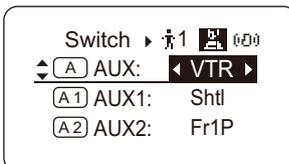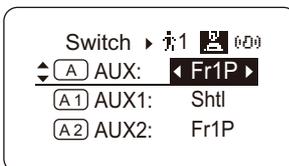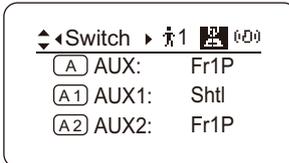

1 Press and then .

The display switches to the **Switch screen**.

2 Press .


[AUX] is underlined.
The previous or default function is highlighted.

3 Press or .

Press left or right until you reach the desired function.

Options	^(D) Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

 (D): Default value



Assigning Functions to the AUX1 Switch Top


The AUX1 switch for a zoom demand can be programmed to activate a function of your choice.

Important




First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

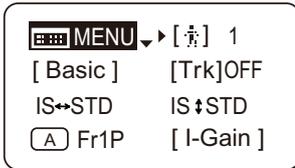

Switch Screen

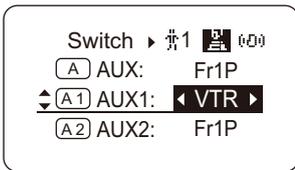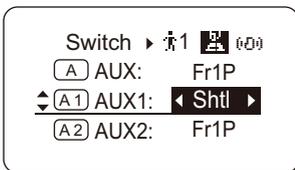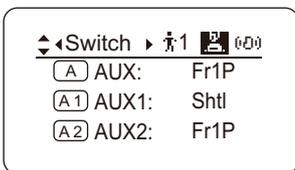

1 Press **Set** and then **▶**.

The display switches to the **Switch screen**.

2 Press **◂** twice.

[AUX1] is underlined.


The previous or default function is highlighted.

3 Press **▶** or **◂**.

Press left or right until you reach the desired function.

Options	Fr1P	Fr1F	Fr2P	Fr2F	Sped	^(D) Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

 (D): Default value




Assigning Functions to the AUX2 Switch Top

The AUX2 switch for a zoom demand can be programmed to activate a function of your choice.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

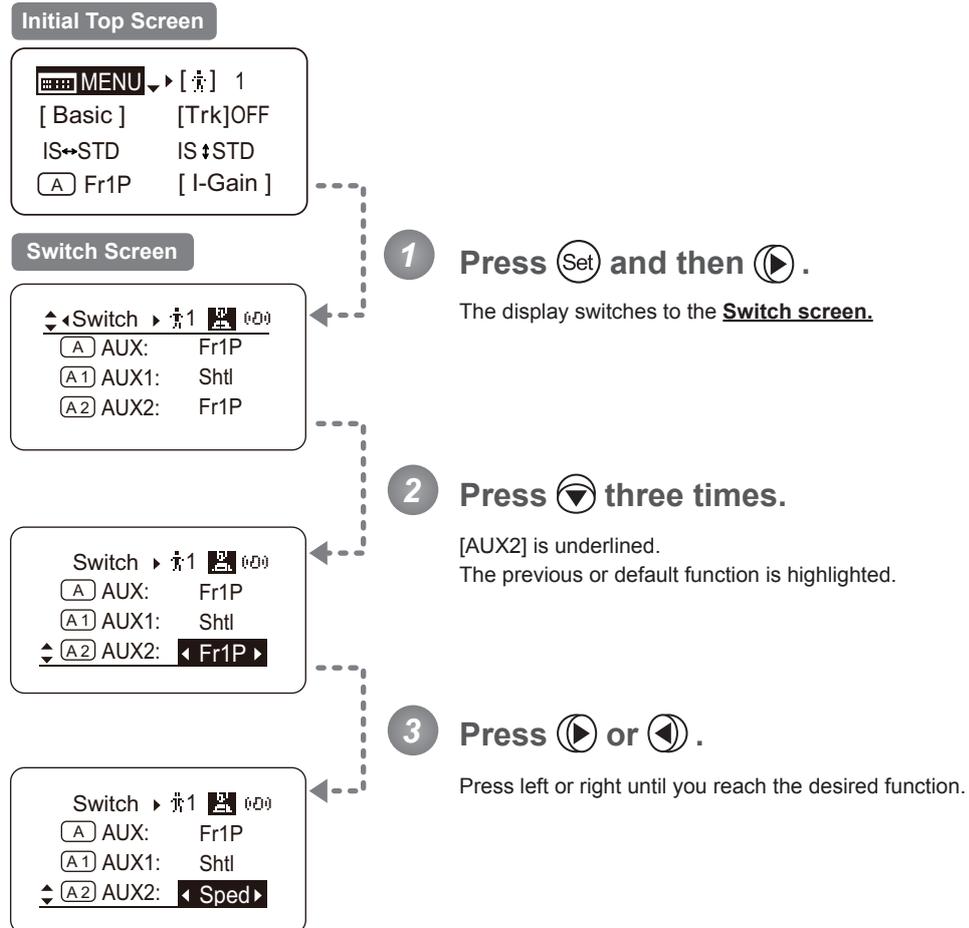

Options	^(D) Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	NON	VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	No function	VTR switch	RET switch

(D): Default value



Assigning Functions to the VTR Switch Top


The VTR switch can be programmed to activate a function of your choice.

Important




First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

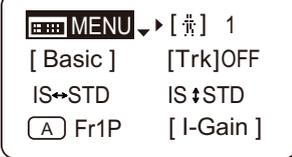

Switch Screen

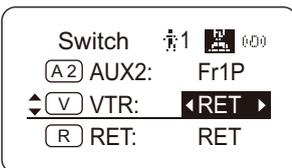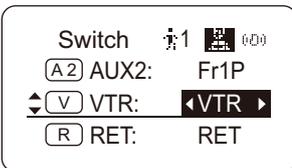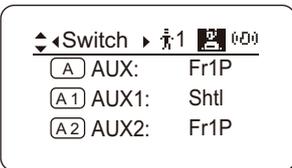

1 Press and then .

The display switches to the Switch screen.

2 Press four times.

[VTR] is underlined.


The previous or default function is highlighted.

3 Press or .

Press left or right until you reach the desired function.

Options	Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	^(D) VTR	RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	VTR switch	RET switch

 (D): Default value



Assigning Functions to the RET Switch Top


The RET switch can be programmed to activate a function of your choice.

Important




First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

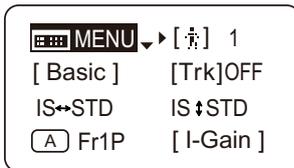

Switch Screen

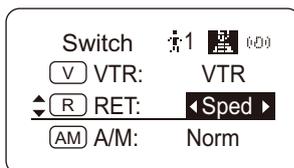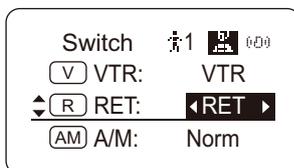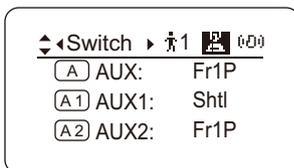

1 Press and then .

The display switches to the **Switch screen**.

2 Press five times.

[RET] is underlined.
The previous or default function is highlighted.

3 Press or .

Press left or right until you reach the desired function.

Options	Fr1P	Fr1F	Fr2P	Fr2F	Sped	Shtl	IS	VTR	^(D) RET
Description	Framing Preset1 switch (preset speed)	Framing Preset1 switch (max. speed)	Framing Preset2 switch (preset speed)	Framing Preset2 switch (max. speed)	Speed Preset switch	Shuttle-Shot switch	IS ON/OFF selection switch	VTR switch	RET switch

(D): Default value



Specifying Iris A/M Switch Top


The Iris A/M switch can be programmed to activate a function of your choice.

Important




First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

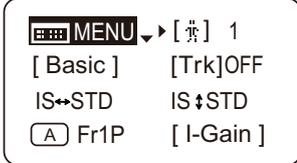

Switch Screen

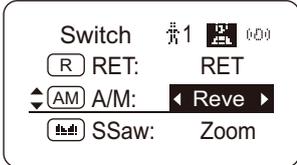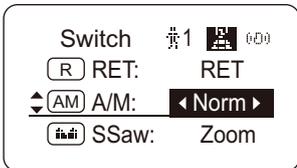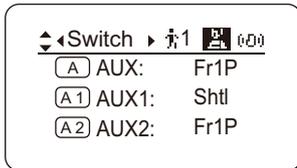

1 Press and then .

The display switches to the **Switch screen**.

2 Press six times.

[A/M] is underlined.


The previous or default function is highlighted.

3 Press or .

Press left or right until you reach the desired function.

Options	^(D) Norm	Reve	Auto	Manu
Description	Normal operation A: Auto / M: Manual	Reverse operation A: Manual / M: Auto	Auto Only A: Auto / M: Manual	Manual Only A: Manual / M: Auto

 (D): Default value




Assigning Functions to the Seesaw Top

The zoom seesaw switch can be programmed to control either the {Zoom} or {Iris}.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

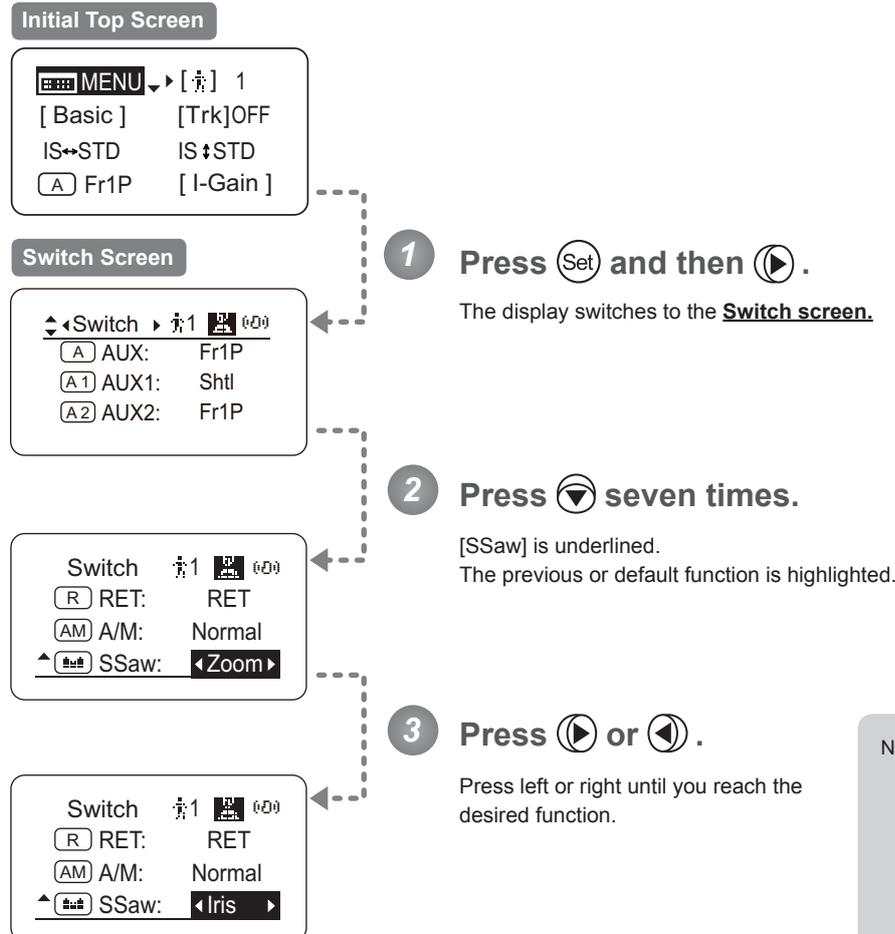

Note: Note on Iris Assignment

1. The seesaw switch will no longer control zooming.
2. To control the iris with the rocker switch, you must set the iris mode to manual. Operation is not possible in Auto or Remote mode.
3. Press the Telephoto side to open the iris, or press the Wide end side to close it.
4. Zoom speed control adjustments also apply to iris control, and you can specify the maximum iris speed. (See "4.2.6 Zoom Screen Settings: Specifying Maximum Zoom Speed Control".)

Options	^(D) Zoom	Iris
Description	Zoom operation	Iris operation

(D): Default value



4.2.3 IS Screen Settings

Note

The indication of IS Screen changes depending on the models.
Refer to the applicable pages after checking the model name of your lens.

The following setting items can be configured on the **IS screen**.

	CJ45ex9.7B CJ45ex13.6B	HJ40ex10B HJ40ex14B
Switch ON/OFF of Mechanical Lock	P.135	-
Switching IS Mode	P.136	P.141
(1) Switching the IS Mode of the Horizontal Direction	P.136	P.141
(2) Switching the IS Mode of the Vertical Direction	P.137	P.142
Specifying the Mode of when IS is OFF	P.138	P.143
Specifying IS Switch Functions	P.139	P.144
(1) Specifying the Method of IS ON/OFF Selection	P.139	P.144
(2) Switching the Polarity of the IS Switch	P.140	P.145

Items labeled **Top** can also be modified from the **Top screen**.


Switch ON/OFF of Mechanical Lock (CJ45ex9.7B, CJ45ex13.6B)

The IS function during shooting can be invalidated forcibly. Switch setting to OFF to validate the IS function and to ON to invalidate the IS function.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

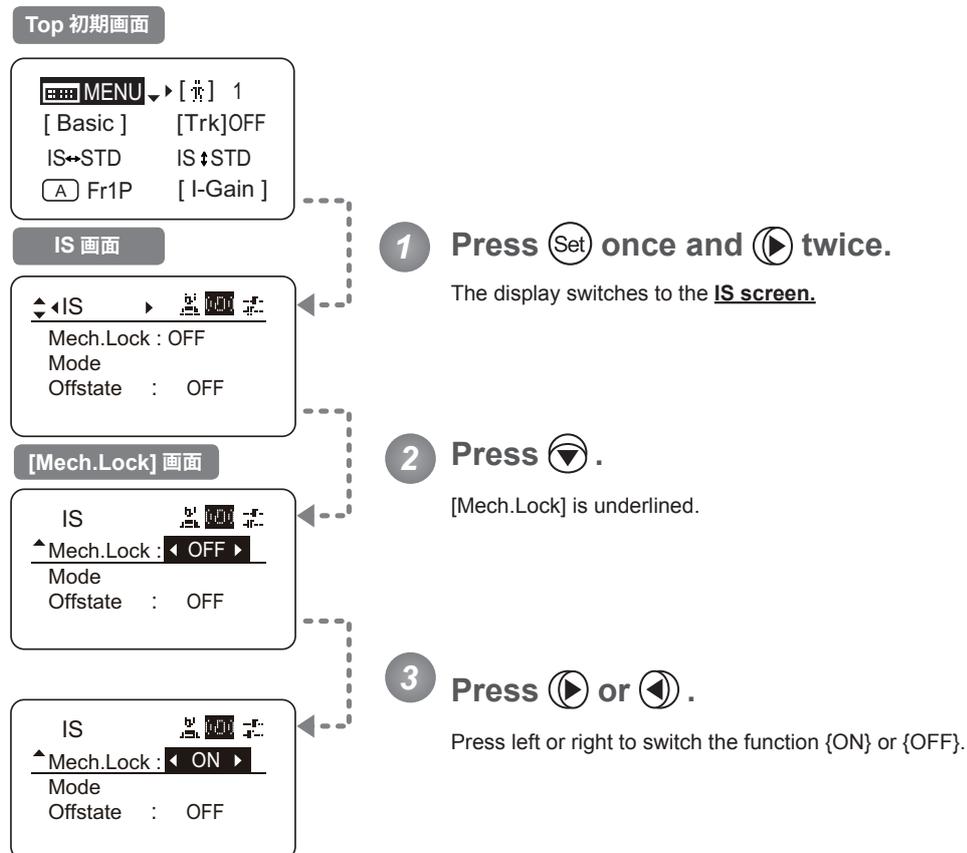

選択項目	^(D) OFF	ON
機能	Releasing the Mechanical Lock (IS ON)	Applying the Mechanical Lock (IS OFF)

(D): Default value



Switching IS Mode (CJ45ex9.7B, CJ45ex13.6B)

(1) Switching the IS Mode of the Horizontal Direction Top

Switch the IS mode of the horizontal direction as needed.

Important


First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")


Initial Top Screen






IS Screen

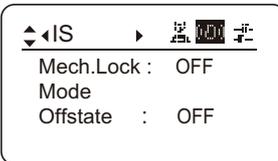

Screen A

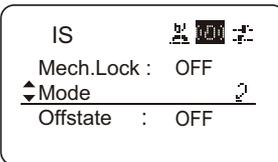

[Mode] screen

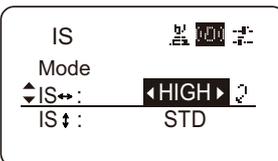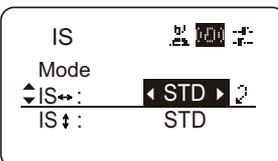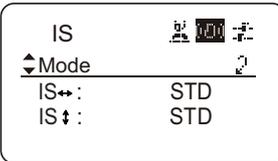

1 Press **Set** once and **▶** twice.

The display switches to the **IS screen**.

2 Press **▼** twice.

[Mode] is underlined.

3 Press **Set**.

The display switches to the **[Mode] screen**.

4 Press **▼**.

[IS ↔] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

Options	^(D) STD	HIGH	OFF
Description	Mode that provides good panning operability	Mode that provides high vibration control performance from low frequencies to high frequencies	Disabled

(D): Default value



(2) Switching the IS Mode of the Vertical Direction Top

Switch the IS mode of the vertical direction as needed.

Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

MENU ▾ [1]
[Basic] [Trk] OFF
IS↔STD IS↑STD
[A] Fr1P [I-Gain]

IS Screen

IS
Mech.Lock : OFF
Mode
Offstate : OFF

Screen A

IS
Mech.Lock : OFF
Mode
Offstate : OFF

[Mode] screen

IS
Mode
IS↔ : STD
IS↑ : STD

IS
Mode
IS↔ : STD
IS↑ : STD


IS
Mode
IS↔ : STD
IS↑ : **STD**

IS
Mode
IS↔ : STD
IS↑ : **HIGH**

- 1** Press **Set** once and **▶** twice.
The display switches to the **IS screen**.
- 2** Press **▼** twice.
[Mode] is underlined.
- 3** Press **Set** .
The display switches to the **[Mode] screen**.
- 4** Press **▼** twice.
[IS↑] is underlined.
The previous or default value is highlighted.
- 5** Press **▶** or **◀** .
Press left or right until you reach the desired function.
- 6** Press **Set** .
The display reverts to **Screen A**.

Options	^(D) STD	HIGH	OFF
Description	Mode that provides good panning operability	Mode that provides high vibration control performance from low frequencies to high frequencies	Disabled

 (D): Default value



Switching the Mode of when IS is OFF (CJ45ex9.7B, CJ45ex13.6B)


Specify the IS function of when the IS mode is switched to OFF, as needed.

Important




First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

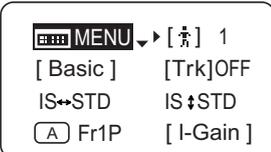

IS Screen

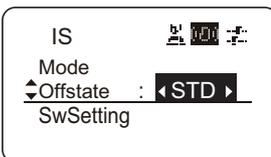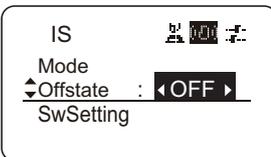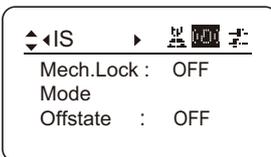

1 Press **Set** once and **▶** twice.

The display switches to the **IS screen**.

2 Press **▼** three times.


[OffState] is underlined.

3 Press **Set** and then **▶** or **◀**.

Press left or right to switch the function {OFF} or {STD}.

Options	STD	^(D) OFF
Description	Mode that provides good panning operability	Disabled

 (D): Default value



Specifying IS Switch Functions (CJ45ex9.7B, CJ45ex13.6B)


(1) Specifying the Method of IS ON/OFF Selection

Specify the method of IS ON/OFF selection of when pressing the IS switch and the switch to which the IS functions are assigned, as needed.


Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")


Initial Top Screen

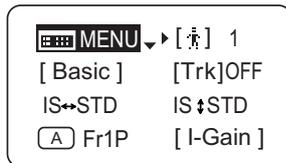



IS Screen

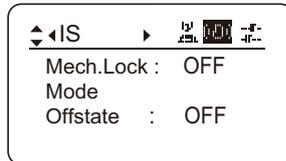


Screen A

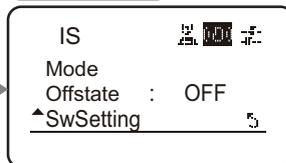

SwSetting Screen

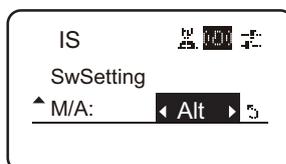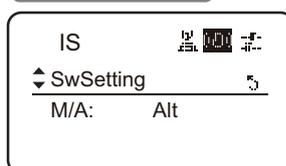

Screen A

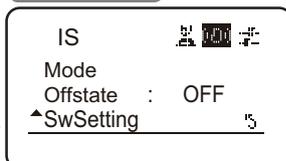

1 Press **Set** once and **Play** twice.

The display switches to the **IS screen**.

2 Press **Down** four times.

[SwSetting] is underlined.

3 Press **Set**.

The display switches to the **SwSetting screen**.

4 Press **Down**.

[M/A] is underlined.

The previous or default value is highlighted.

5 Press **Play** or **Left**.


Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

Options	^(D) Alt	Mom
Description	Alternate action ON/OFF is switched each time the switch is pressed	Momentary action The switch is turned ON only while being pressed

 (D): Default value




(2) Switching the Polarity of the IS Switch

Switch the polarity of the IS switch and the switch to which the IS functions are assigned, as needed.

Important


First, specify Mom as the method of IS ON/OFF selection of when pressing the IS switch and the switch to which the IS functions are assigned.

(For instructions, see "Specifying the Method of IS ON/OFF Selection" on the previous page.)

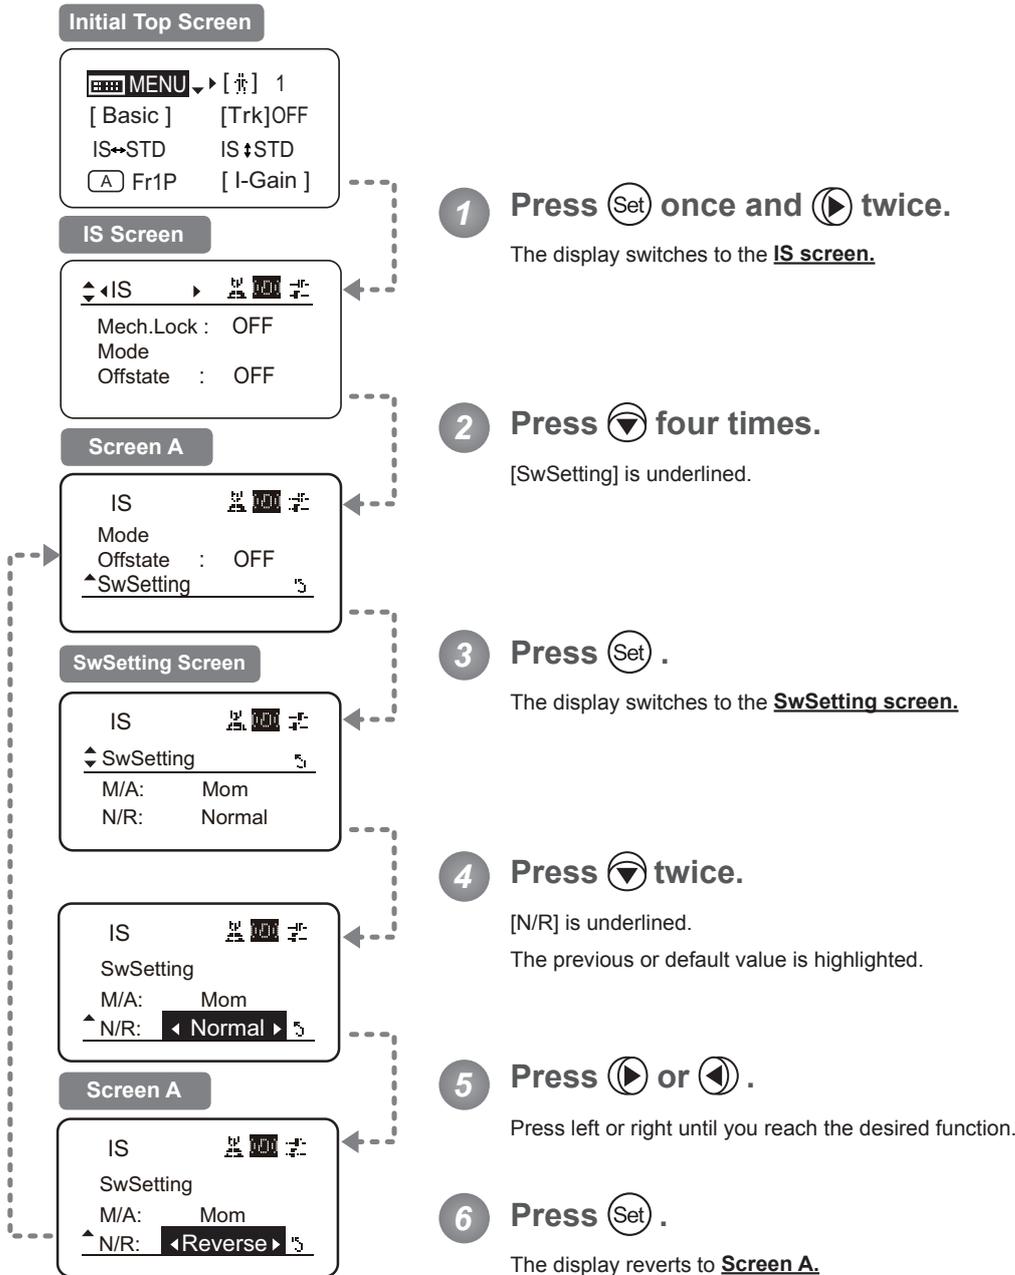

Options	^(D) Normal	Reverse
Description	Momentary action The switch is turned ON only while being pressed	Momentary action The switch is turned OFF only while being pressed

 (D): Default value



Switching IS Mode (HJ40ex10B, HJ40ex14B)


(1) Switching the IS Mode of the Horizontal Direction Top

Switch the IS mode of the horizontal direction as needed.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

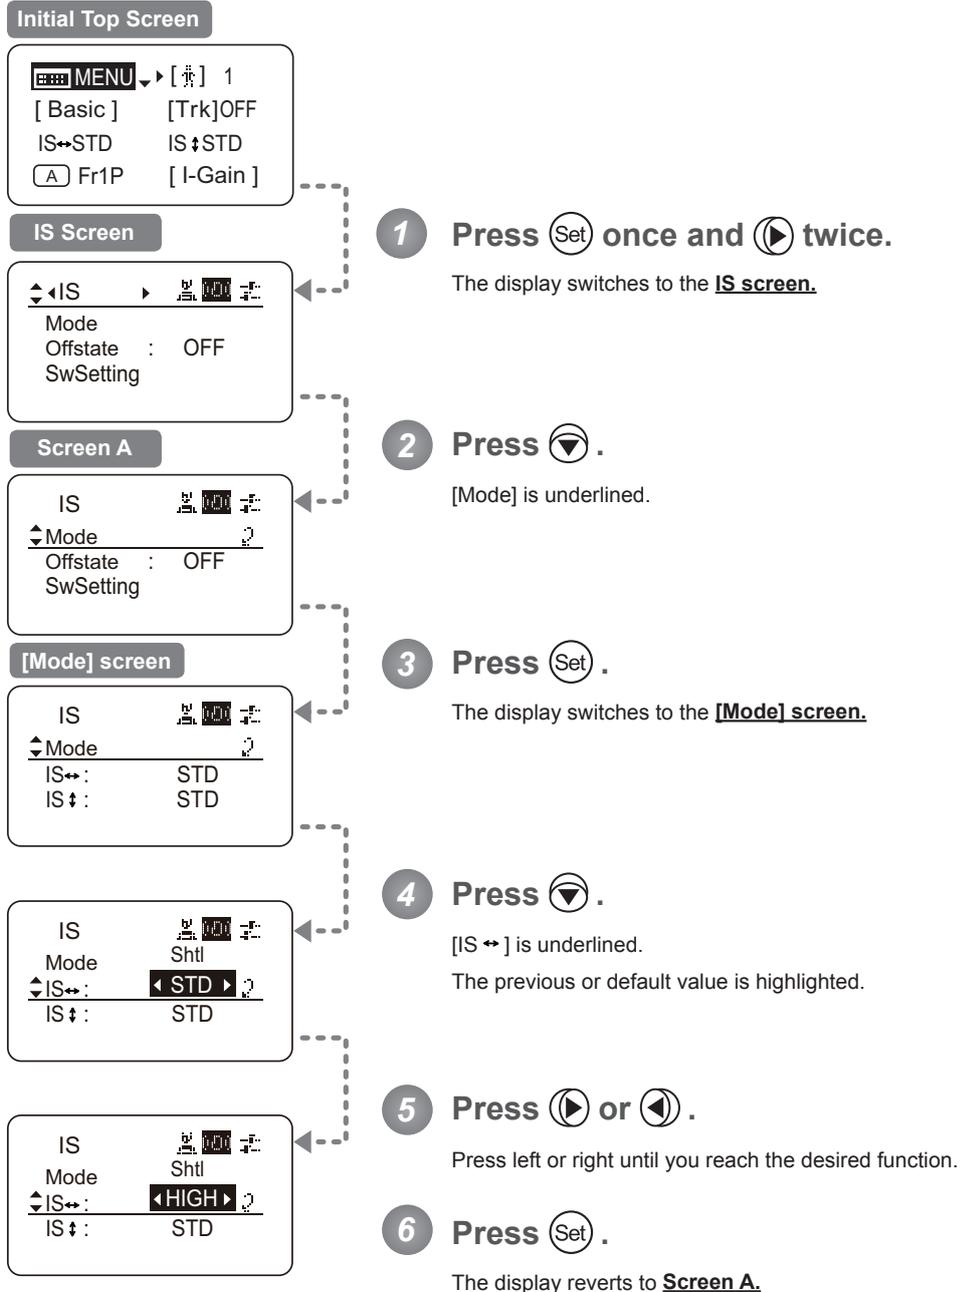

Options	^(D) STD	HIGH	OFF
Description	Mode that provides good panning operability	Mode that provides high vibration control performance from low frequencies to high frequencies	Disabled

(D): Default value



(2) Switching the IS Mode of the Vertical Direction Top


Switch the IS mode of the vertical direction as needed.

Important


First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")


Initial Top Screen

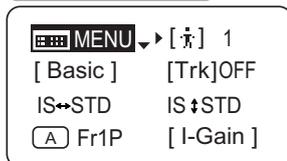




IS Screen

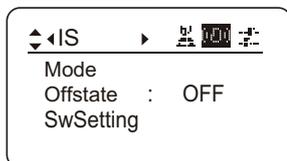

Screen A

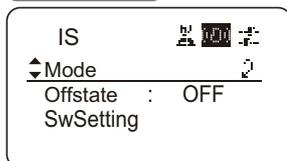

[Mode] screen

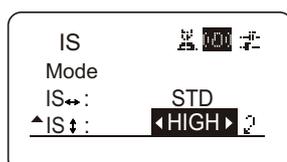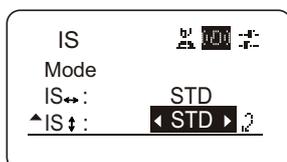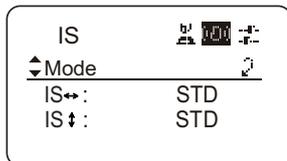

1 Press **Set** once and **▶** twice.

The display switches to the **IS screen**.

2 Press **▼**.

[Mode] is underlined.

3 Press **Set**.

The display switches to the **[Mode] screen**.

4 Press **▼** twice.

[IS ↑] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

Options	^(D) STD	HIGH	OFF
Description	Mode that provides good panning operability	Mode that provides high vibration control performance from low frequencies to high frequencies	Disabled

(D): Default value



Switching the Mode of when IS is OFF (HJ40ex10B, HJ40ex14B)


Specify the IS function of when the IS mode is switched to OFF, as needed.

Important




First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

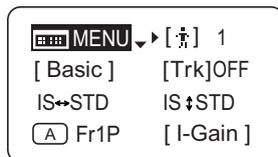

IS Screen

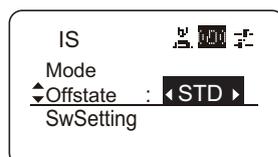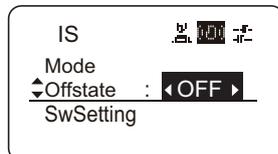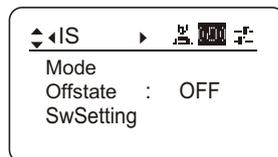

1 Press **Set** once and **▶** twice.

The display switches to the **IS screen**.

2 Press **▼** twice.


[OffState] is underlined.

3 Press **Set** and then **▶** or **◀**.

Press left or right to switch the function {OFF} or {STD}.

Options	STD	^(D) OFF
Description	Mode that provides good panning operability	Disabled

 (D): Default value



Specifying IS Switch Functions (HJ40ex10B, HJ40ex14B)

(1) Specifying the Method of IS ON/OFF Selection

Specify the method of IS ON/OFF selection of when pressing the IS switch and the switch to which the IS functions are assigned, as needed.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

```

MENU [F1] 1
[Basic] [Trk]OFF
IS↔STD IS±STD
[A] Fr1P [I-Gain]
    
```

IS Screen

```

IS [F1] [F2] [F3]
Mode
Offstate : OFF
SwSetting
    
```

Screen A

```

IS [F1] [F2] [F3]
Mode
Offstate : OFF
^SwSetting 5
    
```

SwSetting Screen

```

IS [F1] [F2] [F3]
^SwSetting 5
M/A: Alt
    
```

```

IS [F1] [F2] [F3]
SwSetting
^M/A: Alt
    
```

Screen A

```

IS [F1] [F2] [F3]
Mode
Offstate : OFF
^SwSetting 5
    
```

1 Press **Set** once and **▶** twice.

The display switches to the **IS screen**.

2 Press **▼** three times.

[SwSetting] is underlined.

3 Press **Set**.

The display switches to the **SwSetting screen**.

4 Press **▼**.

[M/A] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

Options	^(D) Alt	Mom
Description	Alternate action ON/OFF is switched each time the switch is pressed	Momentary action The switch is turned ON only while being pressed

(D): Default value



(2) Switching the Polarity of the IS Switch

Switch the polarity of the IS switch and the switch to which the IS functions are assigned, as needed.

Important

First, specify Mom as the method of IS ON/OFF selection of when pressing the IS switch and the switch to which the IS functions are assigned.

(For instructions, see "Specifying the Method of IS ON/OFF Selection" on the previous page.)

Initial Top Screen

```

MENU IG: 50
IS↔STD IS↓STD
[A] Fr1P [Trk]OFF
[A1] Shtl [A2] Fr1P
  
```

IS Screen

```

IS
Mode
Offstate : OFF
SwSetting
  
```

Screen A

```

IS
Mode
Offstate : OFF
SwSetting
  
```

SwSetting Screen

```

IS
SwSetting
M/A: Mom
N/R: Normal
  
```

```

IS
SwSetting
M/A: Mom
N/R: Normal
  
```

Screen A

```

IS
SwSetting
M/A: Mom
N/R: Reverse
  
```

1 Press **Set** once and **▶** twice.

The display switches to the **IS screen**.

2 Press **▼** three times.

[SwSetting] is underlined.

3 Press **Set**.

The display switches to the **SwSetting screen**.

4 Press **▼**.

[N/R] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

Options	^(D) Normal	Reverse
Description	Momentary action The switch is turned ON only while being pressed	Momentary action The switch is turned OFF only while being pressed

(D): Default value



4.2.4 Preset Screen Settings

The following setting items can be configured on the **Preset screen**.

Switching What Frame Preset 1 Controls

Switching What Frame Preset 2 Controls

Specifying the Preset Mode Zoom Speed

Specifying Zoom Start Responsiveness for Presets

Specifying Zoom Stop Responsiveness for Presets

Switching What Frame Preset 1 Controls


Switch what frame preset 1 controls, as needed.

- Zoom : Move the zoom position to the position in memory
- Focus : Move the focus position to the position in memory
- Z+F : Move the zoom and focus position to the position in memory

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

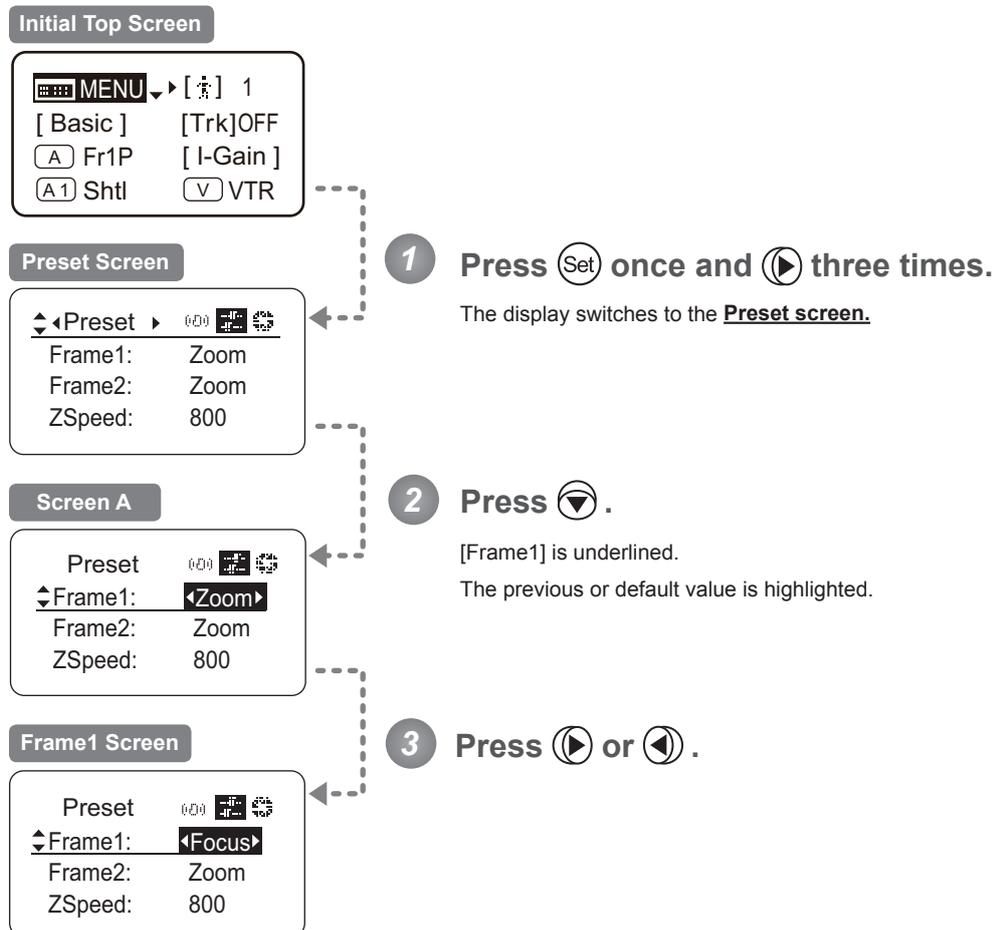

Options	^(D) Zoom	Focus	Z+F
Description	Control zooming	Control focusing	Control zooming and focusing

(D): Default value



Switching What Frame Preset 2 Controls

Switch what frame preset 2 controls, as needed.

- Zoom : Move the zoom position to the position in memory
- Focus : Move the focus position to the position in memory
- Z+F : Move the zoom and focus position to the position in memory

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

MENU → [1]
 [Basic] [Trk]OFF
 IS↔STD IS↓STD
 (A) Fr1P [I-Gain]

Preset Screen

↕ Preset ▶ (D) [1] [2]
 Frame1: Zoom
 Frame2: Zoom
 ZSpeed: 800

Screen A

Preset (D) [1] [2]
 Frame1: Zoom
 ↕ Frame2: ◀ Zoom ▶
 ZSpeed: 800

Frame2 Screen

Preset (D) [1] [2]
 Frame1: Zoom
 ↕ Frame2: ◀ Focus ▶
 ZSpeed: 800

1 Press (Set) once and (▶) three times.

The display switches to the **Preset screen**.

2 Press (▼) twice.

[Frame2] is underlined.

The previous or default value is highlighted.

3 Press (▶) or (◀) .

Options	(D) Zoom	Focus	Z+F
Description	Control zooming	Control focusing	Control zooming and focusing

(D): Default value



Specifying the Preset Mode Zoom Speed

Configure the zoom speed from any position to the position in memory, as needed.

To adjust the value, use either the Memo button (refer to the Lens Manual) or display operations.


Regardless of the method of adjustment used, the most recent setting takes precedence.

Important

First, switch to the user for whom the settings apply.


(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

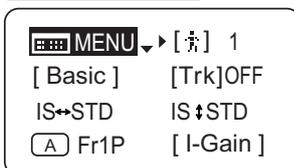

Note: Your specified values apply to both Fr1P and Fr2P.

Preset Screen

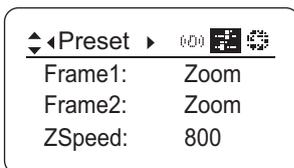


1 Press once and three times.

The display switches to the **Preset screen**.

2 Press three times.


[ZSpeed] is underlined.

The previous or default value is highlighted.

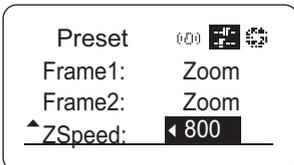

3 Press or .

Press left or right until you reach the desired value.

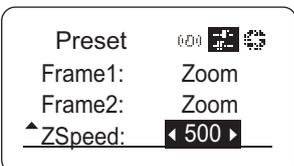

Options	1	to	^(D) 800
Description	Slowest		Fastest

(D): Default value




Specifying Zoom Start Responsiveness for Presets

Specify initial responsiveness in zooming for preset operations.

Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

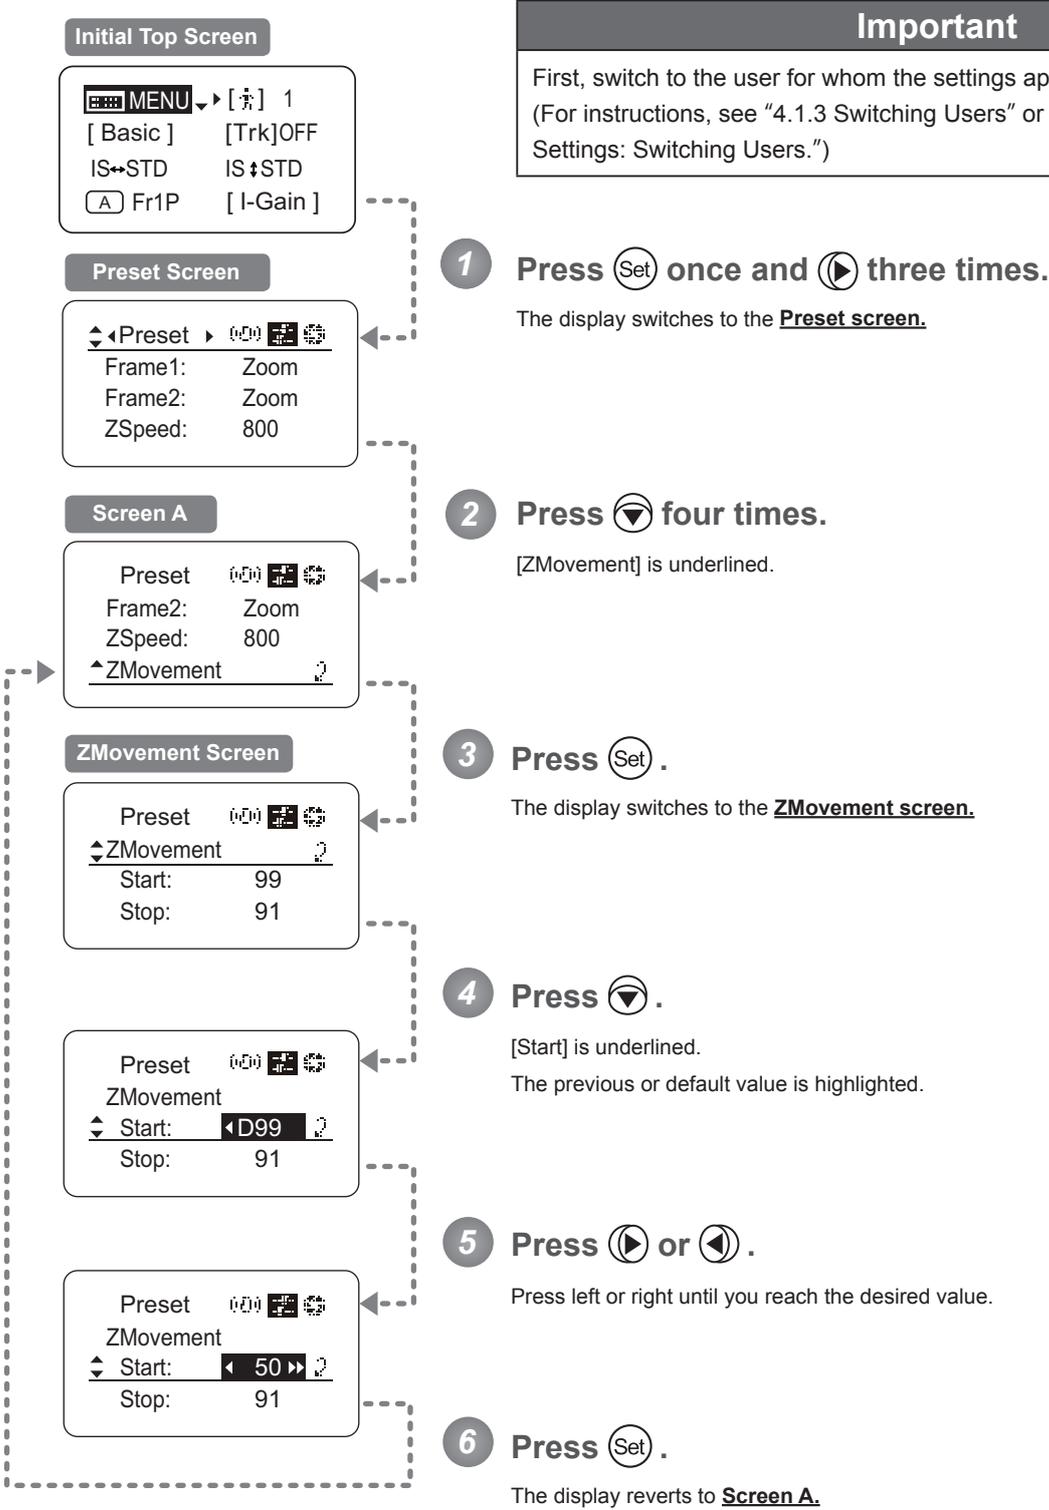

Options	00	to	(D) 99
Description	Start gradually		Start quickly


(D): Default value




Specifying Zoom Stop Responsiveness for Presets

Specify final responsiveness in zooming for preset operations.


Initial Top Screen

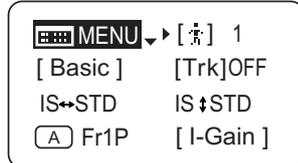




Preset Screen

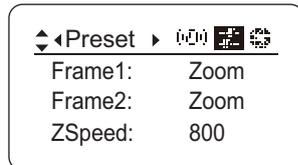

Screen A

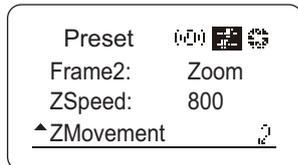

ZMovement Screen

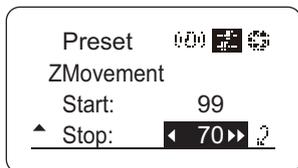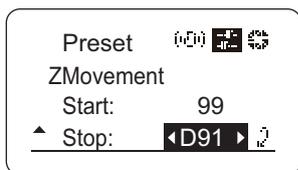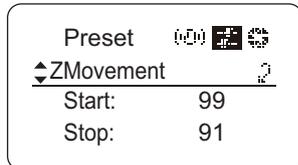

Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

1 Press **Set** once and **Play** three times.

The display switches to the **Preset screen**.

2 Press **Down Arrow** four times.

[ZMovement] is underlined.

3 Press **Set**.

The display switches to the **ZMovement screen**.

4 Press **Down Arrow** twice.

[Stop] is underlined.

The previous or default value is highlighted.

5 Press **Play** or **Left Arrow**.

Press left or right until you reach the desired value.

6 Press **Set**.

The display reverts to **Screen A**.

Options	00	to	99
Description	Stop gradually		Stop quickly

Default value: 91



4.2.5 Iris Screen Settings

The following setting items can be configured on the Iris screen.

Specifying Iris Gain

(1) Specifying Auto Iris Gain

Top

(2) Specifying Remote Iris Gain

Top

Specifying Iris Torque

Top

Iris Compensation ON/OFF

Iris Close Detection ON/OFF

Items labeled **Top** can also be modified from the Top screen.

Specifying Iris Gain


(1) Specifying Auto Iris Gain Top

Although this value is factory-set, it can be adjusted as needed.


To adjust the value, use either the auto iris gain adjustment trimmer (refer to the Lens Manual) or display operations. Regardless of the method of adjustment used, the most recent setting takes precedence.

The same auto iris gain value applies to all users, regardless of the current user. Thus, there is no need to switch users in advance. Unlike most other setting adjustments, any changes to this setting also apply to user 0.


Initial Top Screen

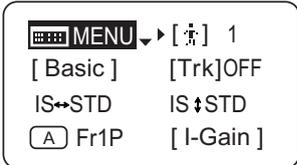




Iris Screen

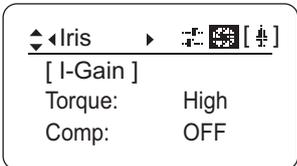

Screen A

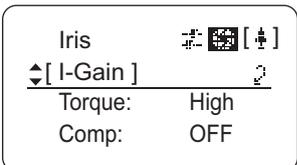

[I-Gain] Screen

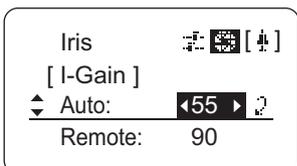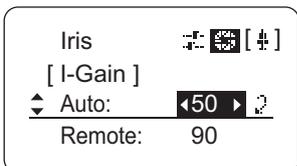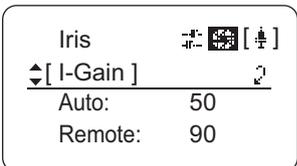

1 Press **Set** once and **▶** four times.

The display switches to the Iris screen.

2 Press **▼**.

[I-Gain] is underlined.

3 Press **Set**.

The display switches to the [I-Gain] screen.

4 Press **▼**.

[Auto] is underlined.
The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to Screen A.

Note: Do the following when adjusting gain while checking iris operation.

- Confirm that the drive unit A/M switch is set to [Auto] mode.
- Set the camera iris mode to [Auto].

Note: As you look at the lens iris ring, set it to the position of maximum gain at which "focus hunting" does not occur.

Note: The current iris gain value is retained even if you reset other settings as described in "4.2.1 Resetting Values." For this reason, you will no longer be able to view the default setting. If necessary, make a note of the default setting before adjusting this value.

Options	01	to	99
Description	Minimum gain		Maximum gain


Default: Varies depending on the factory-set value, but corresponds to the value determined with the iris gain adjustment trimmer.



(2) Specifying Remote Iris Gain Top

Although this value is factory-set, it can be adjusted as needed.

The same remote iris gain value applies to all users, regardless of the current user. Thus, there is no need to switch users in advance. Unlike most other setting adjustments, any changes to this setting also apply to user 0.

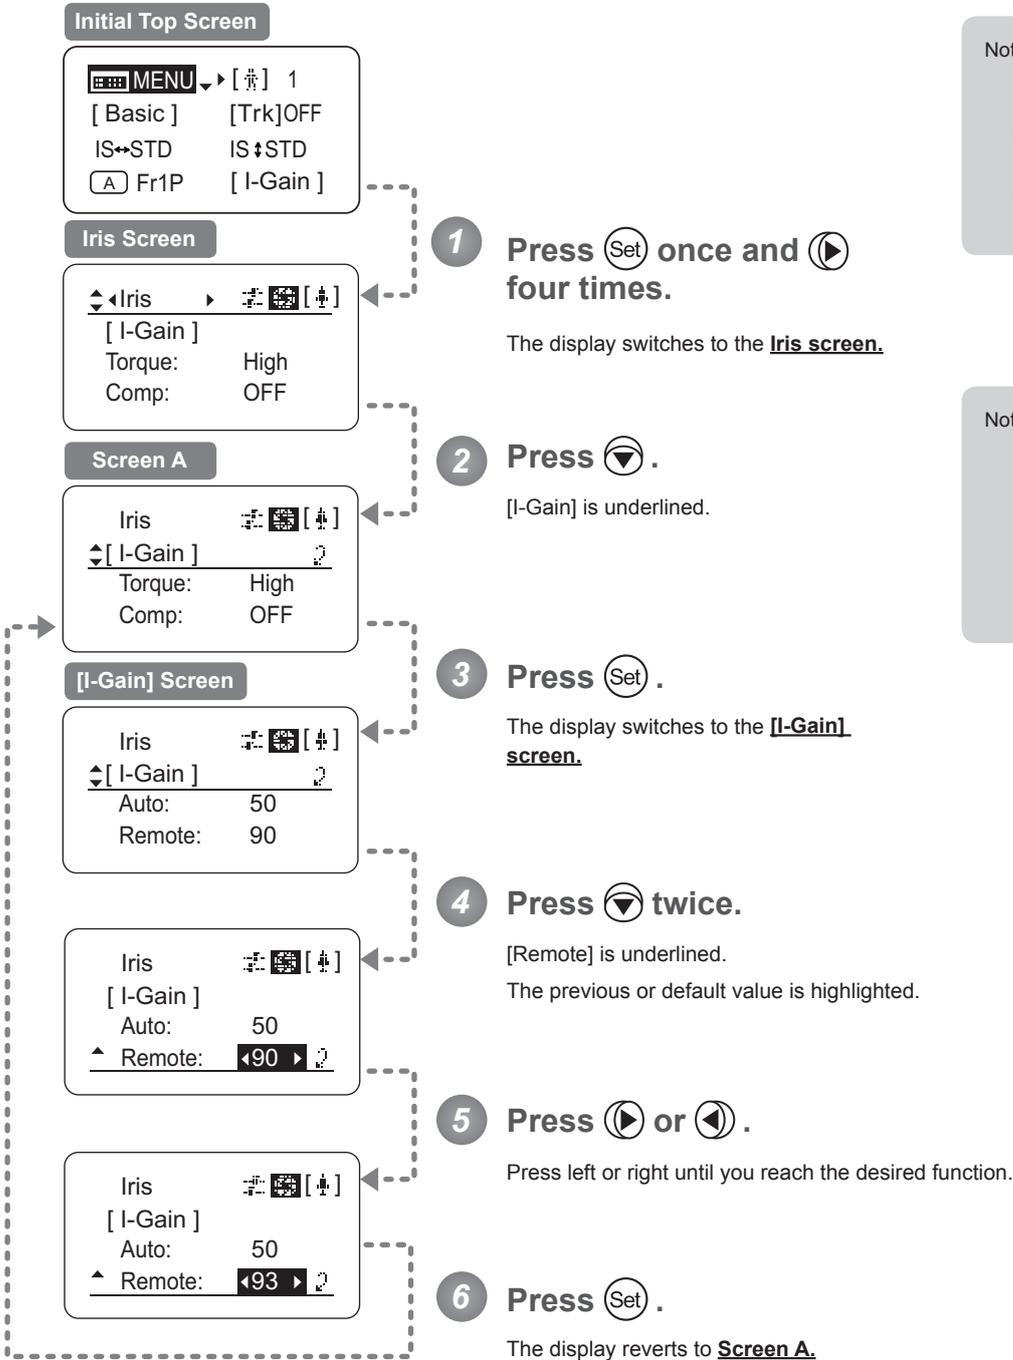

Note: Do the following when adjusting gain while checking iris operation.

- Confirm that the drive unit A/M switch is set to [Auto] mode.
- Set the camera iris mode to [Remote].

Note: The current iris gain value is retained even if you reset other settings as described in "4.2.1 Resetting Values." For this reason, you will no longer be able to view the default setting. If necessary, make a note of the default setting before adjusting this value.

Options	01	to	99
Description	Minimum gain		Maximum gain

Default value: 90




Specifying Iris Torque Top

Specify the desired level of torque in manual control of the iris ring.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

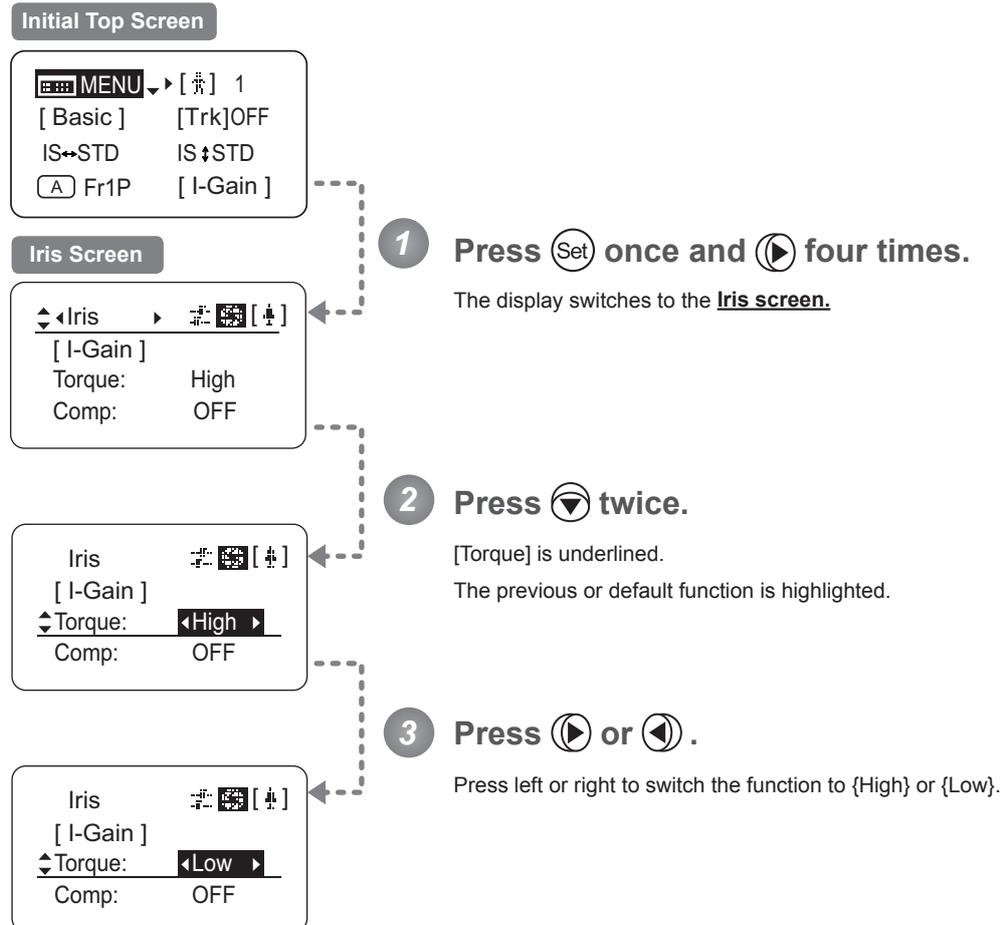

Options	^(D) High	Low
Description	High torque	Low torque

(D): Default value




Iris Compensation ON/OFF

The amount of light decreases when an extender (2.0x) is used. You can specify a function that compensates by opening the iris by an amount equivalent to f/2.




Important

First, switch to the user for whom the settings apply.
 (For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

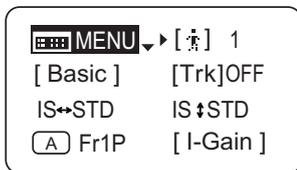

Iris Screen

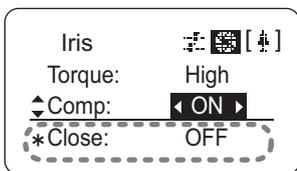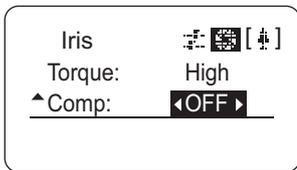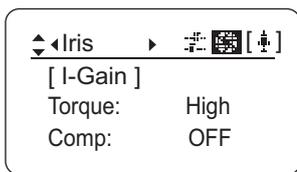

1 Press **Set** once and **▶** four times.

The display switches to the **Iris screen**.

2 Press **▼** three times.

[Comp] is underlined.
 The previous or default function is highlighted.

3 Press **▶** or **◀**.

Press left or right to switch the function {ON} or {OFF}.

Note: The iris may not fully close in some cases when the iris compensation is set to ON while an extender (2.0x) is used. If so, activate detection as described in "Iris Close Detection ON/OFF."

*: Displayed when {Comp} is set to ON.

Options	ON	^(D) OFF
Description	Iris compensation	No iris compensation

(D): Default value




Iris Close Detection ON/OFF

The iris cannot be fully closed when correction is active and an extender (2.0x) is used. As a countermeasure, you can specify a function to detect iris close and close the iris as needed.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

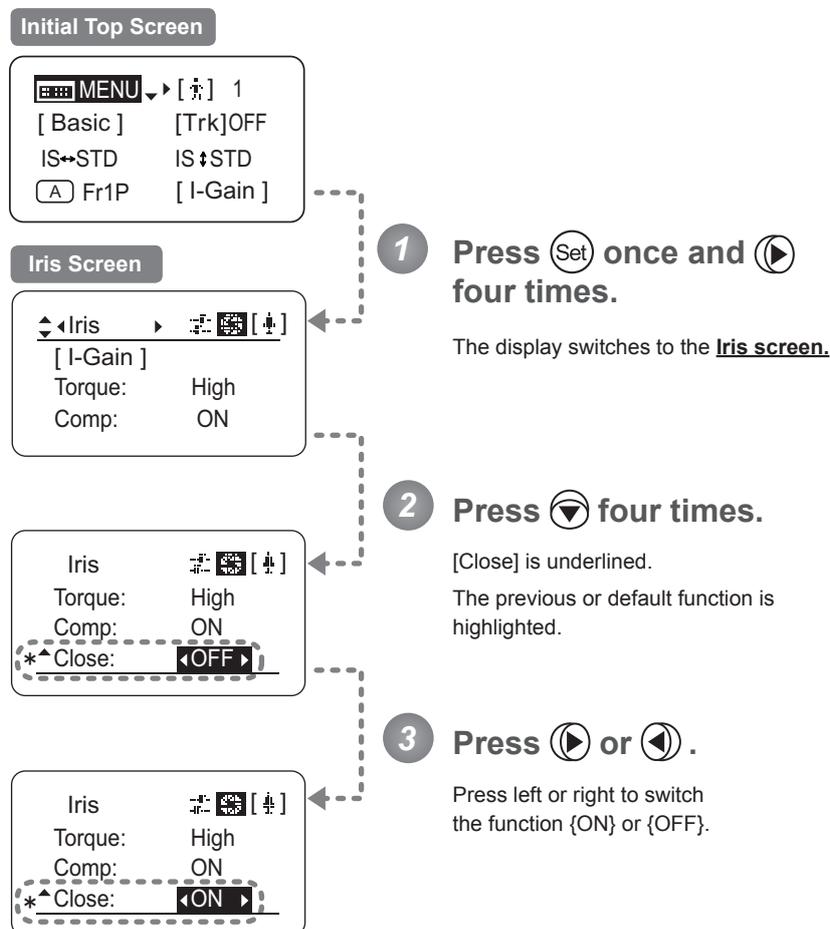


Note: With some cameras, iris compensation may conflict with iris control by the camera, preventing correct iris operation. If so, deactivate iris close detection.

*: Displayed when {Comp} is set to ON.

Note: Iris close is detected only when iris compensation is enabled.

Options	^(D) OFF	ON
Description	No close detection	Close detection

 (D): Default value



4.2.6 Zoom Screen Settings

The following setting items can be configured on the Zoom screen.

Zoom Tracking ON/OFF

Top

Specifying Zoom Servo Start Responsiveness

Specifying Zoom Servo Stop Responsiveness

Specifying Zoom Mechanical End Stop Responsiveness

Specifying Seesaw Switch Responsiveness

Top

Specifying Analog Demand Responsiveness

Top

Specifying Maximum Zoom Speed Control

Specifying Minimum Zoom Speed Control

Specifying Servo Type from Zoom Demand

Demand-Based Zoom Speed Adjustment ON/OFF

Specifying Zoom Demand Specifications

Items labeled **Top** can also be modified from the Top screen.


Zoom Tracking ON/OFF Top

Activate or deactivate zoom tracking as needed.

Important


First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

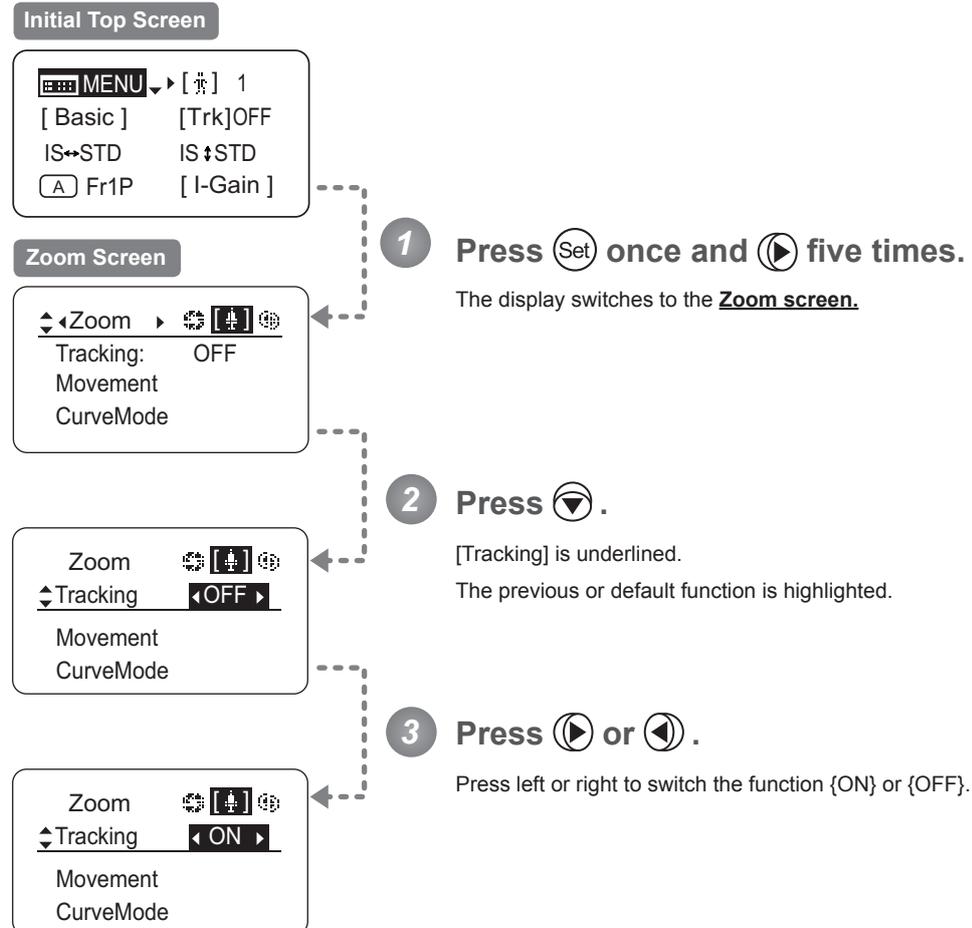

Options	^(D) OFF	ON
Description	Zoom tracking disabled	Zoom tracking enabled

 (D): Default value



Specifying Zoom Servo Start Responsiveness


Specify initial responsiveness in zooming (using seesaw switch, for example) as needed.

Important


First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")


Initial Top Screen

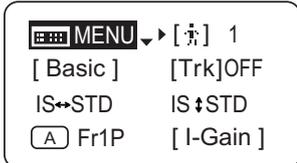




Zoom Screen

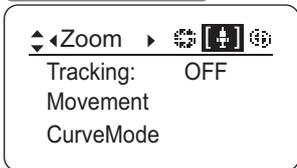

Screen A

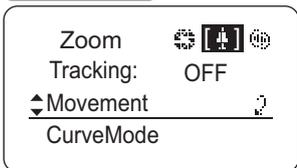

Movement Screen

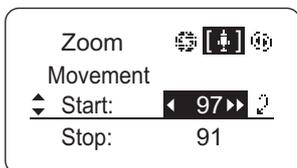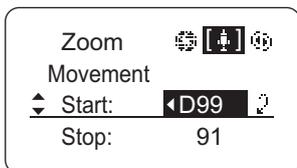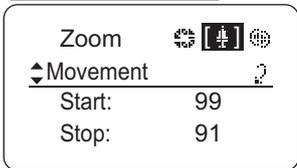

1 Press **Set** once and **▶** five times.

The display switches to the **Zoom screen**.

2 Press **▼** twice.

[Movement] is underlined.

3 Press **Set**.

The display switches to the **Movement screen**.

4 Press **▼**.

[Start] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

Options	00	to	^(D) 99
Description	Start gradually		Start quickly

(D): Default value



Specifying Zoom Servo Stop Responsiveness

Specify final responsiveness in zooming (using seesaw switch, for example) as needed.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

MENU ▾ [1]
 [Basic] [Trk]OFF
 IS↔STD IS↓STD
 (A) Fr1P [I-Gain]

Zoom Screen

Zoom ▾ [1]
 Tracking: OFF
 Movement
 CurveMode

Screen A

Zoom [1]
 Tracking: OFF
 Movement 2
 CurveMode

Movement Screen

Zoom [1]
 Movement 2
 Start: 99
 Stop: 91

Zoom [1]
 Movement
 Stop: ◀D91▶ 2
 End: 99

Zoom [1]
 Movement
 Stop: ◀89▶ 2
 End: 99

- 1 Press (Set) once and (▶) five times.

The display switches to the **Zoom screen**.

- 2 Press (▼) twice.

[Movement] is underlined.

- 3 Press (Set).

The display switches to the **Movement screen**.

- 4 Press (▼) twice.

[Start] is underlined.

The previous or default value is highlighted.

- 5 Press (▶) or (◀).

Press left or right until you reach the desired function.

- 6 Press (Set).

The display reverts to **Screen A**.

Options	00	to	99
Description	Stop gradually		Stop quickly

Default value: 91




Specifying Zoom Mechanical End Stop Responsiveness

Specify final responsiveness at the mechanical end in zooming (using the seesaw switch, for example) as needed.

Important

First, switch to the user for whom the settings apply.
 (For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

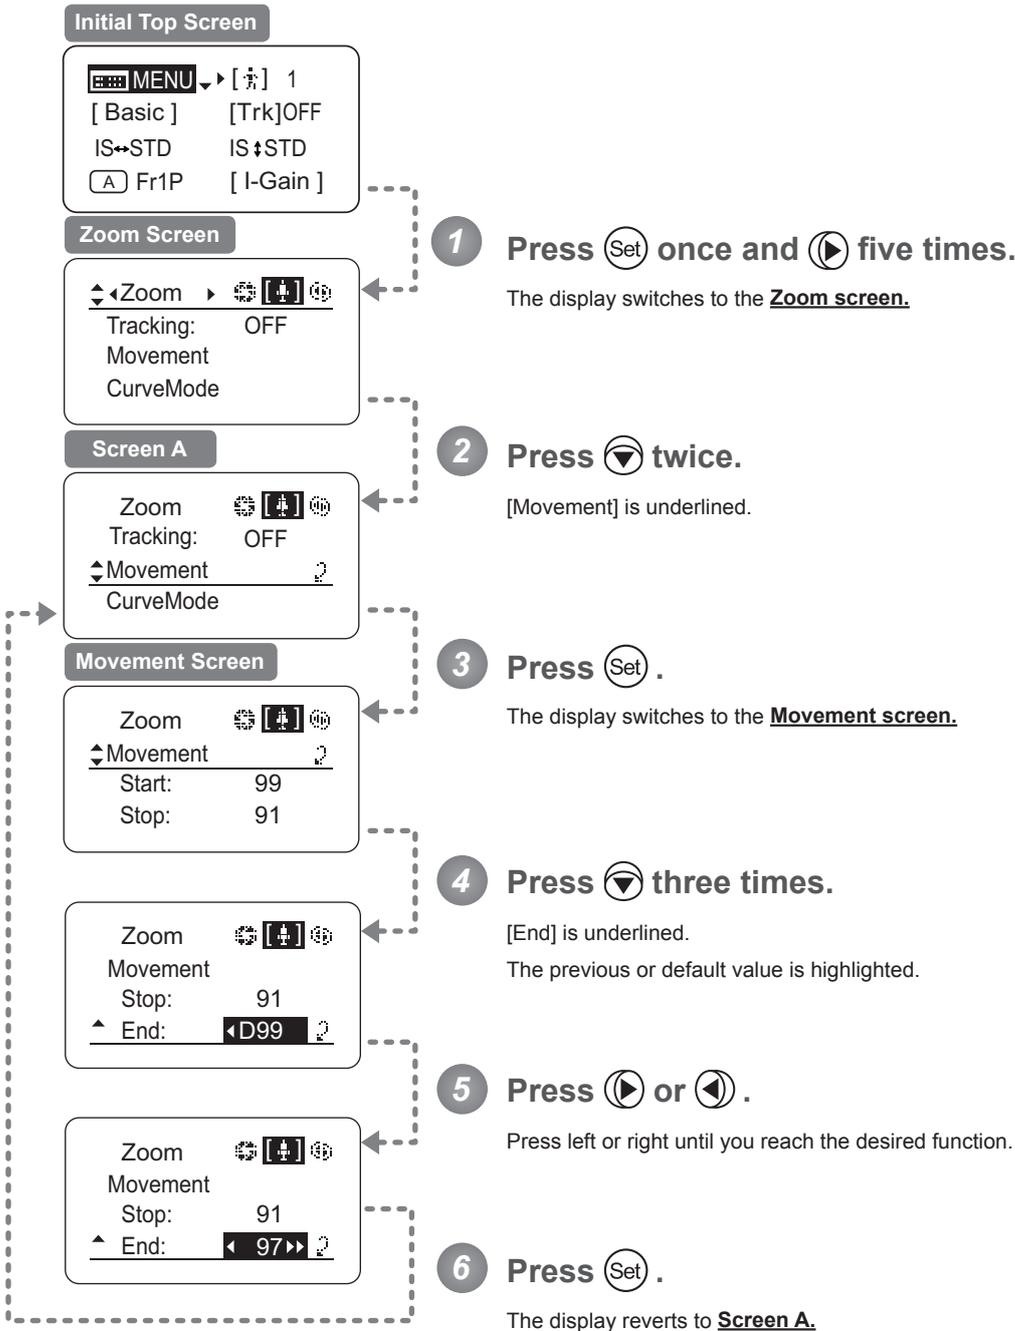

Options	00	to	^(D) 99
Description	Stop gradually		Stop quickly

(D): Default value




Specifying Seesaw Curve Responsiveness Top

Configure the responsiveness of zoom speed adjustment in response to pressing the zoom seesaw switch.
 (Note: Another screen is displayed when this setting is configured.)


Important

First, switch to the user for whom the settings apply.
 (For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")


Initial Top Screen

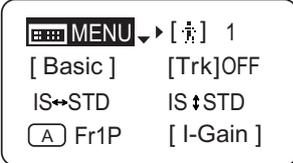





Zoom Screen

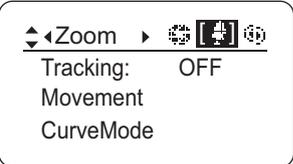

Screen A

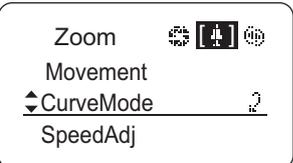

CurveMode Screen

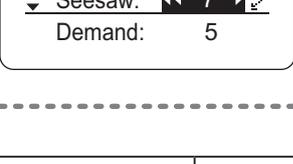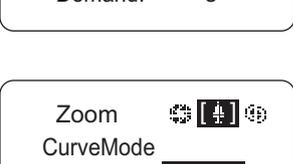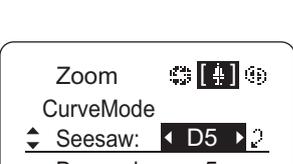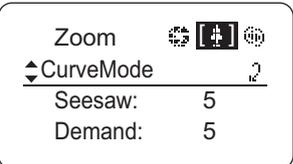

1 Press **Set** once and **▶** five times.

The display switches to the **Zoom screen**.

2 Press **▼** three times.

[CurveMode] is underlined.

3 Press **Set**.

The display switches to the **CurveMode screen**.

4 Press **▼**.


[Seesaw] is underlined.
 The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

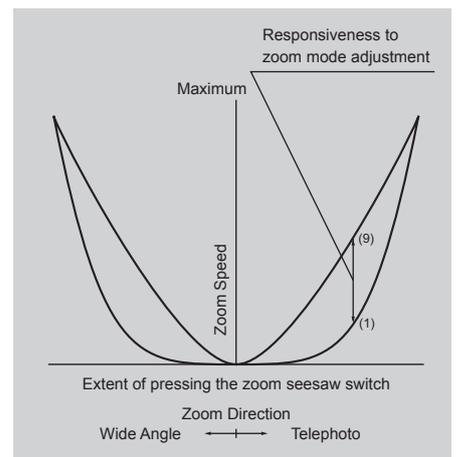

Options	1	2	3	4	(D) 5	6	7	8	9
----------------	---	---	---	---	-------	---	---	---	---

(D): Default value




Specifying Analog Demand Curve Responsiveness Top

Configure the responsiveness of zoom speed adjustment in response to pressing the analog demand thumb ring.
 (Note: Another screen is displayed when this setting is configured.)


Important

First, switch to the user for whom the settings apply.
 (For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")


Initial Top Screen

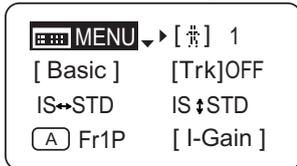




Zoom Screen

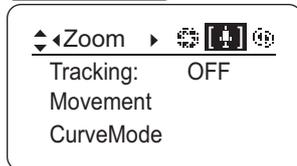

Screen A

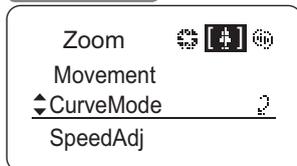

CurveMode Screen

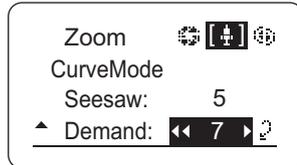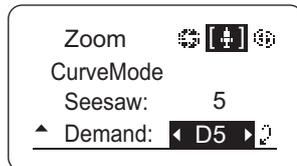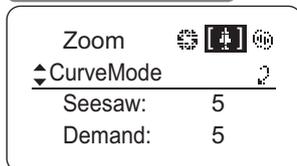

1 Press **Set** once and **Play** five times.

The display switches to the **Zoom screen**.

2 Press **Down Arrow** three times.

[CurveMode] is underlined.

3 Press **Set**.

The display switches to the **CurveMode screen**.

4 Press **Down Arrow** twice.


[Demand] is underlined.
 The previous or default value is highlighted.

5 Press **Play** or **Left Arrow**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

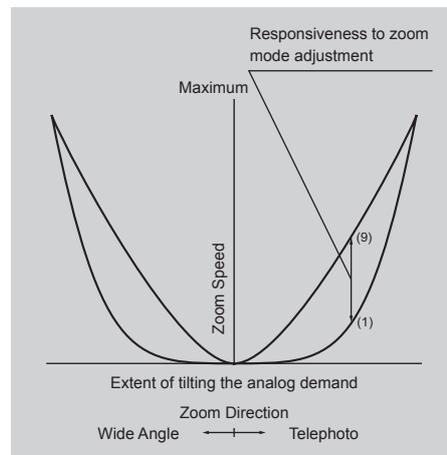

Options	1	2	3	4	(D) 5	6	7	8	9
---------	---	---	---	---	-------	---	---	---	---

(D): Default value



Specifying Maximum Zoom Speed Control

Specify the maximum speed to which the zoom speed can be adjusted using the drive unit knob.

Important

First, switch to the user for whom the settings apply.

(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

MENU ▾ [#] 1
[Basic] [Trk] OFF
IS ↔ STD IS + STD
[A] Fr1P [I-Gain]

Zoom Screen

Zoom ▸ [#] [#]
Tracking: OFF
Movement
CurveMode

Screen A

Zoom [#] [#]
CurveMode
SpeedAdj 2
Control: Sped

SpeedAdj Screen

Zoom [#] [#]
SpeedAdj 2
Max: 99
Min: 01

Zoom [#] [#]
SpeedAdj
Max: ◀ D99 2
Min: 01

Zoom [#] [#]
SpeedAdj
Max: ◀ 97 ▶ 2
Min: 01

- 1 Press **Set** once and **▶** five times.

The display switches to the **Zoom screen**.

- 2 Press **▼** four times.

[SpeedAdj] is underlined.

- 3 Press **Set**.

The display switches to the **SpeedAdj screen**.

- 4 Press **▼**.

[Max] is underlined.

The previous or default value is highlighted.

- 5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

- 6 Press **Set**.

The display reverts to **Screen A**.

Options	Min. value – ^(D) 99
---------	--------------------------------

(D): Default value




Specifying Minimum Zoom Speed Control

Specify the minimum speed to which the zoom speed can be adjusted using the drive unit knob.


Important

First, switch to the user for whom the settings apply.
(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")


Initial Top Screen

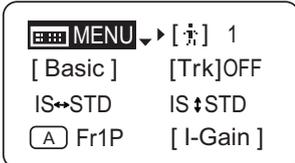




Zoom Screen

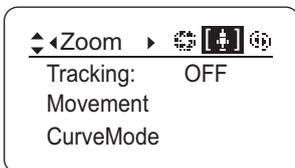

Screen A

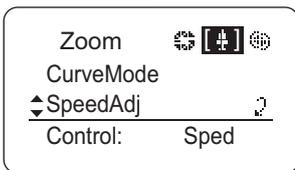

SpeedAdj Screen

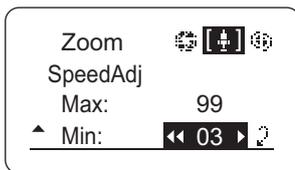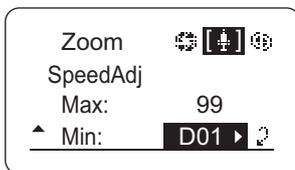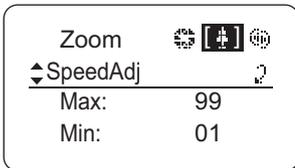

1 Press **Set** once and **▶** five times.

The display switches to the **Zoom screen**.

2 Press **▼** four times.

[SpeedAdj] is underlined.

3 Press **Set**.

The display switches to the **SpeedAdj screen**.

4 Press **▼** twice.

[Min] is underlined.

The previous or default value is highlighted.

5 Press **▶** or **◀**.

Press left or right until you reach the desired function.

6 Press **Set**.

The display reverts to **Screen A**.

Options	01 – Max. value
----------------	-----------------

Default value: 01




Specifying Servo Type from Zoom Demand

Specify either the speed or position servo as the type of servo to use from the zoom demand.

Important

First, switch to the user for whom the settings apply.


(For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

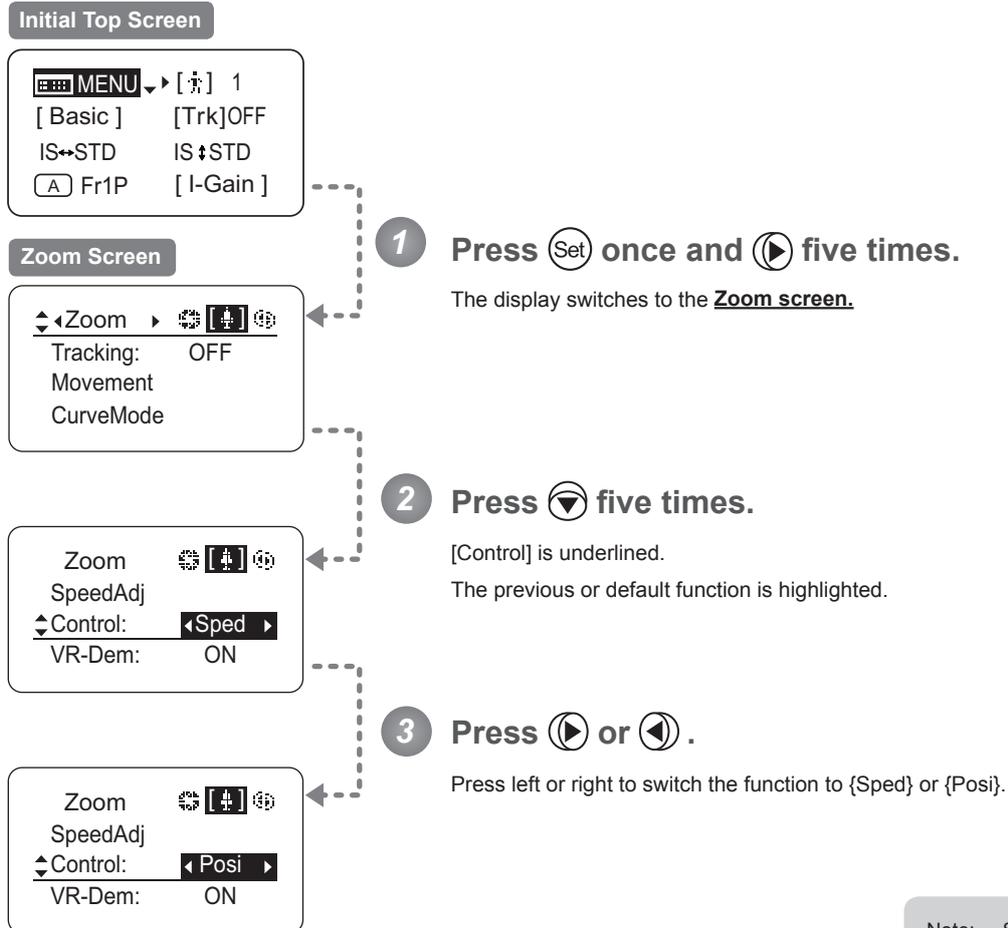

Note: Selecting {Posi} will disable the seesaw switch. Additionally, only one demand connector can be connected when {Posi} is selected. Normally, select {Sped}.

Options	^(D) Sped	Posi
Description	Speed servo	Position servo

 (D): Default value




Demand-Based Zoom Speed Adjustment ON/OFF

Enable or disable adjustment of the maximum drive unit zoom speed based on the zoom demand.




Important

First, switch to the user for whom the settings apply.
 (For instructions, see "4.1.3 Switching Users" or "4.2.1 User Screen Settings: Switching Users.")

Initial Top Screen

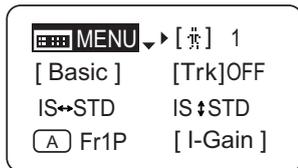

Zoom Screen

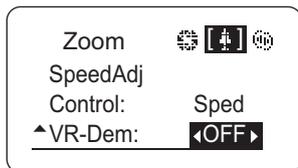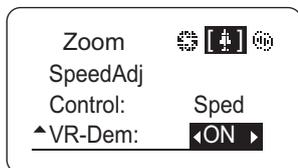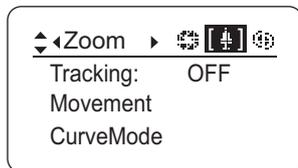

1 Press **Set** once and **▶** five times.

The display switches to the **Zoom screen**.

2 Press **▼** six times.


[VR-Dem] is underlined.
 The previous or default function is highlighted.

3 Press **▶** or **◀**.

Press left or right to switch the function {ON} or {OFF}.

Options	^(D) ON	OFF
Description	Enabled	Disabled

 (D): Default value



4.2.7 Focus Screen Settings



The following setting items can be configured on the Focus screen.

Specifying Focus Demand Responsiveness

Specifying Focus Demand Responsiveness

Specify responsiveness in analog focus demand operations as needed.

Note: These settings take effect when the curve selection switch on the focus demand is set toward FAR.

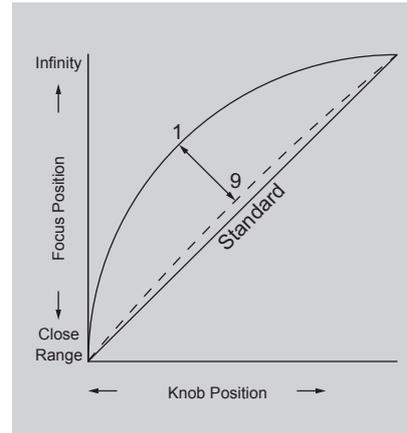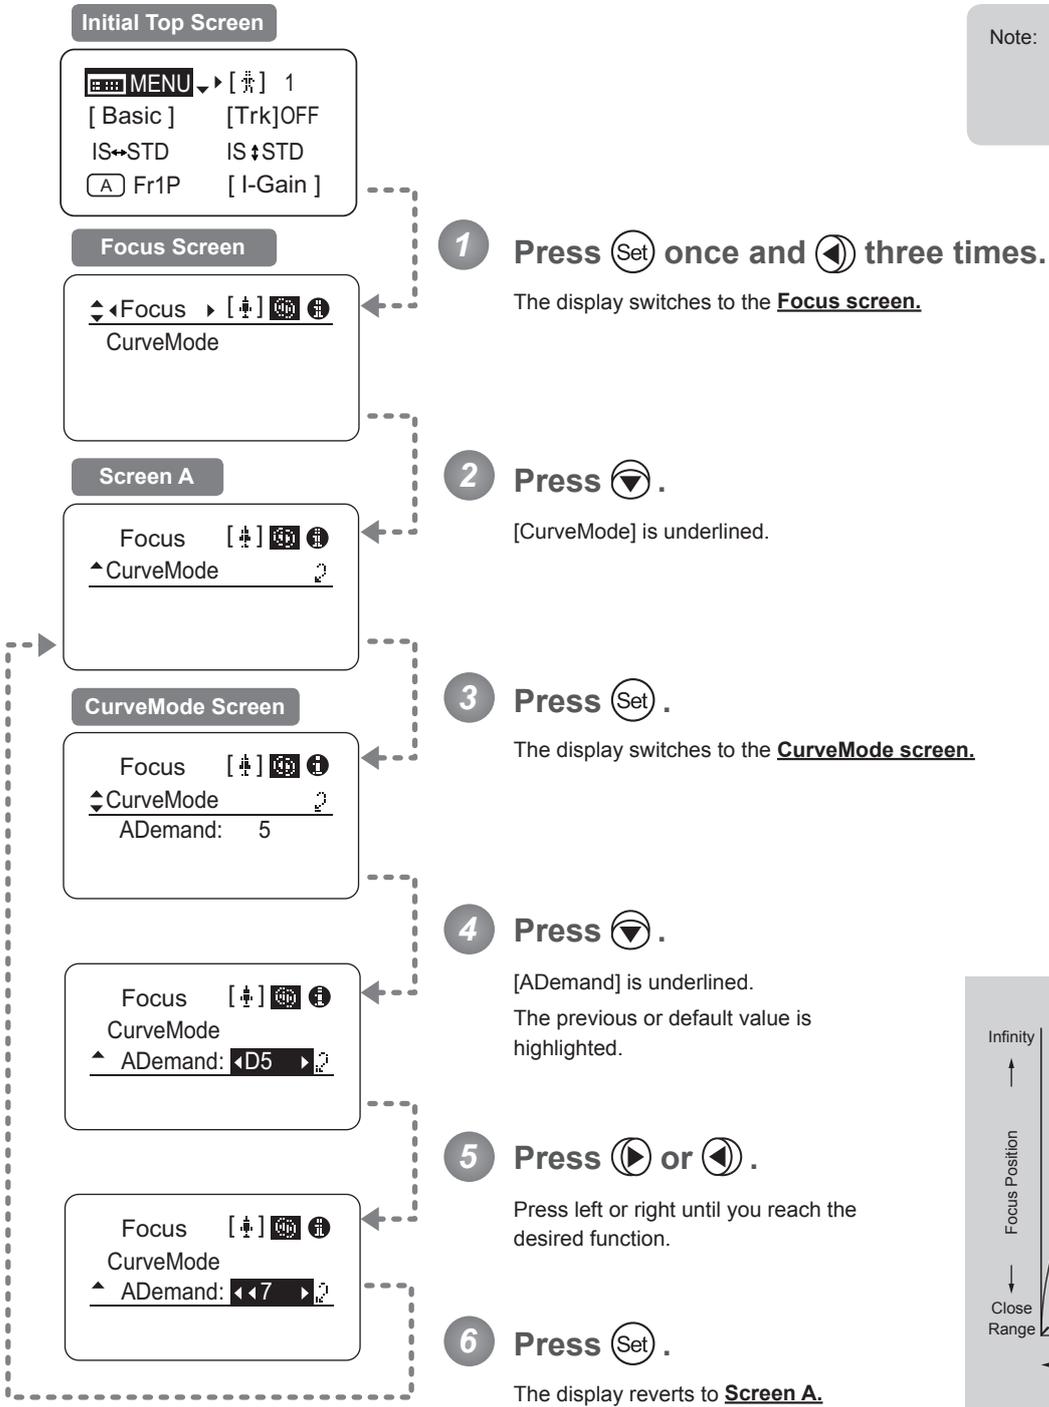

Options	1	to	9
Description	Large curve		Small curve

Default value: 5



4.2.8 Info Screen Settings

The following setting items can be configured on the **Info screen**.

Specifying the 3D Function (For information on specifying the 3D function, see the instruction manual of the BC-100 3D cable.)

Specifying Encoder Output


Serial Communication with Camera ON/OFF

Configuring Settings in System Mode (Used by Canon Service Technicians Only)




Specifying Encoder Output

Enable or disable encoder output as needed. Enabling output enables virtual connector output. For details, contact Canon or your dealer.

Initial Top Screen

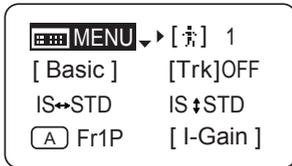

Info Screen

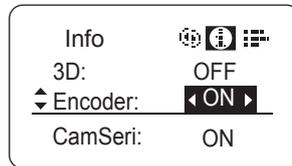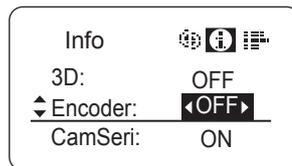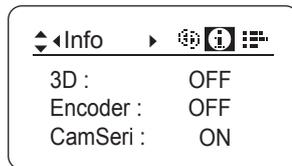

1 Press **Set** once and **Left Arrow** twice.

The display switches to the **Info screen**.

2 Press **Down Arrow** twice.


[Encoder] is underlined.

3 Press **Right Arrow** or **Left Arrow**.

Press left or right to switch the function {ON} or {OFF}.

Options	^(D) OFF	ON
Description	Output disabled	Output enabled

 (D): Default value




Serial Communication with Camera ON/OFF

Two types of camera–lens interfaces are available: analog control or control via serial communication. This setting enables you to switch between auto control detection and analog control.

By default, this setting is ON, enabling auto detection of whether serial or analog control is used.

To restrict the interface to analog control, set it to OFF.

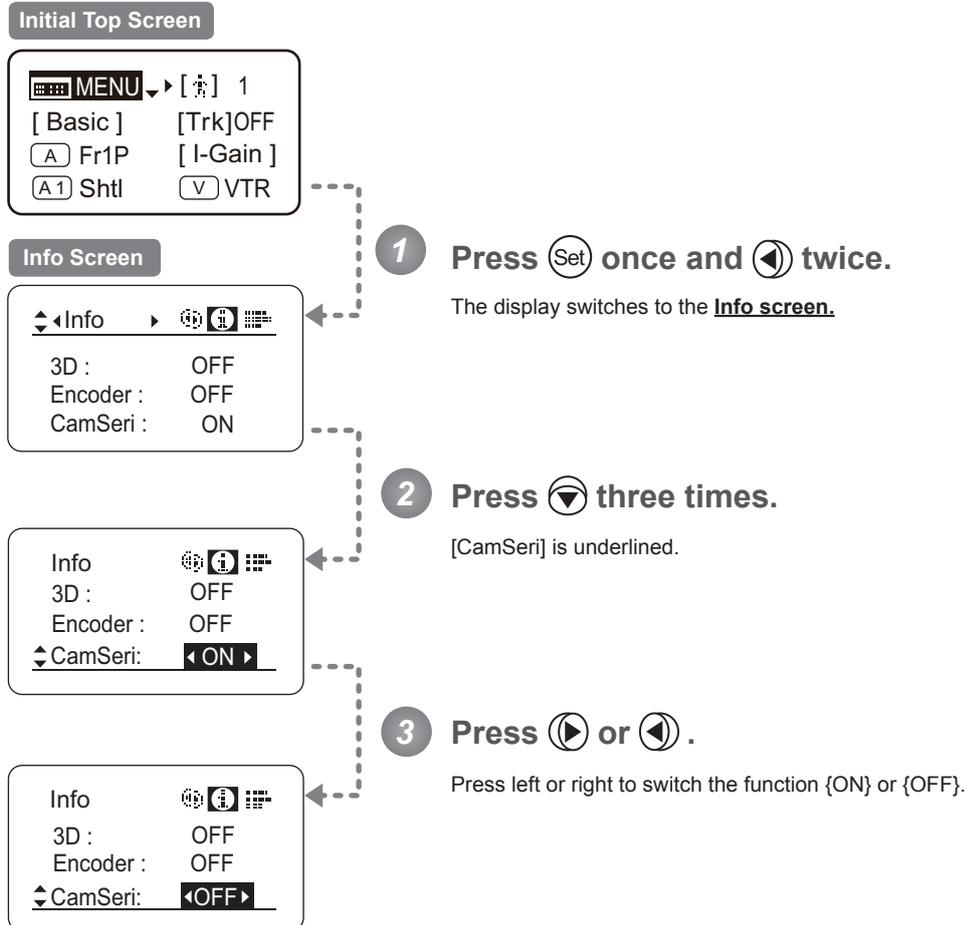

Options	^(D) ON	OFF
Description	Serial communication with the camera Enabled	Serial communication with the camera Disabled

(D): Default value



4.2.9 Fol. Screen Settings


The following setting items can be configured on the **Fol. screen**.

Viewing Lens Follow Settings (Iris, Zoom, Focus)


Viewing Lens Follow Settings (Iris, Zoom, Focus)

Indicates values in the full range of mechanical iris, zoom, and focus operations, expressed as relative values in the range of 0–1000.

Initial Top Screen

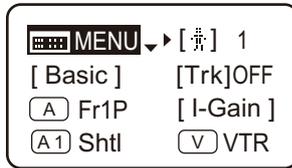

Fol. Screen

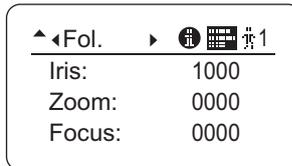

1 Press **Set** and then **◀**.


The display switches to the **Fol. screen**, showing relative follow iris, zoom, and focus values.

Note: As long as the **Fol. screen** is shown, the display will not turn off automatically after 2 minutes if left idle. To turn off the display, press the Display switch.



4.3 List of Settings

	Default Value	Options
Top		
MENU		To * 1 on the next page
[]	1	1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9 / 0
[Basic]		Basic
[Trk]	OFF	OFF / ON
IS ↔	STD	STD / HIGH / OFF
IS ⇕	STD	STD / HIGH / OFF
[A]	Fr1P	VTR / RET / Fr1P / Fr1F / Fr2P / Fr2F / Sped / Shtl / IS / NON
[I-Gain]		
To * 2 on the next page		
[A 1]	Shtl	VTR / RET / Fr1P / Fr1F / Fr2P / Fr2F / Sped / Shtl / IS / NON
[V]	VTR	VTR / RET / Fr1P / Fr1F / Fr2P / Fr2F / Sped / Shtl / IS
[A 2]	Fr1P	VTR / RET / Fr1P / Fr1F / Fr2P / Fr2F / Sped / Shtl / IS / NON
[R]	RET	VTR / RET / Fr1P / Fr1F / Fr2P / Fr2F / Sped / IS / Shtl
[I-Tq]	H	H / L
[Z.M.]		
To * 3 on the next page		
[AM]	Norm	Norm / Reve / Auto / Manu
[]	Zoom	Zoom / Iris
Escape Operation	Jump to user 0 setting status	Hold down both the Display switch and Set key for at least 2 seconds.

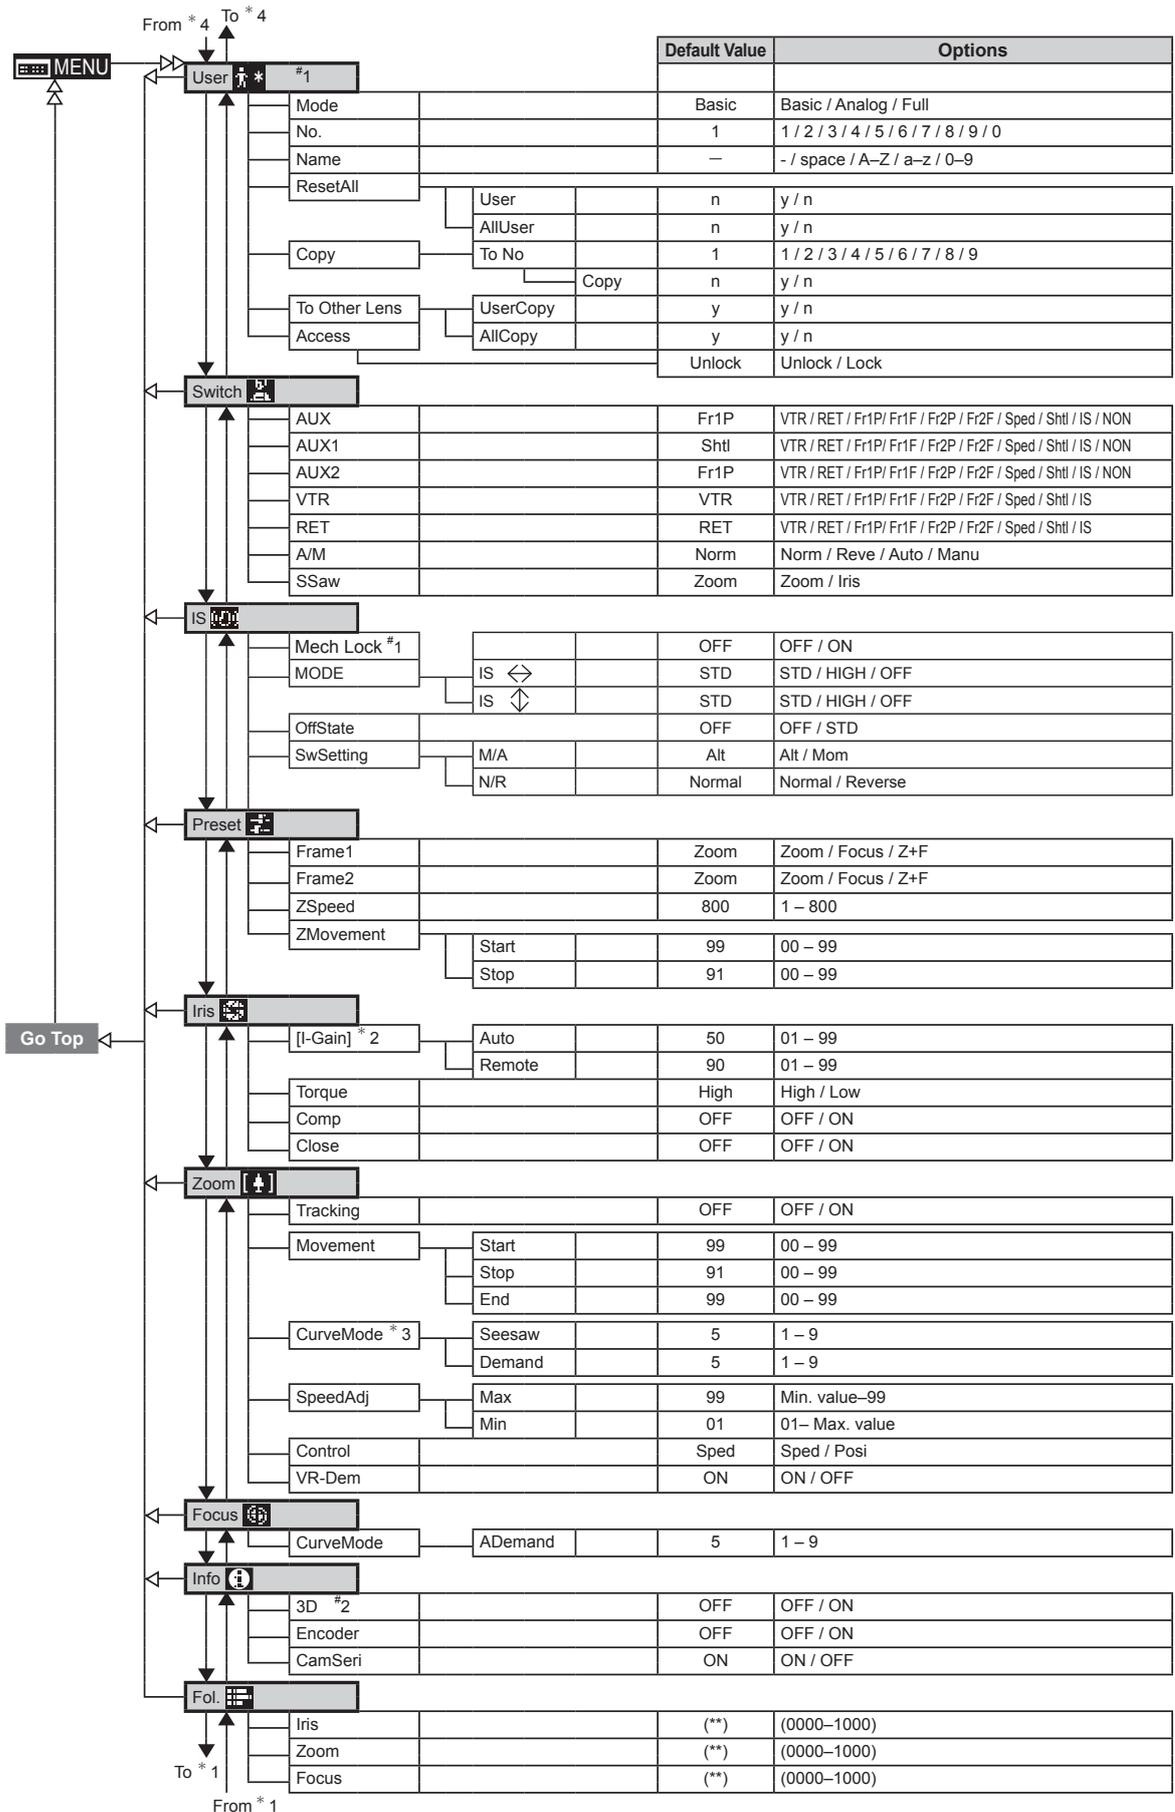

◀◀ : Set key operation ↓ : Right key operation
 ◀ : Up key operation ↑ : Left key operation

#1 : Only for CJ45ex9.7B, CJ45ex13.6B
 #2 : For information on specifying the 3D communication, see the "3D Cable Instruction Manual."
 () : Indicates values that cannot be changed.

Memo

5

Operation in Analog Mode


5. Operation in Analog Mode

5.1 Configuration from the Top Screen

To access the **Top screen**, press the Display switch.

A total of 3 items can be configured on the **Top screen** in Analog mode. The first screen displayed is referred to as the **Initial Top screen**. Status of some items can be checked simply by accessing this screen.

Initial Top Screen in Analog Mode

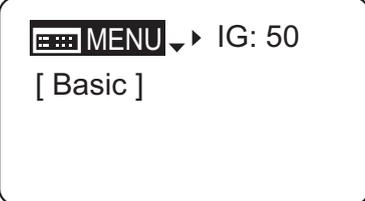

⌨️ MENU ▾ ▶ IG: 50
[Basic]


5.1.1 Selecting Analog Mode

Basic mode is the default mode, but Analog mode can be accessed as follows.

Use this mode for operation of a conventional analog drive unit. Digital functions are not available in this mode.

- Switches labeled VTR, RET, IRIS A/M, and IRIS INST control the respective functions. The rocker switch serves as a regular zoom switch.
- AUX and MEMO switches are disabled.
- To set auto iris gain adjustment, use either display or trimmer operations.
- Shuttle shot, frame preset, speed preset, and zoom tracking are not available.

Switching from Basic to Analog Mode

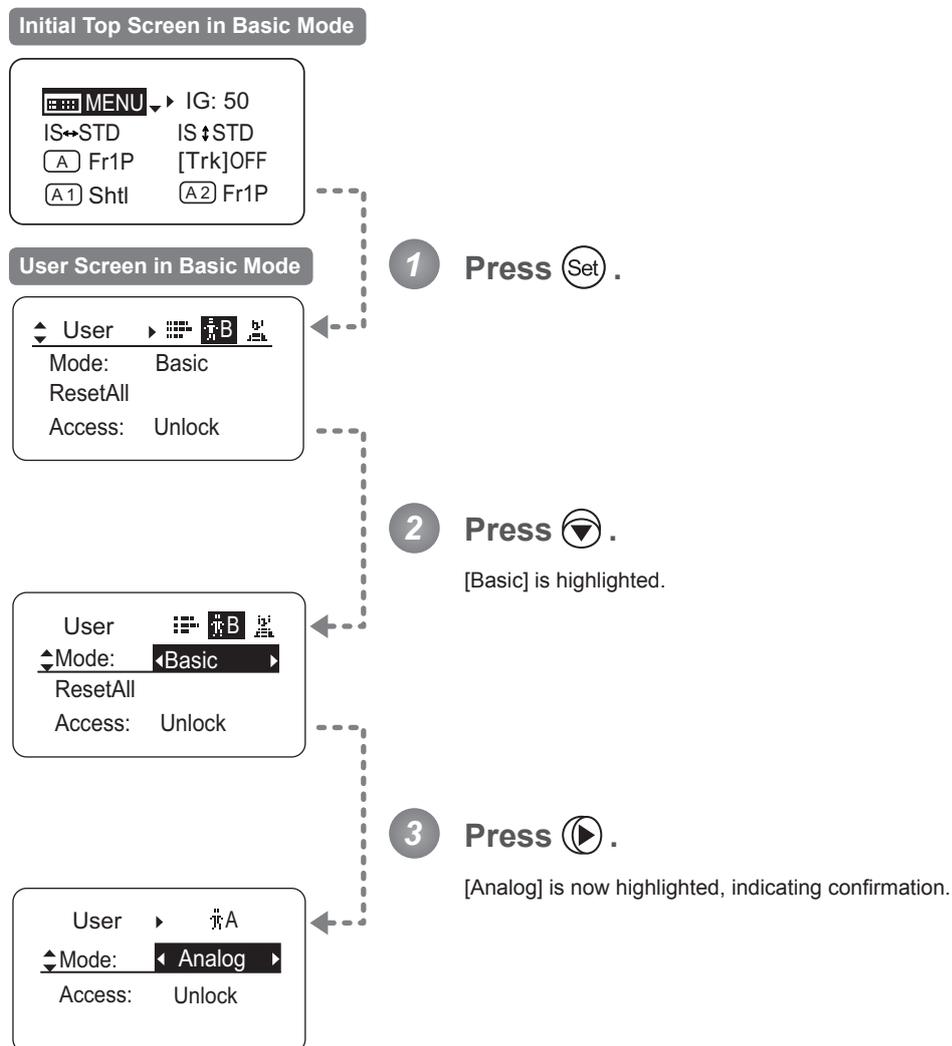


MENU → (Set) → (Down Arrow) → (Right Arrow) → [Analog]

5.1.2 Top Screen

A total of 3 items can be configured on the **Top screen** in Analog mode, and the first screen shown is referred to as the **Initial Top screen**.

Status of some items can be checked simply by accessing this screen. (Shown in the figure below.^{*1})

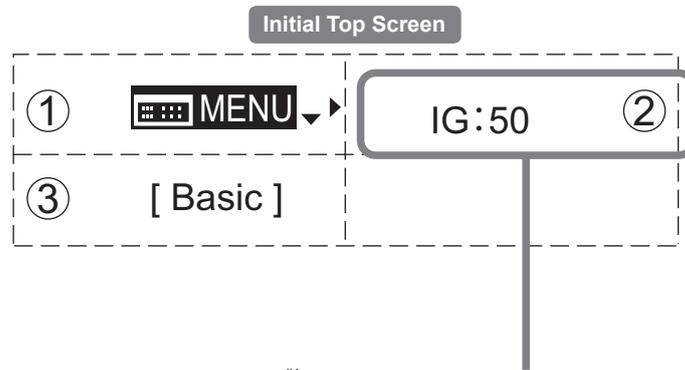

#1

Inside  : Items that show the current setting status.
Example: [IG:50] indicates a value of 50 for auto iris gain.

① **Menu screen**

See "5.2 Configuration from the Menu Screen."

② **IG Auto iris gain**

Adjust the auto iris gain value as needed.

See "5.1.3 Specifying Auto Iris Gain."

③ **[Basic] Switching to Basic Mode**

Switch to Basic mode as needed.

See "5.1.4 Switching to Basic Mode."


5.1.3 Specifying Auto Iris Gain

[IG]

Although this value is factory-set, it can be adjusted as needed.

To adjust the value, use either the auto iris gain adjustment trimmer (refer to the Lens Manual) or display operations. Regardless of the method of adjustment used, the most recent setting takes precedence.

The same auto iris gain value applies to all users.

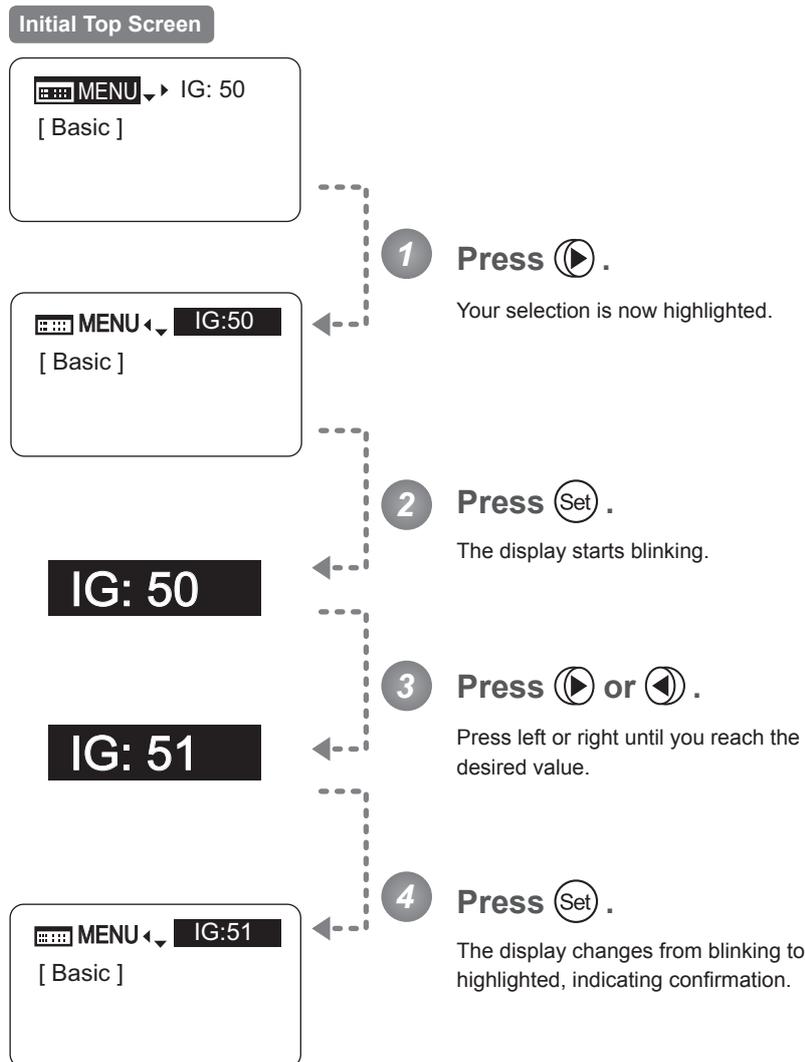

Note: Do the following when adjusting gain while checking iris operation.

- Confirm that the drive unit A/M switch is set to [Auto] mode.
- Set the camera iris mode to [Auto].

Note: As you look at the lens iris ring, set it to the position of maximum gain at which "focus hunting" does not occur.

Options	01	to	99
Description	Minimum gain		Maximum gain

Default: Varies depending on the factory-set value, but corresponds to the value determined with the iris gain adjustment trimmer.



5.1.4 Switching to Basic Mode

[Basic]

Switch to Basic mode from the Top screen as needed.

Switching from Analog to Basic Mode

Initial Top Screen in Analog Mode



1 Press .


[Basic] is highlighted.



2 Press .

The mode switches, and the Initial Top screen in Basic mode is displayed.

Initial Top Screen in Basic Mode

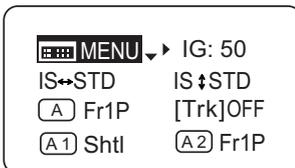

5.2 Configuration from the Menu Screen

In Analog mode, you can view and configure 2 setting items from the Menu screen.*

From the Menu screen in Analog mode, you can access a User screen.

Select [MENU] on the Top screen and press the Set key to access the User screen. (See the following figure.)


*: There is no single Menu screen. Instead, screens accessed by selecting [MENU] and pressing the Set key are collectively referred to as the Menu screen.

5.2.1 User Screen Settings

The following setting items can be configured on the **User Screen**.

- Switching Modes
- Locking Functions

User Screen in Analog Mode

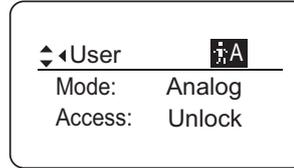


Switching Modes

Switch to Basic or Full mode, as needed.




Important

The new mode setting is retained even after the lens is turned off.

Initial Top Screen

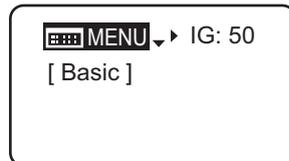

User Screen

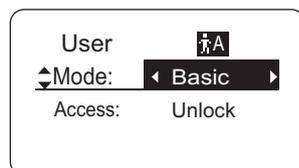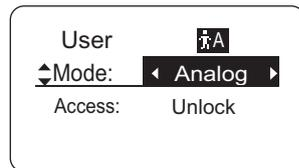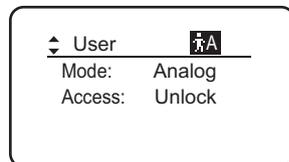

1 Press .

The display switches to the **User screen**.

2 Press .

[Mode] is underlined.

The previous mode is highlighted.

3 Press or .

Press left or right until you reach the desired mode.

Options	^(D) Basic	Full	Analog
Save Settings	Basic Mode	Full Mode	Analog Mode

(D): Default value



Locking Functions

To ensure that configured functions cannot easily be changed, you can lock the settings of certain functions. Once functions are locked, they are locked for all users.



Two display operations are available in Analog mode: auto iris gain adjustment and user switching. However, you cannot switch users when functions are locked, because this function is also locked. Unlocking functions requires the password used to lock them.

(1) Locking Settings

Initial Top Screen



User Screen

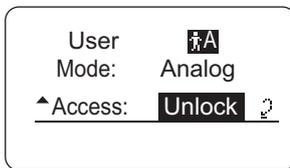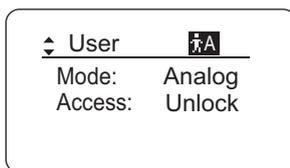

1 Press .

The display switches to the **User screen**.


2 Press twice.

The previous or default value is highlighted.

3 Press .

Continued on next page


Continued from previous page

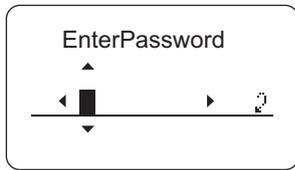

4 Enter the password and press (Set).


Entering Passwords

Press up/down to find characters and left/right to move the cursor or make corrections. Be careful not to press the Set key until you are finished entering the password.

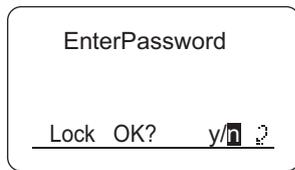

5 Press (Left Arrow) and then (Set).

The settings are now locked.

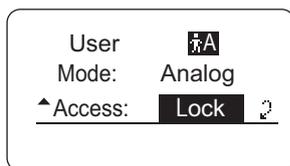

Note

Passwords

No master password is used on this model. The password you enter each time to lock settings is the password used to unlock them. For this reason, we recommend making a note of the password each time. If you forget the password, contact Canon or your dealer. Passwords can be blank or up to 8 digits.

Characters supported in passwords

Options	(D) _ — ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz0123456789
Max. Digits	8

(D): Default value
_: Space

Options	(D) Unlock	Lock
----------------	------------	------

(D): Default value








(2) Unlocking Settings

Initial Top Screen



User Screen

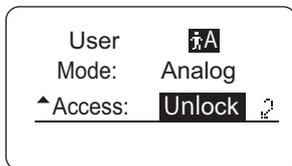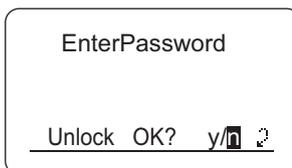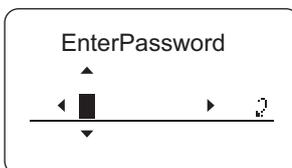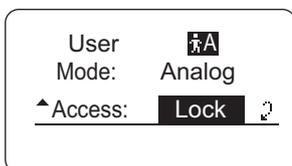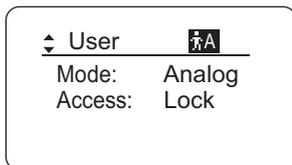

1 Press **Set**.

The display switches to the **User screen**.

2 Press **Down Arrow** twice.

The previous or default value is highlighted.

3 Press **Set**.

4 Enter the password and press **Set**.

Entering Passwords

Press up/down to find characters and left/right to move the cursor or make corrections. Be careful not to press the Set key until you are finished entering the password.

5 Press **Left Arrow** and then **Set**.

The settings are now unlocked.


Options	(D) Unlock	Lock
---------	------------	------

(D): Default value



5.3 List of Settings

		Default Value	Options	Page
<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;">Top</div> <div style="margin-left: 10px;"> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;">MENU</div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;">IG</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">[Basic]</div> </div>				
			To *1 on the next page	
		50	01-99	
			Basic	
Escape Operation	Jump to user 0 setting status	Hold down both the Display switch and Set key for at least 2 seconds.		

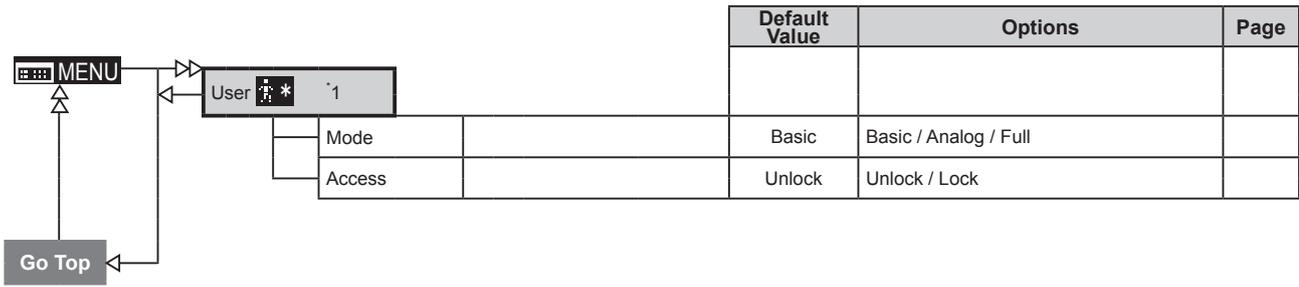

	Default Value	Options	Page
Mode	Basic	Basic / Analog / Full	
Access	Unlock	Unlock / Lock	

⏪ : Set key operation	⏩ : Right key operation
⏴ : Up key operation	⏵ : Left key operation

Index

ANALOG MODE.....	E22, E180	FULL MODE.....	E22, E85
AUX.....	E32, E95	IRIS GAIN.....	E66, E153
BASIC MODE.....	E22, E25	IS.....	E49, E134
CAMERA SERIAL.....	E79, E173	RET.....	E101, E131
ENCODER.....	E78, E182	VTR.....	E99, E130
FOLLOW.....	E80, E175	ZOOM CURVE.....	E36, E103
FRAME PRESET.....	E62, E63, E147, E148	ZOOM TRACK.....	E31, E92



AMERICAS

Canada

Canon Canada, Inc.

Broadcast and Communications Div.
8000 Mississauga Road, Brampton, Ontario L6Y 5Z7,
CANADA

☎ +1-905-863-8000, 📠 +1-905-863-8003

Mexico

Canon Mexicana, S. de R.L. de C.V.

Call Center Div.
Blvd. Manuel Avila Camacho No,138,
Col. Lomas de Chapultepec, Mexico, D.F.

☎ +52 55 5249 4905

North & South America

Canon U.S.A., Inc.

ITCG METC
65 Challenger Road, Ridgefield Park, NJ, 07660
☎ +1(800) 423-5367 (Toll Free), 📠 +1(201) 807-3344

ASIA

Asia & Hong Kong, S.A.R.

Canon Hongkong Company Ltd.

ICP Marketing Div.
19/F, The Metropolis Tower, 10 Metropolis Drive,
Hung Hom, Kowloon, Hong Kong

☎ +852-3191-2333

中国

佳能（中国）有限公司

北京市东城区金宝街89号 金宝大厦15层
邮编 100005

☎ 电话:+86(0)10-8513-9999

📠 传真:+86(0)10-8513-9128

Korea

캐논코리아 컨슈머 이미징 (주)

제품마케팅팀
프로솔루션파트
서울특별시 강남구 테헤란로 607 (삼성동, 5층)
06173

☎ 대표전화 : (82)2-2191-8500

📠 팩스 : (82)2-2191-8576

South & Southeast Asia

Canon Singapore Pte. Ltd.

REG ICP Sales & Marketing Div.
1 Fusionopolis Place, #15-10 Galaxis,
Singapore 138522

☎ +65-6799-8888

日本

キャノンマーケティングジャパン株式会社

イメージングソリューション技術部

108-8011 東京都港区港南2-16-6

☎ (03) 3740-3305, 📠 (03) 3740-3307

EUROPE, MIDDLE EAST, AFRICA

Europe/Africa/Middle East

Canon Europe Ltd.

Broadcast Products Div.
3 The Square, Stockley Park, Uxbridge, Middlesex,
UB11 1ET UK

☎ +44(0)20-8588-8140, 📠 +44(0)20-8588-8929

Canon Europa N.V.

Bovenkerkerweg 59, 1185 XB Amstelveen,
The Netherlands

OCEANIA

Oceania

Canon Australia Pty. Ltd.

CCI Div.
Building A, The Park Estate, 5 Talavera Road,
Macquarie Park, NSW 2113, Australia

☎ +61(0)2-9805-2000



キヤノン株式会社

〒146-8501 東京都大田区下丸子 3-30-2

仕様・外觀・商品構成などはお断りなく変更することがあります。

CANON INC.

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo, 146-8501, Japan

Subject to change without notice.

进口商：佳能（中国）有限公司

地址：100005 北京市东城区金宝街 89 号 金宝大厦 15 层

因产品改进，规格或外观可能有所变更，敬请留意。

修订：2017.9.1

Pub No. BT1-C001-B

原产地：日本

©2017.09 CANON INC.