



PIXELA CORPORATION

PIXELA Applications

English
Installation Guide

Français
Guide d'installation

 
Español
Guía de instalación

ImageMixer™ 3 SE

PIXELA ImageMixer 3 SE - Installation Guide


Recording your movies is only the first step. Use the supplied software to transfer your movies from the camcorder to a computer and access a wide range of fun and easy options to save, manage and edit your videos. Refer to *Viewing the Software Guides* (📖 9) for details on accessing the software guides, which are included on Disc 1.

Here are some of the things you can do with ImageMixer 3.



Save your movies to the computer

 Transfer the movies you recorded from the camcorder to the computer. You can use the computer to edit them or as a place to store them.




Organize your movies with ease

On the computer you can organize your video library, rate your favorite videos and use the albums created automatically (by recording date or other criteria) or create albums of your own.




Play back your video files from the computer

 After transferring your movies from the camcorder, play them back directly from the computer.

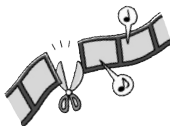

Edit your movies

 Trim out your movies to keep only the most interesting scenes. Rearrange them as you wish and add subtitles or background music to your preference.



Create discs from your movies

Create discs from your video files and share them with friends and family. Of course, you can create original menus for your discs.



Transfer music files*

You can transfer music files to the memory and use the files as background music during playback.

* Only when the camcorder is powered using the compact power adapter.

Preparations

This software is contained on the two supplied discs, **PIXELA Application - Disc 1** and **Disc 2**. Depending on the tasks you want to perform, install the software on either Disc 1 only or both Disc 1 and Disc 2. In either case, the software on Disc 1 must be installed.

Desired task	Disc 1	Disc 2
Saving movies to the computer	●	—
Organizing movies on the computer	—	●
Playing back movies on the computer	—	●
Editing movies	—	●
Disc authoring	—	●
Transferring music files	●	—

System Requirements

Compatible Systems

Computers with a preinstalled version of one of the following operating systems:

- Microsoft Windows XP (Home Edition or Professional, 32 bit), Service Pack 2 or 3.
- Microsoft Windows Vista (Home Basic, Home Premium, Ultimate, Business or Enterprise Edition, 32 or 64 bit), Service Pack 1 or 2.
- Microsoft Windows 7 (Home Premium, Professional*, Ultimate* or Enterprise* Edition, 32 or 64 bit)

* Except in XP mode.

System Configuration*

Operating System	Windows XP SP2	Windows Vista	Windows 7
CPU	Intel® Pentium® 4, 1.49 GHz Intel® Celeron®, 1.7 GHz	Intel® Pentium® 4, 2.4 GHz Intel® Celeron® D, 3.0 GHz	
RAM	512 MB	1 GB	1 GB (32 bit) 2 GB (64 bit)
Available Hard Disk Space	<ul style="list-style-type: none">- For Disc 1: 30 MB- For Disc 1 and Disc 2: 130 MB- Disc authoring: At least three times the amount of data to be written on the disc- Transferring music: At least the same amount on the C: drive as the music files to be transferred		
Display	1024 x 768 resolution, 16-bit color (high color)		
Sound	Sound card compatible with DirectSound		
Others	<ul style="list-style-type: none">- Preinstalled USB 2.0 (Hi-Speed USB) port- For the software on Disc 2: Internet connection (during installation), system that can run DirectX 9.0c, preinstalled DVD drive with writing capabilities, logged on as Administrator- Card reader/writer (FS300 only)		

* Equivalent or better configurations can be used instead.

Software Installation

 
Installing the Software on Disc 1

Disc 1 contains **ImageMixer 3 SE Transfer Utility** and **Music Transfer Utility**. Perform the following procedure to install both applications.


1 Insert the PIXELA Application Disc 1 CD-ROM into the computer's CD or DVD drive.

- The installation wizard will start automatically.
- If the User Account Control window opens, select [Yes] (for Windows 7) or [Continue] (for Windows Vista).

2 Select the language for the installation and click [Next].

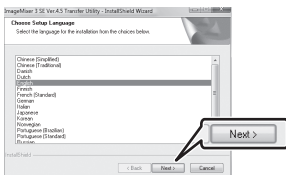

3 Click [Next].

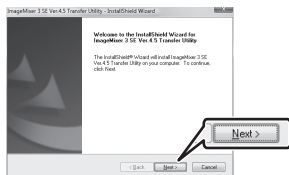 

4 Read the license agreement and click [Next].

Select [I accept the terms of the license agreement] to continue. You cannot install the software otherwise.

 


5 Check the destination folder for the installation files and click [Next].

If you want to change the destination folder, click [Change] and select a different folder.




6 Click [Install] to begin the installation.

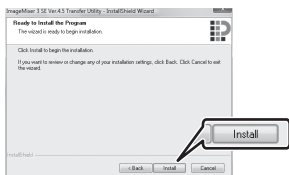


7 Once the installation is completed, click [Finish].

 After installation of **ImageMixer 3 SE Transfer Utility** has finished, installation for **Music Transfer Utility** will start.

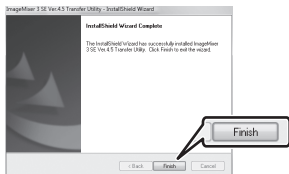


8 Click [Next].

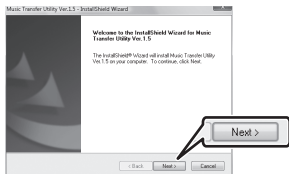 

9 Read the license agreement and click [Next].


Select [I accept the terms of the license agreement] to

 continue. You cannot install the software otherwise.

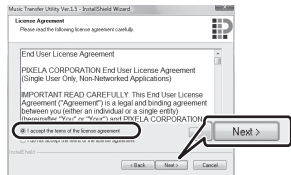


10 Check the destination folder for the installation files and click [Next].

 
If you want to change the destination folder, click [Change] and select a different folder.

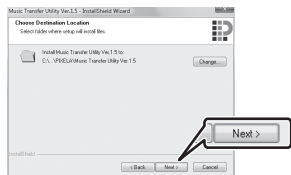

 11 Click [Install] to begin the installation.

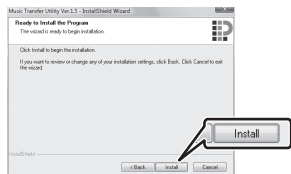

 12 Once the installation is completed, click [Finish].

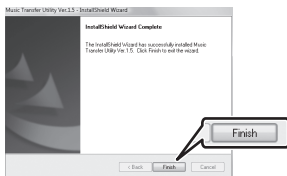

13 Remove Disc 1 from the computer.

To install the software on Disc 2, continue to the next section.

Installing the Software on Disc 2

1 Verify that the computer is connected to the Internet.

 
- During the installation, the software will be activated online. If you have an Internet connection, make sure that the computer is connected to the Internet during the installation process.
- If Internet connection is not available, call one of the user support centers listed on the back cover to get the certification code by phone.

2 Insert the PIXELA Application Disc 2 CD-ROM into the computer's CD or DVD drive.


- The installation wizard will start automatically.

- If the User Account Control window opens, select [Yes] (for Windows 7) or [Continue] (for Windows Vista).

3 Select the language for the installation and click [Next].

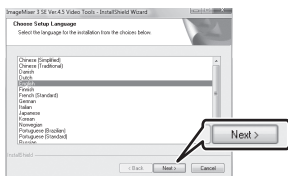


4 Click [Next].

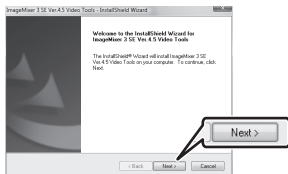 


5 Read the license agreement and click [Next].

 Select [I accept the terms of the license agreement] to continue.

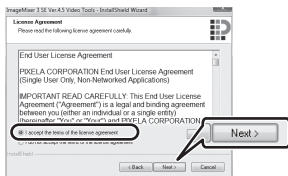


6 Check the destination folder for the installation files and click [Next].

 If you want to change the destination folder, click [Change] and select a different folder.

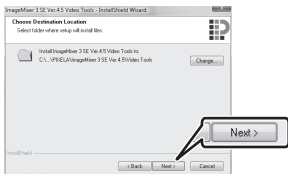

 7 Select your local video system and click [Next].

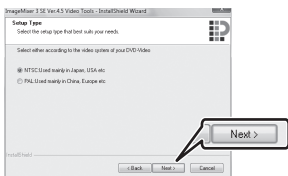

8 Enter the serial number of your camcorder and click [Next].

 
Enter the serial number, starting with the top row of 4 digits, as 12 digits with no spaces or hyphens. In the case of the example shown in

the illustration, enter the serial number as "012345678901".

 
Example of the 12-digit serial number




9 If an Internet connection is not detected, you will be asked to enter the Certification code manually. Call a user support center and get the Certification code. Enter the Certification code you received and click [Next].

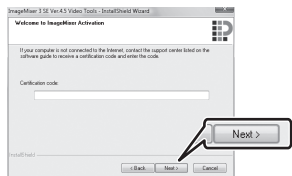

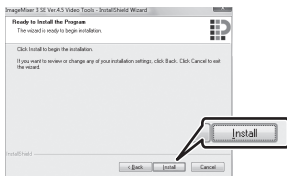

 10 Click [Install] to begin the installation.

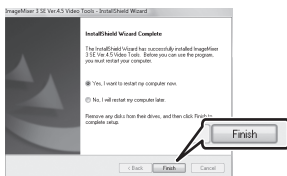


11 Once the installation is completed, select [Yes, I want to restart my computer now.] and click [Finish].



Connecting the Camcorder to the Computer

- 1 Power the camcorder using the compact power adapter.
- 2 Set the camera mode dial to  and press .
- 3 Connect the camcorder to the computer using the USB cable.
 - Refer to *Connection Diagrams* in the camcorder's instruction manual.

- If the device type selection screen appears, select [PC/PRINTER] and press .

! IMPORTANT

Before disconnecting the USB cable, make sure to use the Safely Remove Hardware function by clicking the icon in the system tray to end the connection to the camcorder.

Viewing the Software Guides


For details about the various features of ImageMixer 3, please refer to the **PIXELA ImageMixer 3 SE Software Guide** and **Music Transfer Utility Software Guide**, included as PDF files on Disc 1.

- 1 Click [My Computer].
Windows Vista and Windows 7 users: Click [Computer] instead.
- 2 Right-click the Transfer Util. icon and select [Open].
- 3 Open the [Manual] folder and then the [English] folder.
The PDF files are located in this folder. For easy access later, you can copy the files to your desktop.



PIXELA CORPORATION


USA and Canada

 +1-800-458-4029 (toll-free)

 English

Europe / Europa


United Kingdom • Deutschland • France • España

 +800-1532-4865 (toll-free • gebührenfrei •
numéro vert (appel gratuit) • llamada gratuita)


 English, Deutsch, Français, Español

Other Countries in Europe

 +44-1489-564-764

 English, Deutsch, Français, Español, Italiano, Nederlands

Asia (Philippines)

 +63-2-438-0090

 English