

8mm VIDEO CAMCORDER

# Instruction Manual

CAMESCOPE ET LECTEUR VIDEO 8 mm

## Mode d'emploi

VIDEOCAMARA Y GRABADORA DE VIDEO 8mm

## Manual de instrucciones

ENGLISH


E

FRANÇAIS

F

ESPAÑOL

Es

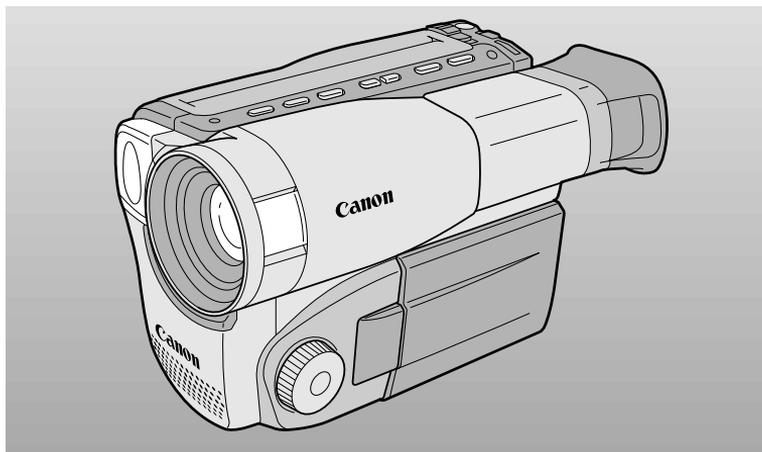

**Canon**  
**ES8600 Hi8**

**NTSC**

## Important Usage Instructions

**WARNING:**


**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

**WARNING:**


**TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.**

**COPYRIGHT WARNING:**

**Unauthorized recording of copyrighted materials may infringe on the rights of copyright owners and be contrary to copyright laws.**

8mm Video Camcorder, ES8600A

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and use in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual.

If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516)328-5600

**CAUTION:**

**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

### Important Warning



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**CAUTION:**

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

# IMPORTANT SAFETY INSTRUCTIONS


E

In these safety instructions the word “product” refers to the Canon 8mm Video Camcorder ES8600A and all its accessories.

1. Read Instructions — All the safety and operating instructions should be read before the product is operated.
  2. Retain Instructions — The safety and operating instructions should be retained for future reference.
  3. Heed Warnings — All warnings on the product and in the operating instructions should be adhered to.
  4. Follow Instructions — All operating and maintenance instructions should be followed.
  5. Cleaning — Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. The product should be cleaned only as recommended in this manual.
  6. Accessories — Do not use accessories not recommended in this manual as they may be hazardous.
  7. Avoid magnetic or electric fields — Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.
  8. Water and Moisture — Hazard of electric shock — Do not use this product near water or in rainy/moist situations.
  9. Placing or Moving — Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.  
A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Power Sources — The CA-550KA Compact Power Adapter should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
  11. Polarization — The CA-550KA Compact Power Adapter is equipped with a polarized 2-prong plug (a plug having one blade wider than the other). The 2-prong polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
  12. Power Cord Protection — Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cords exit the product.
  13. Outdoor Antenna Grounding — If an outside antenna is connected to the product, be sure the antenna is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70—1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure 1.



Fig. 1

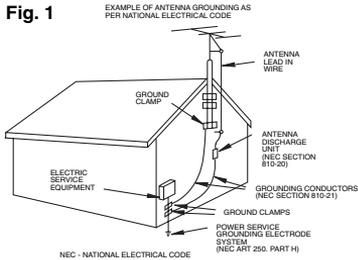

14. **Lightning** — For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet and disconnect the antenna. This will prevent damage to the product due to lightning and power-line surges.
15. **Overloading** — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
16. **Objects and Liquid Entry** — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.
17. **Service** — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. **Damage Requiring Service** — Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If any liquid has been spilled onto, or objects have fallen into, the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e. If the product has been dropped or the cabinet has been damaged.
  - f. When the product exhibits a distinct change in performance. This indicates a need for service.
19. **Replacement Parts** — When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
20. **Safety Check** — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order.

# Contents

## Introduction

Important Usage Instructions	2
IMPORTANT SAFETY INSTRUCTIONS	3
Thank you for Choosing a Canon	6
Introducing the Camcorder	7

## Quick Overview

Finding Your Way Around the ES8600	8
Powering Your Camcorder	10
Loading a Cassettes	13
Basic Recording	15
Zooming	17
Using the LCD Screen	19
Playing Back a Cassette	22
Connecting for Playback on a TV Screen	24
Tips for Making Better Videos	25

## Advanced Functions

Selecting from the Menus	27
Setting Custom Keys	29
Image Stabilizer	31
Setting the Date and Time	32
Adding Titles	34
Fade	37
Searching and Reviewing While Recording	38
Using the Various Recording Programs	39
Focusing	41
Adjusting the Exposure Manually	43
Taking Still Pictures (Photo Mode)	46
Using Digital Effects	47
Using the Built-in Video Light	51
Simple Editing to a VCR	52
PAL TV Playback	53
Preparing the Camera	54
Notes on Using the Batteries	56

## Additional Information

Video System	59
Optional Accessories	60
Cautions and Maintenance	63
Troubleshooting	67
Screen Displays	70
Specifications	72
Index	73

The serial number of this product may be found on the bottom of the camera. No others have the same serial number as yours. You should record the number and other vital information here and retain this book as a permanent record of your purchase to aid identification in case of theft.

Date of Purchase  
Dealer Purchased From  
Dealer Address  
Dealer Phone No.  
Model Name ES8600A  
Serial No.

## Thank you for Choosing a Canon

First, we'd like to thank you for buying this Canon camcorder. Its advanced technology makes it very easy to use — you will soon be making high-quality home videos which will give you pleasure for years to come.

To get the most out of your new camcorder, you should read this manual thoroughly — there are many sophisticated features which will add to your recording enjoyment.

### Getting started

To get started we suggest that you master the basic operations of the camcorder first, before moving on to use its full range of features.

For quick reference (in addition to the contents and index) please refer to:

- Finding Your Way Around the ES8600 (p. 8)
- Screen displays (p. 70)
- Troubleshooting — in case you run into any problems (p. 67)

Note that capital letters are used to refer to settings that appear in the display and buttons labeled on the camcorder itself e.g. Press the EJECT  button.

Check that this package contains the following accessories:

BP-911K Battery Pack 	SS-500 Shoulder Strap 
C-250 AV Cable 	Lens cap and lens cap cord (Attached to camera) 
CA-550K Compact Power Adapter 	Lithium button battery (CR2025) 

# Introducing the Camcorder

## LCD Screen



An LCD screen makes it easy for you to shoot colorful, well composed video. You can even put yourself in the frame and check the picture as you shoot. It is also great for playback.

## 22× lens (800× Digital Zoom)



From wide-angle to 22× telephoto — with unparalleled optical quality. The digital zoom multiplies this magnification by more than 22× for even more dramatic results.

## FlexiZone Control



Easier than manual operation and more flexible than automatic functions, Canon's FlexiZone Control is a completely new way to use a video camera.

## Image stabilizer



Images are stabilized even in long telephoto shots.

## Photo Mode



You can record still pictures like a photograph for approximately 7 seconds.

## Digital effects



Advanced digital technology allows you to add special effects during recording and playback.

## Powerful recording programs



Six recording programs deal with everything from simple point-and-shoot operation to the most challenging recording conditions.

## Video light



The built-in video light brightens at the touch of a switch. Recording in low light (or no light) has never been easier.


## Time base corrector

Digitally compensates for picture jitter during playback resulting in a stable picture.

## Lithium ion power supply

A small but powerful battery pack that can be charged at any time.

## Custom Keys

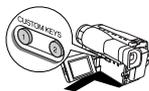

With the unique Custom Keys, you can decide which functions you want at your fingertips. Assign frequently used functions to the keys on the camera body.

## Titles



You can choose from among a selection of preset titles to add to your recording. Also, you can choose the color for the date and title from among 7 colors to display and record on the tape.


## Hi8





Hi8 is the format that most video professionals rely on for high quality and long recording times.

## Fade

# Finding Your Way Around the ES8600

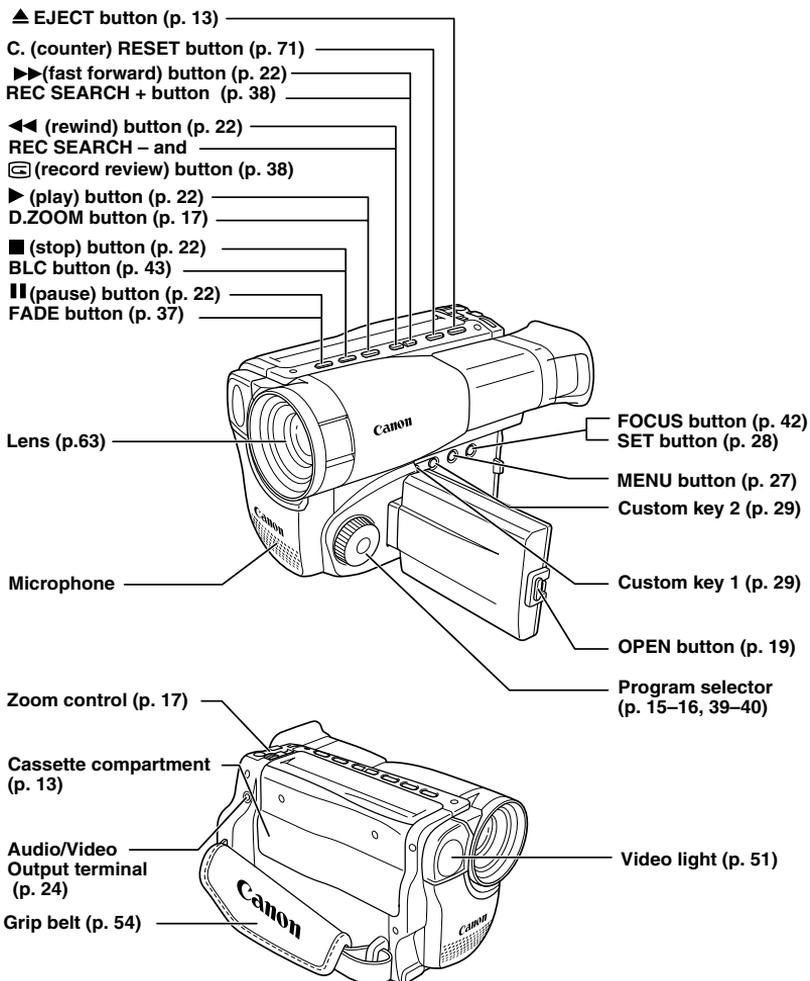

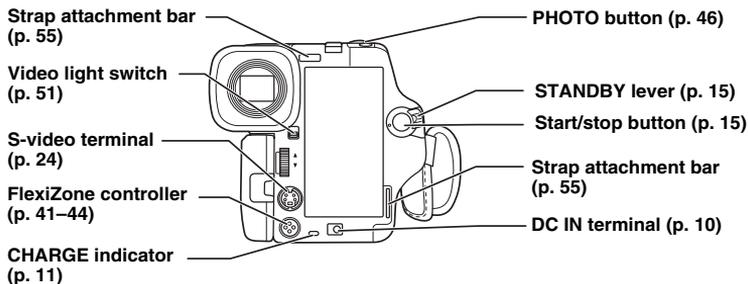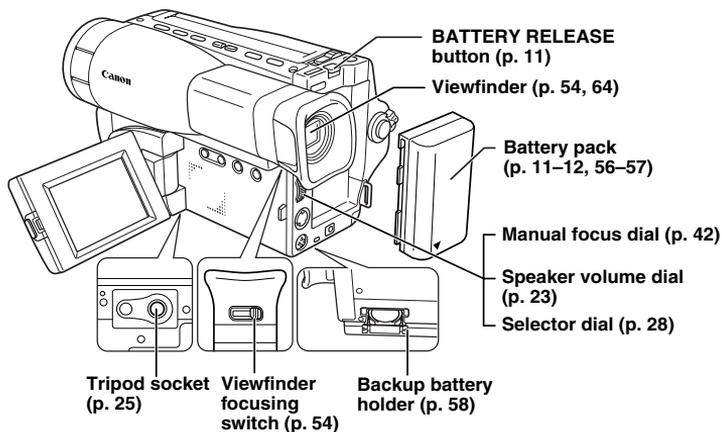

## Powering Your Camcorder

Before operating your camera, you will need to use the power adapter to:

**Provide power from an AC outlet**


or

**Charge a battery pack**

### Notes:

- The power adapter converts current from a household power socket (100–240 V AC, 50/60 Hz) to the DC current used by your camera.
- If the adapter is used next to a TV, it may cause noise bars to appear on the TV— move the adapter away from the TV or the antenna cable.

### Connecting the camera to an AC outlet

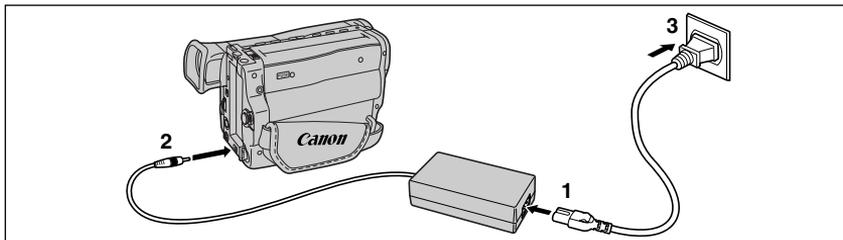

Use the power adapter to provide your camera with instant power from an AC outlet.

- 1. Connect the AC cable to the power adapter.**
- 2. Connect the power adapter to the camera's DC IN terminal.**
- 3. Connect the power adapter to an AC outlet.**
- 4. Remove the power adapter after use.**
  - Always turn the camera off before connecting/removing the power source.
  - For the power adapter, use only Canon CA-550K (or CA-550). Do not use other equipment.


### CA-550K Compact power adapter

#### Specifications

Power supply	100–240 V AC, 50/60 Hz
Power consumption	20 W
Rated output	8.4 V, 1.5 A DC
Operating temperature range	32°–104°F (0°–40°C)
Dimensions	4.1 × 1.2 × 2.2 in (105 × 30 × 56 mm)
Weight	9.7 oz (275 g)

Weight and dimensions are approximate. Errors and omissions excepted.  
Subject to change without notice.

## Charging and attaching the battery pack

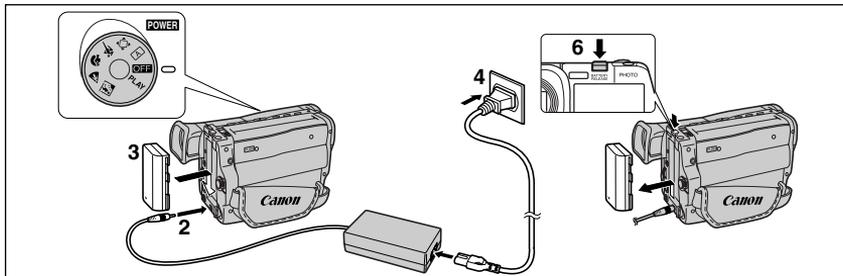

Your battery pack was partially charged before it left the factory. It should have enough power for you to check that your camera is working properly. However, you must charge the battery pack fully if you want it to power the camera for more than a few minutes.

- 1. Set the program selector to OFF before you charge the battery pack.**
- 2. Connect the power adapter to the camera's DC IN terminal.**
- 3. Attach the battery pack to the camera.**
  - Align the triangle on the battery pack with the line on the camera. Slide the battery in the direction of the arrow until it clicks into place.
- 4. Plug the adapter into an AC outlet.**
  - The charge indicator flashes to show that charging is in progress. Single flashes mean that the battery pack is less than 50% charged. Double flashes mean that it is between 50% and 75% charged. Triple flashes mean that it is more than 75% charged. The indicator glows steadily when the battery pack is fully charged.
- 5. When charging is complete, disconnect the power adapter.**
- 6. Detach the battery pack after use.**
  - Press and hold the BATTERY RELEASE button while you slide the battery off the camera.
  - Always turn the camera off before removing the power source.

### Note:

- You can find detailed notes for using the batteries in the "Notes on Using the Batteries" on p. 56. These notes include charging and recording times and how to install the backup battery.

## Charging and recording times

### Charging time

BP-911K (supplied)	3 hrs.
BP-915 (optional)	4 hrs.
BP-930 (optional)	6 hrs.
BP-945 (optional)	8 hrs. 30 min.

### Continuous recording time : (video light off) \*


	(Using LCD screen)	(Using viewfinder)
BP-911K (supplied)	1 hr. 30 min.	2 hrs. 5 min.
BP-915 (optional)	1 hr. 35 min.	2 hrs. 5 min.
BP-930 (optional)	3 hrs. 15 min.	4 hrs. 15 min.
BP-945 (optional)	4 hrs. 55 min.	6 hrs. 25 min.

- \* Continuous recording time will be reduced by approx. 50% with continued use of the video light.
- These times vary — the safest policy is always to have 2 or 3 times as many battery packs as you think you will need.

When the replacement of power supply is required, please return it to the responsible nearest Canon Service Center, and please replace it with the power adapter CA-550.

- The adapter can be used with a power supply between 100 and 240 V AC. Contact your Canon dealer for information about plug adapter for overseas use. For U.S.A customers only: For areas where 120 V AC power is not used, you will need a special plug adapter.

## Loading a Cassette

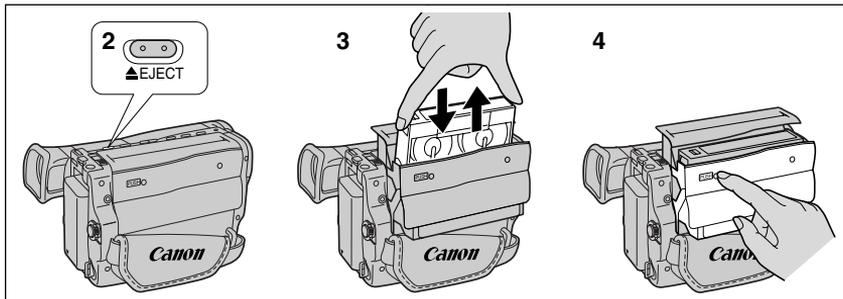


Use video cassettes marked with an **Hi8** or **Hi8i**.

After loading a cassette, use record search (p. 38) to find the point where you want to start recording.

### Loading and unloading

1. Make sure that you have attached or connected a power source.
2. Press the **▲ EJECT** button and wait for the cassette compartment to open.
3. Load/unload the cassette.
  - Insert the cassette gently with the window facing out.
  - Remove the cassette by pulling it straight out.
4. Press the **(PUSH)** mark on the compartment until it clicks, and wait for it to close.
  - Never push down the top of the compartment.

### Protecting tapes from accidental erasure

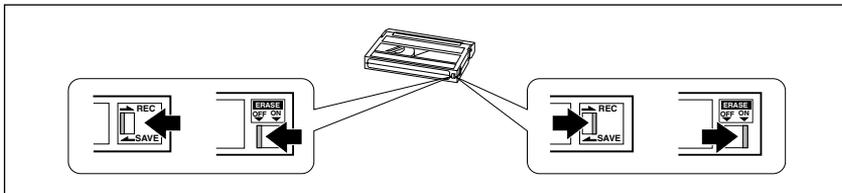

To protect your recordings from accidental erasure, slide the red switch on the cassette so that it covers the hole. (This switch position is usually labeled **SAVE** or **ERASE OFF**.) If you load this cassette and power on the camera, “**⊠**” flashes in the display.

If you want to record on the cassette again, slide the red switch back so the hole is open. (This position is usually labeled **REC** or **ERASE ON**.)

## Handling cassettes

- To protect the tape heads, transfer cassettes directly from the tape case to the camcorder – do not open the tape protect cover or touch the tape itself.
- Do not use cassettes where the tape has been damaged or rejoined – they may damage the camcorder.
- Do not insert anything into the small holes on the cassette or cover them with cellophane tape.
- Handle cassettes with care – dropping them or exposing them to external shocks may cause internal damage.
- Store cassettes in the provided case, rewinding them to the start of the tape first, and then storing them upright.

## About Hi8

To record or play back in the Hi8 format, you need both a Hi8 camcorder and a Hi8 cassette (you can use either Metal-P or Metal-E Hi8 cassettes).


A Hi8 camcorder can record or play back in either the Hi8 format or standard 8mm format, depending on the tape used.

The superior quality of Hi8 can best be appreciated on a TV which has an S-video input terminal.

### Notes:

- Do not interfere with the compartment while it is opening or closing automatically.
- After loading a cassette, use record search (p. 38) to find the point where you want to start recording.
- Do not leave the cassette in the camera after use — return it to its case and store it in a cool, clean, dry place.
- The holes in the back of the cassette are used for transferring information — do not cover them.

## Basic Recording

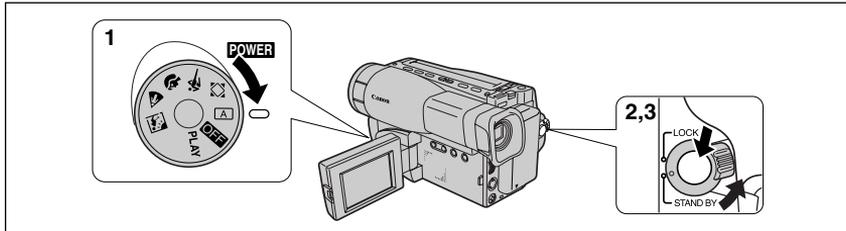**E**

### Safe cassette operation

When you turn the power off or remove the power source, be sure to set the camcorder first to record pause, stop or still pause mode.

Turning the power off or removing the power source while the tape is moving (during recording, play, rewind for example), will make the counter display appear wrong or may cause tape damage.

### Before you start recording

Have you completed the following steps?

- Attach a power source (p. 10).
- Load a cassette (p. 13).
- Adjusted the LCD screen (p. 19) or viewfinder, fastened the grip belt and taken off the lens cap (p. 54).

You may also want to install the backup battery (p. 58) in order to set date and time display (p. 32).

### To record

- 1. Turn the program selector to the **A** position.**
  - This selects the camera's Automatic recording program. It allows you to simply point and shoot without making any manual adjustments.
- 2. Turn the **STANDBY** lever to **STANDBY**.**
  - **PAUSE** appears in the display — the camera is now in "record pause mode."
- 3. Press the start/stop button to begin recording.**
  - **REC** appears in the display.
- 4. Press the start/stop button again to pause recording.**
  - The camera returns to record pause mode and **PAUSE** reappears in the display.
  - You can stop and restart recording as often as you like by pressing the start/stop button.
  - The camera will turn itself off if you leave it in record pause mode for more than about 5 minutes. To return to record pause mode, turn the **STANDBY** lever to **LOCK** and back to **STANDBY**, or set the program selector to **OFF** and then back to camera mode.

## When you have finished recording

- Replace the lens cap.
- Unload the cassette.
- Return the viewfinder to its lowered position.
- Close the LCD panel.
- Set the program selector to OFF.
- Disconnect the power source.

### Notes:

- To check that the camera is recording correctly, be sure to make a test recording first.
- Before making important recordings, clean the video heads using Canon CC-8 Video Head Cleaning Cassette or a commercially available dry-type head cleaning cassette.
- For tips on how to make better videos, see page 25.

## Recording with the LCD screen

In place of using the viewfinder, you can also monitor recording using the LCD screen. When you open the LCD panel, the viewfinder turns off automatically. For more details please refer to “Using the LCD Screen” (p. 19).

### Notes:

- You cannot monitor the sound from the speaker during recording.
- The LCD screen uses more power than the viewfinder, so possible recording time will be less than if you were to use the viewfinder.
- Be sure to close the LCD panel flush to the camera body when you have finished recording with the LCD screen.

## Demonstration

To see a demonstration of the camera's main features, before loading the cassette, go to the DEMONSTRATION option in the camera menu. Select the ON setting and close the menu. The demonstration also starts automatically if the power has been on for ten minutes without a cassette loaded into the cassette compartment. (You can avoid this by turning the DEMONSTRATION to OFF through the camera menu.) To cancel the demonstration once it has begun: push the menu button, turn off the power, or load a cassette.




**MENU**

(see p. 27)

▶ DEMONSTRATION · · · ON

## Zooming

E

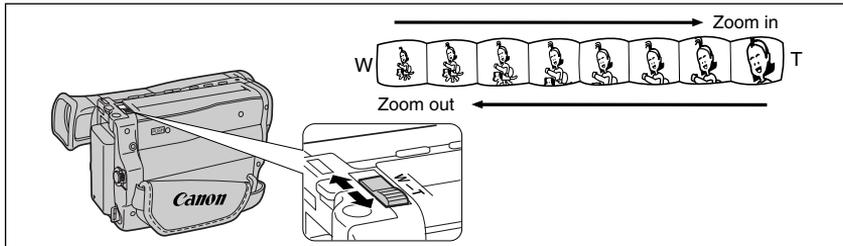

The camera's 22 $\times$  zoom lens allows you to choose the best picture angle for each scene:

- Turn the zoom control towards W to zoom out to wide-angle.
- Turn it towards T to zoom in to telephoto.

You can also control the speed of zooming:

- Move the control slightly to zoom slowly.
- Turn it farther to zoom more quickly. (The farther you turn the zoom control, the faster the zoom speed.)

### Turning the 800 $\times$ digital zoom on/off

Turn the digital zoom on/off by pressing the D.ZOOM button, to magnify the camera's zoom range by more than 22 $\times$ .


- In addition, you can assign CUSTOM KEY 1 to turn the digital zoom on/off (see p. 29).

The zoom control continues to work as usual. You can freely zoom in and out between 1 $\times$  and 800 $\times$  magnification — the camera automatically switches between optical zooming (up to 22 $\times$ ) and digital zooming (22 $\times$  to 800 $\times$ ).

#### Note:

- When you enter the digital zoom range in FlexiZone mode, the FlexiZone frame becomes locked in the center of the display.

## Zoom displays

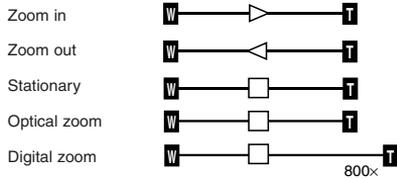


### Notes:

- The zoom display stays lit for approximately 4 seconds following an adjustment to the picture angle.
- Overuse of the zoom may make recordings seem too busy. It is generally better to use it sparingly, or in order to reframe between shots.
- When you want to get as close as possible to your subject, keep the zoom at the wide-angle position. You can focus on a subject as close as 0.4 in (1 cm).
- When you turn the digital zoom on, "800x" appears in the display.
- Image resolution is lower when the magnification is greater than 22x.

## Using the LCD Screen


### Open the LCD screen

Push the OPEN button and open the panel by pulling it away from the camera. This automatically switches the LCD screen on and the viewfinder off. When you close the LCD panel, the LCD screen automatically switches off and the viewfinder switches back on.

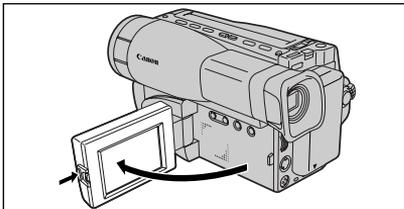


### Changing the angle of the LCD screen

First open out the LCD panel at a right angle (90°) to the camera.

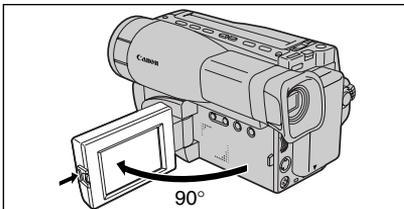


You can now choose the angle of the panel that suits you best by rotating it about this axis.

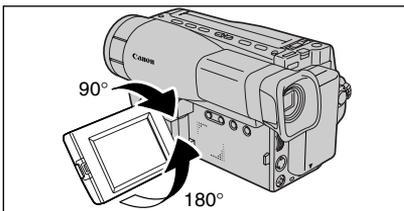

If you rotate the panel around to 180° so that it faces the direction of the lens you can allow the subject to monitor the shot in the LCD screen or you can include yourself in the picture (p. 21). The viewfinder is also activated when the panel is in this position.

From this position you may also push the panel flat against the camera until it is flush with the side, with the screen facing outwards.

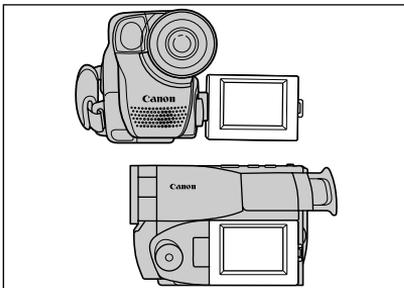


**Notes:**

- Avoid touching the LCD screen when moving the LCD panel.
- Do not hold the camera by the LCD panel or the viewfinder.
- Make sure you open the LCD panel at 90°, before attempting to rotate it backwards or forwards.
- Always rotate the LCD panel vertically into place, before closing it or pushing it flat against the side of the camera.
- Be careful not to leave the LCD, viewfinder or lens exposed to direct sunlight outdoors or in a window. Doing so could cause damage.
- Bright light falling on the LCD screen may cause glare that makes it difficult to view the image. In this case, switch to using the viewfinder. You are also able to adjust the brightness of the screen (see “Adjusting the LCD screen” below).

### Adjusting the LCD screen

You can adjust the brightness and color of the LCD screen. You can adjust the display from either the camera or the play menu.

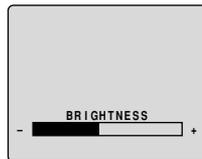

1. **Open the menu and move the cursor to LCD PICTURE ADJUST.**
2. **Press the SET button to adjust the brightness.**
  - Press the FlexiZone controller right to make the display brighter.
  - Press the FlexiZone controller left to make the display darker.
3. **Press the MENU button to adjust the color.**
  - Press the FlexiZone controller right to make the colors more vivid.
  - Press the FlexiZone controller left to tone down the colors.
4. **Press the MENU button to return to the menu screen.**

**Notes:**

- The camera will remember your adjustment settings even after you turn it off.
- The adjustments of the LCD do not effect the recorded images or the viewfinder.

### About the LCD Screen


The LCD screen built into this camcorder is a high precision product.

However, small black dots or bright points of light (red, blue or green) may appear constantly on the LCD screen. This is not a malfunction of the LCD screen and they are not recorded on the tape. (Effective dots: more than 99.99%)

## Allowing the subject to monitor recording

When you turn the LCD panel so that it faces the opposite direction (see diagram below), you can watch yourself during recording or let your subject monitor recording.


1. Open the LCD panel (p. 19).
2. Rotate the LCD panel 180° until the screen faces the same direction as the lens.
  - The viewfinder is also activated when the LCD is in this position.

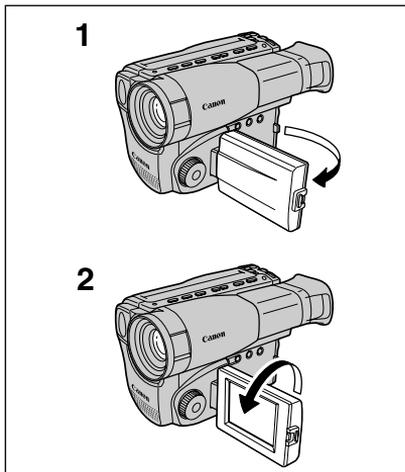

### Note:

- Screen displays are reversed, but titles/dates are correctly recorded.

## Playing Back a Cassette

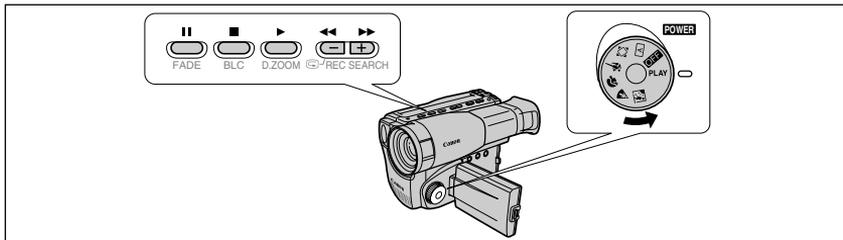

### Safe cassette operation

When you turn the power off or remove the power source, be sure to set the camcorder first to record pause, stop or still pause mode.

Turning the power off or removing the power source while the tape is moving (during recording, play, rewind for example), will make the counter display appear wrong or may cause tape damage.

You can use the LCD screen for instant, on-the-spot playback. The camera also plays back the sound track via the built-in speaker (p. 23).

To play back your recordings on a TV, see p. 24.

### 1. Attach a power source and turn the program selector to **PLAY**.

### 2. Load the cassette.

### 3. Press the **▶** button to start playback.

- To end playback, press the **■** button.
- To wind the tape forwards, stop playback and press the **▶▶** (fast forward) button.
- To wind the tape backwards, stop playback and press the **◀◀** (rewind) button.
- If the playback picture is rough, clean the video heads using a Canon CC-8 Video Head Cleaning Cassette or a commercially available dry-type head cleaning cassette.

## Special playback

### Still playback

To view the video as a still picture press the **■** button. To resume normal playback, press it again, or press the **▶** button. The camera automatically goes into stop mode after about 5 minutes' playback pause.

### Fast forward playback

To play back the recording at about 9 times normal speed, press and hold the **▶▶** button during normal playback.

## Rewind playback

For reverse playback at about 7 times normal speed, press and hold the ◀◀ button during normal playback.

## High-speed search


To play back the recording at about 19 times normal speed, press and hold the ▶▶ button during normal fast forward. For reverse playback at about 19 times normal speed, press and hold the ◀◀ button during normal rewind.

### Notes:

- When the tape reaches the end during normal playback it rewinds automatically.
- Noise bars appear and the soundtrack cannot be heard during special playback. The picture may roll and divide, appear black and white and the picture may not be visible during high-speed search.
- During still playback, the picture flickers, and fast action scenes may appear blurred.
- The tape counter is reset when a cassette is loaded.
- When you playback a cassette suffered considerable vibration or shaking during recording, you may find that the playback picture is not stable, depending on the TV you use.

## Built-in speaker

The camera has a built-in speaker so you can review the sound track alongside the picture during playback.

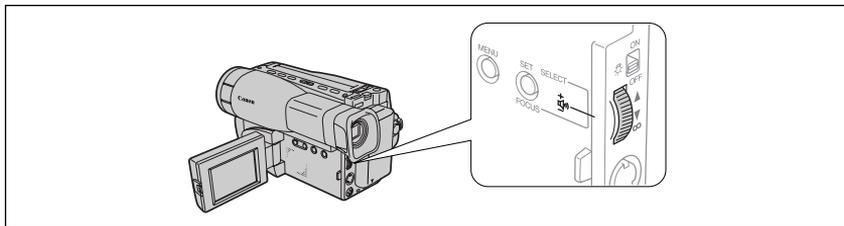


Adjust the speaker volume by turning the SELECT dial.

- A volume display appears temporarily to indicate the current volume.
- Turn the SELECT dial up to increase the volume.  
Turn the SELECT dial down to decrease the volume.

### Note:

- When the LCD panel is closed, the speaker does not work.

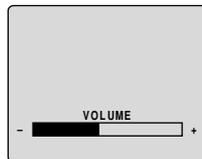


## Connecting for Playback on a TV Screen

You can connect the camera to a TV or VCR in order to play back your recordings. You will need to attach a power source to the camera (see p. 10).


See your TV or VCR instruction manual for further details.

### If your TV (or VCR) has an S-video input terminal

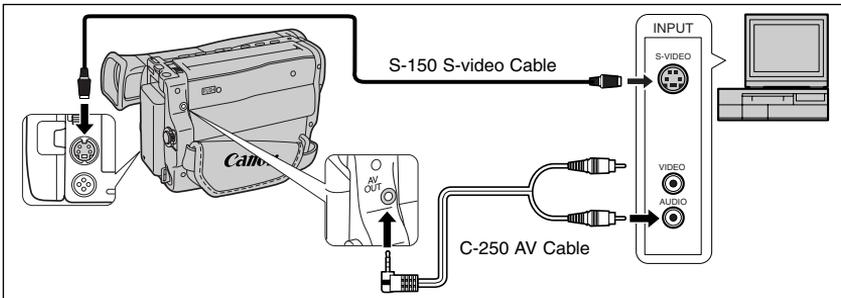

- Use the optional S-150 S-video Cable to connect the S-video terminal. Use the C-250 AV Cable white plug to connect the audio terminal.
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.

### If your TV (or VCR) has audio/video input terminals

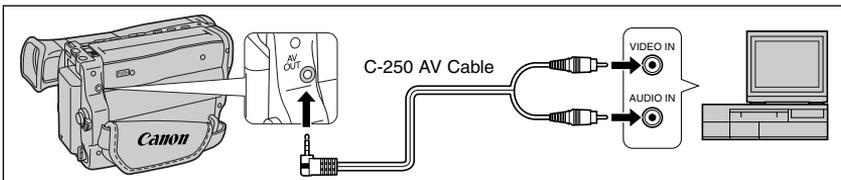

- Connect the camera by using the C-250 AV Cable to connect the AV terminal. Connect the white plug to the white AUDIO terminal. Connect the yellow plug to the yellow VIDEO terminal.
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camera to a VCR, set the input selector on the VCR to LINE.

#### Note:


- If you are going to use the TV as a monitor while you are shooting, remember to keep the TV volume turned down as long as the camera's audio terminals are connected. If the sound from the TV speakers is picked up by the microphone, an unpleasant high-pitched squeal, called feedback, may be produced.

## Tips for Making Better Videos

E

### Holding the camera

For maximum stability, place your right hand through the grip belt and keep your right elbow pressed against your body. Rest your left hand lightly on the side of the camera. With practice, you will be able to operate the controls by touch, without taking your eye off the action.

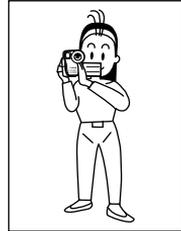

### Using a tripod

To prevent any unwanted movement, you can mount the camera on a tripod, (or any flat surface at a suitable height) and operate it with the wireless controller.

- When you are using a tripod, be careful not to leave the viewfinder exposed to bright sunlight or it may melt. (The light is concentrated by the viewfinder lens.) Avoid damage by returning the eyepiece to its retracted position.
- Make sure that the fastening screw of the tripod is no longer than 0.24 inch (6 mm), or it will damage the camera.



### Composition

The most important element in the scene does not have to be in the center. For a more interesting picture, try to position your subject so it is slightly to one side. Leave some space on the side of the frame that the subject is facing or moving towards.



Don't cut off the top of the subject's head, and don't cut people off at the neck, hips or knees (move a little bit above or below).



Watch out for distracting objects in the background.



Quick Overview

## Picture angle

Instead of zooming while recording, try to choose your picture angle before you begin. A good way to tell a story with video is to begin with a long shot that establishes the situation, and then move in with medium shots and close-ups to show the details. Remember to change your viewpoint for each shot.

Remember that any camera movement or change in picture angle should have a definite purpose. Avoid unnecessary or half-hearted movements.



Long shot




Medium shot



Close-up

## Camera moves

Use pans to record a landscape or following a moving subject. Decide the area you want to cover and stand facing the end of your panning angle. Without moving your feet, turn from the waist to the starting position. Start recording, and after a few seconds begin to turn slowly from the waist. Hold the final image for a few seconds before you stop recording.

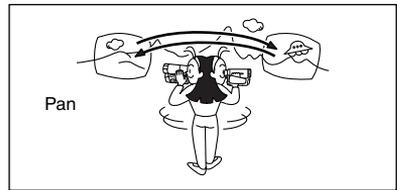

Pan

Tilt the camera up to exaggerate the height of the subject. Tilt down from the top of a building for example, as an introduction to subjects at the bottom.



Tilt

## Selecting from the Menu


The menus let you choose settings for a wide range of functions. There are 2 separate menus, for recording (camera menu) and playback (play menu).

### Camera menu

While the camera is in record pause mode, press the MENU button.


#### Screen 1

- ① Custom key information.....p. 30
- ② TV screen .....p. 70
- ③ Image stabilizer .....p. 31
- ④ Date select .....p. 33
- ⑤ Date display.....p. 32
- ⑥ Title.....p. 34–35
- ⑦ Date/title color .....p. 36
- ⑧ Photo mode .....p. 46
- ⑨ Demonstration .....p. 16

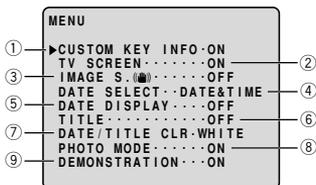

#### Screen 2


- ① Date set.....p. 33
- ② Title select .....p. 35
- ③ Custom key set.....p. 29
- ④ LCD picture adjust.....p. 20

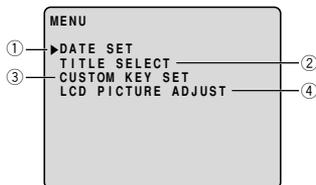


### Play menu

With the program selector set to PLAY, press the MENU button.

- ① Custom key information.....p. 30
- ② TV screen .....p. 70
- ③ PAL60.....p. 53
- ④ LCD picture adjust.....p. 20

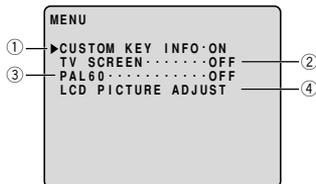


Turn to the appropriate page for a detailed explanation of each function.

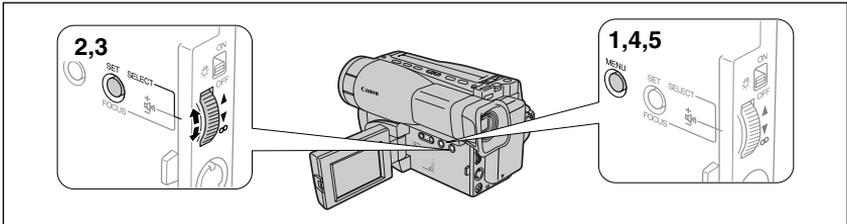

1. Press the **MENU** button to open the menu at screen 1.
2. Use the **SELECT** dial to move the cursor up or down the screen.
  - In camera mode, when the cursor reaches the bottom of the screen 1, screen 2 of the menu appears, and when the cursor reaches the top of the screen 2, screen 1 appears.
3. Press the **SET** button to turn the function on or off, or to change its setting.
4. Press the **MENU** button again to move to screen 2 of the menu (camera menu only).
  - Make selections in the same way as for screen 1.
5. Press the **MENU** button to close the menu.

## Setting Custom Keys

The Custom Keys let you choose the functions you want at your fingertips.

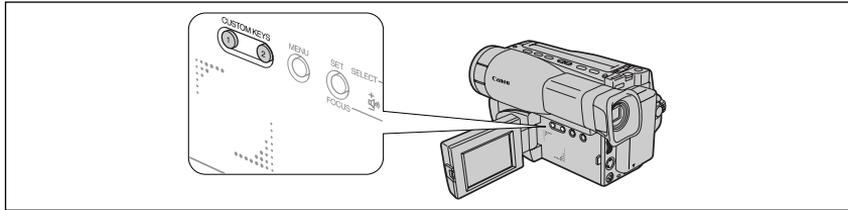

The 2 keys on the left side of the camera body can easily be set to operate a number of functions. When you buy the camcorder, they should be set as follows:

CUSTOM KEY 1	CUSTOM KEY 2
D.ZOOM	IMAGE S. (📷)

Select the combination of functions that you are likely to use most often. It is simple to change the Custom Key settings when necessary.

### To set the function of the Custom Keys



1. Turn the program selector to camera mode (A, , , , , , or ).
2. Open the camera menu to screen 2 and select CUSTOM KEY SET.
3. Turn the SELECT dial to move the cursor down until you reach the combination of functions of your choice.

CUSTOM KEY 1	CUSTOM KEY 2
D.ZOOM	IMAGE S. (📷)
D.E.SELECT	D.E.ON/OFF
DATE	TITLE
FADE	BLC

4. Press the SET (or MENU) button to assign the functions to the CUSTOM KEYS.
  - The camera displays these functions in the display for about 3 seconds and then returns to the camera menu.
5. Press the MENU button to close the menu.

## Displaying the Custom Key function

Choose to display the combination of functions set for the CUSTOM KEYS in the display.



1. Turn the program selector to camera mode (A, , , , ,  or ).
2. Open the camera menu and select CUSTOM KEY INFO.
3. Turn the information on or off.
4. Close the menu.

### Notes:

- If it takes you more than about 5 minutes to select the Custom Key information, the camera may turn itself off automatically before you finish. This can be avoided by removing the cassette before you begin.
- You can only operate the digital effects when the CUSTOM KEYS are assigned to the digital effect option.
- The camera remembers the Custom Key settings until you make a new selection.
- Even when the CUSTOM KEY INFO (information) is turned off, the settings are displayed for about 4 seconds each time you close the menu or turn the camera on.

## Image Stabilizer

With most camcorders, even the slightest hand movements will be noticeable during telephoto recording. However, the image stabilizer allows you to obtain steady recordings even at high magnification. Before you start recording, turn the image stabilizer on or off from the IMAGE S. (📷) option at the camera menu.


- In addition, you can assign CUSTOM KEY 2 to turn the image stabilizer on/off (see p. 29).



### Notes:

- The (📷) mark appears in the display when the image stabilizer is turned on.
- Due to the nature of the image stabilizer, the image quality will be lower when the image stabilizer is switched on, and the image will appear slightly enlarged in the display.
- The image stabilizer is designed to deal with a normal degree of camera shake — it cannot compensate for large movements of the camera.
- Keep the image stabilizer turned off when the camera is mounted on a tripod.
- The image stabilizer is not as effective as usual when the optional wide-converter or tele-converter is attached.
- You cannot use the image stabilizer simultaneously with the 16:9 format, mirror, strobe, or ghost digital effects.
  - When you activate one of these digital effects, the image stabilizer turns off automatically and the (📷) mark blinks for 4 seconds in the display then disappears.
- If a digital effect is turned on first, the image stabilizer becomes inoperable:
  - When you open the menu, IMAGE S.(📷) shows "- - -".
  - When Custom Key 2 is set to the image stabilizer and you press it, the (📷) mark blinks for 4 seconds in the display then disappears.

## Setting the Date and Time

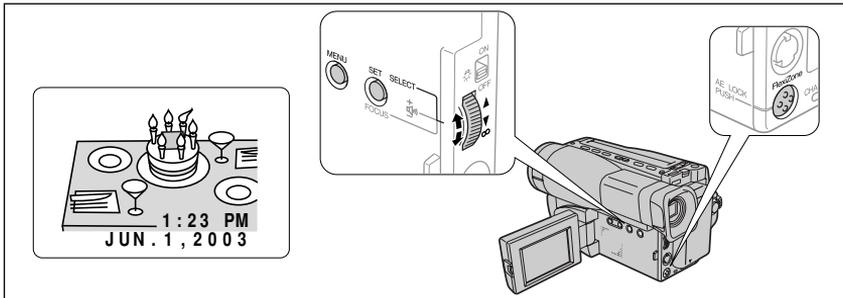

### MENU

(see p. 27)

▶DATE DISPLAY...OFF

Choose whether to add the date and time to your recordings by selecting DATE DISPLAY and choosing one of the 3 options shown below. You can also select the display color from among 7 colors by selecting DATE/TITLE CLR on the Camera menu.

After you have selected a display color, do not remove the battery pack before actual recording. Your selected color will return to white when you remove (change) the battery pack (except when you are using the power adapter) or remove/connect the power adapter.

- AUTO-10S:** Adds the date and time to your recordings for the first 10 seconds of each scene you record.
- The date/time display flashes in Record Pause mode.
- OFF:** The date and time will not be added to your recordings at any time.
- CONT.:** The date and time are recorded continuously.

If you set the date display to AUTO-10S or CONT. but have not yet set the date and time, --:-- will appear in the display during Record Pause mode. This will not be recorded.

- If you change the date/title color, the date and title will be displayed and recorded in the selected color.

## Setting the date and time

Set the date and time display when you first start using your camera. As long as you have inserted the backup battery (p. 58), the camera's internal clock will continue to work even when the main power source is removed.



1. **Open the camera menu to screen 2 and choose the DATE SET option.**
  - The year display starts flashing.
2. **Press the controller up and down to change the year. Press sideways to move to another part of the display.**
  - Press once to scan a year at a time. Press and hold to scan quickly.
  - Once you move from the year, the next part of the display starts flashing.
3. **Set the months, days, hours, and minutes in the same way.**
  - After you set the minutes, press the SET (or MENU) button to start the clock; the camera displays the date and time for about 3 seconds and then automatically returns to the camera menu.
  - You can use the SET button to return to the camera menu, at any stage of setting the clock.
4. **Press the MENU button to close the menu.**

### Notes:

- The display can be set to any year between 2002 and 2050.
- In addition, you can assign CUSTOM KEY 1 to choose whether to add the date and time to your recordings (see p. 29). Once assigned, press the CUSTOM KEY to choose between auto-10s, off, and continuous display styles (each in turn).

## Choosing the display style

You can choose between three different date/time displays at the camera menu.



DATE&TIME




DATE



TIME



## Adding Titles

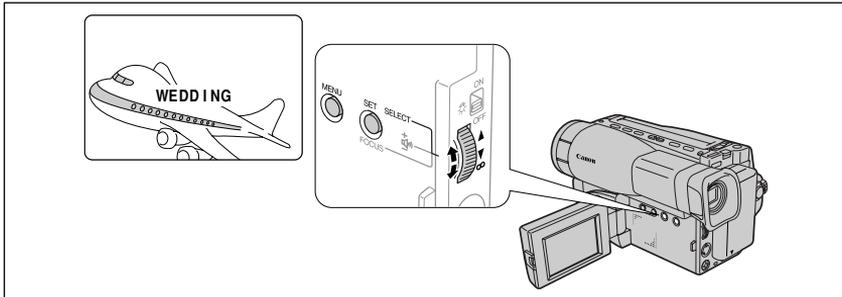

You can choose from among a selection of preset titles and select the display color from among 7 colors.

After you have selected a preset title and a display color, do not remove the battery pack before actual recording.

Your preset title will return to HAPPY BIRTHDAY and the color to white when you remove (change) the battery pack (except when you are using the power adapter) or remove/connect the power adapter.



Choose whether to add the title to your recordings by selecting TITLE on the Camera menu, and choosing one of the 3 options:

**AUTO-10S:** Adds the title to your recordings for the first 10 seconds of each scene your record.

- The current title flashes in Record Pause mode.

**OFF:** The title will not be added to your recordings at any time.

**CONT.:** The title is recorded continuously.

### Notes:

- In addition, you can assign CUSTOM KEY 2 to choose whether to add titles to your recordings (see p. 29). Once assigned, press the CUSTOM KEY to choose from among AUTO-10s, off, and continuous display styles (each in turn).
- When you turn the camera off, the TITLE setting is reset to OFF.
- If you change the date/title color, the date and title will be displayed and recorded in the selected color.


## Selecting a preset title



**MENU**  
(see p. 27)

▶TITLE SELECT

1. Open the camera menu to screen 2 and choose the **TITLE SELECT** option.
2. Turn the **SELECT** dial to move through the list of preset titles until the title you wish to use is displayed.
  - Each time you turn the **SELECT** dial the preset titles will be displayed in order one by one.

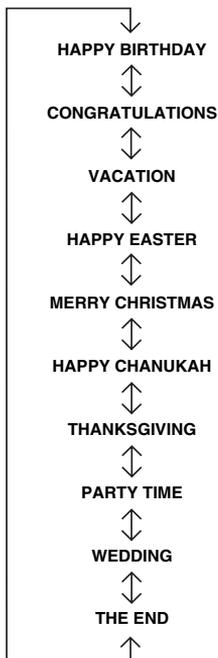

3. Press the **SET** button to select the preset title and enter the title in the memory.
  - The preset title is displayed for 3 seconds, before the camera returns to the menu.
4. Press the **MENU** button to close the menu.

## Changing the color of the date and title

You can change the display/recording color of the date/title, selecting from among 7 colors. After you have selected a display color, do not remove the battery pack before actual recording. Your selected color will return to white when you remove (change) the battery pack (except when you are using the power adapter) or remove/connect the power adapter.




### Selecting a color

1. **Open the Camera menu to Screen1 and choose the DATE/TITLE CLR option.**
  - The list of display colors appears, and current color is shown in parentheses.
2. **Turn the SELECT dial to select the color you wish.**
  - Each time you turn the SELECT dial and move the cursor to a color, that color name will be displayed the color it represents.
3. **Press the SET button to register your color selection.**
4. **Press the MENU button to close the menu.**

## Fade

E

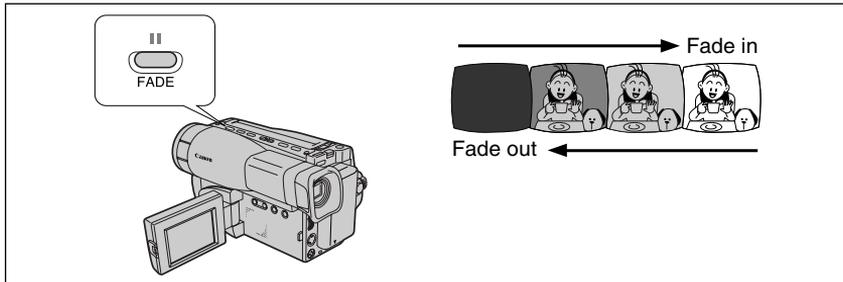

### Fade in

To make the scene gradually appear from a blank screen:

1. **Make sure the camera is in record pause mode.**
2. **Press and hold the FADE button until the scene disappears completely from the display.**
3. **Press the start/stop button to begin recording.**
4. **Release the FADE button.**
  - The scene gradually reappears in the display.

### Fade out


To make the scene gradually disappear:

1. **Press and hold the FADE button during recording.**
2. **When the scene has completely disappeared, press the start/stop button to end recording.**
3. **Release the FADE button.**

#### Notes:

- In addition, you can assign CUSTOM KEY 1 to operate the fade (see p. 29). Once assigned, press the CUSTOM KEY to fade in or out in the same way as detailed above.
- The sound fades together with the image.
- Title, date and time displays do not fade.

## Searching and Reviewing While Recording

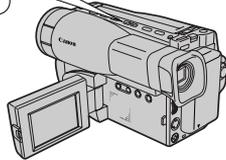

### Record search

When the camera is in record pause mode, you can use record search to play the tape forwards or backwards to find the point where you want to start or restart recording. This is useful when you want to add a new scene to a previously recorded cassette. By using record search, you can ensure a smooth join between the new scene and the old one.

1. **Make sure the camera is in record pause mode.**
2. **Press and hold the REC SEARCH + or – button while you check the picture in the display.**
  - The + button plays the recording forwards and the – button plays it backwards.
3. **Release the button when you find the point where you want to start recording.**
  - The camera returns to record pause mode.

### Record review

When the camera is in record pause mode, you can use record review to play back the last few seconds of your recording and then return automatically to record pause mode. You can quickly make sure that a scene has recorded properly and then go on to shoot the next scene.


1. **Make sure the camera is in record pause mode.**
2. **Press the  (rec review) button.**
  - The camera rewinds the tape, plays back the last few seconds, and returns to record pause mode.

**Note:**

- Noise may appear on the screen during record search and record review.

## Using the Various Recording Programs

The camera provides you with a choice of 6 recording programs. They use different combinations of camera settings in order to adjust the exposure and other functions to match the recording situation.

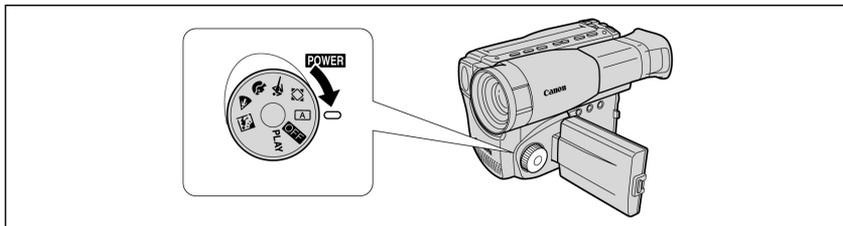

Rotate the program selector to choose the appropriate program before you start recording.

- For normal shooting conditions, you can leave the recording program selector set to **[A]** (Auto Recording). For different recording conditions, rotate the selector to the appropriate program before you start recording. Reset to **[A]** for standard conditions.

### Auto Recording

The simplest way to use the camera is with the program selector set to the **[A]** position. The camera will adjust the focus and exposure automatically, leaving you free to point and shoot.

- You can operate the following functions in this mode:
  - Backlight compensation (BLC)
  - Exposure lock



The image was removed due to copyright restrictions

### FlexiZone Recording

In normal recording conditions, set the program selector to the  position. This is the same as the Auto Recording program, except that you can now use the FlexiZone AF (p. 41) and FlexiZone AE (p. 44).

- You can operate the following functions in this mode:
  - Backlight compensation (BLC)
  - While in the optical zoom range, the FlexiZone frame moves freely around the screen. However, once you enter digital zoom range, the frame becomes locked in the center of the display.
  - The FlexiZone frame blinks twice when you zoom out from digital to optical zoom range. You are now free to move the frame.



The image was removed due to copyright restrictions

## Specialized AE programs

### Sports

This program is useful for recording high-speed sports scenes in brightly lit conditions. Normal playback will be slightly jerky, but you will get clear images which can be analyzed frame by frame during slow or still playback on a VCR.



The image was removed due to copyright restrictions

### Portrait

Use this program outdoors to make the subject stand out from a softened foreground and background. It works well for still-lives and close-ups. The effect is most noticeable when the zoom position is between the middle range and the telephoto end. Focus manually for maximum accuracy.



The image was removed due to copyright restrictions

### Spotlight

This program is designed for recording spotlight scenes, such as on a stage. The exposure is automatically adjusted for glare-free recordings of subjects lit by a concentrated light source.



The image was removed due to copyright restrictions

### Sand & Snow

Use this program in places where the background is so bright that the subject appears underexposed in the display — a sunny beach or ski resort, for example.




The image was removed due to copyright restrictions

### Notes:

- You can focus manually in any recording program (p. 42).
- Avoid changing programs during recording as the brightness of the image may change suddenly.
- The specialized AE programs are not suitable for all kinds of lighting. The image may flicker, or a bright line may appear on the screen if you use them in the wrong lighting conditions.

## Focusing

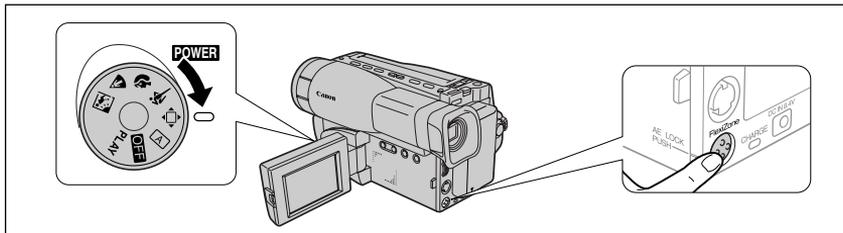

The camera can focus automatically. All you have to do is point it, and whatever is in the center of the display will usually be in sharp focus.

It also has 2 functions which give you more control over focusing.

### FlexiZone AF

FlexiZone AF makes autofocus much more powerful. Using the FlexiZone controller, you can select any object that appears in the display, and the camera will bring it into focus. Choose the FlexiZone Recording program when you want to use FlexiZone AF.

FlexiZone AF is useful in the following situations:

When your main subject is not in the center of the display



When you want to shoot a moving subject



It also makes it easy to use “focus shift” techniques. You can direct the viewer’s attention by focusing first on one part of the scene, and then on another.




#### 1. Turn the program selector to .

- The FlexiZone Control frame appears in the display.

#### 2. Use the FlexiZone controller to move the frame over the subject.

- The controller can be moved in any direction. Press it repeatedly to move the frame little by little. Press and hold to move the frame quickly.
- The camera adjusts the focus to suit the area inside the frame.
- When you zoom into the digital range, the FlexiZone frame becomes locked in the center of the screen. Zoom back out from digital to optical, and the frame blinks twice, signaling that you are again free to move the frame around the screen.
- Do not press the center of the FlexiZone controller, as this will lock the exposure.

## Manual focus

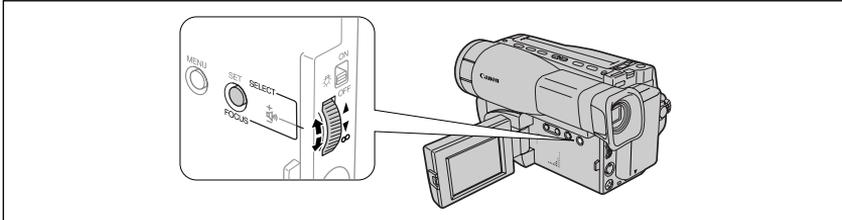

Sometimes you will get better results by turning off autofocus and using manual focus instead. (For a list of difficult to focus subjects refer to p. 68.)


1. **Frame the picture with the zoom control.**
  - If you use the zoom after manual focusing, the picture may go out of focus.
2. **Press the FOCUS button to switch to manual focus.**
  - MF appears in the display.
  - The focus remains locked at the point set by the autofocus.
3. **Turn the SELECT dial downward to move the focus farther away and turn it upward to bring the focus nearer.**
4. **To return to autofocus, press the FOCUS button again.**

### Notes:

- When you turn the camera off, manual focus is canceled.
- If you turn the program selector to  $\odot$  position while using manual focus, the focus remains locked. You may release it and activate the FlexiZone AF by pressing the FOCUS button.
- You can also adjust the focus temporarily without turning autofocus off — turn the SELECT dial to set the focus and autofocus will start again as soon as you release the SELECT dial.

## Adjusting the Exposure Manually

E

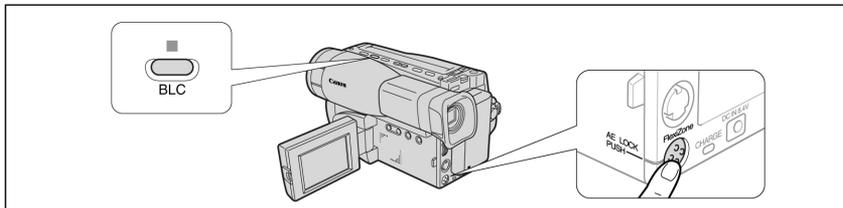

The camera adjusts the exposure automatically, making sure that your pictures are neither too dark nor too light. There is a choice of 6 recording programs to deal with different recording conditions (see p. 39–40).

This section explains how to use 3 more exposure functions. These will give you added control over your recordings.

### Compensating for backlight

The image was removed due to copyright restrictions



The image was removed due to copyright restrictions

If the subject is brightly lit from behind, it may appear under-exposed and lacking in detail. To compensate for this, use the BLC function.

1. Select the Auto **A** or FlexiZone  Recording program.
2. Press and hold the BLC button.
  - BLC appears in the display.
  - The BLC function will take effect as long as you hold the key down.
3. Release the key when it is no longer needed.

**Note:**

- In addition, you can assign CUSTOM KEY 2 to operate the BLC (see p. 29).

## FlexiZone AE

The image was removed due to copyright restrictions



The image was removed due to copyright restrictions


The camera usually adjusts the exposure so that it is suitable for the whole scene, and especially for the area in the center of the display. FlexiZone AE allows you to choose any part of the scene, so that even if your subject is towards the edge of the screen, or if it is very bright or very dark, it will still be properly exposed.

**1. Turn the program selector to  FlexiZone Recording Program.**

- The FlexiZone control frame appears in the display.

**2. Use the FlexiZone controller to move the frame over the subject.**

- The controller can be moved in any direction.

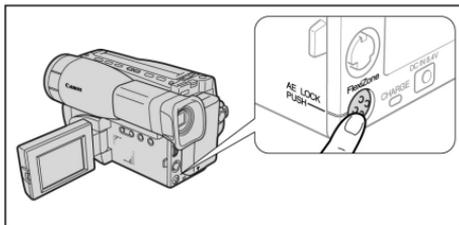

**3. Press the center of the FlexiZone controller in straight.**

- The camera adjusts the exposure to suit the area that is currently inside the frame. You can move the frame to focus on something else, but the exposure area will not move with it.
- EXP.LOCK appears in the display.

**4. Press the controller in straight again when you want to cancel FlexiZone AE.**


- The exposure is now adjusted to suit the center of the screen again.
- Press the controller once more if you want to adjust the exposure for the frame's new position.
- When you zoom into the digital range, the FlexiZone frame becomes locked in the center of the screen and you are unable to use AE Lock. Zoom back out from digital to optical, and the frame blinks twice, signaling that you are again free to move the frame around the screen.

## Exposure lock

When you are recording in situations where the lighting or light reflected by the subject may change suddenly, you can lock the exposure at the current level.

1. Turn the program selector to **A** Auto Recording program.
2. Press the center of the FlexiZone controller in straight.
  - The camera locks the exposure at the current level.
  - EXPLOCK appears in the display.
3. Press the controller in straight again when you want to cancel the exposure lock.

## Taking Still Pictures (Photo Mode)

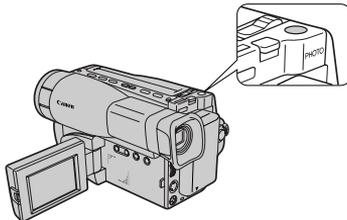

You can record still pictures like a photograph. You can use still pictures as an effective first scene, and so on. The camera records the picture and sound to tape for approximately 7 seconds.

You can take a still picture at any time during regular recording, or you can put the camcorder into record pause mode first, then take a still picture.



**MENU**  
(see p. 27)

▶PHOTO MODE.....ON


1. **Open the camera menu and move the cursor to PHOTO MODE.**
2. **Select the ON setting and close the menu.**
3. **Set the camera to record or record pause mode.**
4. **Press the PHOTO button.**

- The camera takes the image almost immediately, and then record the “photo” on the tape for approximately 7 seconds. During this time the camera also records the sound, and the viewfinder shows the still picture.
- The counter display is shown, that counts up to 6 seconds as the camcorder records the picture.
- After the photo recording is finished, the camera enters record pause mode.
- When the title or date is displayed, you can record them during PHOTO recording.

### Notes:

- While the camera records the still, you cannot use the camera functions (except turning the power off, STANDBY lever and ON SCREEN button). They do not respond until recording is complete.
- If you want to use an effect other than ghost or strobe, make sure you set it before you take the picture. If you have already set the ghost or strobe effect, you cannot use the PHOTO mode.
- If the PHOTO button is pressed with PHOTO MODE set to OFF, during Record Search, FlexiZone controller operation or fade, PHOTO OFF blinks for 4 seconds in the display then disappears.
- When you press the PHOTO button without loading a cassette, the image in the display freezes as long as you hold the button down.
- Hold the camera steady during recording.

## Using Digital Effects

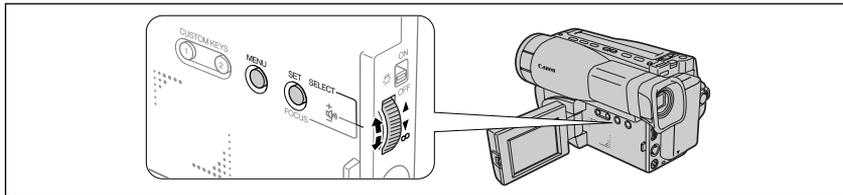

You can add a variety of digital effects to your recording, during recording and playback (negative-positive conversion, mirror, mosaic, 16:9, cinema, strobe and ghost effects can be used only during recording). The soundtrack is not affected.

- The digital effects marked with asterisks can be used only during camera recording.


### Art

Adds a paint-like effect, called solarization, to the image.




### Black & White

Makes the image in black & white.

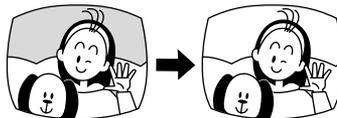


### Sepia

Makes a monochrome image with a sepia tint.

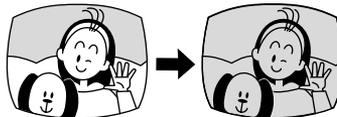

### Negative-Positive Conversion\*


Records a color negative of the image. White appears as black, yellow appears as blue, green appears as red, etc. Also convert a negative image to an ordinary positive one.

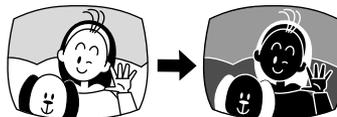


**Mirror\***

The image will be as if you have placed a mirror in the middle of the screen.

- If you select Mirror after the image stabilizer has already been turned on, the image stabilizer automatically turns off and (🔊) flashes and then disappears after 4 seconds. Accordingly, if Mirror is turned on first, the image stabilizer becomes inoperable.

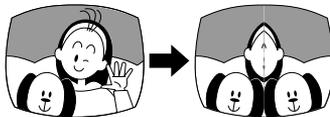
**Mosaic\***

Enlarges various pixels. The image is made up of noticeable squares of color, giving a mosaic-like effect.

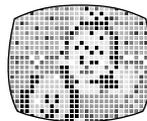
**16:9\***

Produce images in the 16:9 format for playback on widescreen TVs.

- If you select the 16:9 format after the image stabilizer has already been turned on, the image stabilizer automatically turns off and (🔊) flashes and then disappears after 4 seconds. Accordingly, if the 16:9 format is turned on first, the image stabilizer becomes inoperable.
- If you play back a recording made for 16:9 on a normal TV screen, the image will appear to be vertically "squashed" (compressed).
- The image quality is lower when the 16:9 is activated.

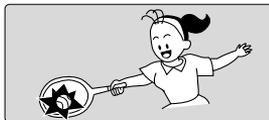**Cinema\***

Makes the image with the same proportions as a cinema screen. The top and bottom of the screen are black, giving the effect of a film being broadcast on TV in the 'letterbox' format.

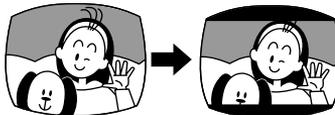

### Strobe\*

This effect converts on-screen action to a series of still images, giving an effect similar to slow-motion.

If you select Strobe after the image stabilizer has already been turned on, the image stabilizer automatically turns off and (👏) flashes and then disappears after 4 seconds.

Accordingly, if Strobe is turned on first, the image stabilizer becomes inoperable.



### Ghost\*

Adds increasingly transparent blurs around moving subject, giving a ghostly special effect.


If you select Ghost after the image stabilizer has already been turned on, the image stabilizer automatically turns off and (👏) flashes and then disappears after 4 seconds.

Accordingly, if Ghost is turned on first, the image stabilizer becomes inoperable.



## Using Digital Effects

1. Turn the program selector to camera or play mode.
2. Make sure that the CUSTOM KEYS are assigned to D.E.SELECT and D.E.ON/OFF (see p. 29).
3. Press CUSTOM KEY 1 (the D.E.SELECT button) to choose the effect you want.
  - Each time you press the key, the flashing display changes:

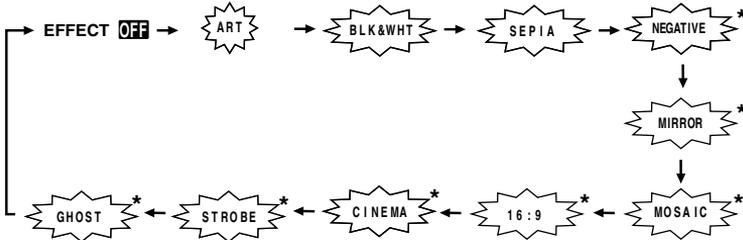


4. Press CUSTOM KEY 2 (the D.E.ON/OFF button) to activate the effect.
  - The display stops flashing and shines continuously.
5. Press CUSTOM KEY 2 to cancel the effect.
  - The display starts flashing again. You can now select a different effect.

### Notes:

- Choosing EFFECT OFF deselects all digital effects.
- In play mode, you can select a digital effect in stop mode or without a cassette loaded, however you cannot turn it on until you play the tape.

## Using the Built-in Video Light

E

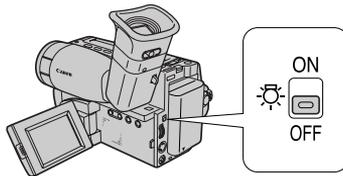

The built-in video light allows you to make clear, colorful recordings of poorly lit scenes. You can even record in complete darkness.

The recommended distance between the subject and camcorder is about 5 feet (2 m).

1. **Turn the program selector to any of the camera modes except Spotlight mode.**
2. **Slide the light switch to the  ON position to turn on the video light.**
  - The light will only turn on in camera mode.
  - When inserting or ejecting a cassette the video light turns off automatically.
3. **Make your recording.**
4. **When you have finished using the light, slide the switch back to the OFF position.**

### Notes:

- Continuous recording time is reduced with continued use of the video light.  
For longer recordings you may prefer to use a power adapter.
- The light becomes hot during use — keep it away from plastic or flammable materials, and do not touch it.
- Do not knock the light, especially during use.
- Do not use the wide-converter lens or the tele-converter lens with the video light.
- When the bulb has reached the end of its life, contact your nearest Canon Service Center.

### Caution:

- Do not touch the bulb protector during and after use of the video light. It and surrounding areas become hot.

### DANGER

- Not to be handled by children.
- Emits intense heat and light.
- Use with caution to reduce the risk of fire or injury.
- Keep a safe distance between the Video Light and human or material subjects when using and until cool.
- Turn light off when not in use.

## Simple Editing to a VCR

### Preparations

- 1. Connect the camera to the VCR.**
  - See “Connections for Playback on a TV Screen” on p. 24.
- 2. Prepare the TV and VCR.**
  - Turn on the TV and set it to the video channel, or set the TV/VIDEO selector to VIDEO.
  - Turn on the VCR, and set its input selector to LINE. Load a blank cassette, and put the VCR in record pause mode.
  - See your TV and VCR instruction manuals for details.
- 3. Turn the camera's program selector to PLAY, and load your recorded cassette.**

### Basic editing

- 1. Find a point on your prerecorded cassette slightly before the section you want to copy.**
- 2. Start to play it back while you monitor the picture on the TV.**
- 3. Start recording on the VCR as soon as the section you want to copy appears on the screen.**
- 4. Pause the VCR at the end of the section you want to copy, then stop playback on the camera.**
- 5. Repeat steps 1 to 4 until your edited recording is complete.**

**Note:**

- The quality of the edited tape will be slightly lower than that of the original.

## PAL TV Playback

This camcorder uses the NTSC system for recording and playing back tapes. However, it can also convert this signal to PAL60 format, allowing you to view cassettes recorded in the NTSC system on televisions operable on 60Hz\*.

Check whether the television can be set to PAL60 mode.

This function can only be used for playback. The ES8600 cannot record in the PAL system.

\* Some televisions can handle 60Hz automatically.



- 1. Connect the camera to a TV set.**  
See "Connections for Playback on a TV Screen" on p. 24.
- 2. Turn the TV on and set it to PAL60 mode.**  
See your TV instruction manual for details.
- 3. Open the Playback menu and choose the PAL60 option.**
- 4. Turn the SELECT dial to select your setting.**
- 5. Press the SET button.**
- 6. Press the MENU button to close the menu.**
  - PAL60 appears on the display during fast forward, rewind and stop.
- 7. Press the ► (play) button.**

### Notes:


- When a cassette recorded with this camera is played back in PAL60 mode, the image in the viewfinder appears in black and white.
- The camera sometimes might not operate correctly, owing to the condition of the recorded cassette, even with the proper settings.

## Preparing the Camera

You should already have attached a power source to the camera and loaded a cassette. When you have completed the following steps, you will be ready to start recording.


### Fasten the grip belt

- Release the Velcro fastening and hold the camera with your right hand while you adjust the belt with your left.

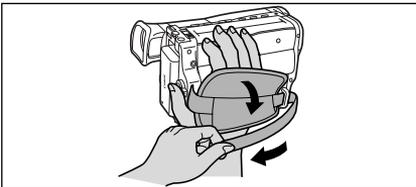


### Prepare the lens cap

- Attach/remove the lens cap as shown.
- Hook the lens cap on to the grip belt while you are recording, and place it over the lens when you have finished.

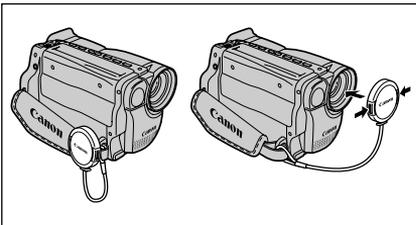


### Adjust the viewfinder

- You can adjust the viewfinder to suit your eyesight. First put the camera in record pause mode (turn the STANDBY lever to STANDBY and turn the program selector to camera mode).
- Adjust the viewfinder by sliding the viewfinder focusing switch to the left or right to bring the viewfinder display clearly into focus.
- The viewfinder also rotates through 70° to give a choice of shooting positions.

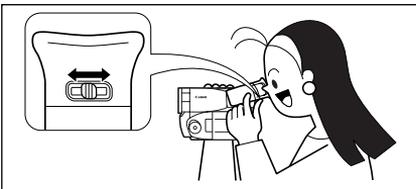

## Attach the shoulder strap

- For extra security and portability, attach the shoulder strap before using the camera.
- Pass the ends through the attachment bars and adjust the length as shown.
- Be sure to test the strap to check that it is properly attached before using it to carry the camera.

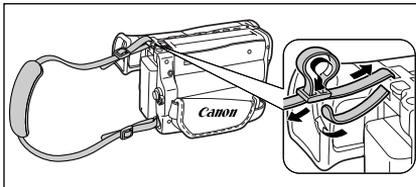

### Note:

- Be careful not to leave the viewfinder exposed to bright sunlight, or it will melt. (The light is concentrated by the viewfinder lens.) You may be able to move the viewfinder out of direct sunlight by pushing it upright, or by moving it back down to horizontal.

## Notes on Using the Batteries

### Charging and recording times

#### Time required for full recharge

BP-911K*	3 hrs.
BP-915	4 hrs.
BP-930	6 hrs.
BP-945	8 hrs. 30 min.

#### Maximum recording time

	BP-911K*	BP-915	BP-930	BP-945
Using LCD screen	1 hr. 30 min.	1 hr. 35 min.	3 hrs. 15 min.	4 hrs. 55 min.
Using viewfinder	2 hrs. 5 min.	2 hrs. 5 min.	4 hrs. 15 min.	6 hrs. 25 min.

\* The BP-911K Battery Pack is supplied and the other BP-900 series Battery Packs are optional.


- Continuous recording time will be reduced to approx. 50% with continuous use of the video light.
- When you use the optional CH-910 Dual Battery Charger/Holder with 2 battery packs attached, maximum recording time will be almost doubled.  
For example, when you attach 2 BP-945 battery packs, the ES8600 can record up to 12.5 hours continuously (using viewfinder).
- These times vary — the safest policy is always to have 2 or 3 times as many battery packs as you think you will need.
- You will get more recording time if you turn the camera off between shots, instead of leaving it in record pause mode.
- Recording time will be shorter than usual at low temperatures. You can use the battery pack between 32° and 104°F (0° to 40°C), but it works best between 50° and 86°F (10° to 30°C). At locations with extremely low temperatures such as ski resorts, a warning display might sometimes appear for about five minutes after starting use.
- If the battery pack starts to give you much less recording time than usual, it has reached the end of its life and must be replaced.

## How much power is left?

The indicator in the display shows you approximately how much charge the battery pack has left (when a battery pack is directly attached to the camera):

### Notes:

- The  mark starts blinking in the display when the power is completely exhausted.
- The indicator is not constant — it varies with the condition under which battery pack and camcorder are used.

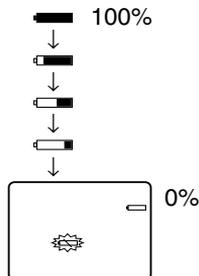

## When to recharge

You can recharge a lithium ion battery pack whenever it is convenient. Unlike a conventional battery pack, it does not have to be fully discharged first. However, as the battery pack will naturally discharge itself over time, it is best to charge it the same day you plan to use it, or the day before.

## Taking care of the battery pack

### Always attach the terminal cover.


- Do not allow any metal objects to touch the terminals, as this can cause a short circuit and damage the battery pack. Attach the terminal cover whenever the battery pack is not being used.

### Keep the terminals clean.

- The camera, adapter or battery pack will not work properly if the terminals are dirty. Check them before use, and wipe them with a dry cloth or tissue if necessary.



### Storing the battery pack.

- If you do not use a battery pack for a period of more than a few months any remaining charge may cause damage to the battery pack, and reduce usage time. To prevent damage therefore, aim to use a battery pack's complete charge before storage.
- If you have some battery packs, do these things at the same time for them.
- Store the battery pack in an area which is free of moisture and where the temperature is no higher than 86°F (30°C).

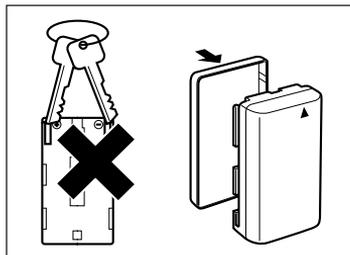

## Installing the backup battery

By pressing both sides in the direction of the arrows, pull out the battery holder from the base of the camera, and insert the CR2025 lithium battery with the + side facing downwards.

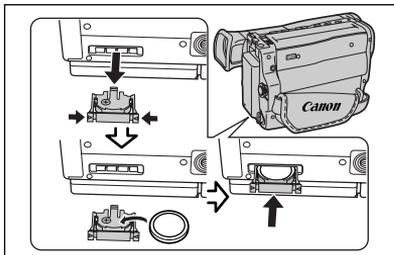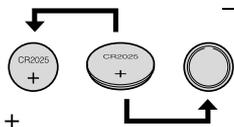

Click the holder back into place.

- This backup battery allows the camera to remember the data and time and other settings when the main power source is removed. It has a life span of about a year.

When it needs replacing (or if it has not been installed), the “” date display flashes in the display. Make sure to attach the power adapter to the camera first. This way it will remember your chosen settings when you change the battery.

### WARNING!

The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 212°F (100°C) or incinerate. Replace the battery with a Sony, Sanyo, Hitachi Maxell or Panasonic CR2025, or Duracell DL2025. Use of another battery may present a risk of fire or explosion.


### Cautions:

- Do not pick up the battery using tweezers or other metal tools — this will cause a short circuit.
- Wipe the battery with a clean, dry cloth to ensure proper contact.
- Keep the backup battery out of reach of children — if it is swallowed, contact a physician immediately, as the battery case may break down and the battery fluids damage the stomach and intestines.
- Do not disassemble, heat, or immerse the battery in water, to avoid the risk of explosion.

# Video System

(Availability differs from area to area.)

E

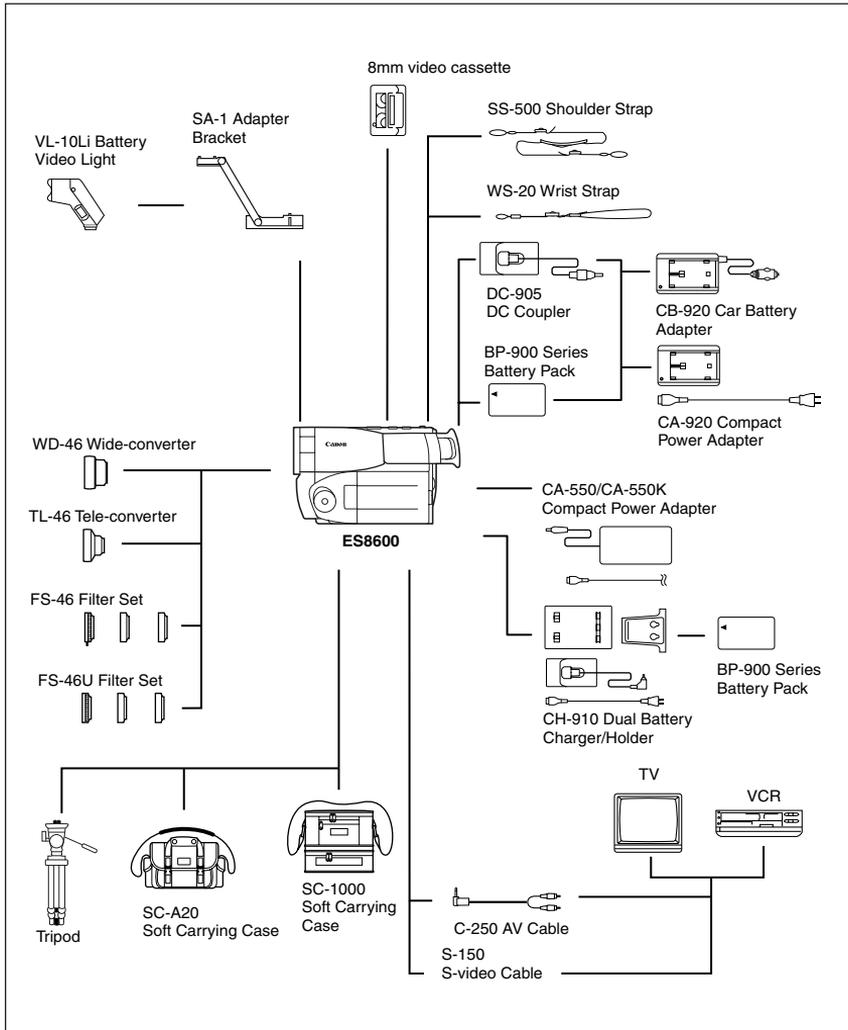

Additional  
Information


## Optional Accessories

Call or visit your local retailer/dealer for genuine Canon video accessories. You can also obtain genuine accessories for your Canon camcorder by calling: 1-800-828-4040, Canon U.S.A. Information Center.

### Battery Packs

The battery pack BP-911K is not available as an option. When you need extra battery packs, select from the following: BP-915, BP-930 and BP-945.


Recording times are as follows (video light off):

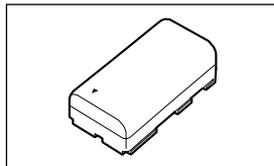

	BP-911K	BP-915	BP-930	BP-945
Using LCD screen	1 hr. 30 min.	1 hr. 35 min.	3 hrs. 15 min.	4 hrs. 55 min.
Using viewfinder	2 hrs. 5 min.	2 hrs. 5 min.	4 hrs. 15 min.	6 hrs. 25 min.


### CB-920 Car Battery Adapter

To power your camera or recharge battery packs on the move, the car battery adapter plugs into your car's cigarette lighter socket and runs off a 12/24 V negative ground battery.

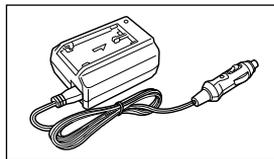

### CH-910 Dual Battery Charger/Holder


This holds two battery packs and can charge them both consecutively. It can then be connected to the ES8600 to give twice the recording time.

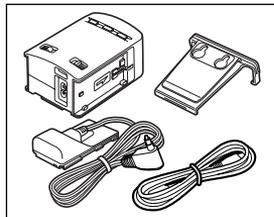

### TL-46 Tele-converter

This tele-converter lens increases the focal length of the camera lens by a factor of 1.4. The zoom and autofocus operate as usual, so you can take full advantage of the extra range.


- If you have a "professional-type" monitor, there may be some vignetting.

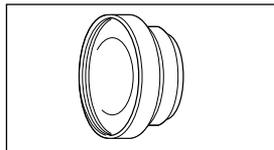

### WD-46 Wide-converter

This lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views — and you can still use both zoom and autofocus.


- As the ES8600 is already designed to record wide angle, vignetting occurs at the extreme wide angle position.

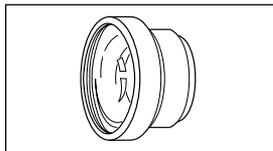

### FS-46 Filter Set


Three special effects filters to add a creative touch to your recordings: multiple-image, R-cross and zoom-spot.

- Turn autofocus off when using special effects filters.
- Vignetting occurs when using the multiple-image filter at the extreme wide angle position.

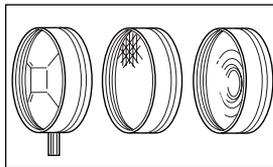

### FS-46U Filter Set

Ultraviolet, neutral density and circular polarising filters help you take control of difficult lighting conditions.

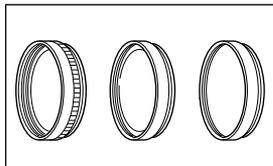


### VL-10Li Battery Video Light

If you need more light than is provided by the built-in video light, use this compact yet powerful video light for indoor and even outdoor shooting.

The SA-1 Adapter Bracket is required.


- Lithium ion battery packs can be used to power the light.  
Approximate usage times are as follows:

BP-915	BP-930	BP-945
60 min.	120 min.	170 min.

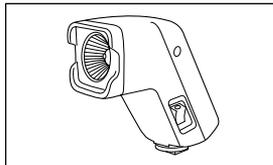


### SA-1 Adapter Bracket

Attaches a video light or microphone securely to the camera.

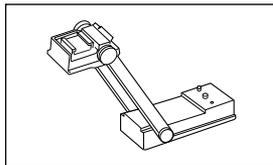


### SC-1000 Soft Carrying Case

This lightweight bag keeps the camera within easy reach without weighing you down or getting in the way.

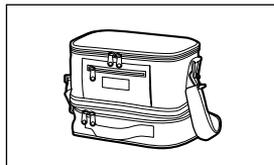


### SC-A20 Soft Carrying Case

A handy camera bag with adjustable padded compartments and plenty of pockets for accessories.

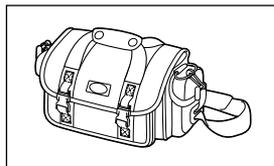

### WS-20 Wrist Strap

Provides an extra measure of protection for active shooting.

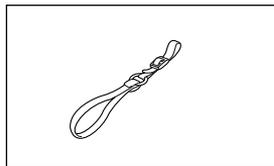

This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing this same mark.

#### Provided accessories:

C-250 AV Cable	3077A002AA	Lens cap and lens cap cord	DY1-7748-000
SS-500 Shoulder Strap	D81-1150-201		

#### Optional accessories:

CA-550 Compact Power Adapter	3026A001AA	JR7.2W 10WF Halogen Bulb for VL-10Li	3141A002AA
CA-920 Compact Power Adapter	8029A002AA	SA-1 Adapter Bracket	3002A002AA
DC-905 DC Coupler	3075A002AA	WD-46 Wide-converter	3108A002AA
CB-920 Car Battery Adapter	8034A002AA	TL46 Tele-converter	3105A002AA
CH-910 Dual Battery Charger/Holder	3036A002AA	FS-46 Filter Set	3094A002AA
BP-915 Battery Pack	3057A002AA	FS-46U Filter Set	3095A002AA
BP-930 Battery Pack	3058A002AA	WS-20 Wrist Strap	3118A002AA
BP-945 Battery Pack	4244A002AA	S-150 S-video Cable	3062A002AA
VL-10Li Battery Video Light	3140A002AA		

## Cautions and Maintenance

E

### Cautions

#### **Avoid high temperatures and high humidity.**

- Do not leave the camera inside a car in hot weather, for example.
- Be careful of heat radiating from video lighting equipment.
- Do not take the camera into a humid room.

#### **Avoid sudden changes in temperature.**

- If you take the camera from a cold place to a warm place, condensation may form on the lens and internal parts (see p. 65).

#### **Do not point the lens or viewfinder at strong light sources.**

- Never point it at the sun, and do not leave it aimed at a bright subject.
- Be especially careful when leaving the camera on a tripod.

#### **Avoid magnetic or electric fields.**

- Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.

#### **Do not expose the camera to water.**

- Cover the camera when you are recording in light rain or mist.
- There is a risk of electric shock if water gets inside the camera — contact qualified service personnel as soon as possible.

#### **Protect the lens.**

- Sand and dust can damage the lens — be especially careful on windy days.

#### **Handle the camera gently.**

- Vibration or shock can cause damage.
- Do not use the viewfinder or LCD panel as a carrying handle.

#### **Do not disassemble the camera.**

- This is very dangerous as there is a risk of electric shock — if the camera does not function properly, take it to qualified service personnel.

#### **Note:**

- These cautions also apply to accessories such as battery packs and cassettes.


## Maintenance

### LCD

- Clean the LCD screen using a soft, dry cloth.
- Where there is a big change in temperature, moisture may form on the surface of the screen. Wipe clean with a soft, dry cloth.
- At low temperatures the display may appear to be much darker than usual. This is not a fault, and as the screen warms up the display will return to normal.

### Viewfinder

- To clean the viewfinder screen, rotate the viewfinder up and remove the two screws. Pull the eyecup straight off.
- Clean the viewfinder screen with a commercially available blower brush.
- Replace the eyecup by putting it back into position and fixing it with the screws.

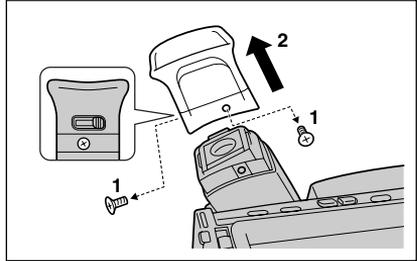

### Camera body and lens

- Use a soft, dry cloth to clean the camera body or lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

### Video heads

- Clean the video heads only when necessary, preferably using Canon's CC-8 Video Head Cleaning Cassette.
- Do not use a wet-type cleaning cassette as this can cause damage.


## Storage

If you do not intend to use the camera for some time, store it in an area which is free of dust and moisture, and where the temperature is no higher than 86°F (30°C). After storage, check each part and function of your camera to make sure everything is still working properly.


## Condensation

Condensation may form on the camera when it is moved from a cold place to a warm place. Using the camera while condensation is present can damage both the tape and the camera.


Condensation may become a problem:

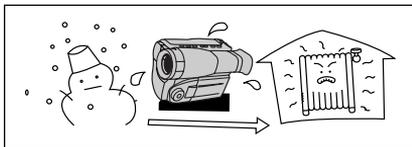


When you take the camera from a cold place to a warm room

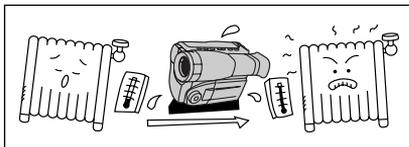

When a cold room is heated rapidly

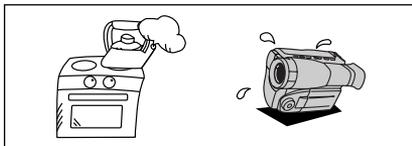

When the camera is left in a humid room

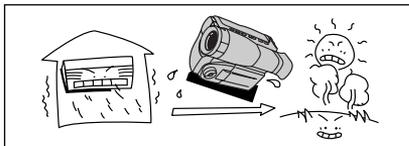

When the camera is taken from an air-conditioned room to a warm, humid place

### Protecting the camera from condensation

- Before you take the camera to a warm or humid place where condensation is likely to be a problem, unload the cassette and put the camera in a plastic bag. Wait until the camera reaches room temperature before you take it out of the bag.
- When the surface of the video camera is wet, do not use it. Wait for hours until the whole video camera dries.

### What happens when condensation is detected

- If EJECT flashes in the display, unload and load the cassette couple of times. After this operation, if EJECT still continues flashing in the display, condensation may have formed.

### What to do

- Remove the cassette, leave the cassette compartment open, and turn the power off.
- Leave the camera and cassette in a dry place for more than one hour.
- After more than one hour and load a cassette. If EJECT still continues flashing in the display, the camera may need repair.

## Using the camera abroad

### Power sources

- You can use the compact power adapter to operate your camera and charge battery packs in any country where the electricity supply is between 100 and 240 V AC, 50/60 Hz. Contact your Canon dealer for information about plug adapters for overseas use.

### TV playback

- Although you can always play back your recordings in the viewfinder, your camera can only be connected to TVs which use its NTSC system. This TV system is used in the following countries/areas:

American Samoa, Bahama, Barbados, Bermuda, Bolivia, Canada, Chile, Colombia, Costa Rica, Cuba, Ecuador, El Salvador, Guam, Guatemala, Greenland, Haiti, Honduras, Jamaica, Japan, Korea, Mexico, Micronesia, Myanmar, Nicaragua, Panama, Peru, Philippines, Puerto Rico, Saint Lucia, Surinam, Taiwan, Trinidad and Tobago, USA, Venezuela.

## Troubleshooting

Refer to this checklist first if you have any problems with your camera. Possible explanations are given below each problem on the list — turn to the page numbers in parentheses for more information.

Make sure that the camera is properly connected if you are using it with a TV or VCR. Consult your dealer or service outlet if problems persist.

**❑ Nothing happens when I press the buttons.**

- You haven't turned the camera on (p. 15).
- You haven't loaded a cassette, or it is set for erasure prevention (p. 13).
- The tape has reached the end.
- The battery pack is exhausted, or not properly attached (p. 11, 57).
- You need to select a different recording program to use that function (p. 39).

**❑ The camera turned itself off.**

- You left it in record pause mode for more than about 5 minutes (p. 15).
- The battery pack is exhausted (p. 11, 57).

**❑ The start/stop button doesn't work.**

- The program selector is not set to camera mode (p. 15).
- You haven't loaded a cassette, or it is set for erasure prevention (p. 13).
- The tape has reached the end.

**❑ There's no picture in the display.**

- The program selector is not set to camera mode (p. 15).

## ❗ The camera won't focus.

- The camera is on manual focus (p. 42).
- The viewfinder lens needs adjusting (p. 54).
- The lens is dirty (p. 64).
- Some subjects are not suitable for autofocus.

### Note:

- Some subjects are not suitable for autofocus. In these situations, you will often get better results using manual focus (see p. 42). Focus on something which is about the same distance away, lock the focus, and then point the camera at your original, hard-to-focus subject.



Subjects behind glass




Several subjects in the display at different distances



Slanted subjects



Rapidly moving subjects

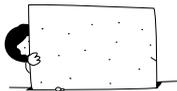

Subjects without much contrast (such as a white wall)



Subjects with horizontal stripes



Dark subjects



Subjects which reflect too much light (such as shiny car exteriors)



Night scenes and low light conditions



Subjects not in the center of the display

❑ **The video light won't turn on.**

- The program selector is in PLAY mode.
- The STANDBY lever is turned to LOCK.
- The bulb has reached the end of its life.

❑ **The ► (Play) button doesn't work.**

- The program selector is not set to PLAY (p. 22).
- You haven't loaded a cassette (p. 13).
- The tape has reached the end.

❑ **There's a bright stripe on the screen.**

The image was removed due to copyright restrictions

- When you are recording in dark places, a bright light in the scene may cause a vertical bar, called smear, to appear on the screen.

❑ **The playback picture is rough.**

The image was removed due to copyright restrictions

- If your recordings do not play back smoothly, clean the video heads (p. 64).

❑ **There's no picture on the TV screen, even though the tape is moving.**

- The video heads need cleaning (p. 64).
- The TV/VIDEO selector on the TV isn't set to VIDEO (p. 24).

❑ **There's no sound coming from the speaker during playback.**

- The speaker volume is set to the minimum level (p. 23).

❑ **EJECT flashes on the display.**

- It is possible that condensation has formed (p.65).

❑ **Malfunction**

- External interference may cause the camera's microprocessor to malfunction temporarily. If random letters appear in the display or if normal operation is interrupted, remove and then replace the power source (and if necessary, the backup battery).

## Screen Displays

Use the menu's TV SCREEN function to choose whether or not the displays appear on the TV screen.

They are not recorded to the tape if you start recording with the camera.



indicates a flashing display.

Date and time display  
(p. 32)



The date and time have not been set. This display will not be recorded  
(p. 32).



Title (p. 34)



Record pause mode  
(p. 15)



Recording (p. 15)



Playback (p. 22)



Fast forward (p. 22)



Rewind (p. 22)



The tape is stopped  
(p. 22).



The camera is ejecting the tape (p. 13).



Hi8 Recording or playback.



The safety mechanism is activated. Unload the cassette and turn the camera off. Turn it on again and reload the cassette.



No cassette is loaded, or the cassette is set for erasure prevention (p. 13).



The tape is within 5 minutes of the end.



The tape has reached the end.



Shows how much battery power remains (p. 57).



The battery pack is nearly exhausted (p. 11, 57).



The backup battery is nearly exhausted, or not inserted properly (p. 58).




PHOTO MODE is set to OFF in the camera menu (when the PHOTO button is pressed) (p. 46).



Optical zoom (p. 17)



Digital zoom is turned on (p. 17).

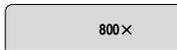

Digital zoom (p. 17)

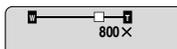


Image stabilizer (p. 31)




Specialized AE programs (p. 40)



Autofocus is turned off (p. 42).



Backlight compensation (p. 43)

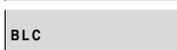

Digital effects:

The display flashes when the effect is being selected, and appears steadily when it is activated (p. 47–50).



FlexiZone AE/  
Exposure lock (p. 44)

EXP. LOCK

## Custom key settings

(p. 29)

D. ZOOM  
IMAGE S. (M)

D. E. SELECT  
D. E. ON/OFF

DATE  
TITLE

FADE  
BLC

## Tape counter



The tape counter indicates the approximate running time of the tape — 1 hour, 23 minutes and 45 seconds in this example. The tape counter is reset when a cassette is loaded, or when you press the C.RESET button (p. 8).

## Recording reminder



When you start recording, the camera counts from 0sec to 10sec (for PHOTO recording from 0sec to 6sec). Shots which are shorter than 10 seconds may be difficult to edit later. On the other hand, if you are not planning to edit the recording, remember that a shot which does not contain action should generally last no longer than 10 seconds.

## Specifications

### ES8600

**Power Supply (rated):** 7.2 V DC

**Power Consumption (while recording with the AF turned on):**  
4.1 W (LCD screen OFF),  
5.3 W (LCD screen ON)

**Television system:**

EIA standard (525 lines, 60 fields)  
NTSC color signal

**Video recording system:** 2 rotary heads, helical scanning system; luminance signal: FM azimuth recording; chrominance signal: converted subcarrier phase shift recording (8mm video standard)

**Audio recording system:** Frequency multiplexing with the video signal (1 channel)

**Image sensor:** 1/4" CCD (charge coupled device) 270,000 pixels (250,000 effective pixels)

**Tape format:** 8mm videocassette, metal evaporated/metal particle

**Tape speed:** 0.56 ips (14.345 mm/s)

**Maximum recording time:** 2 1/2 hours (with a P6-150 cassette)

**Fast forward/rewind time:** Approx. 6 minutes (with a P6-120 cassette)

**Lens:** F/1.6-3.8, 22x power zoom, 3.6-79.2 mm

**Filter diameter:** 46 mm

**Focusing system:** TTL autofocus, manual focusing possible

**Minimum focusing distance:** 3 ft 3 in (1m), wide-angle end: 0.4 in (1cm)

**Minimum illumination:** 0.2 lx

**Recommended illumination:**  
More than 100 lx

**Viewfinder:** 0.24-inch monochrome LCD, 76,000-pixels

**LCD screen:**

2.5" measured diagonally (6.4 cm), 123,000 pixels (approx.)

**Microphone:**

Non-directional electret condenser microphone

**Output level:**

Video terminal : 1 Vp-p/75 ohms unbalanced

S-video terminal: 1 Vp-p (Y signal), 0.286 Vp-p (C signal)

Audio terminal: -10dBV, less than 2.2 kohms, unbalanced

**Operating temperature range:**

32-104 °F (0-40 °C)

**Dimensions:** 4 × 4.1 × 7.1 1/8 in (102 × 103 × 180 mm)

**Weight:** 1.7 lb (770g)

**Video light:**

Central luminosity: Approx. 12 lx at 6 ft 6 in (2 m)

Color temperature: Approx. 2,900 K

Bulb life: Approx. 50 hours

Power supply: Battery pack or compact power adapter

### BP-911K Battery Pack

**Battery type:** Rechargeable lithium ion battery

**Rated voltage:** 7.2 V DC

**Operating temperature:** 32°-104°F (0°-40°C)

**Battery capacity:** 1,100 mAh

**Dimensions:** 1.5 × 0.8 × 2.8 in (38.2 × 20.5 × 70.5 mm)

**Weight:** 2.9 oz (80 g)

Weight and dimensions are approximate.

Errors and omissions expected.

Subject to change without notice.

Canon is a trademark of Canon Inc.

# Index

## A

Abroad, Using the Camera, 66  
Accessories, 6, 60–62  
Adapter, AC, 10–11  
AE programs, 39–40  
Art, 47  
Audio/Video Terminal, 24  
Auto Recording, 39

## B

Backup Battery, 58  
Basic Recording, 15–16  
Battery Pack, 11–12, 56–57  
Black & White, 47

## C

Cables, 6, 24  
Cassette, 13–14  
Cautions and Maintenance, 63–64  
Charging the Battery Pack, 11, 56  
Cinema, 48  
Cleaning the Camera, 64  
Compact Power Adapter, 10–11  
Compensation for Backlight, 43  
Condensation, 65  
Connection to TV or VCR, 24  
Custom Keys, 29

## D

Date/title color, 36  
Date and Time Display, 32–33  
Demonstration, 16  
Digital Effects, 47–50  
Digital Zoom, 17

## E

Editing to a VCR, 52  
Exposure Programs, 39–40

## F

Fade, 37  
Fast forward/Fast Forward Playback, 22  
Feed back, 24  
Finding Your Way Around the ES8600, 8–9  
FlexiZone AE, 44  
FlexiZone AF, 41  
FlexiZone Recording, 39  
Focusing, 41–42

## G

Ghost, 49  
Grip Belt, 54

## H

Head Cleaning, 64  
High-Speed Search, 23

## I

Image Stabilizer, 31  
Introducing the Camcorder, 7

## L

Lithium Battery, 58  
LCD Screen, 19–21  
Loading Cassettes, 13

## M

Maintenance, 64  
Making Better Videos, 25–26  
Manual Focus, 42  
Mirror, 48  
Mosaic, 48

## N

Negative-Positive Conversion, 47  
Nomenclature, 8–9

## O

Optional Accessories, 60–62

**P**

Pause, Record, 15  
Photo Mode, 46  
Playback, 22  
Playback Connection, 24  
Portrait, 40  
Power Sources, 10  
Preparing the Camera, 54–55

**R**

Recharging the Battery Pack, 56  
Record Pause Mode, 15  
Record Review, 38  
Record Search, 38  
Recording, 15–16  
Recording Programs, 39–40  
Rewind/Rewind Playback, 23

**S**

Sand & Snow, 40  
Screen Displays, 70–71  
Sepia, 47  
Shoulder Strap, 55  
16:9, 48  
Specifications, 72  
Sports, 40  
Spotlight, 40  
Storage, 64  
Strobe, 49

**T**

Tape Counter, 23, 71  
Telephoto, 17  
Temperature, 56  
Time Display, 32–33  
Titles, 34  
Tripod, 25  
Troubleshooting, 67–69

**V**

Video Cassettes, 13–14  
Video Light, 51  
Video System, 59  
Viewfinder, 54, 64

**W**

Wide Angle, 17

**Z**

Zooming, 17–18



## CANON INC.

**U.S.A.** ————— **CANON U.S.A., INC. NEW JERSEY OFFICE**  
100 Jamesburg Road, Jamesburg, NJ 08831 USA

**CANON U.S.A., INC. CHICAGO OFFICE**  
100 Park Blvd., Itasca, IL 60143 USA

**CANON U.S.A., INC. LOS ANGELES OFFICE**  
15955 Alton Parkway, Irvine, CA 92618 USA

**CANON U.S.A., INC. HONOLULU OFFICE**  
210 Ward Avenue, Suite 200, Honolulu, HI 96814 USA

- **If you have any questions, call the Canon U.S.A. Information Center toll-free at 1-800-828-4040 (U.S.A. only).**

**CANADA** ————— **CANON CANADA INC. NATIONAL HEADQUARTERS**  
6390 Dixie Road, Mississauga, Ontario L5T 1P7

**CANON CANADA INC. CALGARY**  
2828, 16th Street, N.E. Calgary, Alberta T2E 7K7

**CANON CANADA INC. MONTREAL**  
5990 Côte de Liesse, Quebec H4T 1V7

- **If you have any questions, call the Canon Canada Information Center toll-free at 1-800-828-4040. (Canada only)**
- **Si vous avez des questions, veuillez téléphoner sans frais au Canada 1-800-828-4040. (Canada seulement)**

**MEXICO** ————— **CANON MEXICANA, S. DE R.L. DE C.V.**  
Periferico Sur No. 4124 Col. Ex-Rancho de Anzaldo C.P. 01900  
México, D.F., México

**CENTRO Y SURAMÉRICA** ————— **CANON LATIN AMERICA, INC.**  
703 Waterford Way, Suite 400, Miami, FL 33126 USA

**ASIA** ————— **CANON HONGKONG COMPANY LTD.**  
9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong