

Setting Up Your MX340 In Default Mode (Tel Priority Mode) With An Answering Machine DSL/Cable Modem Connection

Connecting The Phone Lines

Connecting Your Phone/Answering Machine

Is your answering machine built into your phone?

YES


[Click Here](#) or [Go To Page 12](#)

NO


Click the Next Button

Fax to Phone Line Connection

Before

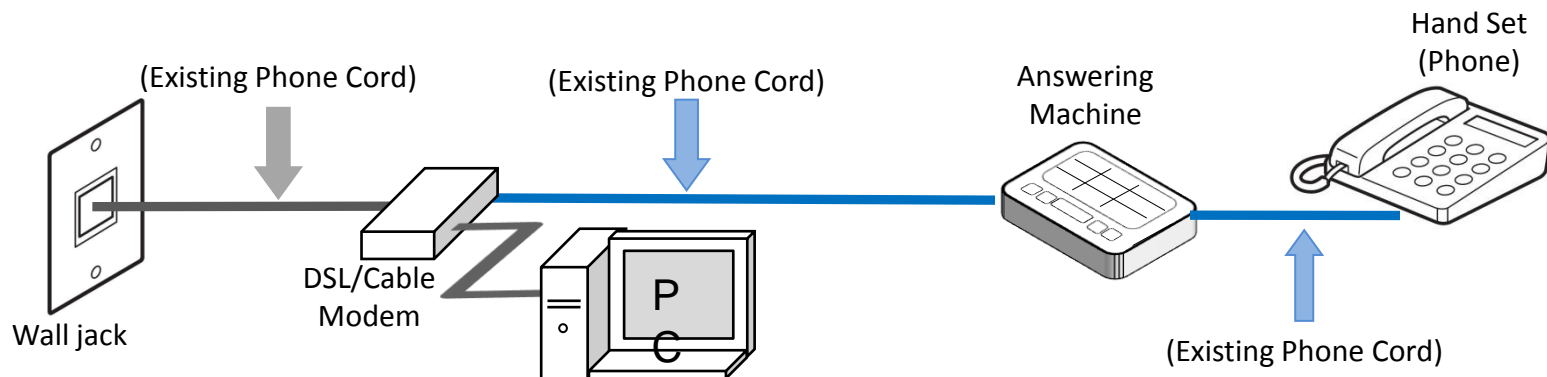


After

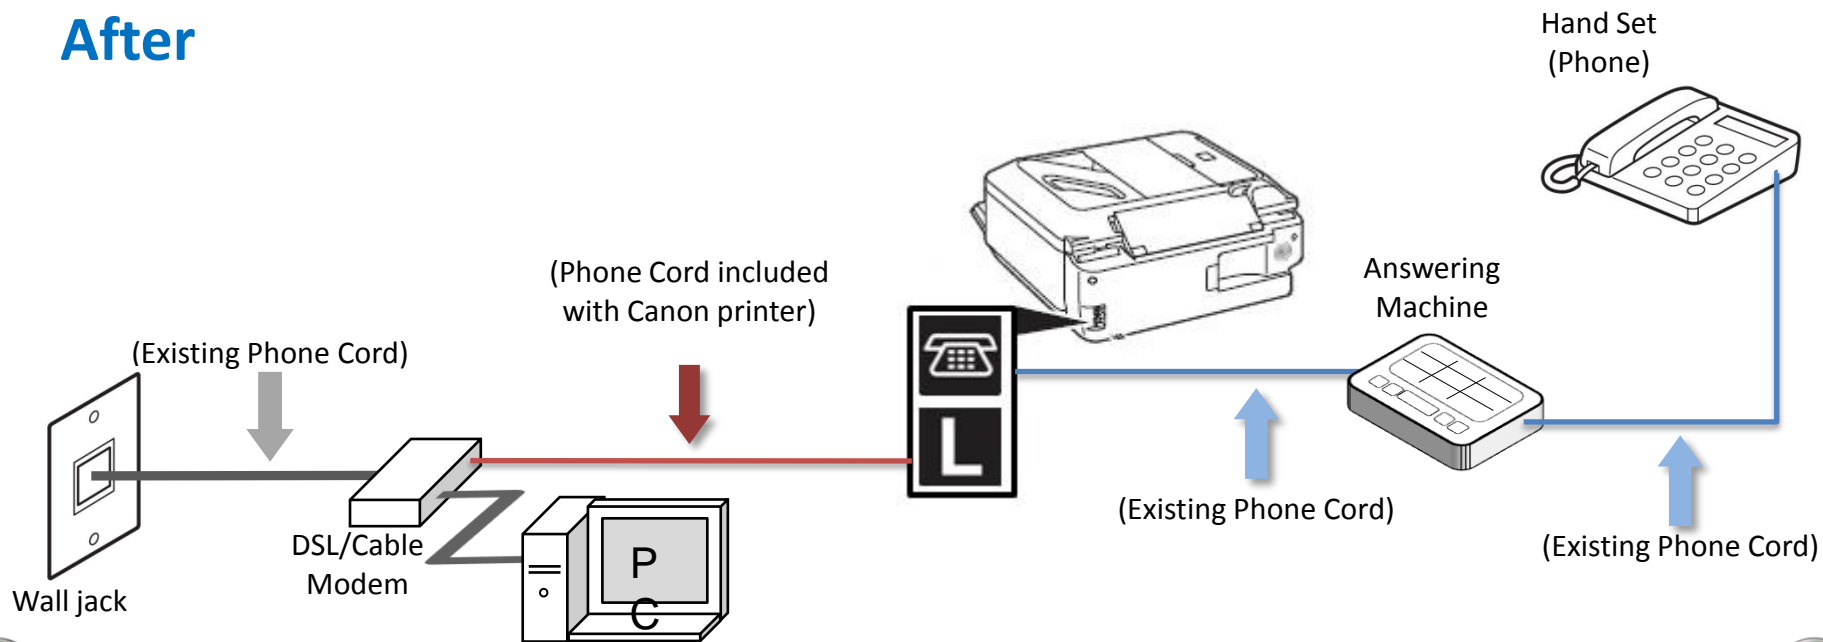



Fax to Phone Line Connection

- Plug the provided phone cord into the DSL/Cable Modem

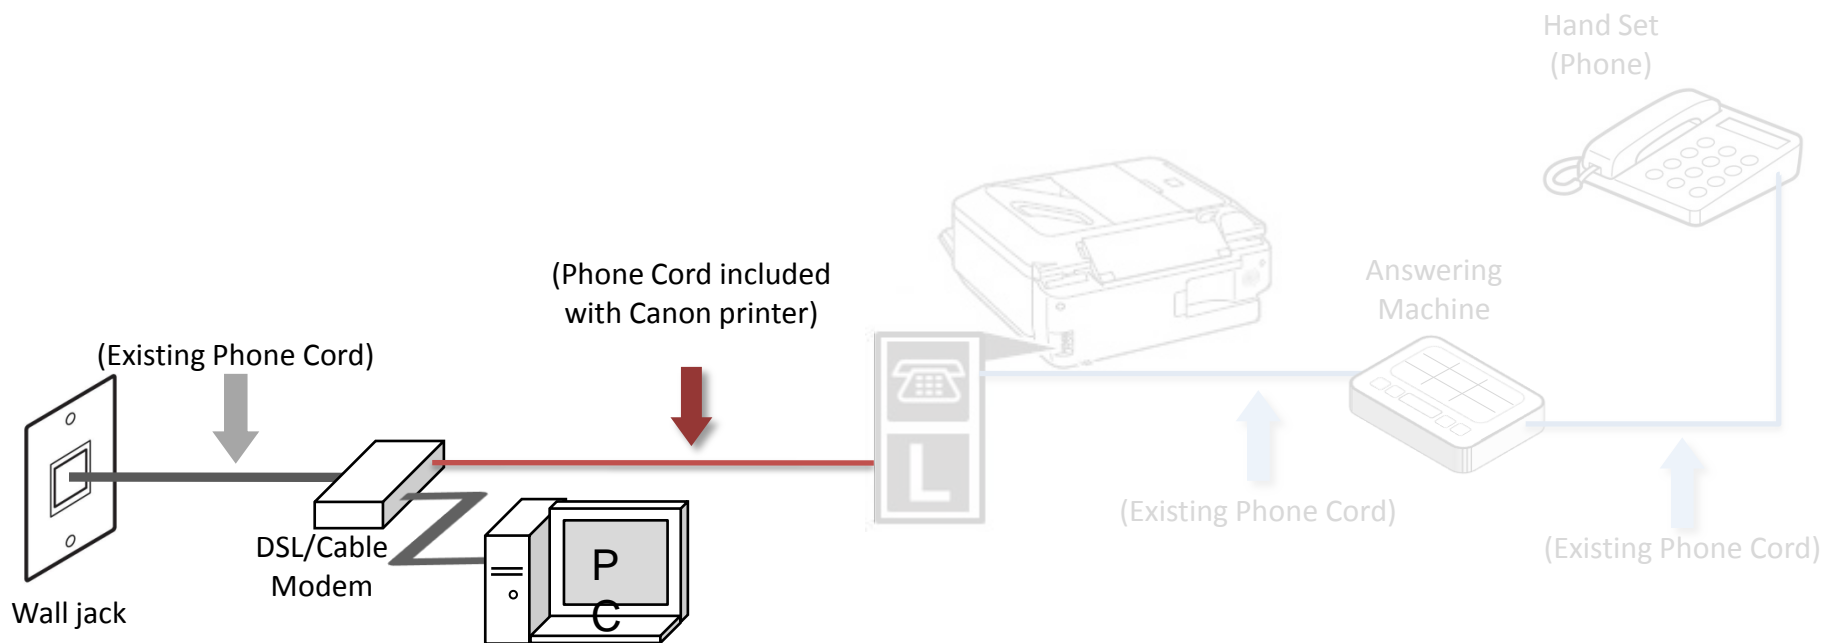



Fax to Phone Line Connection

- Plug the provided phone cord into the “L” jack in the rear of the multifunction

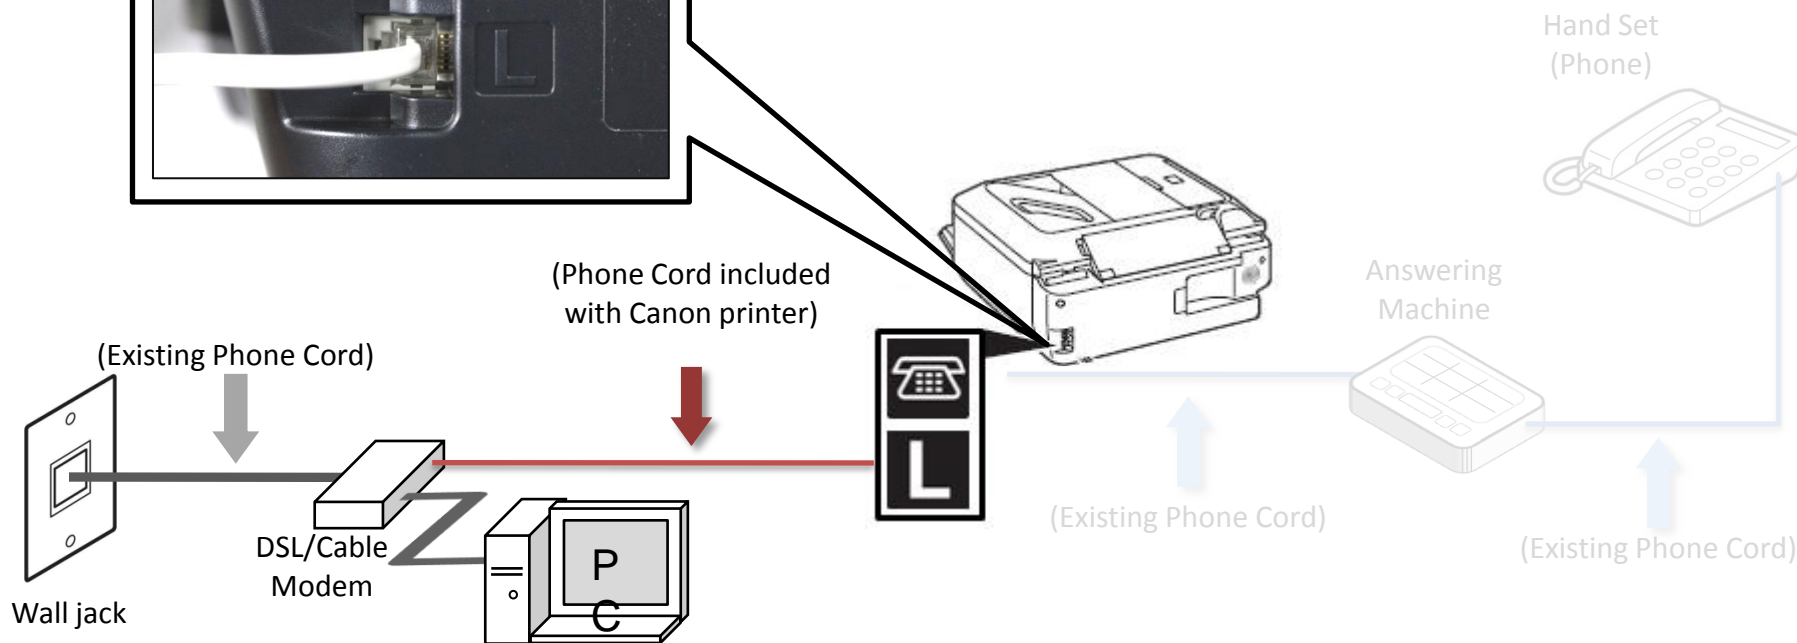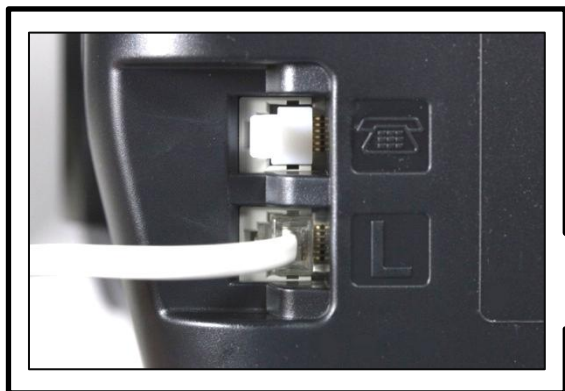


Fax to Phone Line Connection

- Remove the white plug (D) from the upper jack

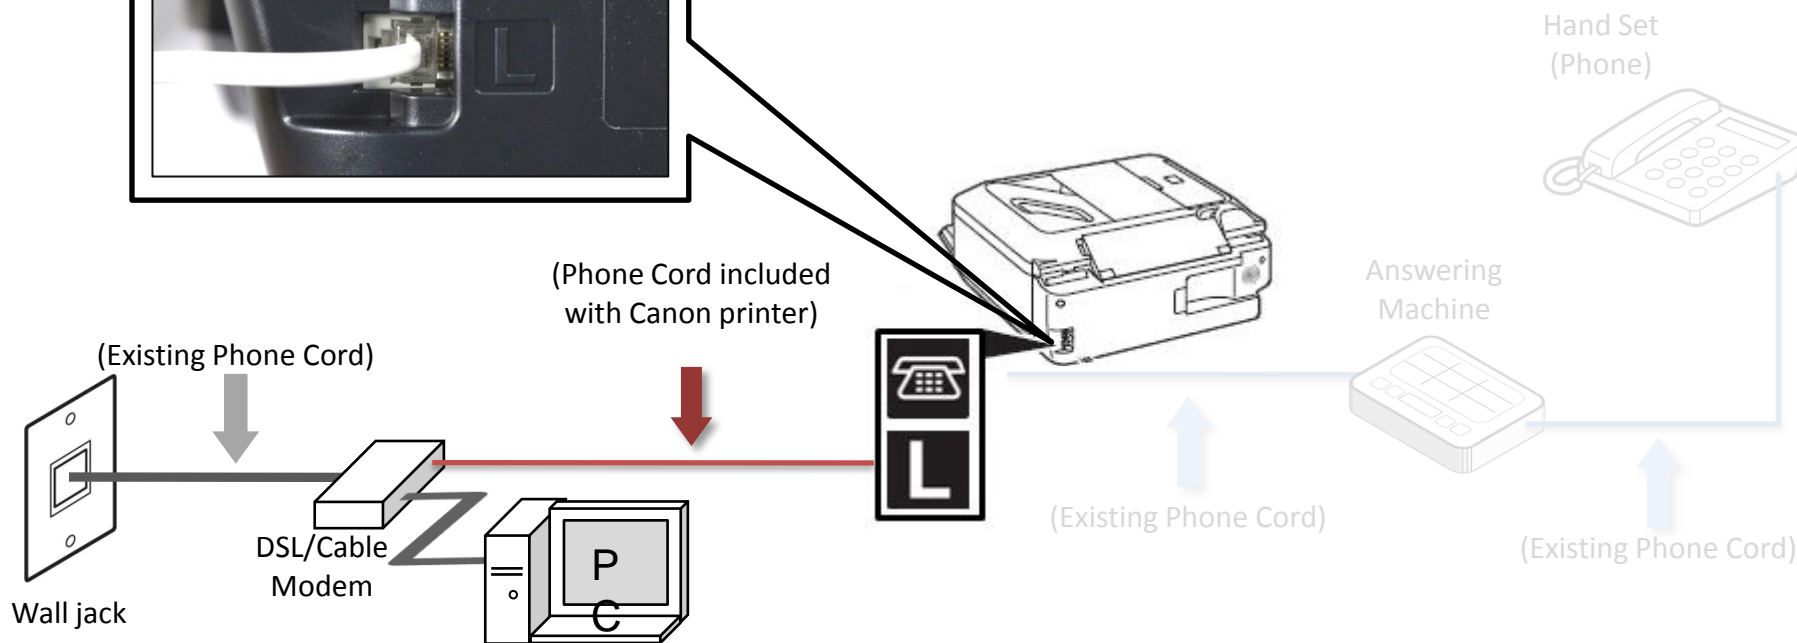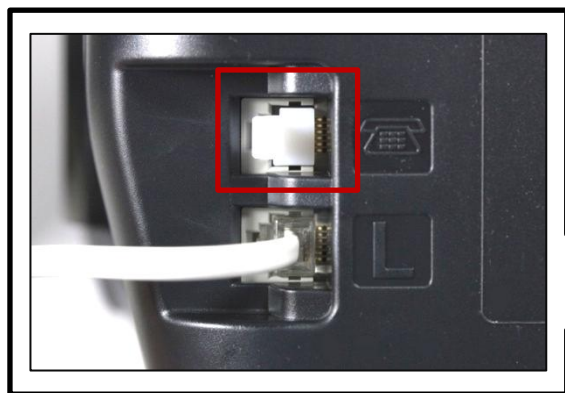


Fax to Phone Line Connection

- Plug the second phone cord into the “telephone” jack located on the rear of the multifunction

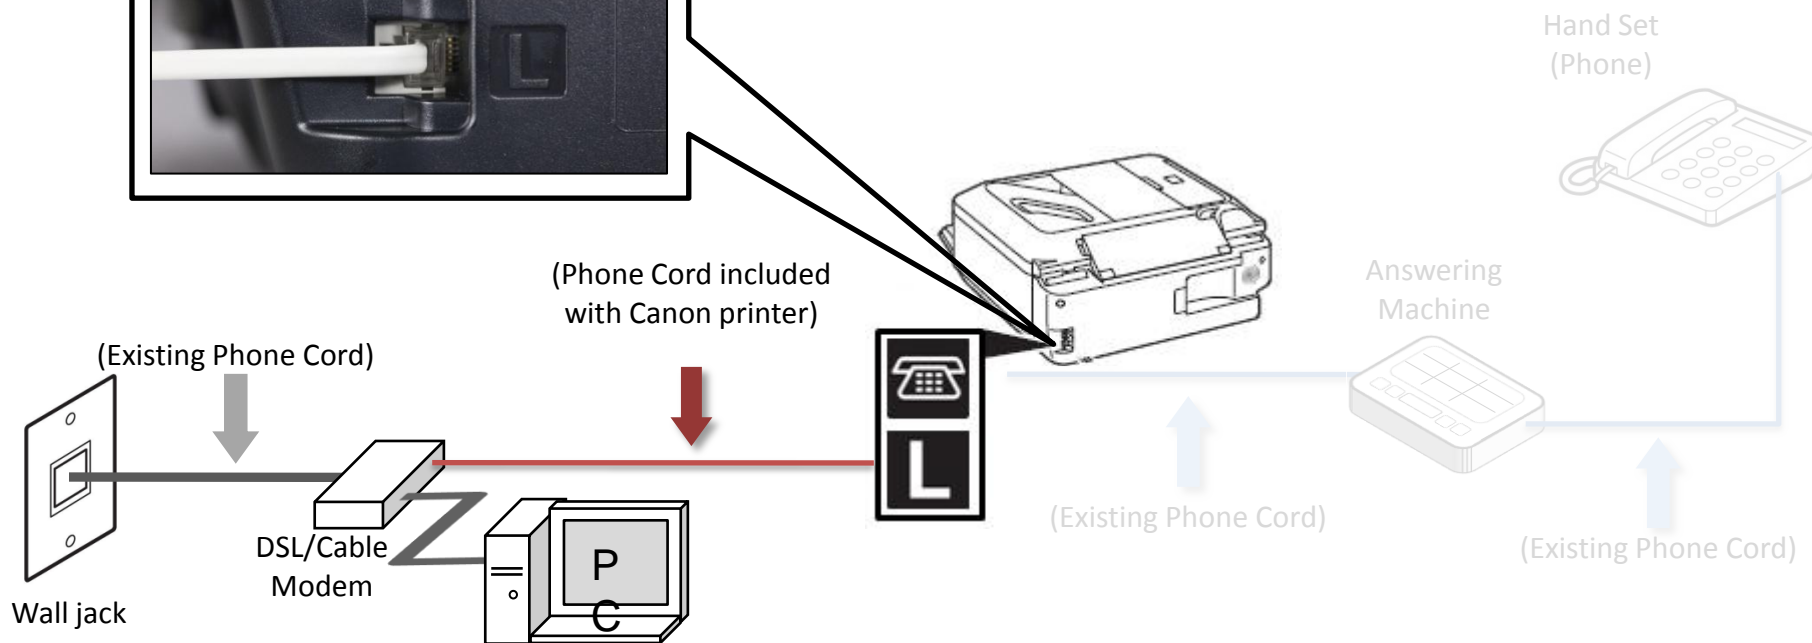


Fax to Phone Line Connection

- Plug the second phone cord into the answering machine

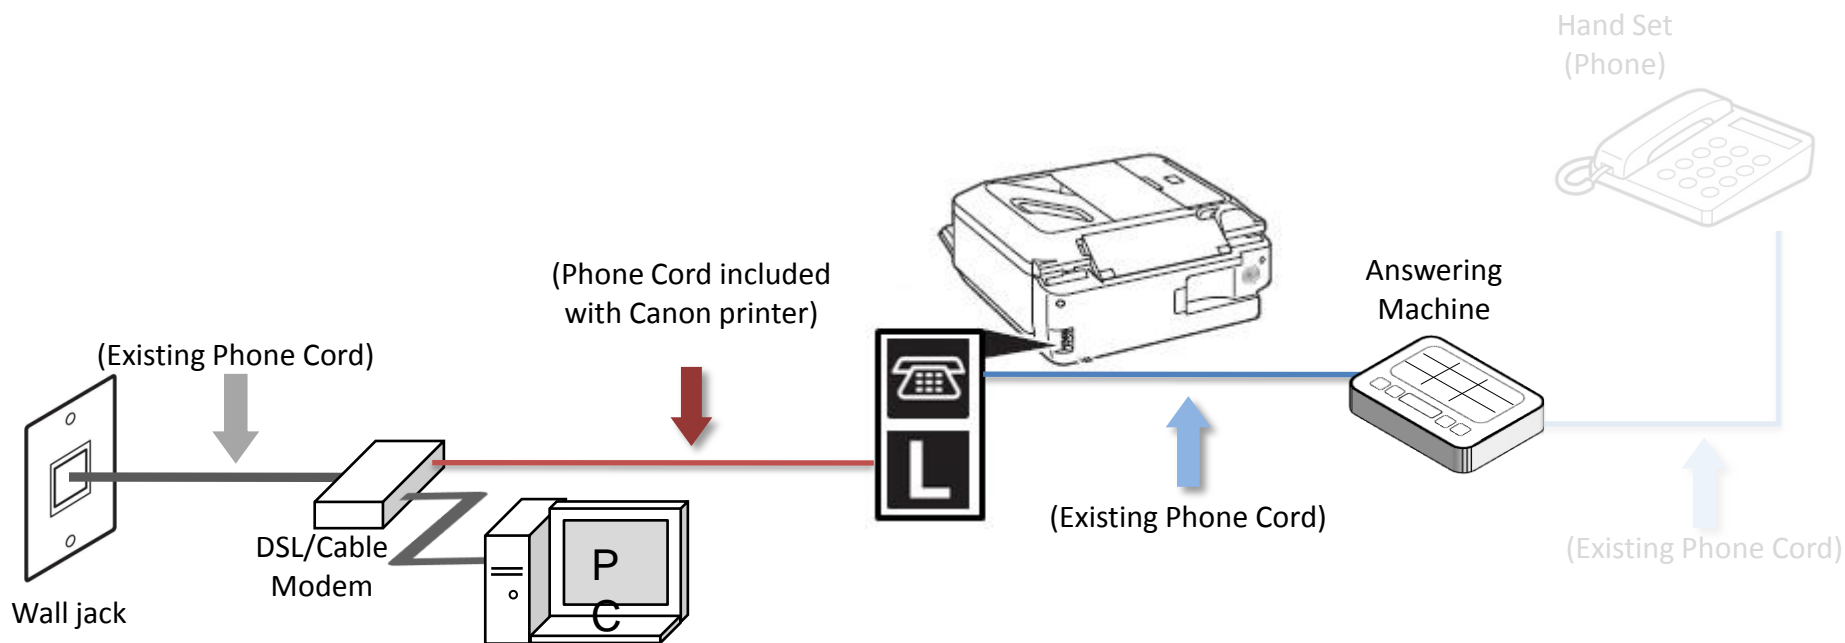


Fax to Phone Line Connection

- Plug the third phone cord into the answering machine

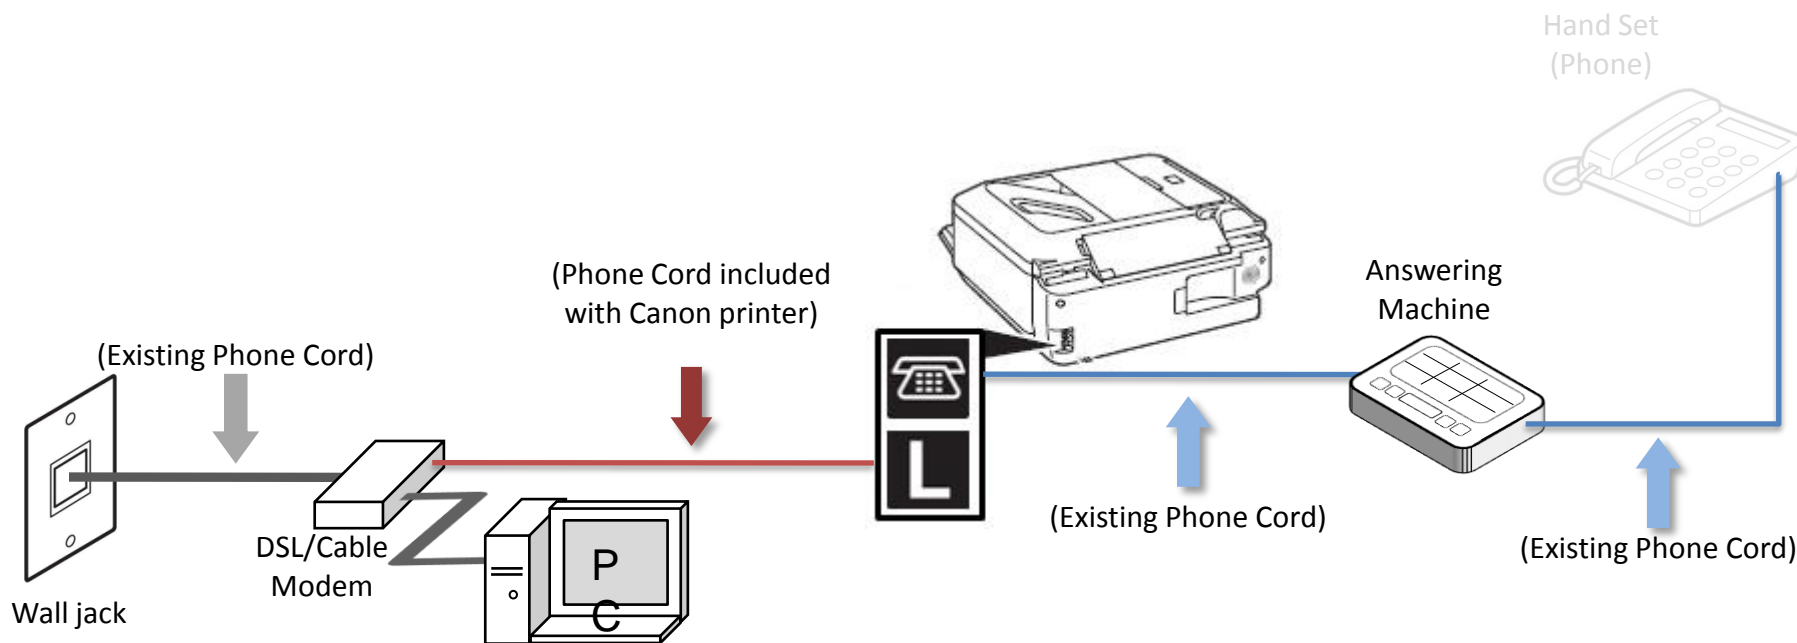


Fax to Phone Line Connection

- Plug the third phone cord into the phone

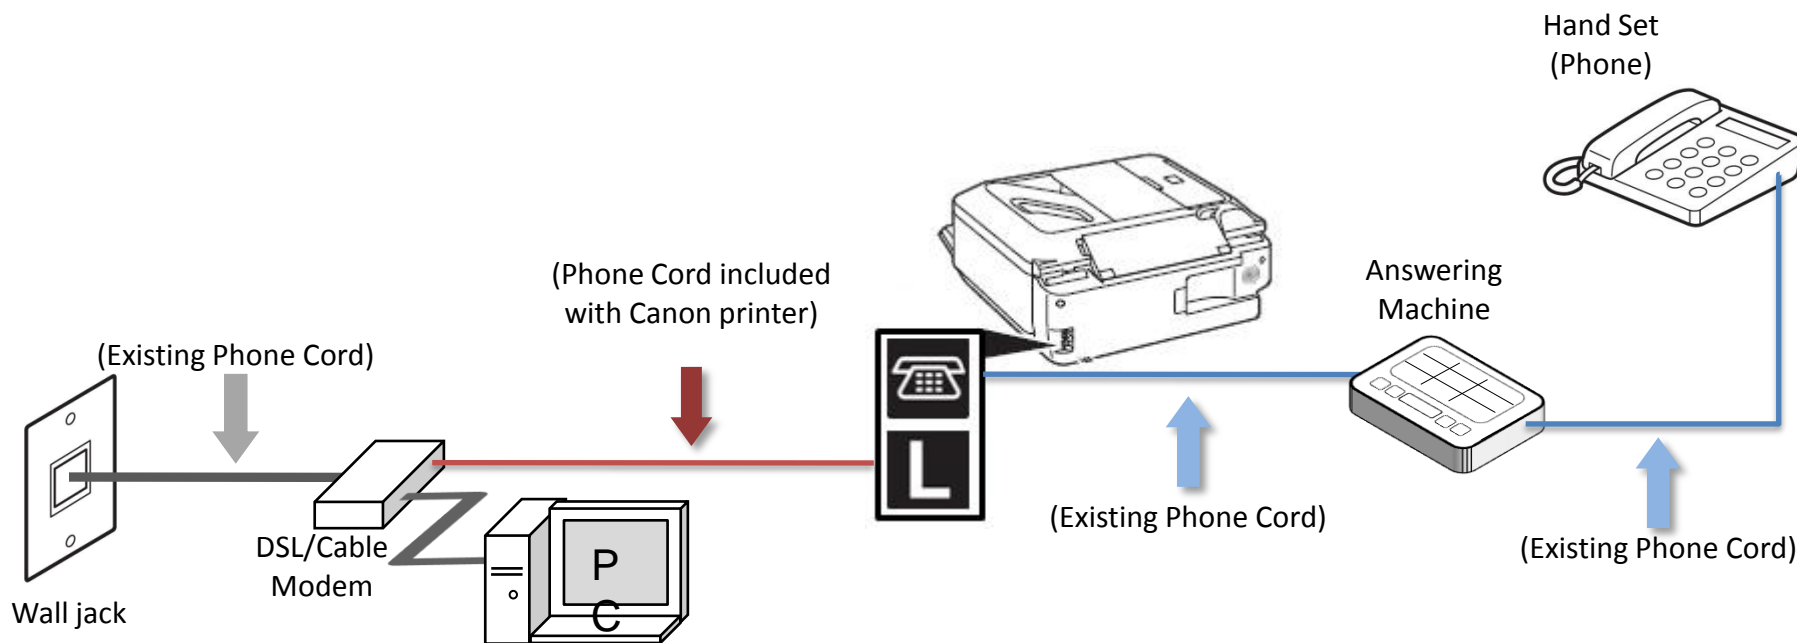


Fax to Phone Line Connection

Before

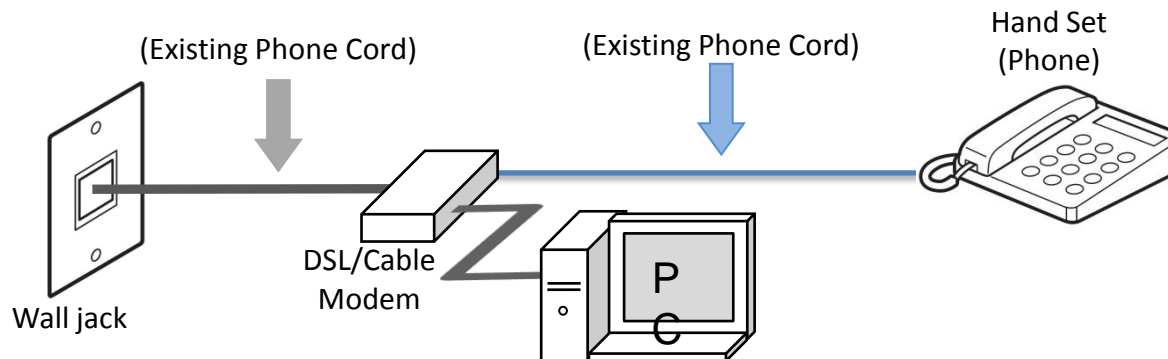

After

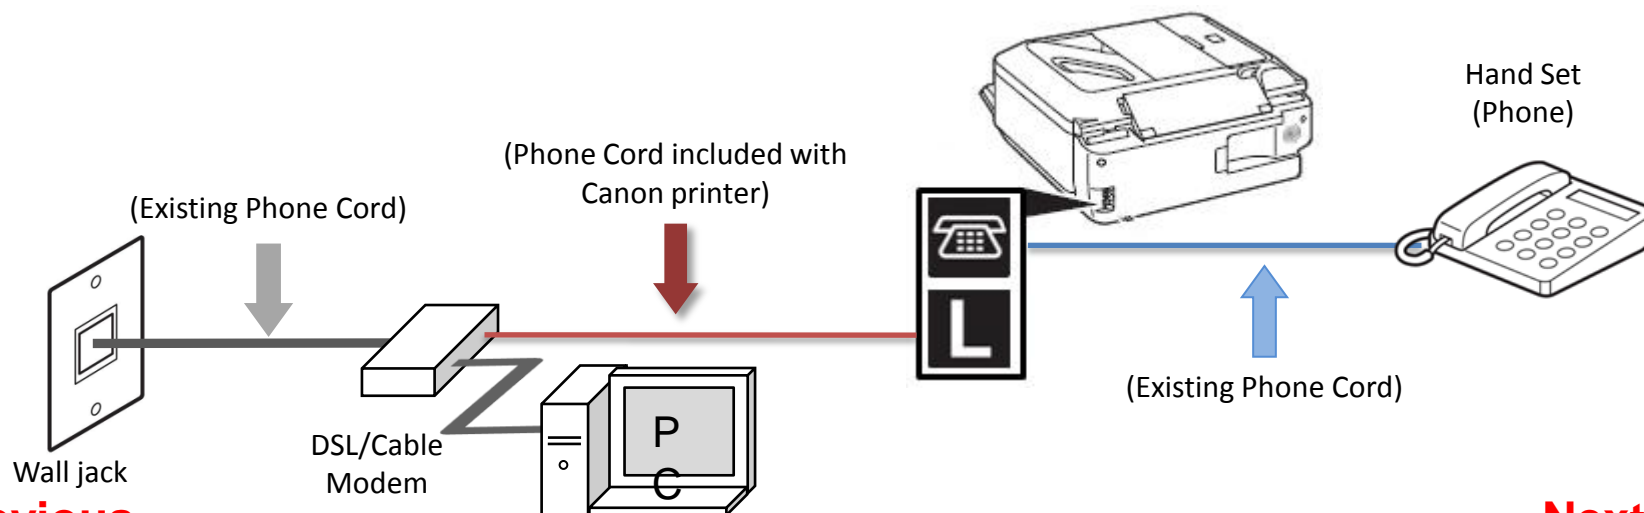


Previous

Next




Fax to Phone Line Connection

- Plug the provided phone cord into the DSL/Cable Modem

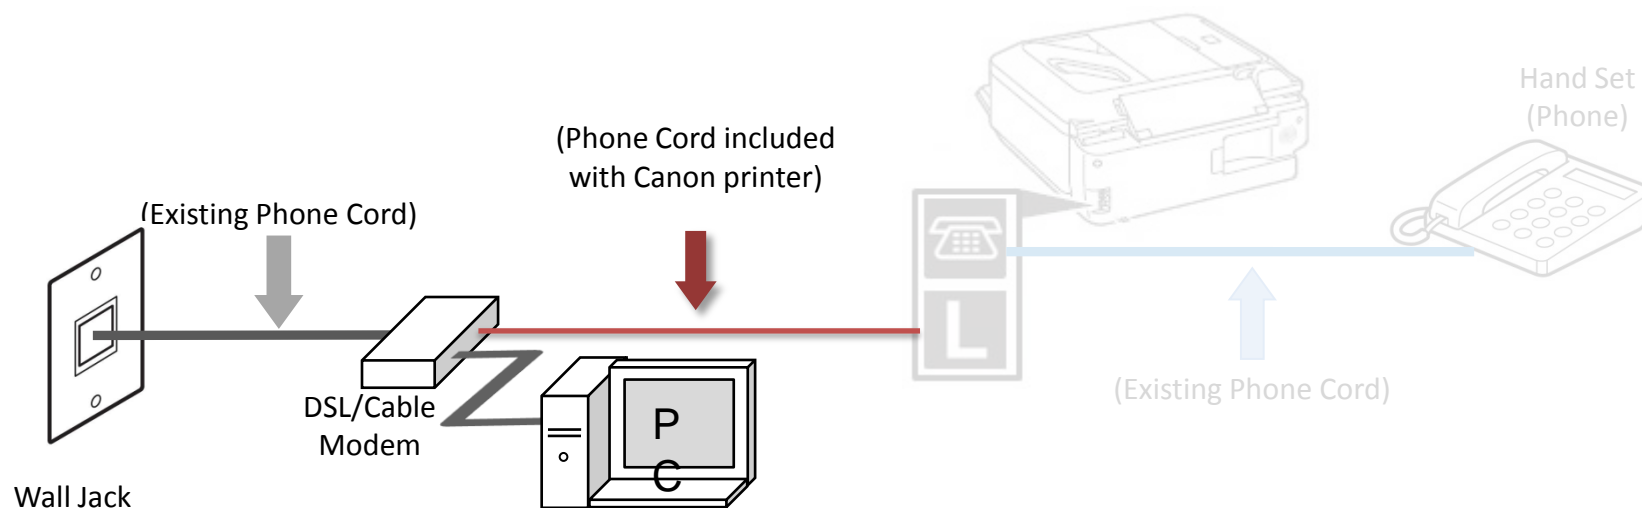

Fax to Phone Line Connection

- Plug the provided phone cord into the “L” jack in the rear of the multifunction

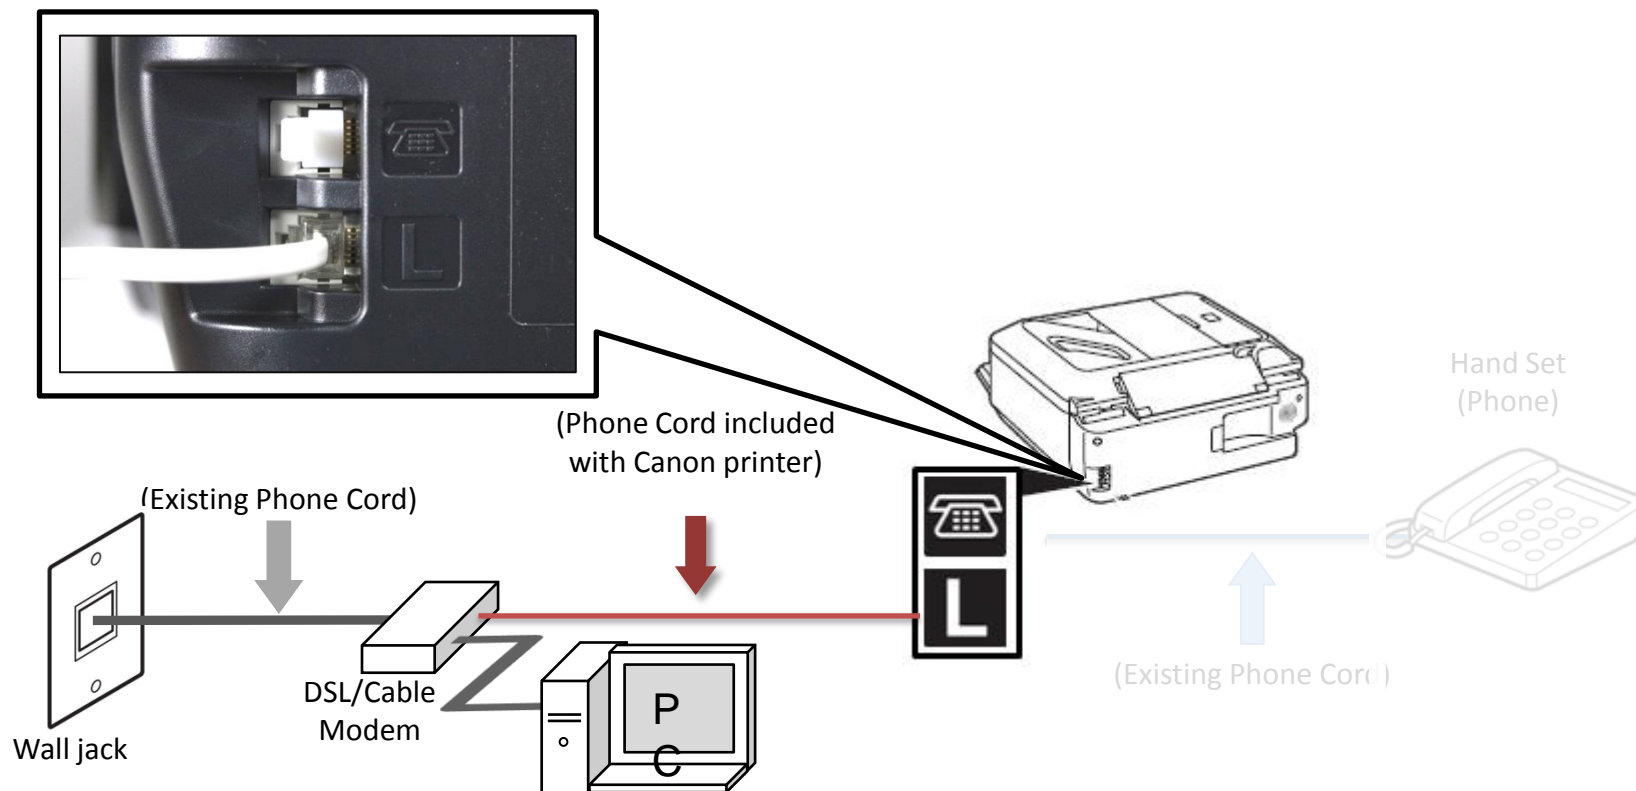


Previous

Next




Fax to Phone Line Connection

- Remove the white plug (D) from the upper jack

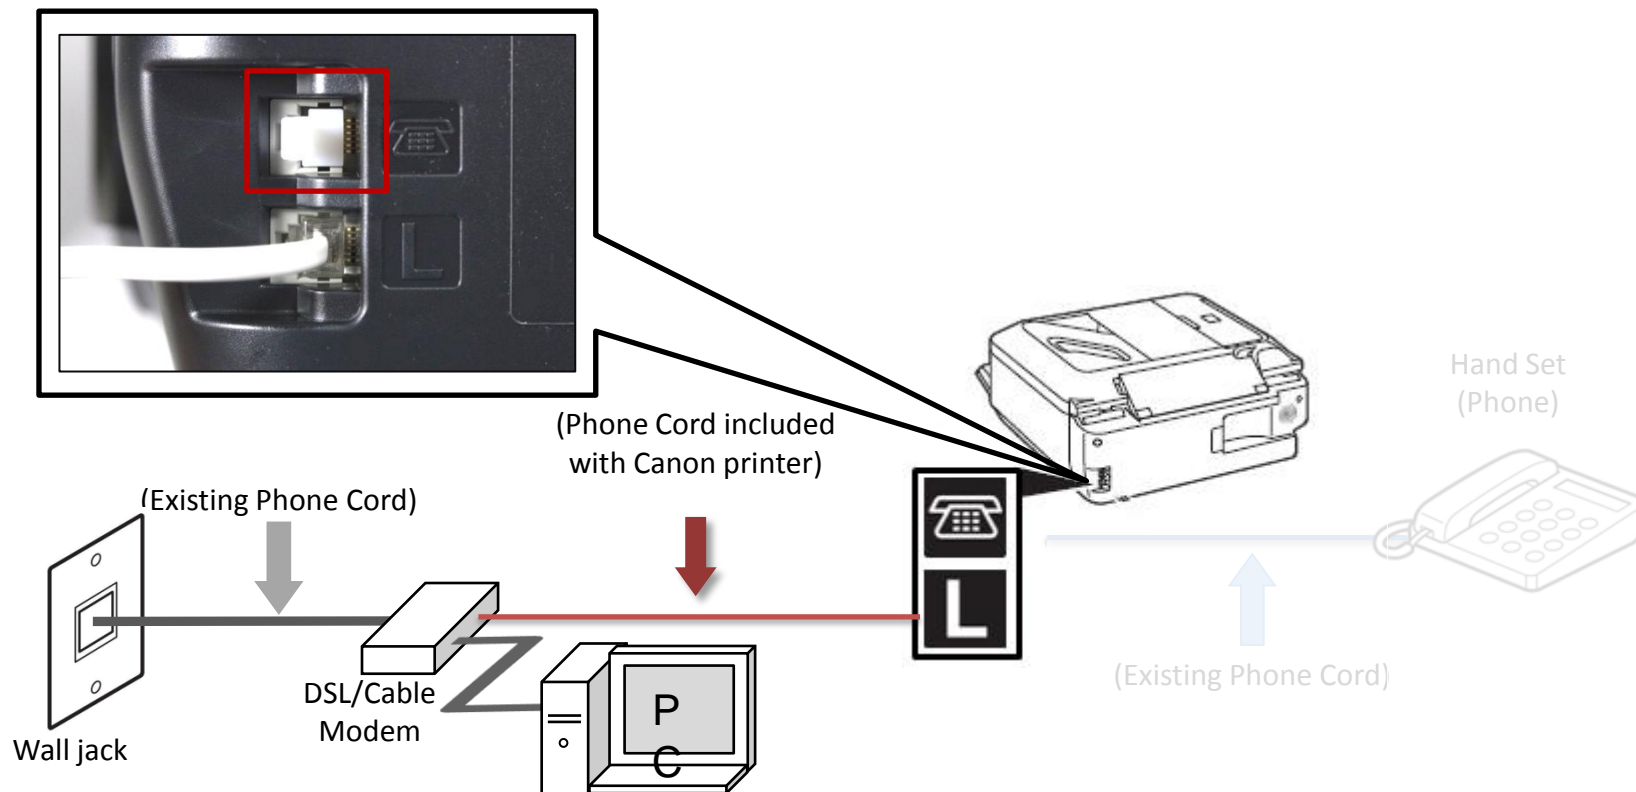

Fax to Phone Line Connection

- Plug the second phone cord into the “telephone” jack located on the rear of the multifunction

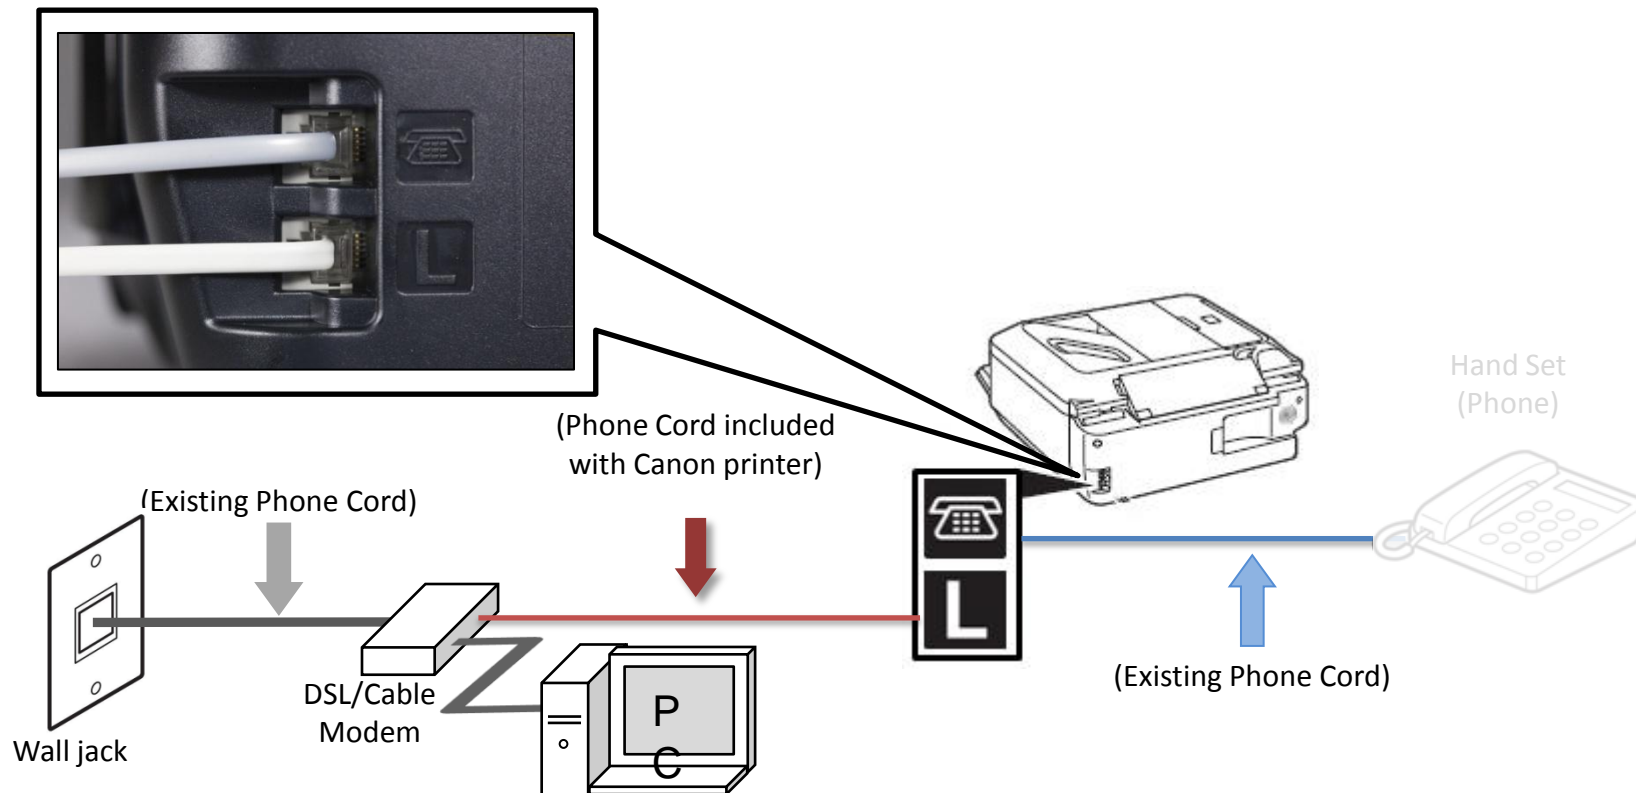


Previous

Next



Fax to Phone Line Connection

- Plug the existing phone cord into the phone

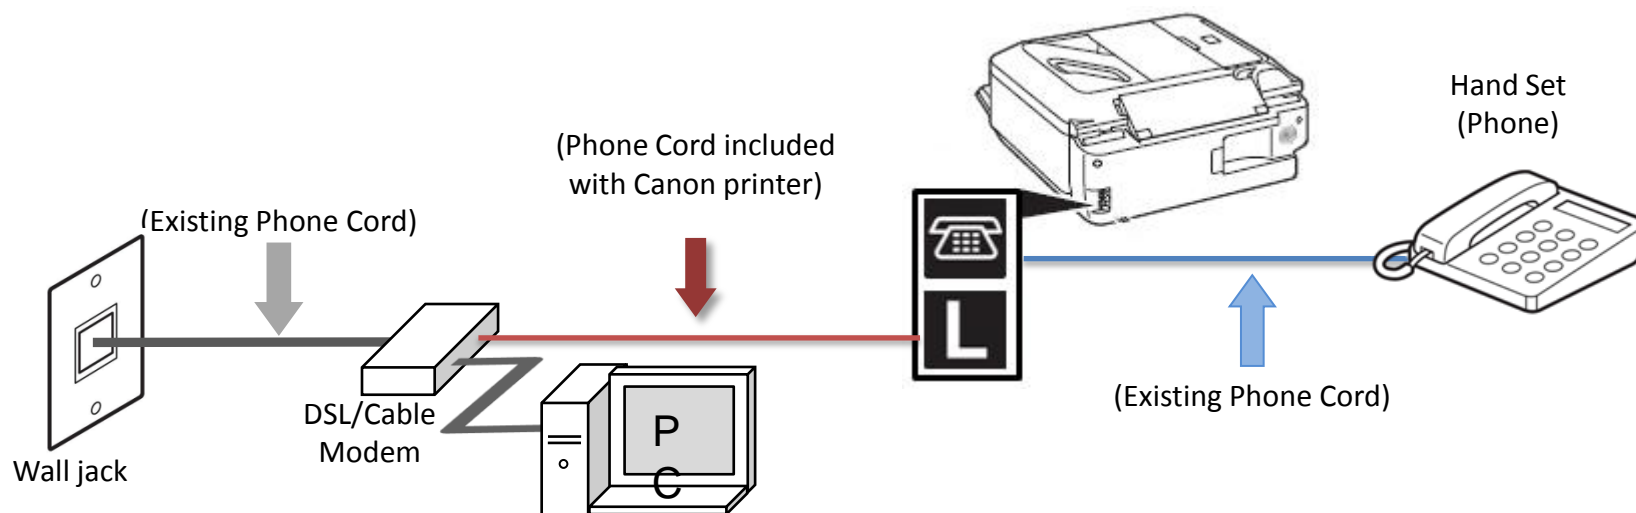



Setting Up The Receive Mode



Return To “Connecting Your Phone/Answering Machine”

Next



Step 1

Turn on the MX340 by pressing the **ON** button.



Step 2

Press the **FAX** button.



Step 3

Press the **Menu** button



Step 4

Use the **Left** or **Right** Arrow button to select "Receive mode set".



Step 5

Press the **OK** button




Step 6

The “Receive mode set” screen will appear




Step 7

Use the **Left** or **Right** arrow button to select “TEL priority mode”

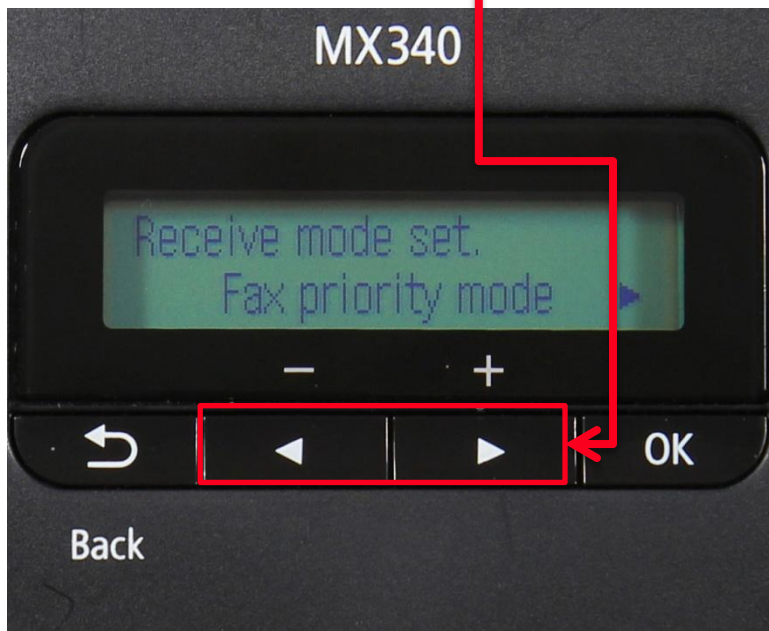

Step 8

Ensure that “TEL priority mode” is displayed

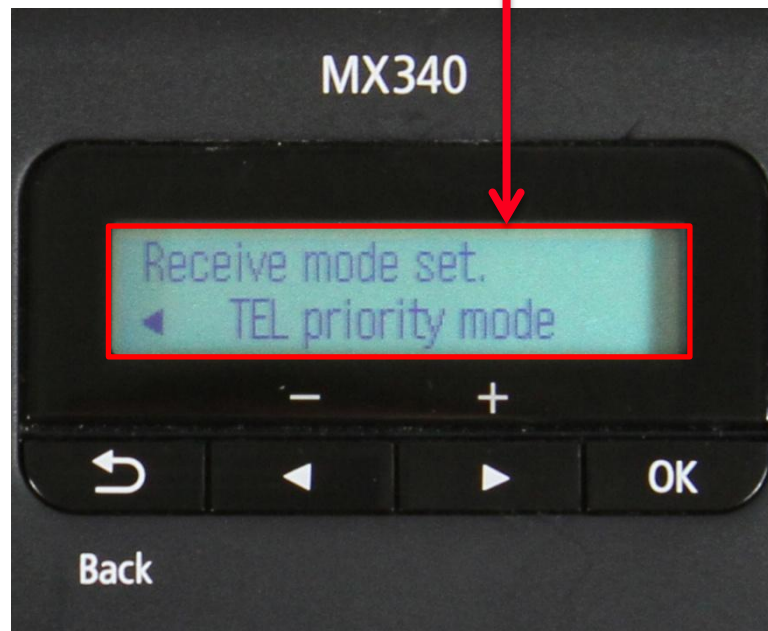

Step 9

Press the **OK** button



Step 10

Your MX340 is now set to TEL priority mode. Notice that the mode is listed on the fax standby screen.



Receiving A Fax

To receive a fax when you are home you will:

- Pick up the handset on the phone connected to the MX340.
- Listen for fax tones.
- When the tones stop hang up the handset.
- The MX340 will receive the fax document.

To receive a fax while you are away:

- The answering machine will answer the call.
- If fax tones are heard by the MX340 it will take over the call and receive the fax document.

IMPORTANT: In order to receive a fax, you must either pick up the handset on a phone that is connected to the MX340 or let your answering machine answer the call.

