


Setting Up Your MX360 or MX410 In Default Mode (Tel Priority Mode) Without An Answering Machine DSL/Cable Modem Connection


Connecting The Phone Lines

Fax to Phone Line Connection

Before

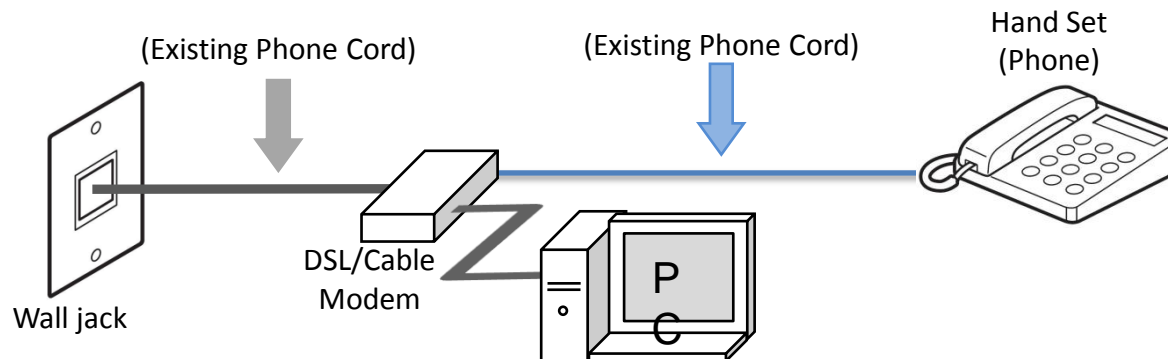

After

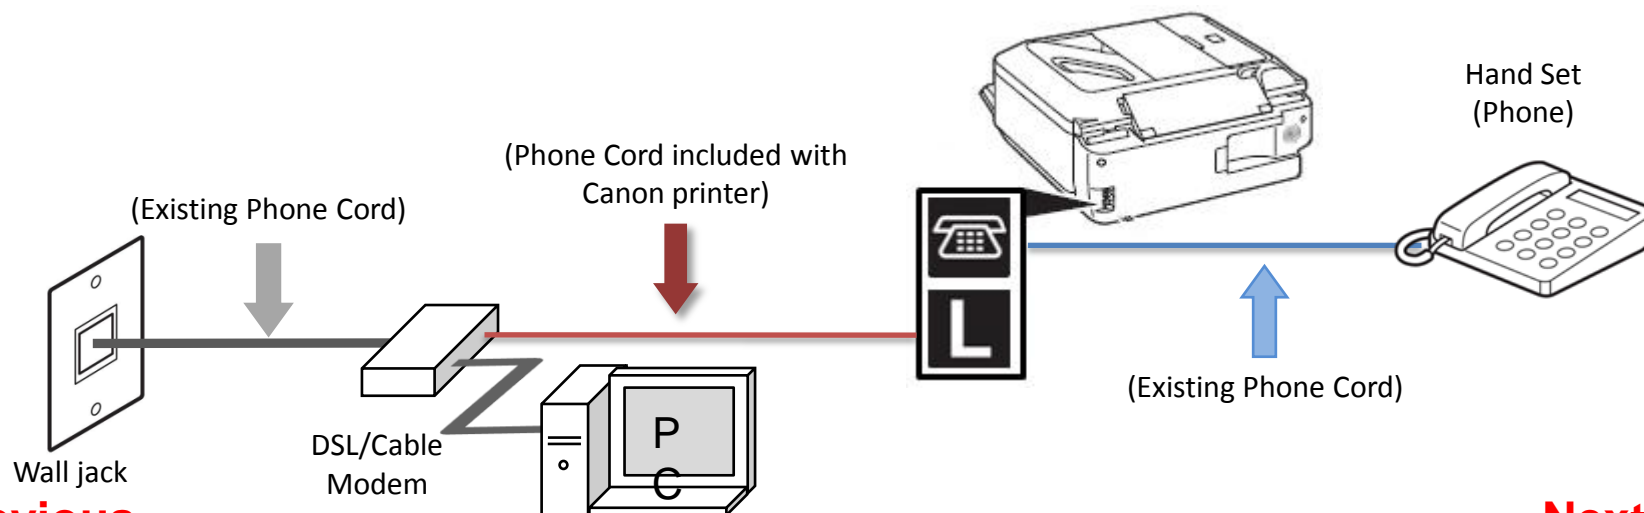


Previous

Next




Fax to Phone Line Connection

- Plug the provided phone cord into the DSL/Cable Modem

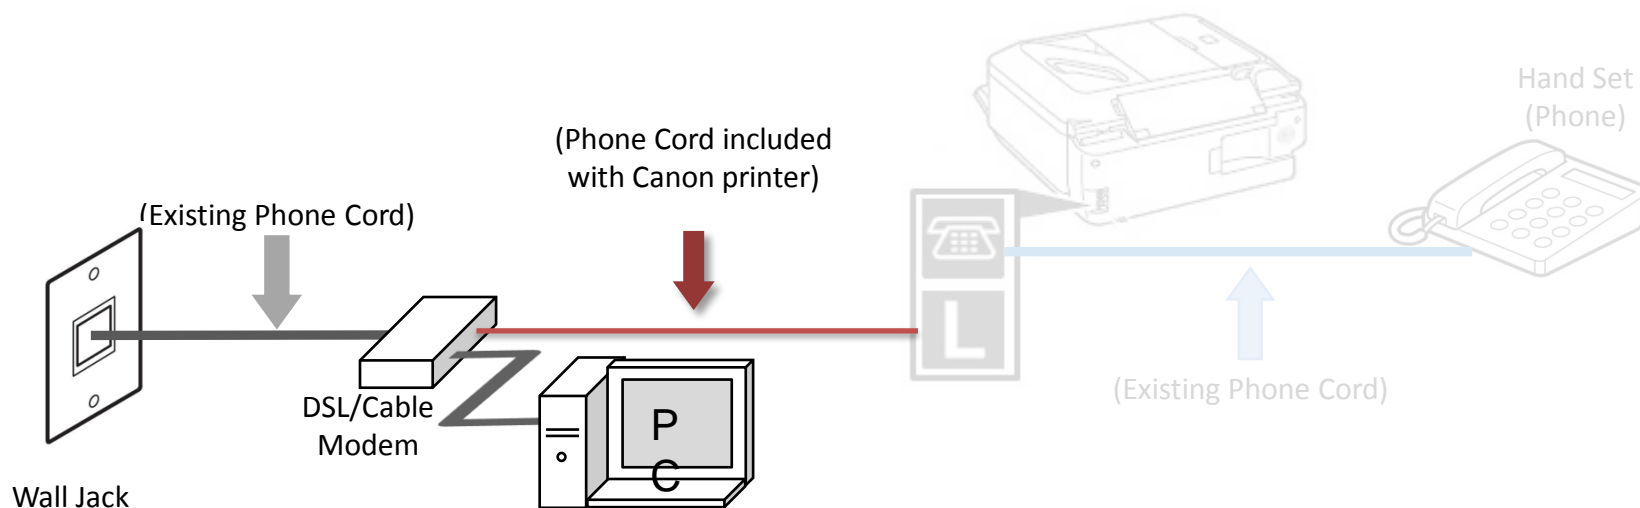


Fax to Phone Line Connection

- Plug the provided phone cord into the “L” jack in the rear of the multifunction

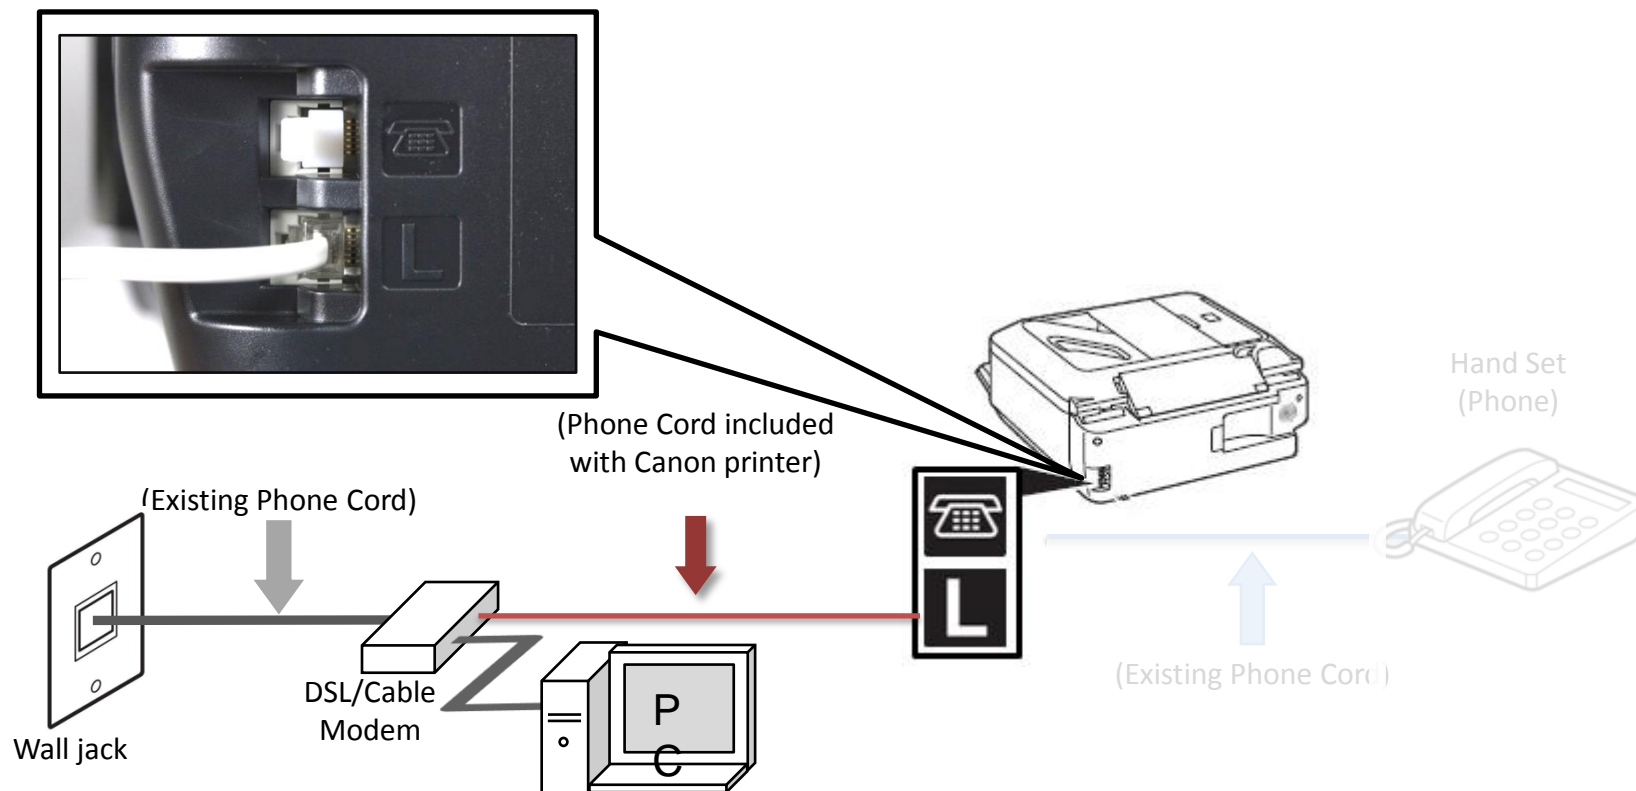


Fax to Phone Line Connection

- Remove the white plug (D) from the upper jack

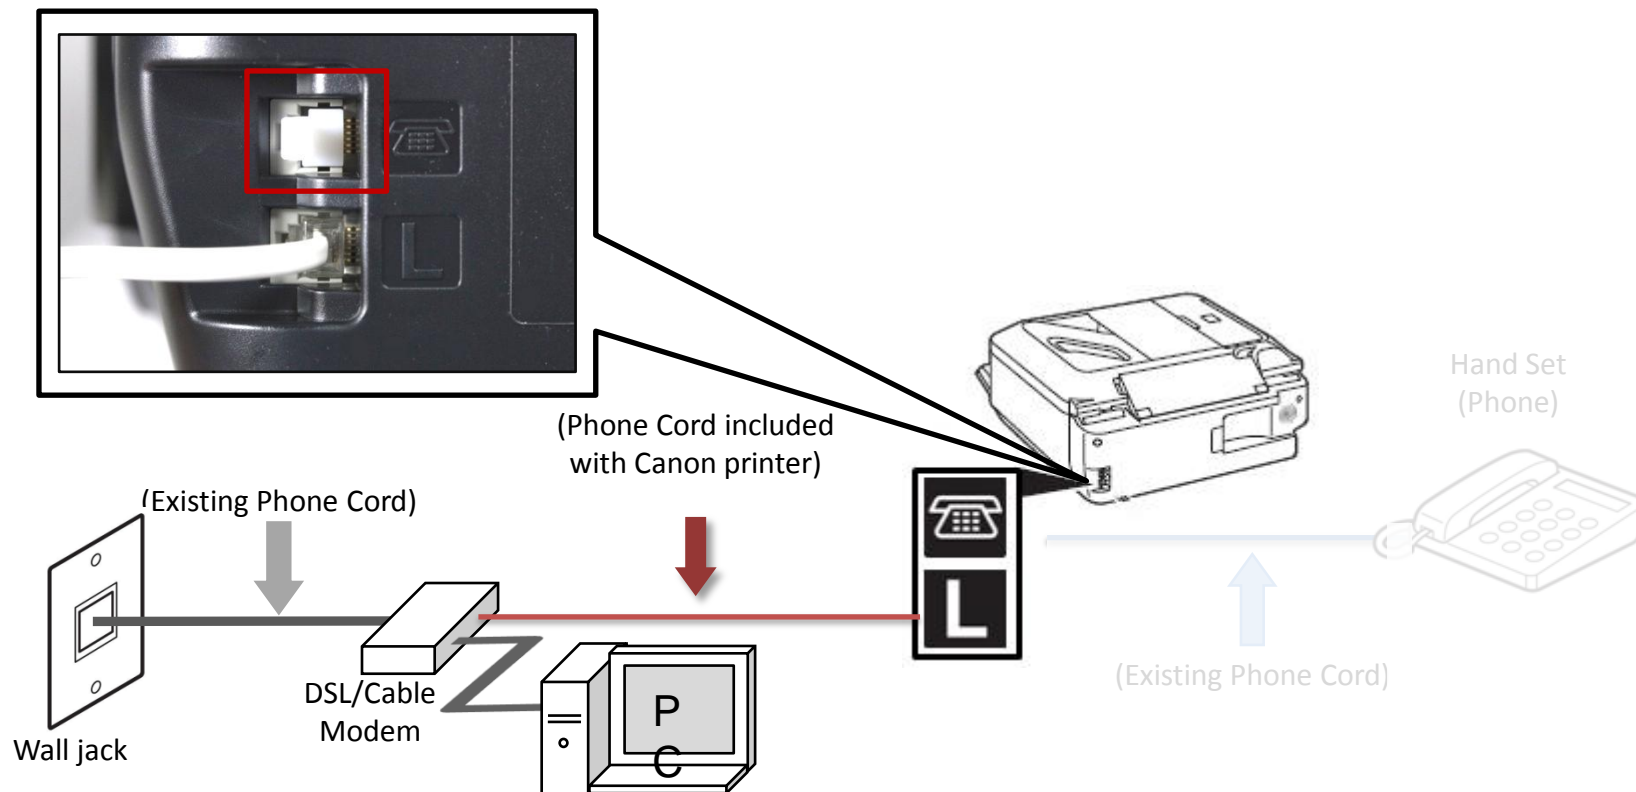


Fax to Phone Line Connection

- Plug the second phone cord into the “telephone” jack located on the rear of the multifunction

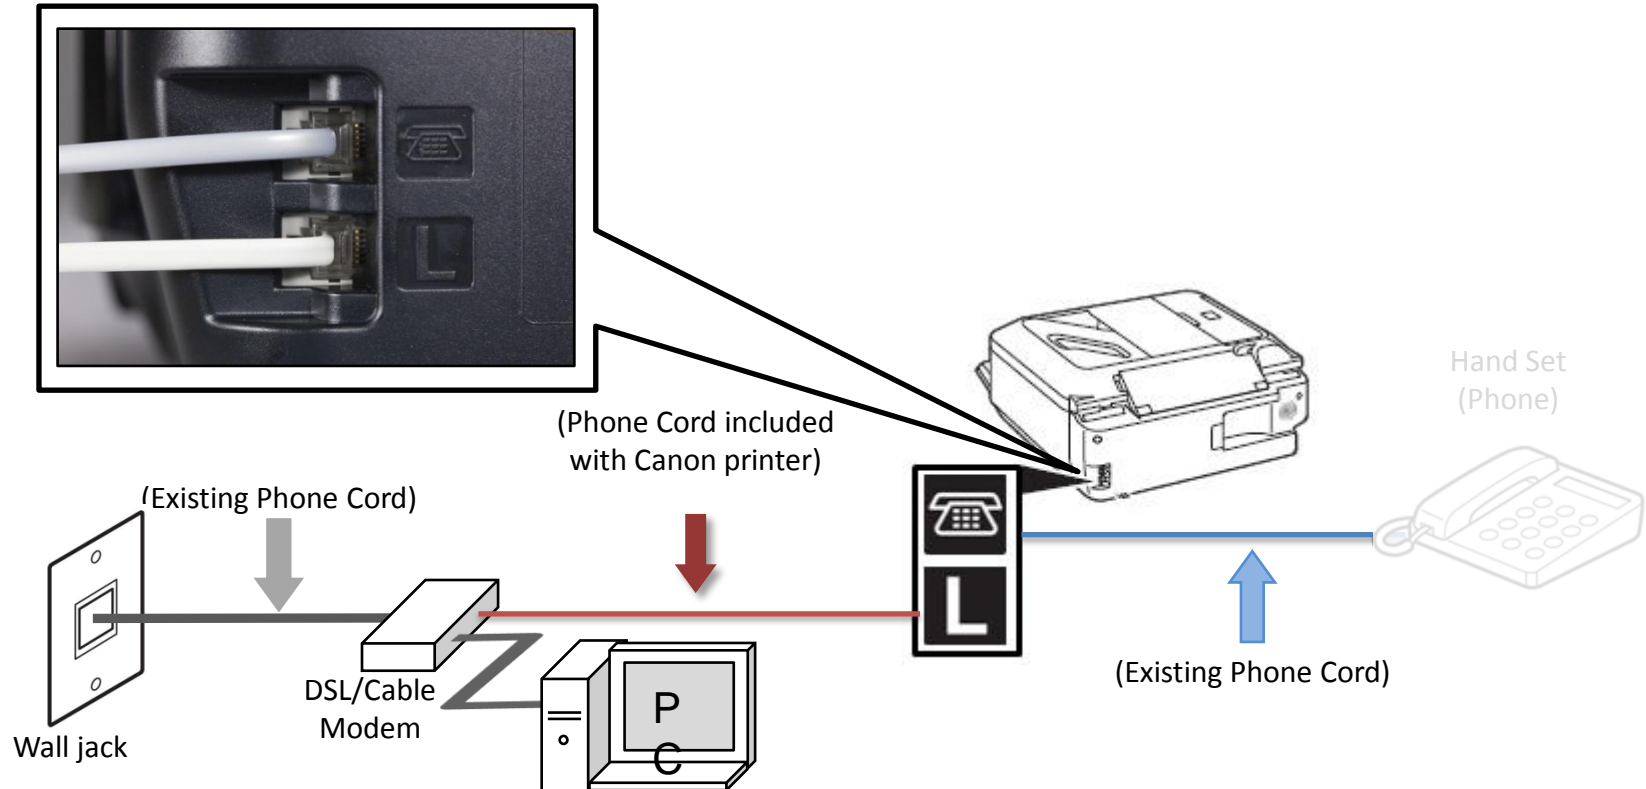

Fax to Phone Line Connection


- Plug the existing phone cord into the phone

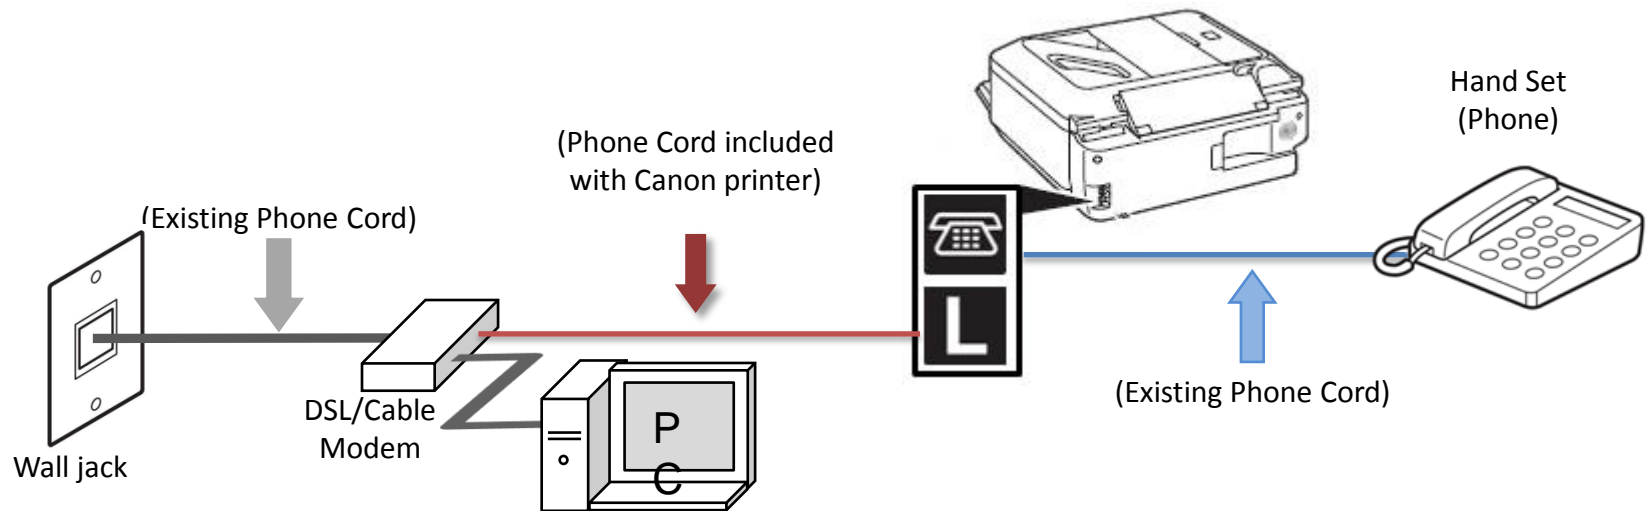

Setting Up The Receive Mode

Step 1

Turn on the MX360 or MX410 by pressing the **ON** button.

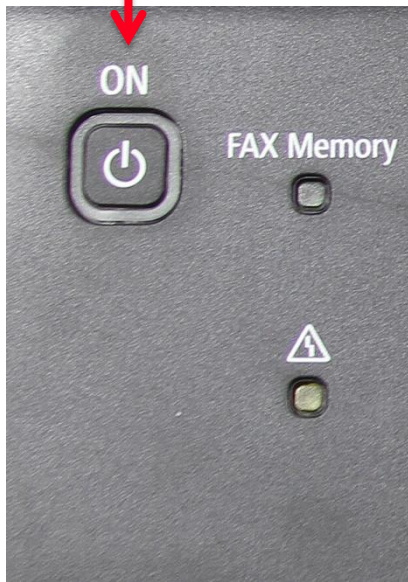

MX360



MX410


Step 2

Press the **FAX** button.




Step 3

Press the **Menu** button

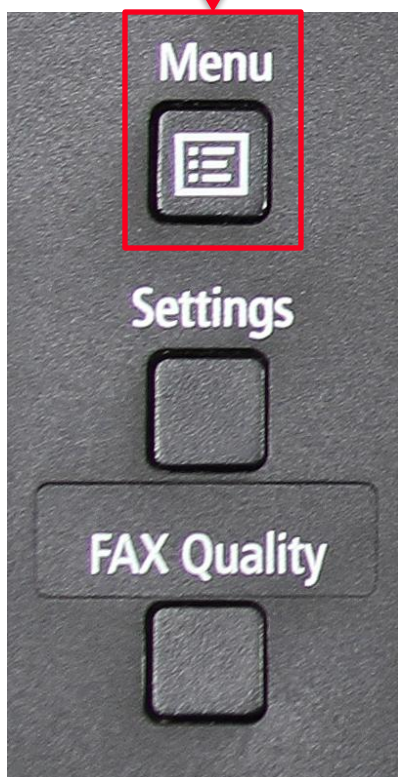

Step 4

Use the **Left** or **Right** Arrow button to select "Receive mode set".

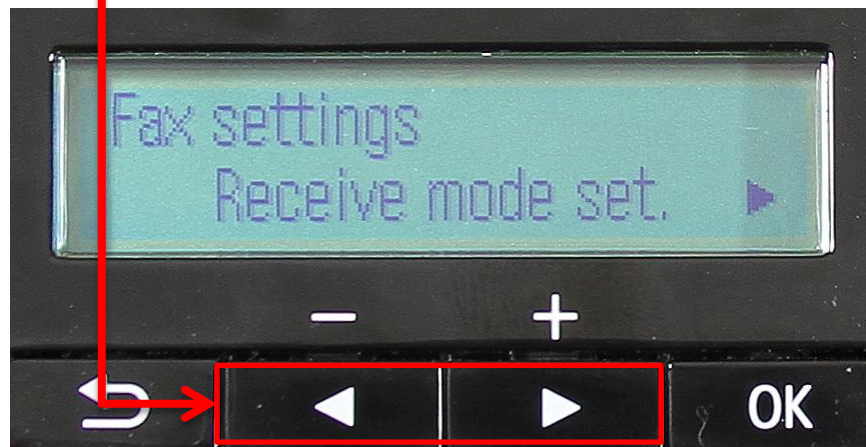


Step 5

Press the **OK** button



Step 6

The "Receive mode set" screen will appear

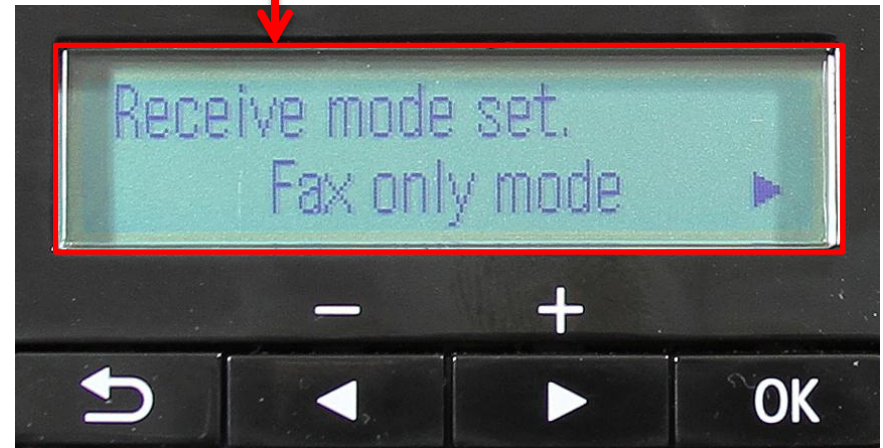

Step 7

Use the **Left** or **Right** arrow button to select "TEL priority mode"



Step 8

Ensure that "TEL priority mode" is displayed




Step 9

Press the **OK** button




Step 10

The "Make advanced settings?" screen will appear

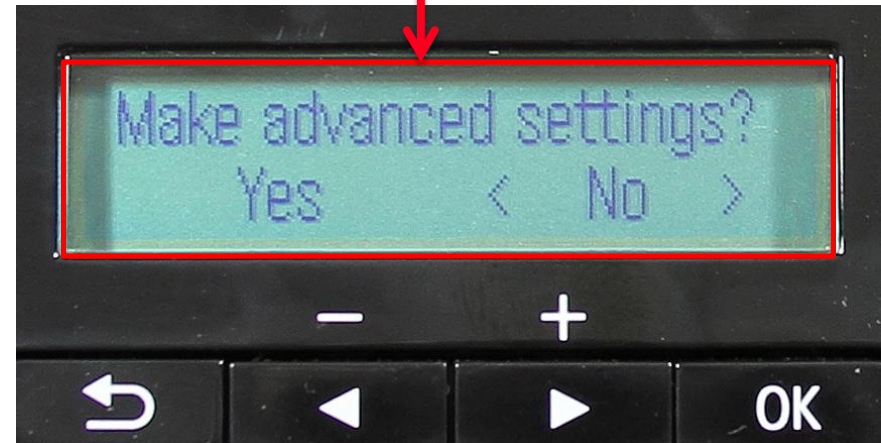


Step 11

Use the **Left** or **Right** arrow button to select "Yes"

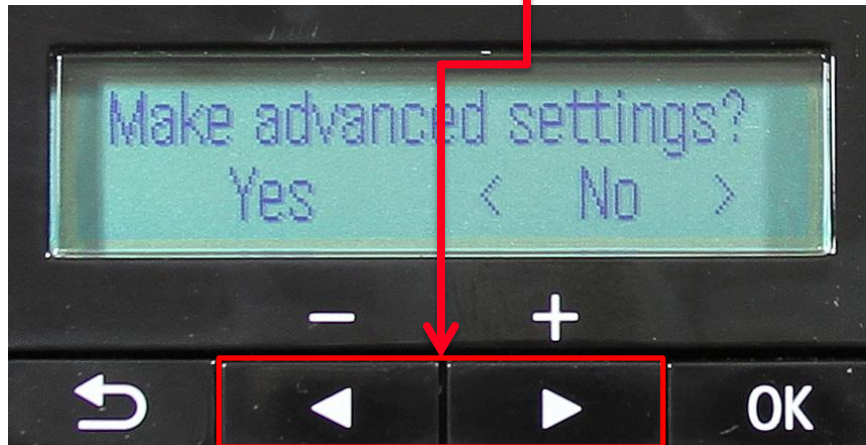


Step 12

Ensure "Yes" is selected

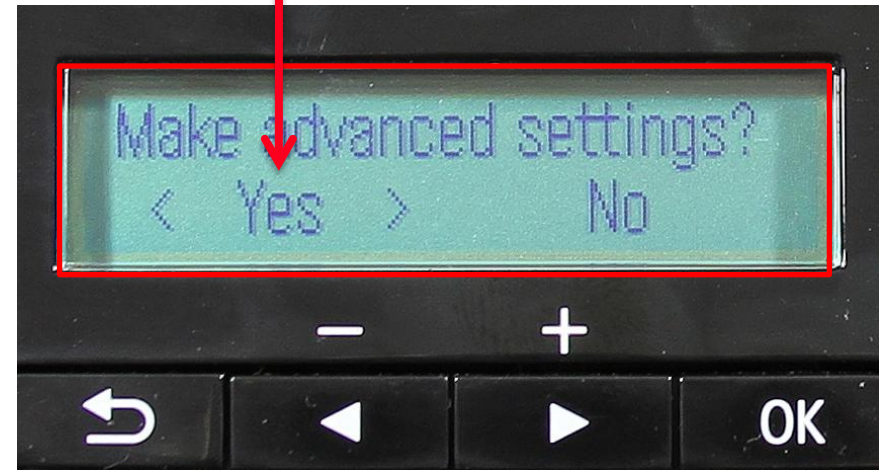


Step 13

Press the **OK** button

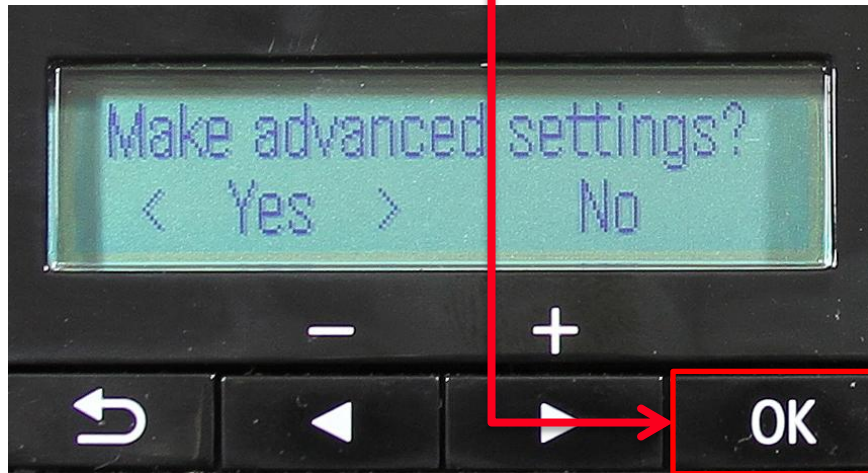


Step 14

The "TEL priority mode screen will appear

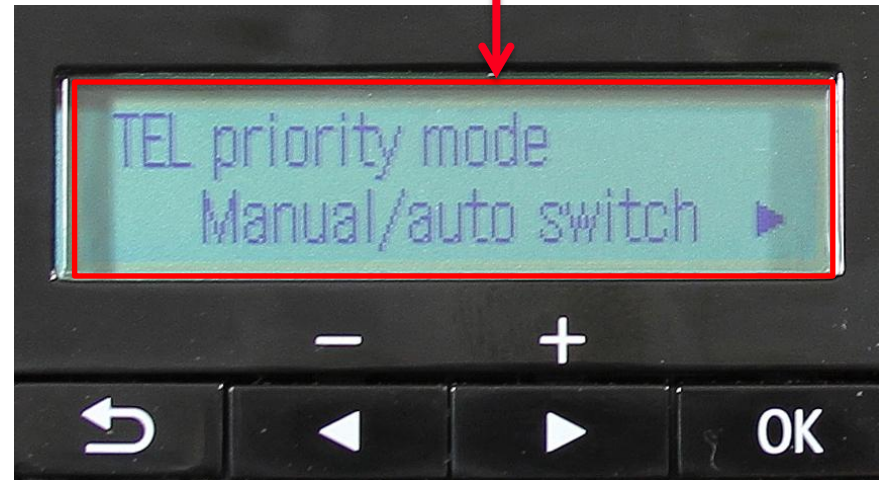


Step 15

Use the **Left** or **Right** arrow button to select "User-friendly RX"

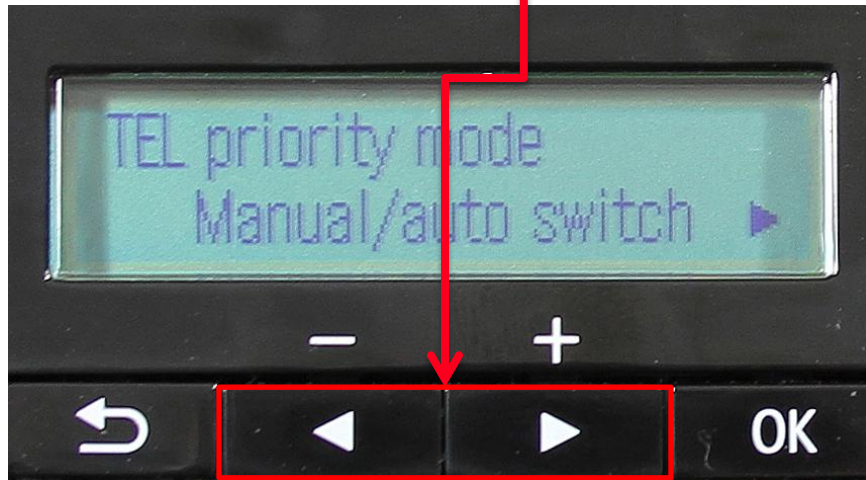


Step 16

Confirm "User-friendly RX" is selected

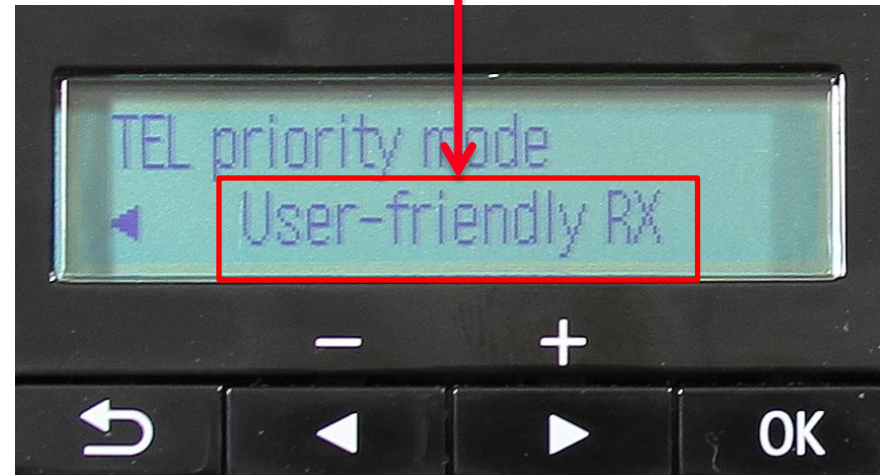

Step 17

Press the **OK** button

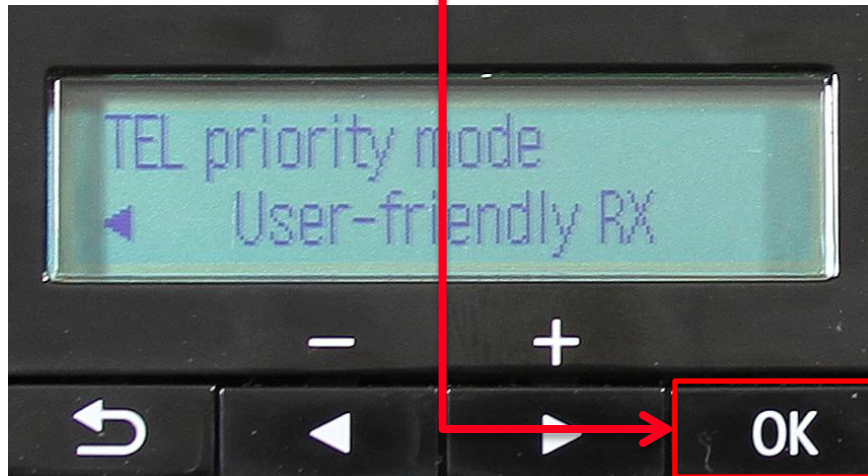


Step 18

The “User-friendly RX” screen will appear




Step 19

Use the **Left** or **Right** arrow button to select "ON"

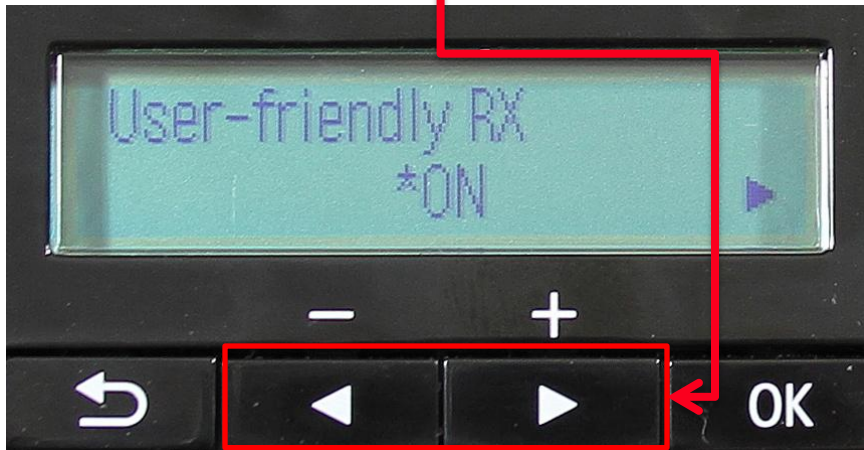


Step 20

Ensure "ON" is selected

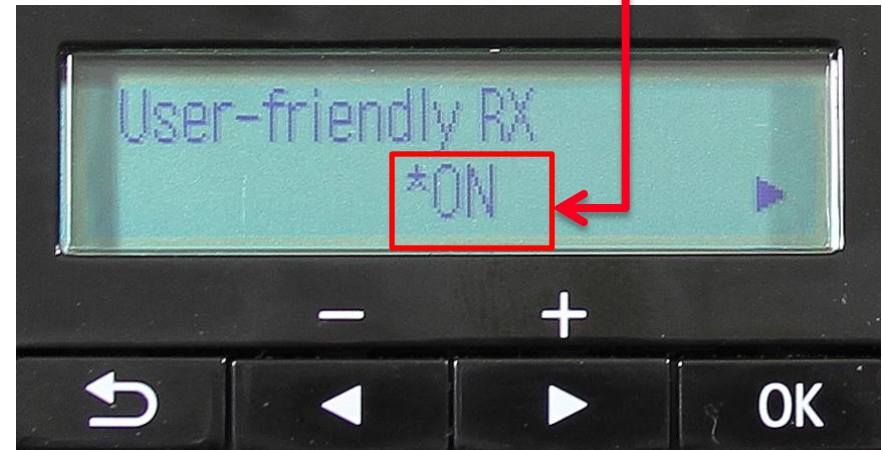

Step 21

Press the **OK** button

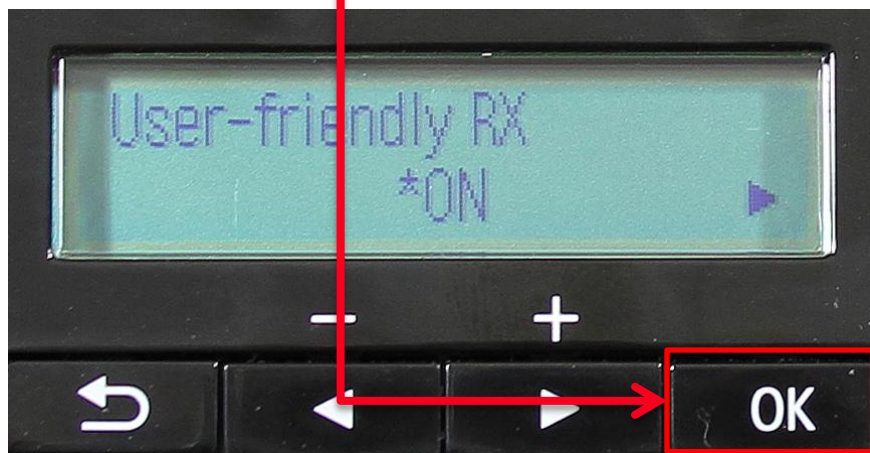

Step 22

The screen will return to the fax standby screen. Your MX360 or MX410 is now ready to receive a fax



Receiving A Fax

To receive a fax:

- Pick up the handset on the phone connected to the MX360 or MX410.
- Listen for fax tones.
- When the tones stop hang up the handset.
- The MX360 or MX410 will receive the fax document.

IMPORTANT: In order to receive a fax, you must pick up the handset on a phone that is connected to the multifunction.

