

Setting Up Your MX882 In
Default Mode (Tel Priority Mode)
With An Answering Machine
DSL/Cable Modem Connection





Connecting The Phone Lines





Connecting Your Phone/Answering Machine

Is your answering machine built into your phone?

YES

Click Here or Go To Page 12


NO


Click the Next Button






Before

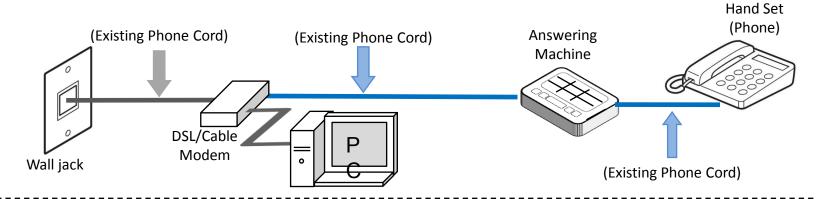

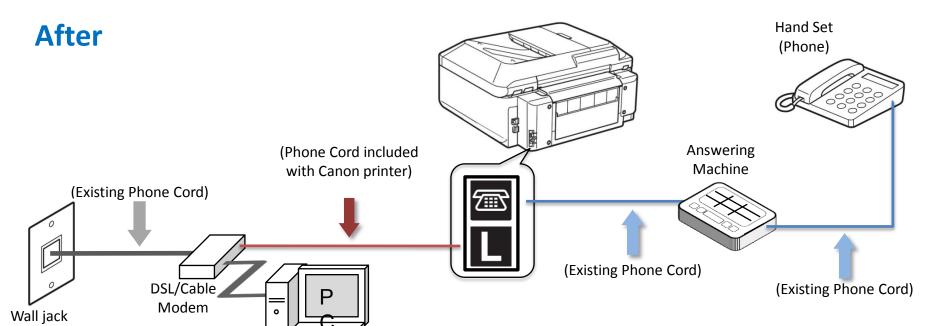




Plug the provided phone cord into the DSL/Cable Modem

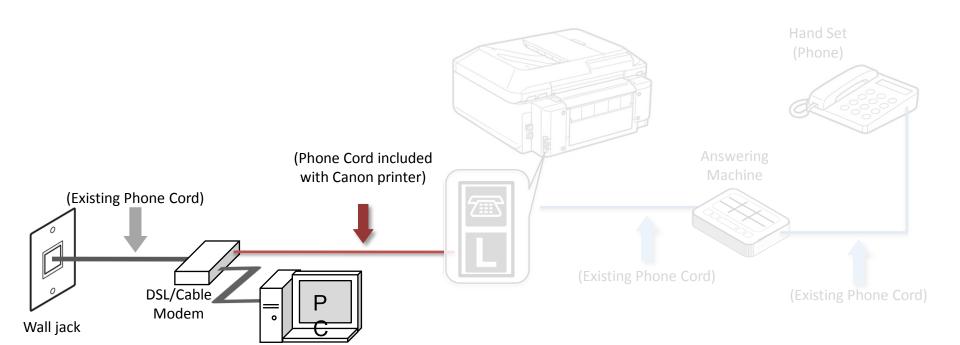




 Plug the provided phone cord into the "L" jack in the rear of the multifunction

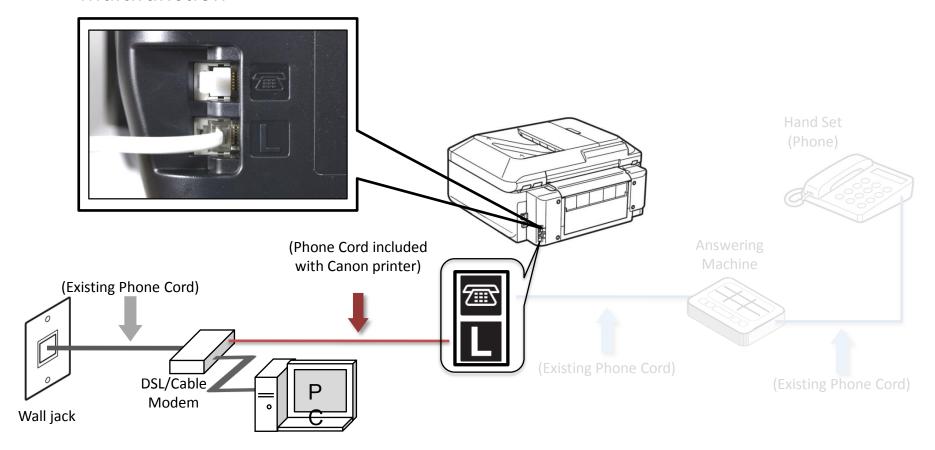




Remove the white plug (D) from the upper jack

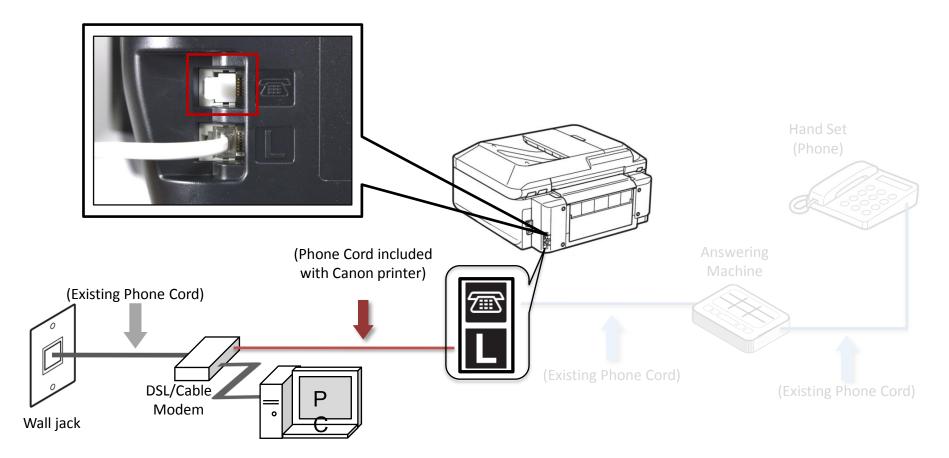




 Plug the second phone cord into the "telephone" jack located on the rear of the multifunction

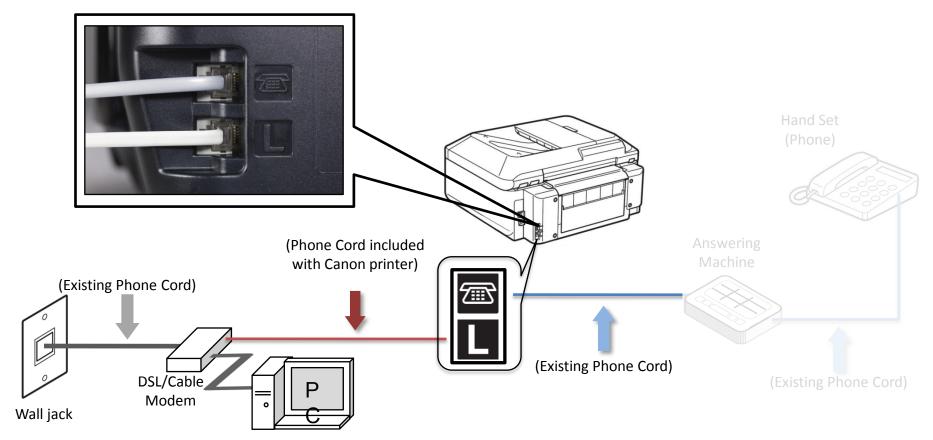



Plug the second phone cord into the answering machine

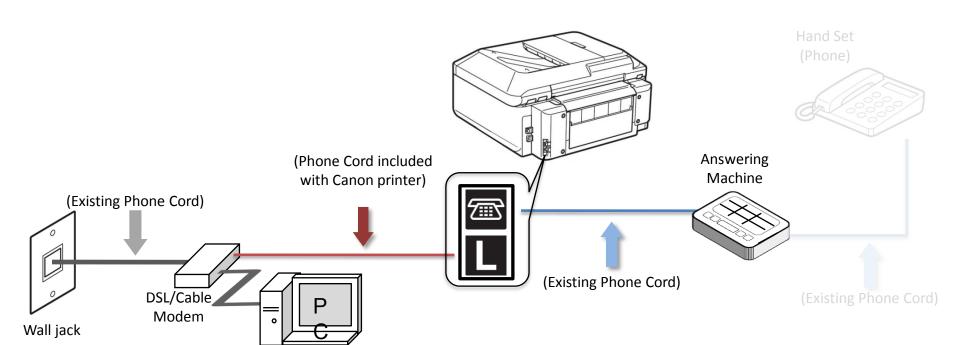



Plug the third phone cord into the answering machine

(Phone Cord included with Canon printer)

(Existing Phone Cord)

(Existing Phone Cord)

Wall jack

Hand Set (Phone)


(Phone)

(Phone Cord included with Canon printer)

(Existing Phone Cord)





Plug the third phone cord into the phone

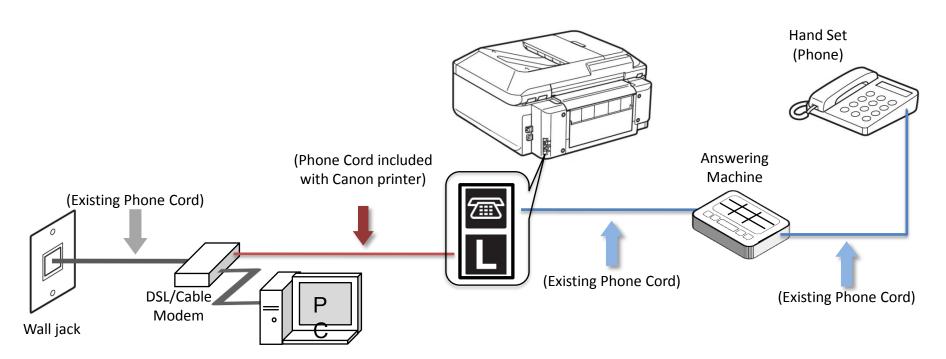




Before

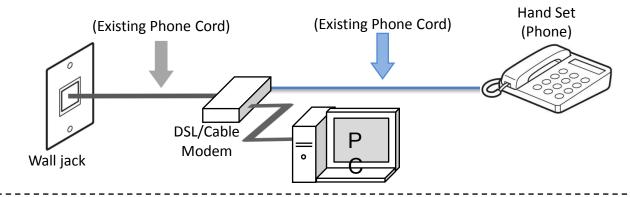

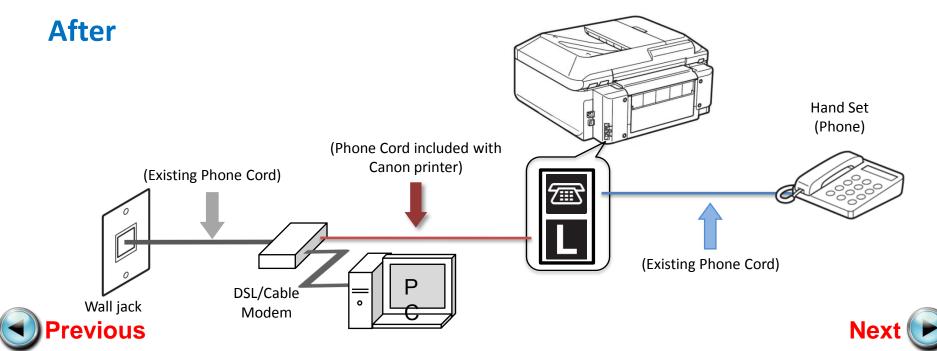


Plug the provided phone cord into the DSL/Cable Modem

.....

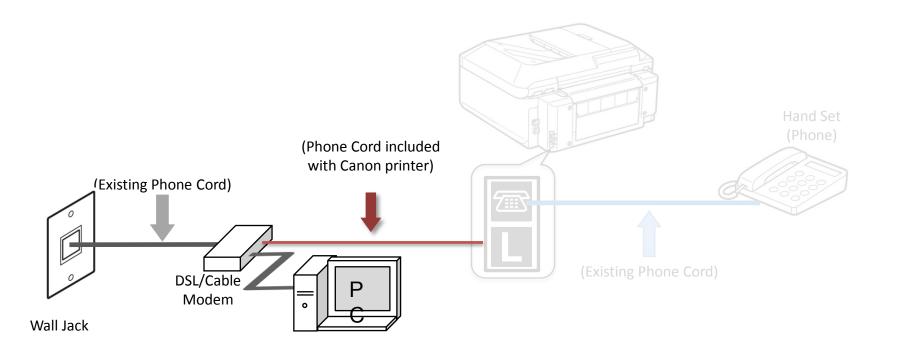




 Plug the provided phone cord into the "L" jack in the rear of the multifunction

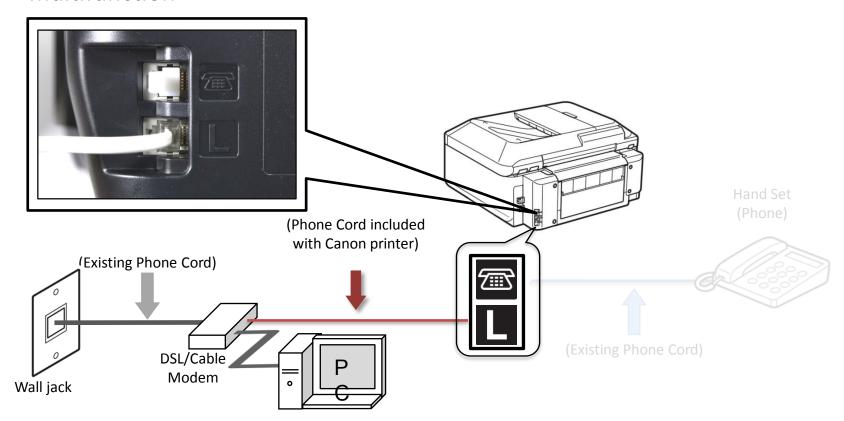




• Remove the white plug (D) from the upper jack

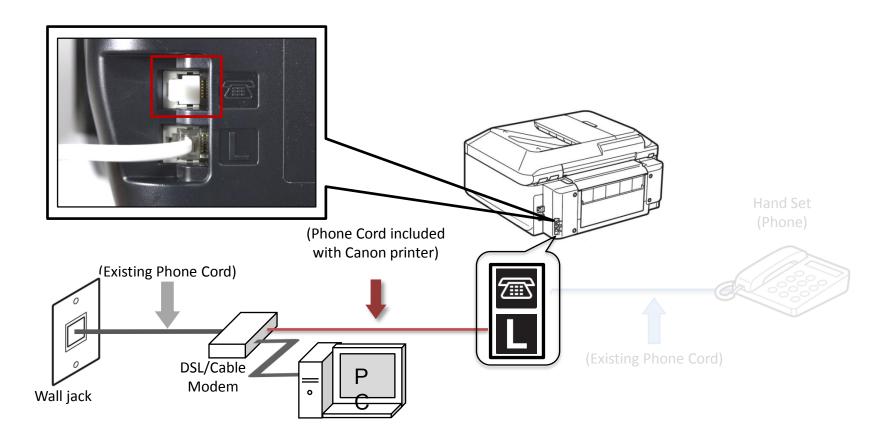



 Plug the second phone cord into the "telephone" jack located on the rear of the multifunction

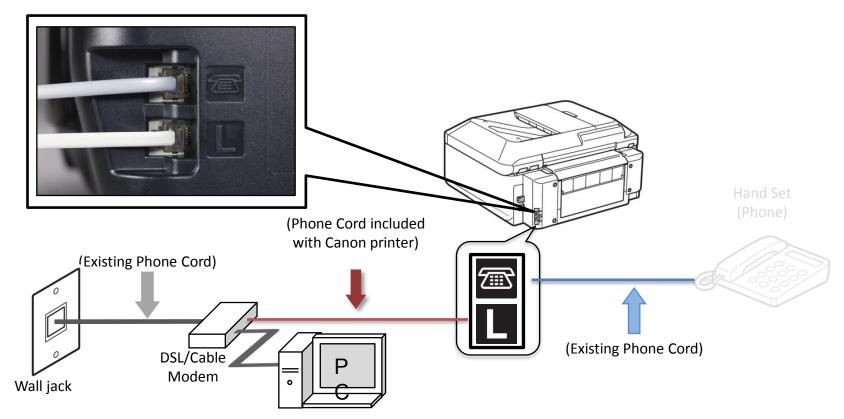



Plug the existing phone cord into the phone

(Phone Cord included with Canon printer)

(Existing Phone Cord)

(Existing Phone Cord)

(Existing Phone Cord)






Setting Up The Receive Mode



Turn on the MX882 by pressing the **ON** button.

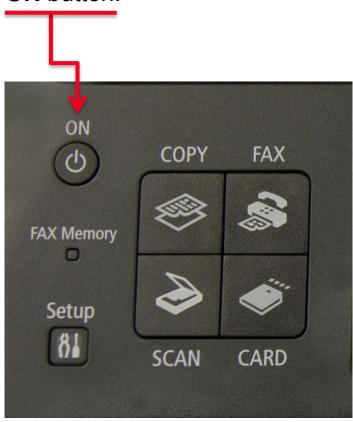

Step 2

Press the **FAX** button.





The fax standby screen will appear.



Press the center **FUNCTION** button.







The Receive mode settings screen will appear.



Step 6

Use the **UP** or **DOWN** button to select "TEL priority mode".





Press the right **FUNCTION** button under the **Advanced** label



Step 8

Use the **UP** or **DOWN** button to select "User-friendly reception".





Ensure "User-friendly reception" is selected



Step 10

Press the OK button





The "User-friendly reception" screen will appear



Step 12

Use the **UP** or **DOWN** button to select "ON"






Ensure "ON" is selected



Step 14

Press the **OK** button

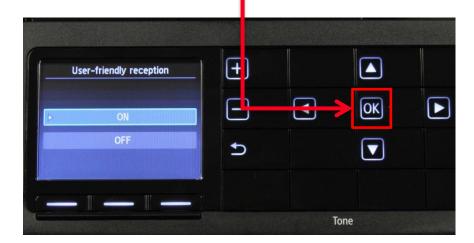




A confirmation screen will appear briefly



Step 16

You will return to the "Advanced" selection screen

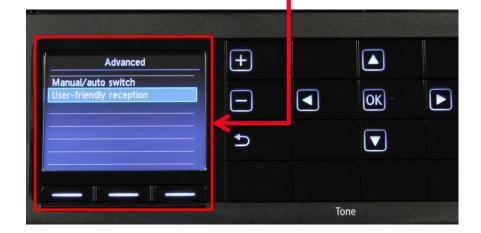



Press the **BACK** button



Step 18

You will return to the "Receive mode setting" screen. Confirm that "Tel priority mode" is selected





Press the **OK** button



Step 20

You will return to the "Fax standby screen". The MX882 is ready to receive a fax





Receiving A Fax

To receive a fax when you are home you will:

- Pick up the handset on the phone connected to the MX882.
- Listen for fax tones.
- When the tones stop hang up the handset.
- The MX882 will receive the fax document.

To receive a fax while you are away:

- The answering machine will answer the call.
- If fax tones are heard by the MX882 it will take over the call and receive the fax document.

IMPORTANT: In order to receive a fax, you must either pick up the handset on a phone that is connected to the MX882 or let your answering machine answer the call.



World Class. Here at Home.