

**Canon**

Mini Photo Printer  
User Manual



***iwy***

# CONTENTS

## SAFETY INFORMATION

---

## PACKAGE CONTENT

---

## PRINTER SETUP

- A) Charge Printer
- B) Power On
- C) Load Paper



## INSTALLING APP


---

## PARING MOBILE DEVICE & CANON MINI PRINT

---

## USER INTERFACE

- Home Screen
- Main Menu
- Camera Mode
- Photo Gallery
- Printing Photos
- Share Photos
- Save/Delete Photos
- Send to Mini Print

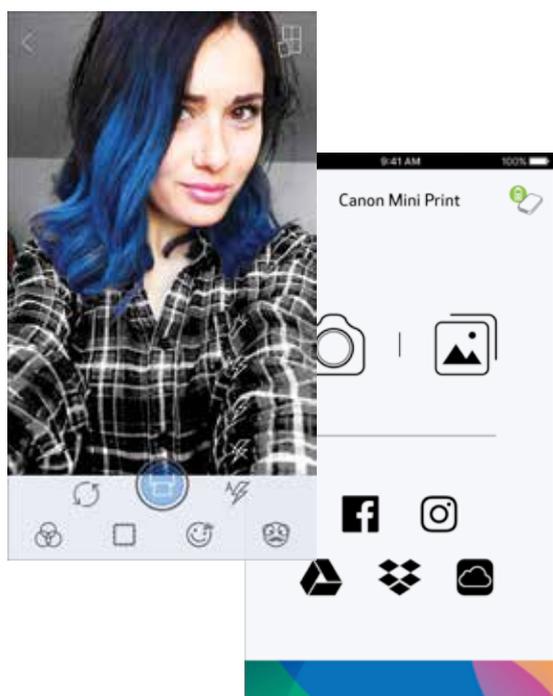


## BATTERY CAUTION

---

## SPECIFICATIONS

---

# SAFETY INFORMATION

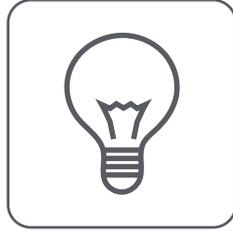

## READ BEFORE USE

Please read the following instructions and safety precautions before using the Printer.

For regulatory and additional safety information, refer to the Regulation and Warranty Information sheet included in your printer package contents.

## ABOUT SYMBOLS



Symbols that, if ignored, could result in accidental injury caused by improper use of the equipment. These must be observed for safe operation.



Instructions or content are important and must be followed accordingly.



## WARNINGS

---

Disassembling the battery may cause leakage, explosion, damage or personal injury.

---

Do not use the printer if the battery or product has swelled.

---

Never expose the battery to high temperature, direct heat, or dispose by incineration.

---

### Please do not disassemble

Please never disassemble this product. Should the printer fail, please contact the dealer you purchased this product from or Canon Service & Support at 1-800-652-2666 mentioned in warranty sheet.

---

Do not handle near Medical Electrical Equipment. Weak magnetism is emitted by this product. Do not stand near implanted electronic devices, such as a cardiac pacemaker. Please see your doctor if the printer does come close to such a device.



## CAUTION

---

### Printer operating and charging temperature

\*When operating in extreme weather, the printer may not print.

Allow the printer temperature to adjust to recommended operating temperature of 59° to 90°F (15° to 32°C). Try printing again.

For charging, please charge the printer at recommended temperature of 59° to 90°F (15° to 32°C).

---

### When using the product in environments of low humidity

\*In a low humidity environment, the printer may build a static electricity charge.

\*Take precaution before handling the printer.

---

Do not use or leave the product under direct sunlight.

Areas subject to rapid temperature changes, high humidity, dust and dirt should also be avoided.

---

Use a soft, dry cloth to clean the product. Do not clean with a damp cloth or volatile liquid such as paint thinner.

---

The printer should not be exposed to water (dripping or splashing) and objects filled with liquids, such as vases, should not be placed on it.

---

The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-clothes, curtains etc.

---

Do not under any circumstances dismantle the printer. If the product is not functioning properly, please contact Canon Service & Support at 1-800-652-2666.


---

Do not improperly dispose of the product such as in an incinerator as it may cause personal injury or harm. Please dispose of the product in accordance with local regulations.

# PACKAGE CONTENT




## SUPPLIED ITEMS

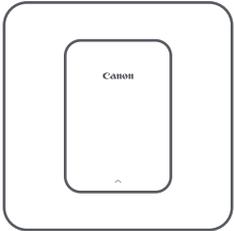


Mini Photo Printer




Quick Start Guide

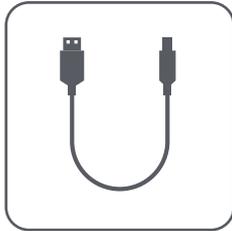

USB Cable

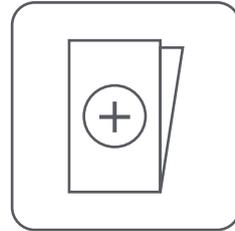


Regulation and  
Warranty  
Information sheet

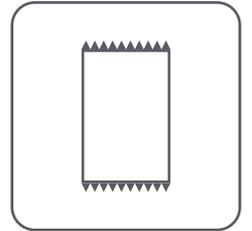


CANON ZINK™  
Photo Paper  
(10 sheets)


## PRODUCT FEATURES

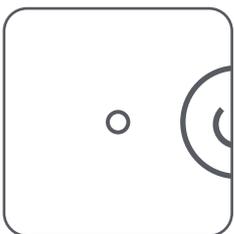


Power LED light

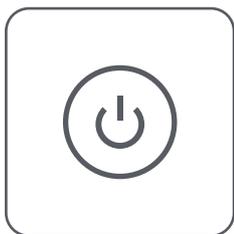

Power button

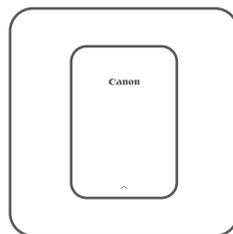

Top cover

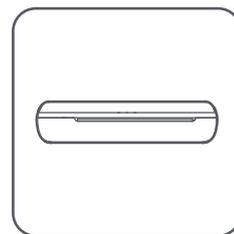

Paper output slot




Reset button



Charging LED light




Wristband eyelet

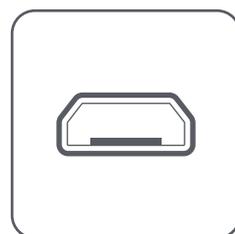

USB port  
(for charging)



Paper tray

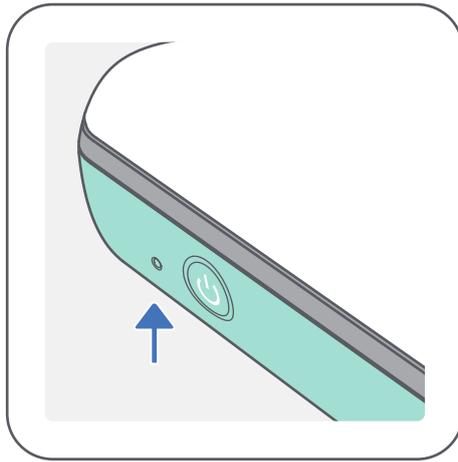

## STATUS - LED Indicator Light



White – Printer is powered on




White flashing – Printing / Processing / Cooling



Red flashing – No paper / Cover open / Paper jam /  
Low battery / storage full / other errors



Red - Firmware updating

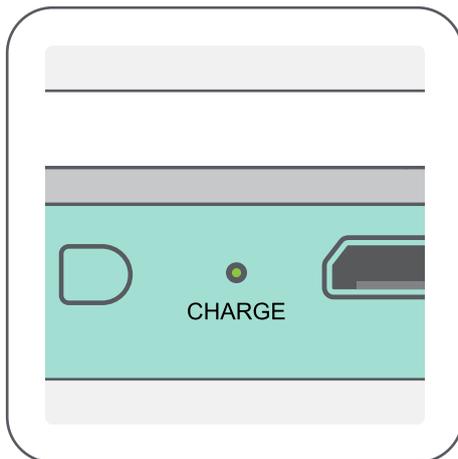

## CHARGING - LED Indicator Light



Red - Charging




Green - Charge completed



Red & Green flashing alternatively - Charging error

# PRINTER SETUP

## A) CHARGE PRINTER

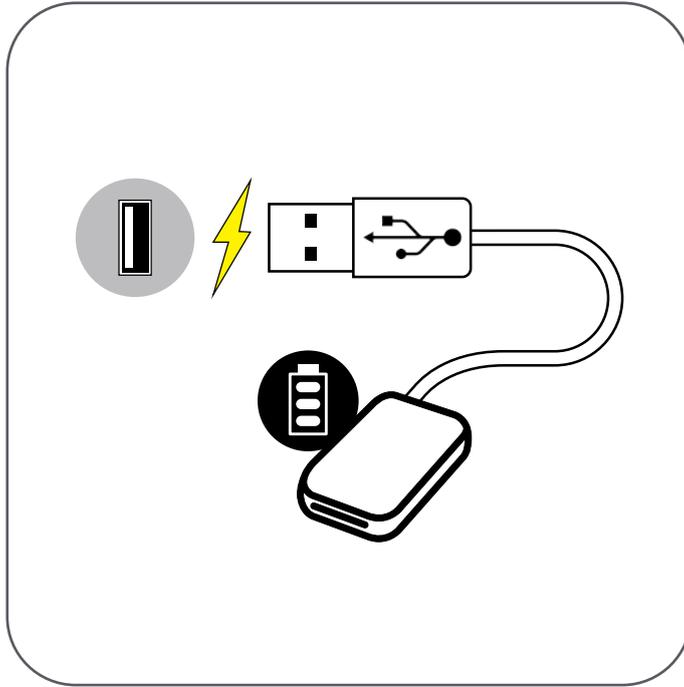

*Printer uses a built-in battery. Before using the printer, fully charge the battery using the USB cable provided.*

- ① Insert the smaller end of the supplied USB cable into the Printer and the other end into a chargeable USB adapter.
- ② The charging LED light will turn red to indicate charging.
- ③ Once fully charged, the charging LED will turn green.

*-- Operating time may vary depending on the battery status, operational status and environment conditions.*

### Battery Status Icon (shown in App)





## HANDLE THE USB CABLE WITH CARE WHILE CHARGING

Do not place any heavy objects on top of the cable.

Do not place the USB cable near heat.

Do not scratch, process or damage, screw or pull hard on the cable.


Do not plug or unplug the cable with wet hands.

Avoid too high/too low temperature or humid condition.

Please unplug the USB cable from power source after charged.



Please use supplied USB cable for charging.

## B) POWER ON

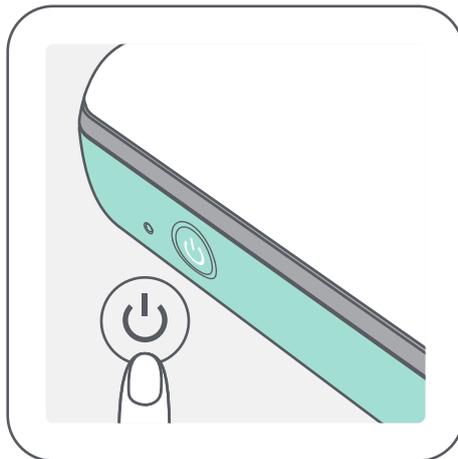


- ① Press and hold the Power button (⏻) until the LED indicator light turns on.  
-- The LED indicator will flash as the printer is powering on.
- ② When the LED indicator turns to a steady white light, the printer is ready to print.

## C) LOAD PAPER

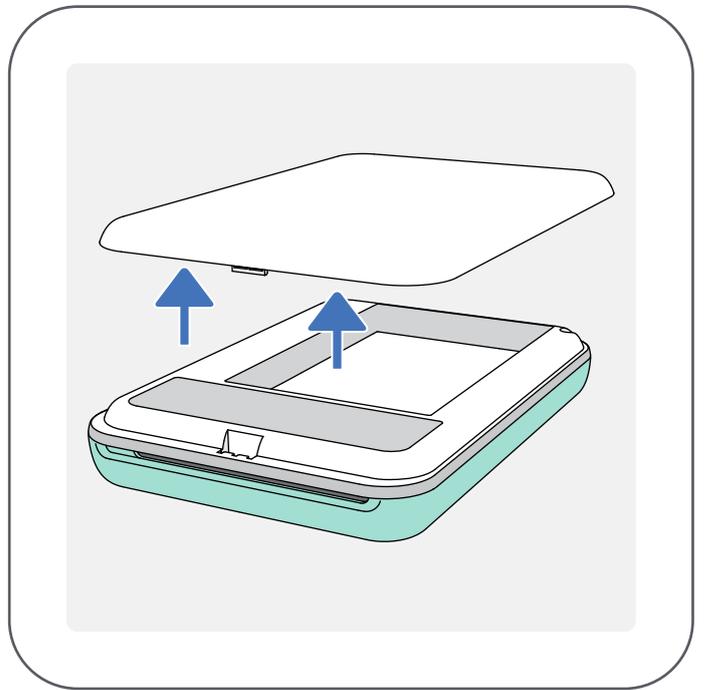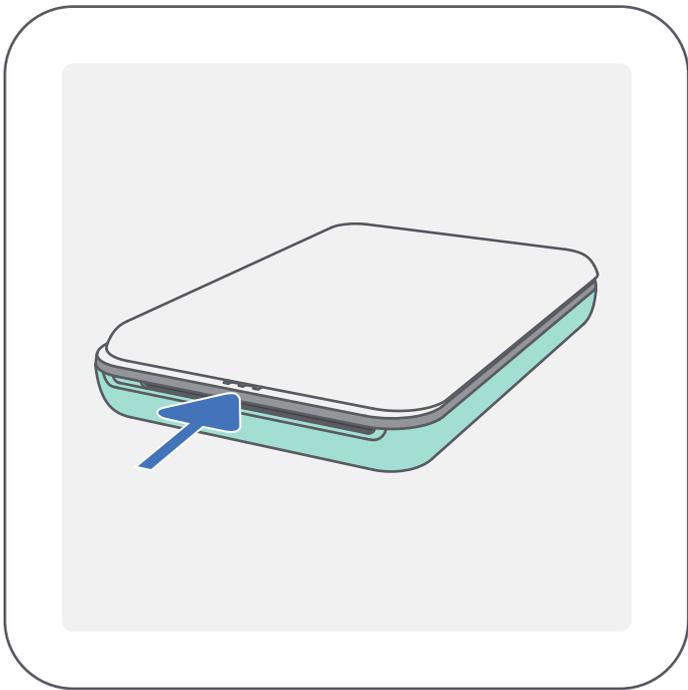

- ① Remove the top cover by sliding it slightly forward and away from the photo paper output slot. This will release the lid and allow you to remove the top cover to insert paper.

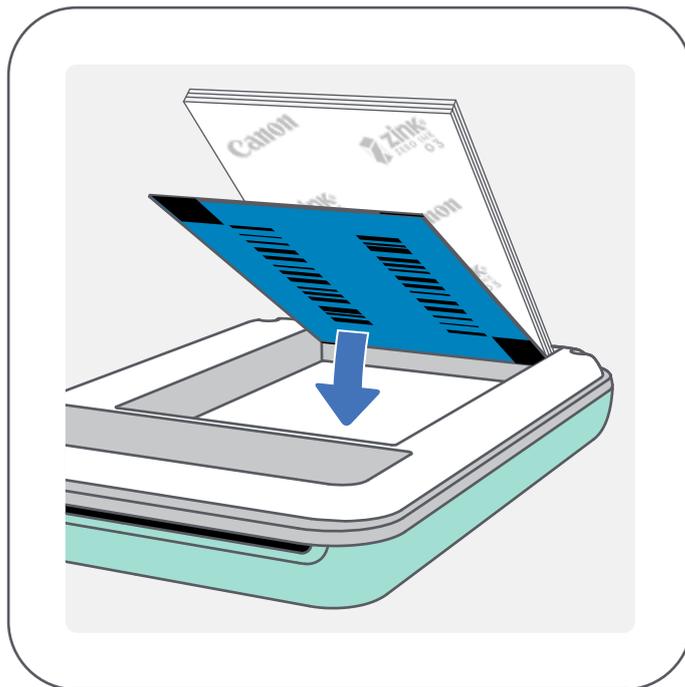

- ② Unpack the photo paper pack (10 sheets + blue SMART SHEET™).  
-- Ensure the included SMART SHEET™ (blue card) is on the bottom of the pack with the barcode facing down.
- ③ Place all 10 sheets of the photo paper and the one SMART SHEET™ into the photo paper compartment.  
-- Stack the photo paper on top of the blue SMART SHEET™ with the white side (printing side) facing up. The blue barcode and the photo paper logos should be facing down.
- ④ Place the top cover back onto the printer. It should click into place when closed properly.



## CAUTION

---

Do not insert more than 10 ZINK™ photo paper sheets and 1 SMART SHEET™ into the printer at a time to avoid paper jams or print errors.

---

Use Canon ZINK™ photo paper with the printer to get the optimal print quality.

*You may purchase additional photo papers within the Canon Mini Print App by tapping "Buy Paper" in the main menu.*

---

In case of a paper jam, do not pull the photo paper out. Instead, turn the printer OFF and ON to automatically eject the photo paper.

---

Do not pull the photo paper out of the printer during printing.

## NOTE ON SMART SHEET™

---

The SMART SHEET™ will pass through the printer automatically before the first print job. It cleans and calibrates the printer for the entire paper pack (10 sheets).

---

Use the SMART SHEET™ within each pack of new photo paper for best printing quality.

---

Keep the SMART SHEET™ and only discard after you have printed all 10 sheets of photo paper in the pack.

---

Using a SMART SHEET™ from another pouch may result in low quality.

## NOTE ON PHOTO PAPER

---

Do not damage or bend the photo papers.

---

Ensure not to soil the photo paper when loading it into the printer.

---

Do not expose to direct sunlight or moisture.

---

Do not leave it in a place where the temperature or humidity is out of the suggested conditions indicated on the pouch. It may degrade the quality of the printed photo.



# INSTALLING APP




## OPTION ①

### SEARCH FOR "Canon Mini Print" IN APP STORES

For Android™ - from Google Play™

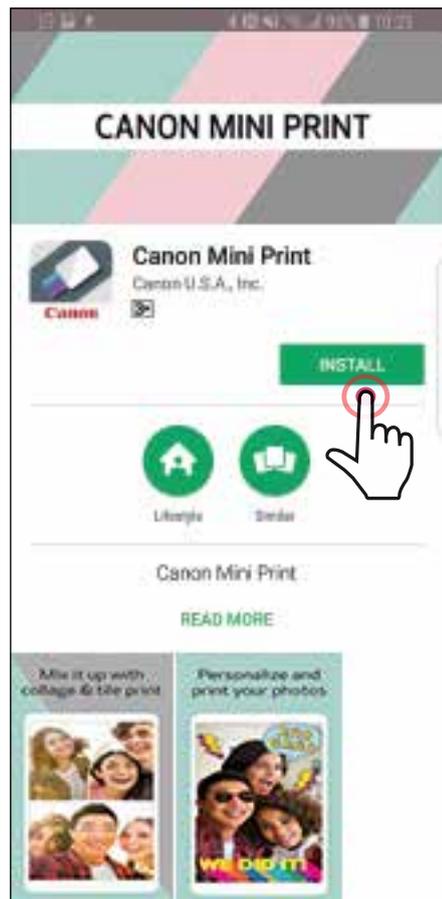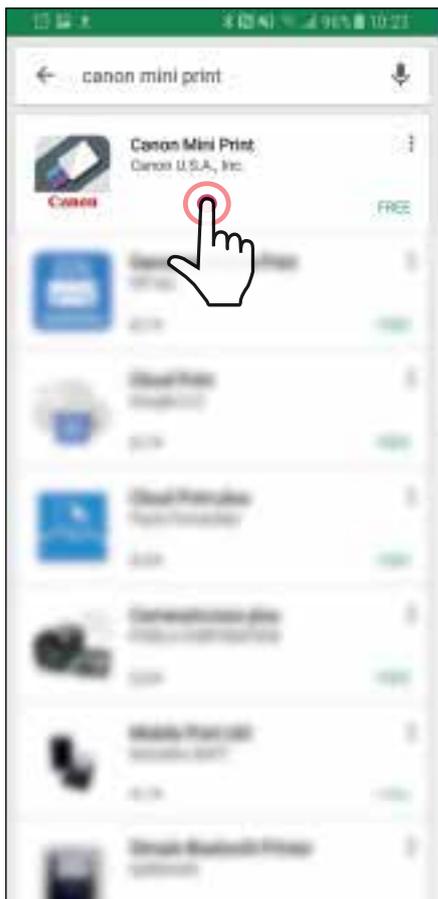

For iOS® - from the App Store®

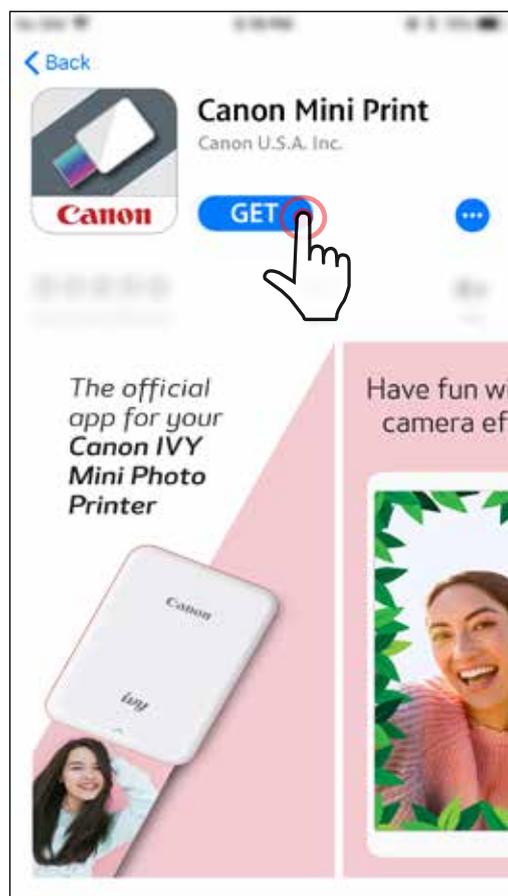





## OPTION ②

USING QR CODE - SCAN THE QR CODE ON THE "Quick Start Guide"

For Android

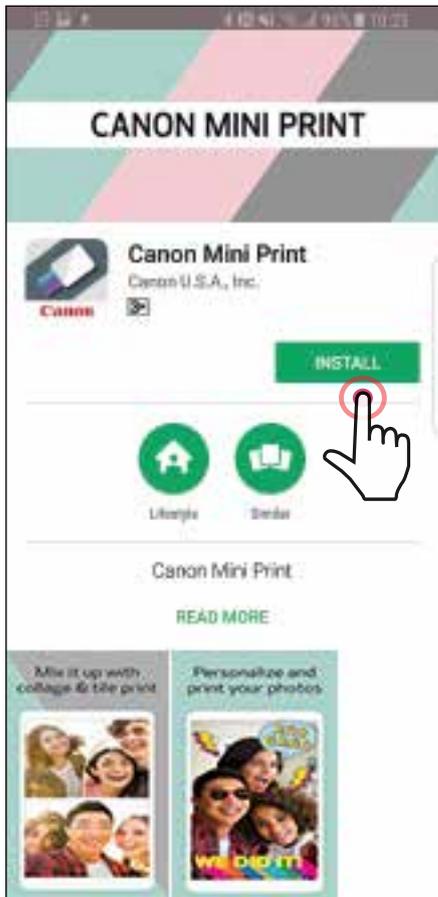

For iOS


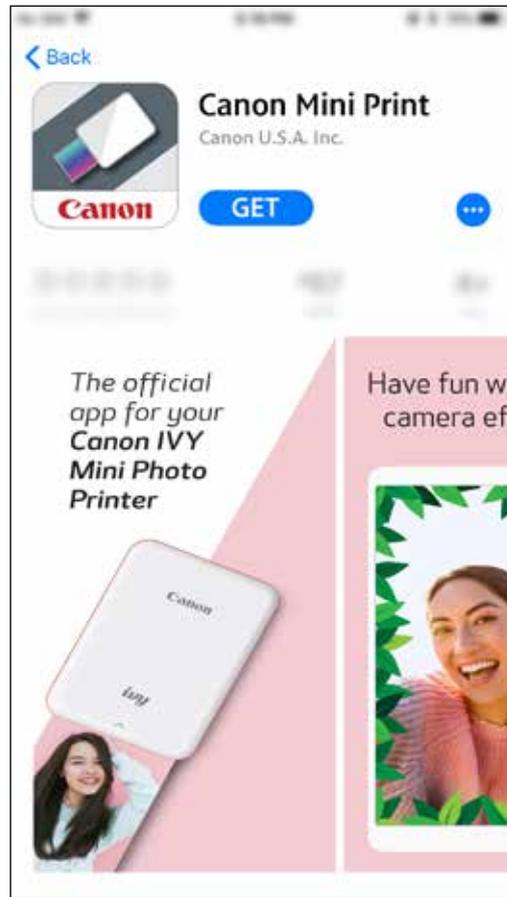


## OPTION ③

In your device browser GO TO <https://app.canonminiprint.com/>

## OPTION ④


USING NFC For Android ONLY

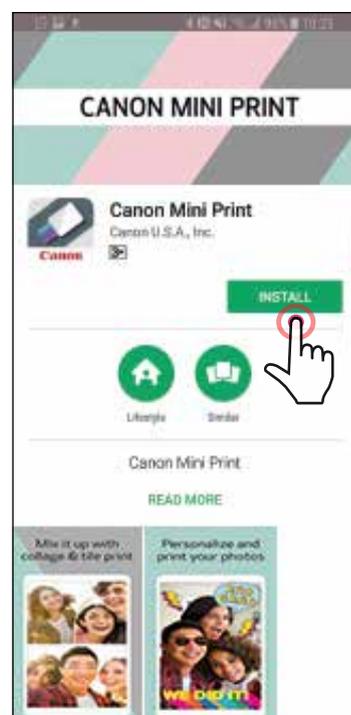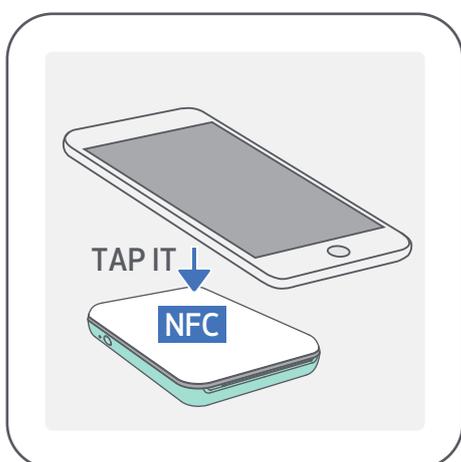


# PAIRING MOBILE DEVICE & CANON MINI PRINTER

## FOR Android

- ① Turn on the printer by pressing and holding the Power button until the LED indicator light turns on.
- ② Open mobile device "Settings" to enable Bluetooth and pair it with the printer.

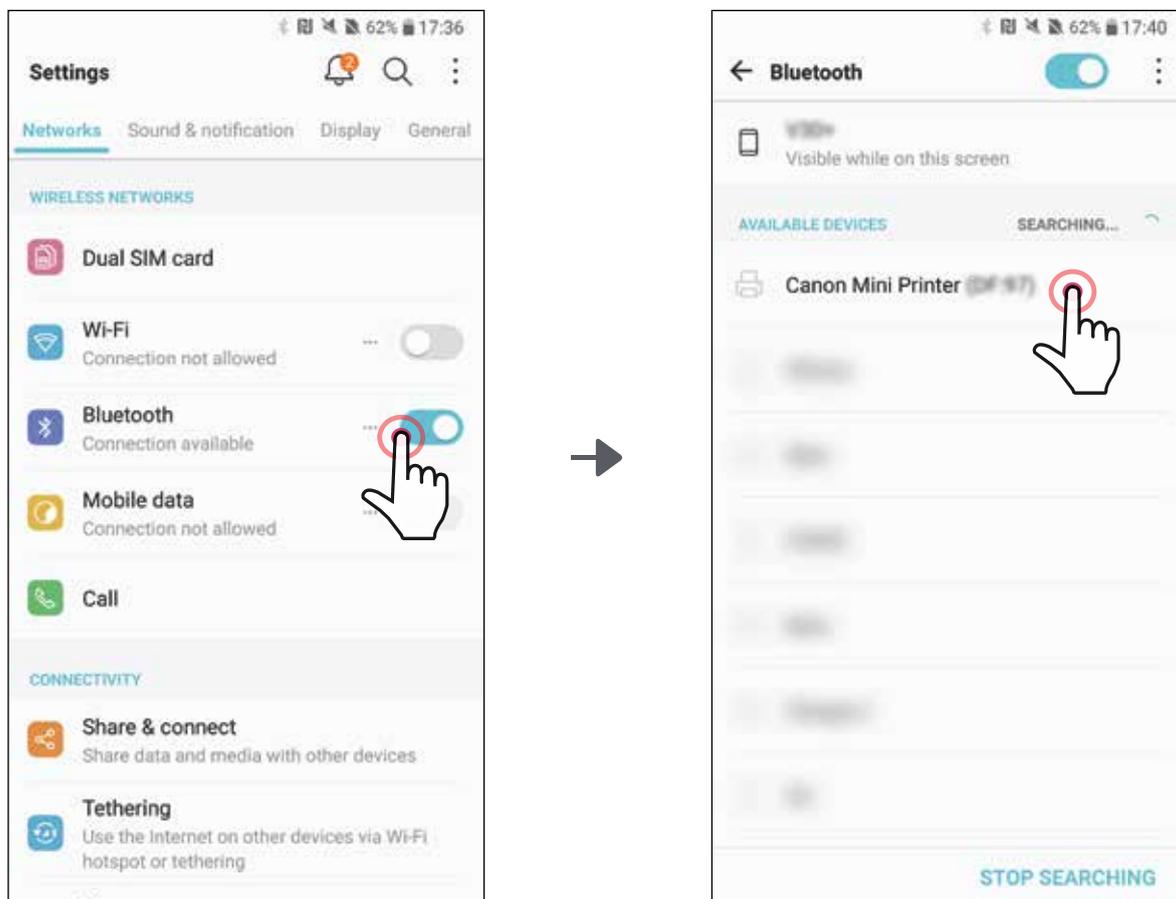


- ③ **OPTION A** - Add the printer to the app. Tap on the icon on the top right and choose your printer.  
*The icon will change to indicate battery level when connected.*

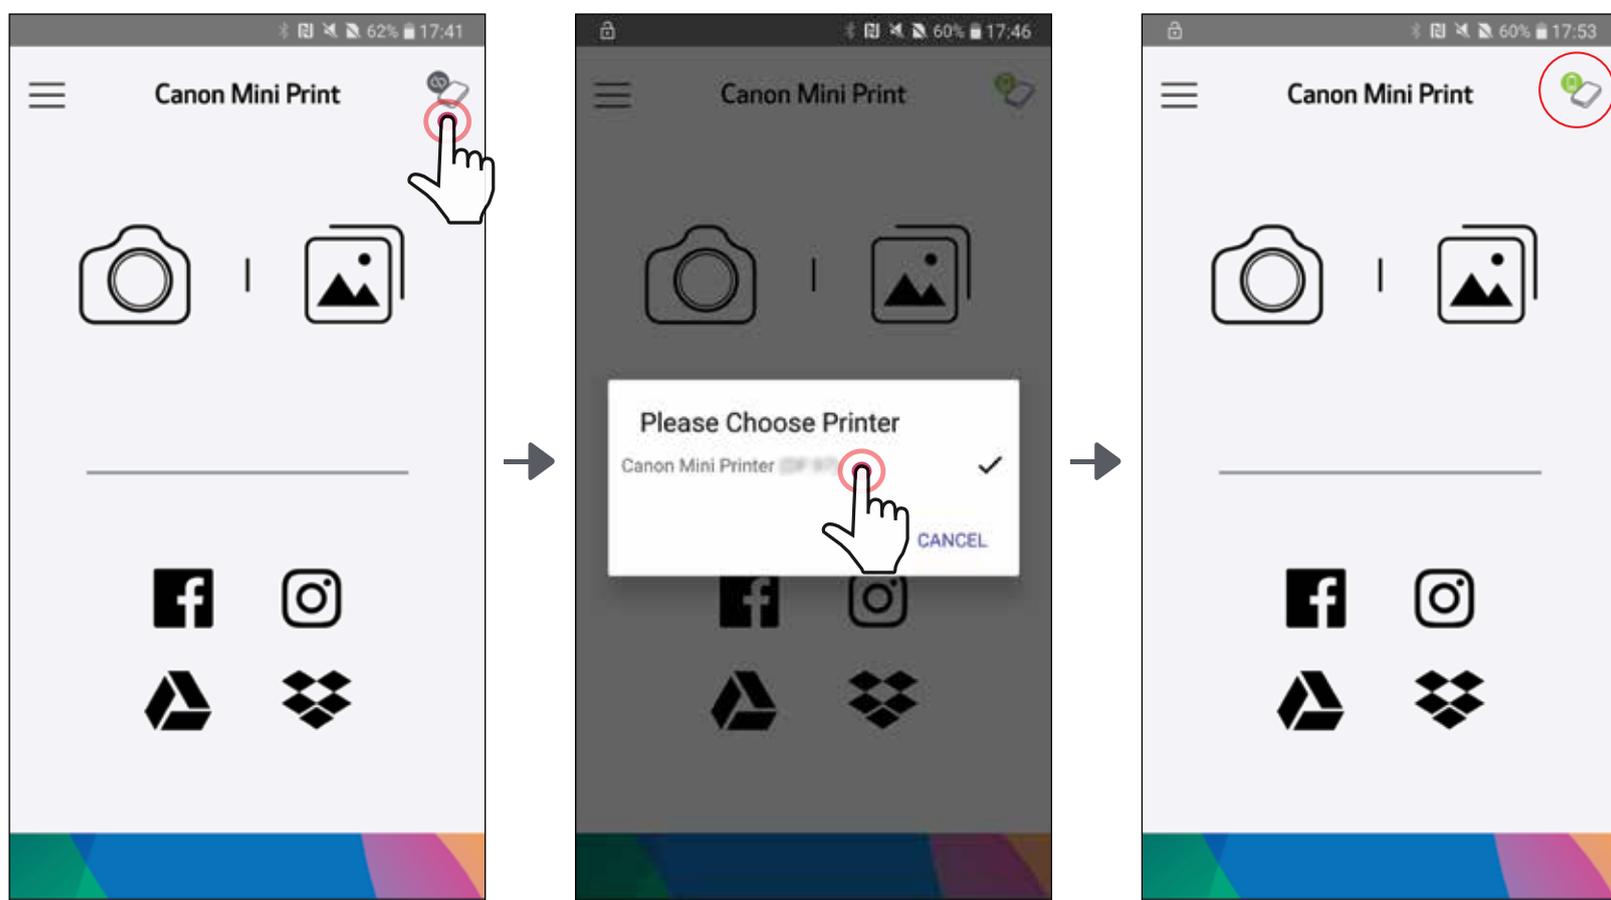

—OR—




- ③ **OPTION B** - Add the printer to the app. Go to “Printer Settings” in the main menu, tap “Add Printer” and choose your printer.

*Your printer will appear in the “Printers” list and the icon will change to indicate battery level when connected.*

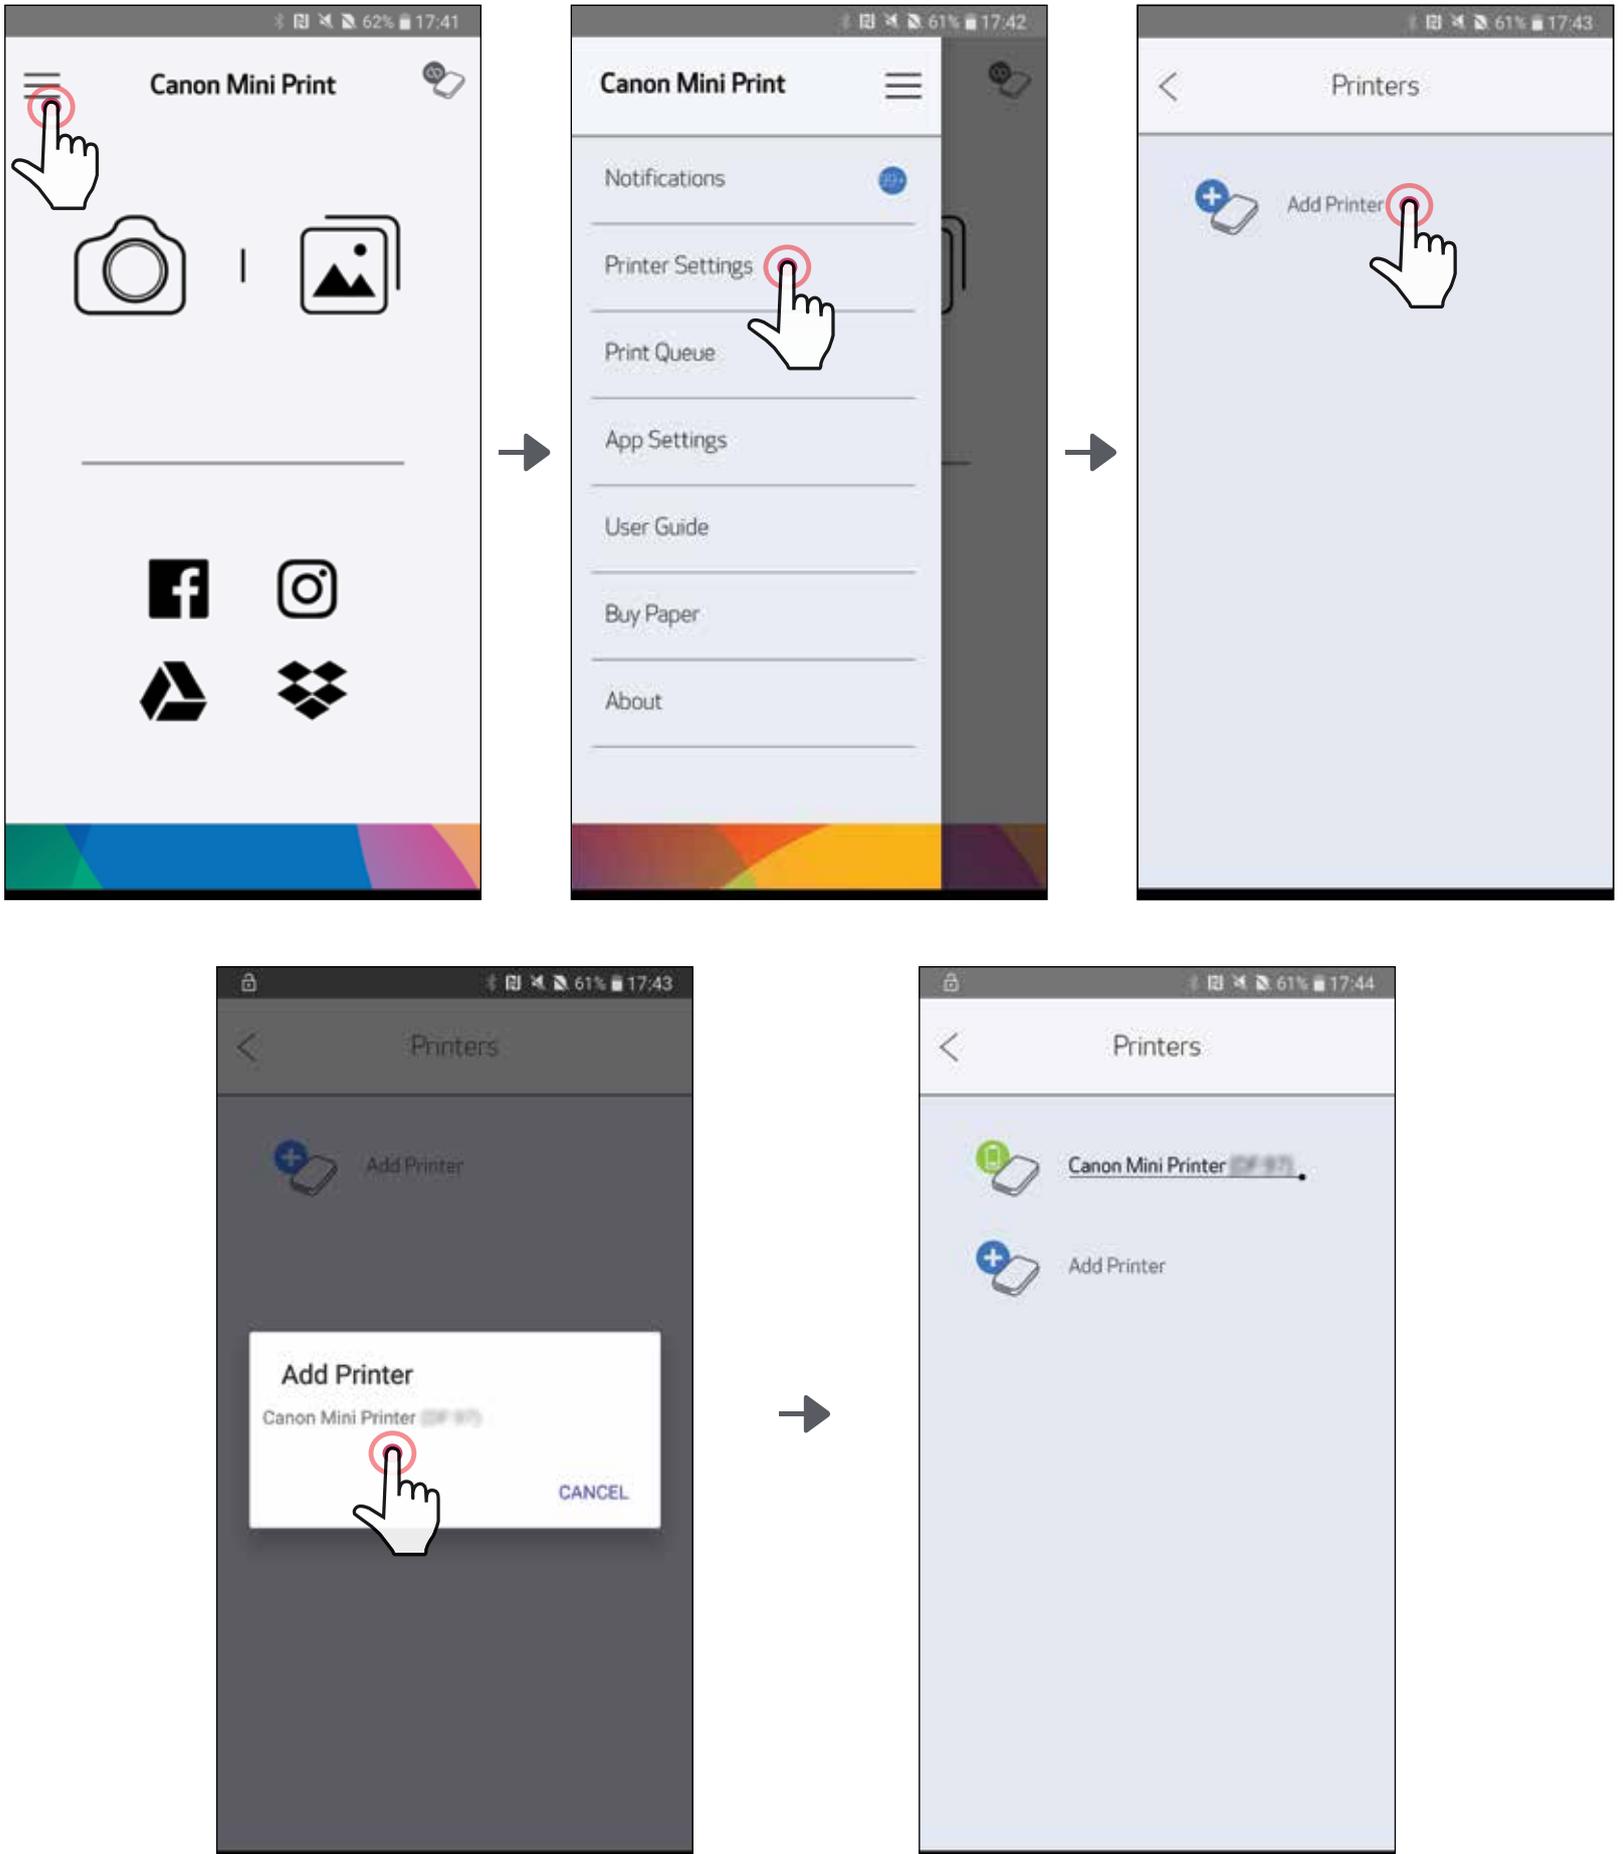


# FOR iOS

- ① Turn on the printer by pressing and holding the Power button until the LED indicator light turns on.
- ② Open mobile device "Settings" to enable Bluetooth and pair it with the printer.

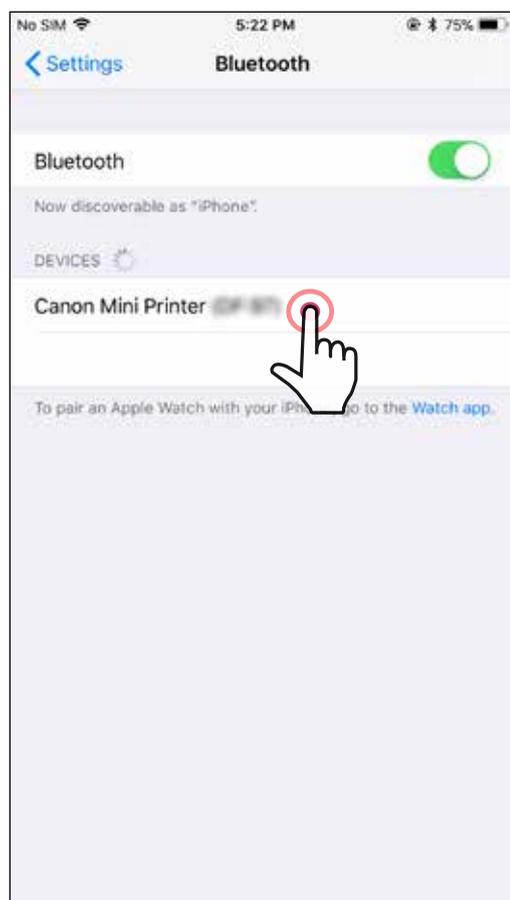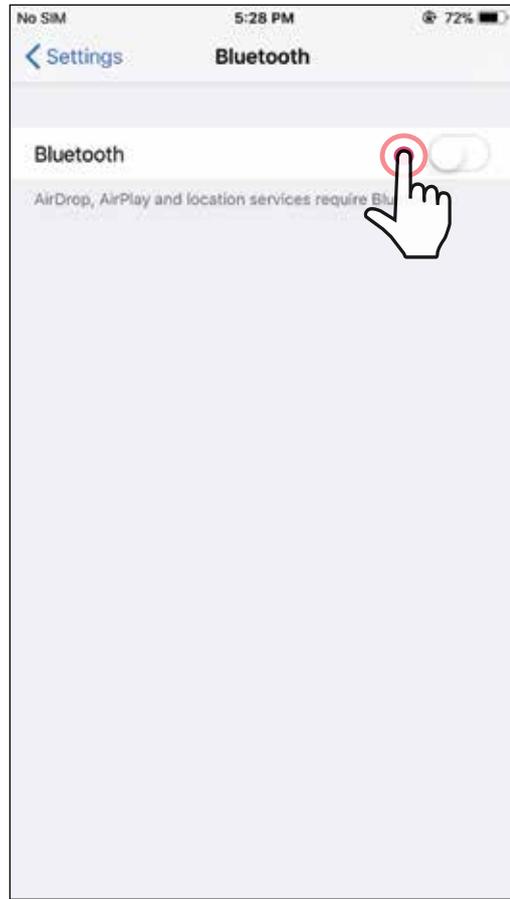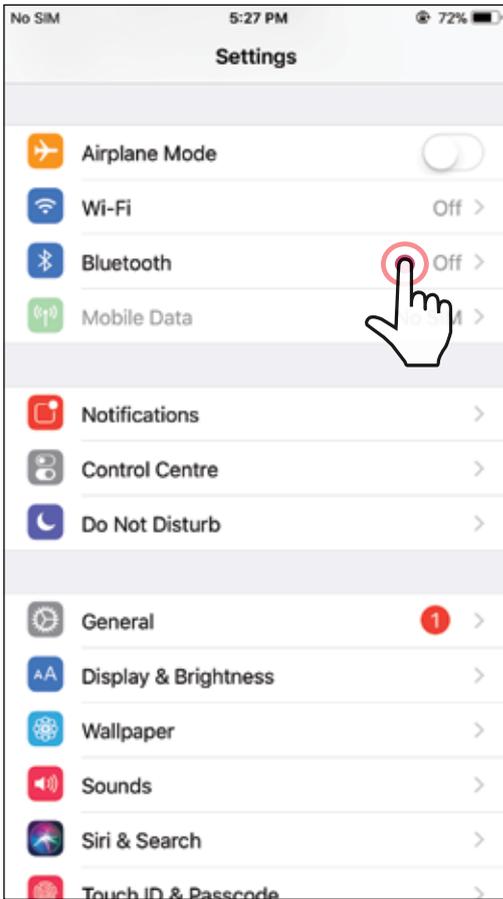

③ **OPTION A** - Add the printer to the app. Tap on the icon on the top right and choose your printer.


*The icon will change to indicate battery level when connected.*

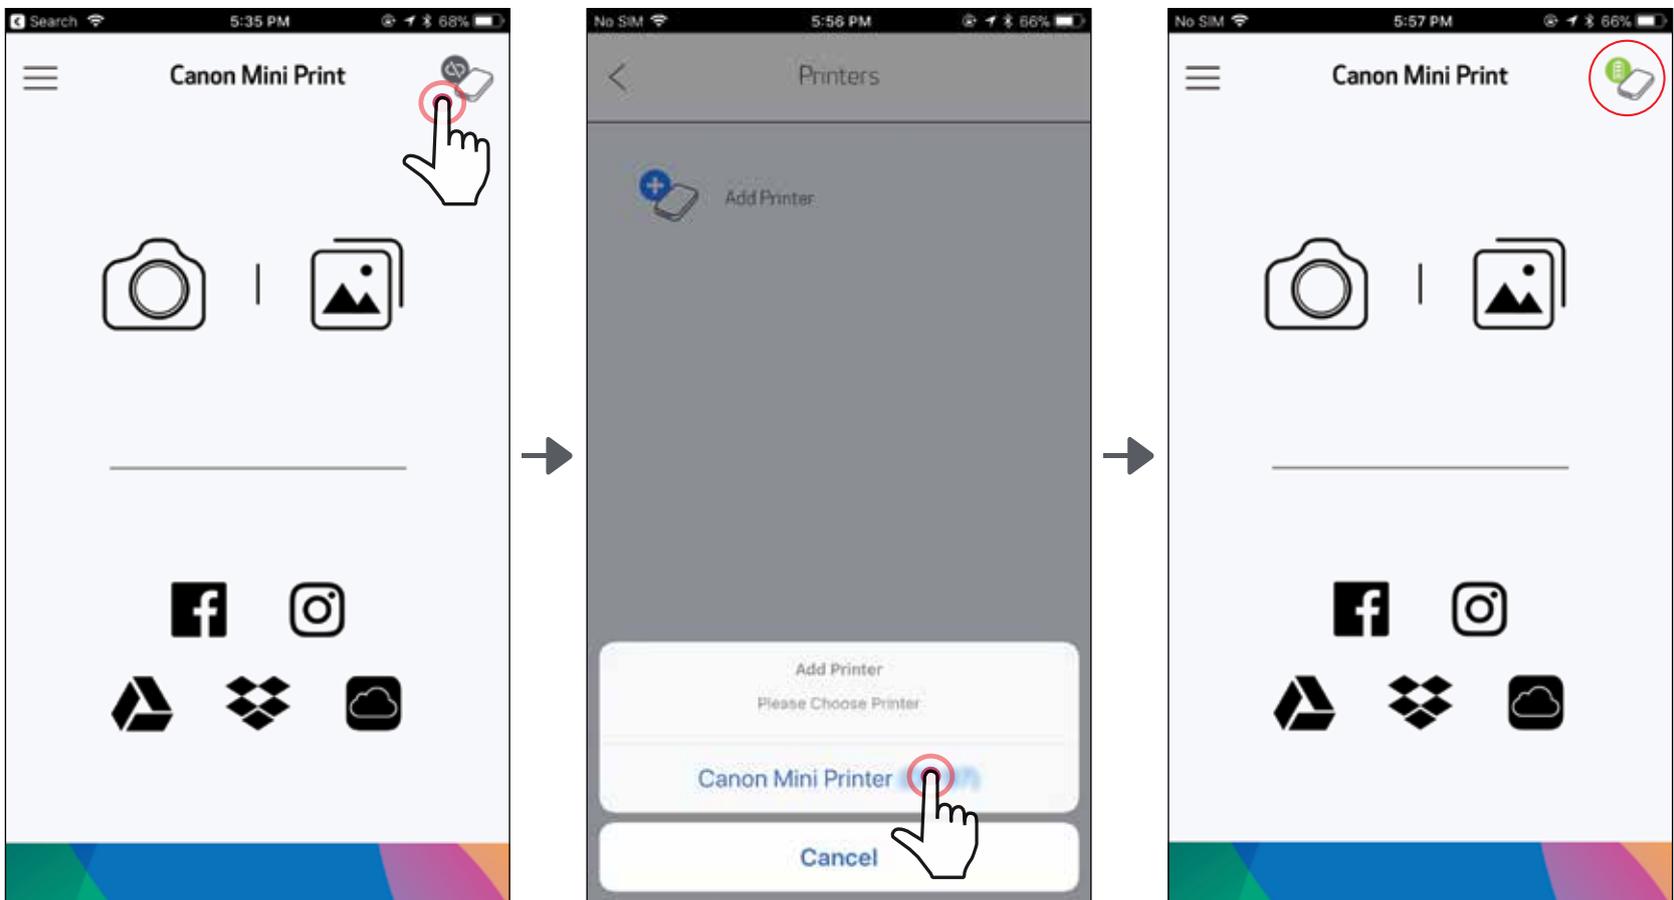

—OR—


③ **OPTION B** - Add the printer to the app. Go to "Printer Settings" in the main menu, tap "Add Printer" and choose your printer.

*Your printer will appear in the "Printers" list and the icon will change to indicate battery level when connected.*

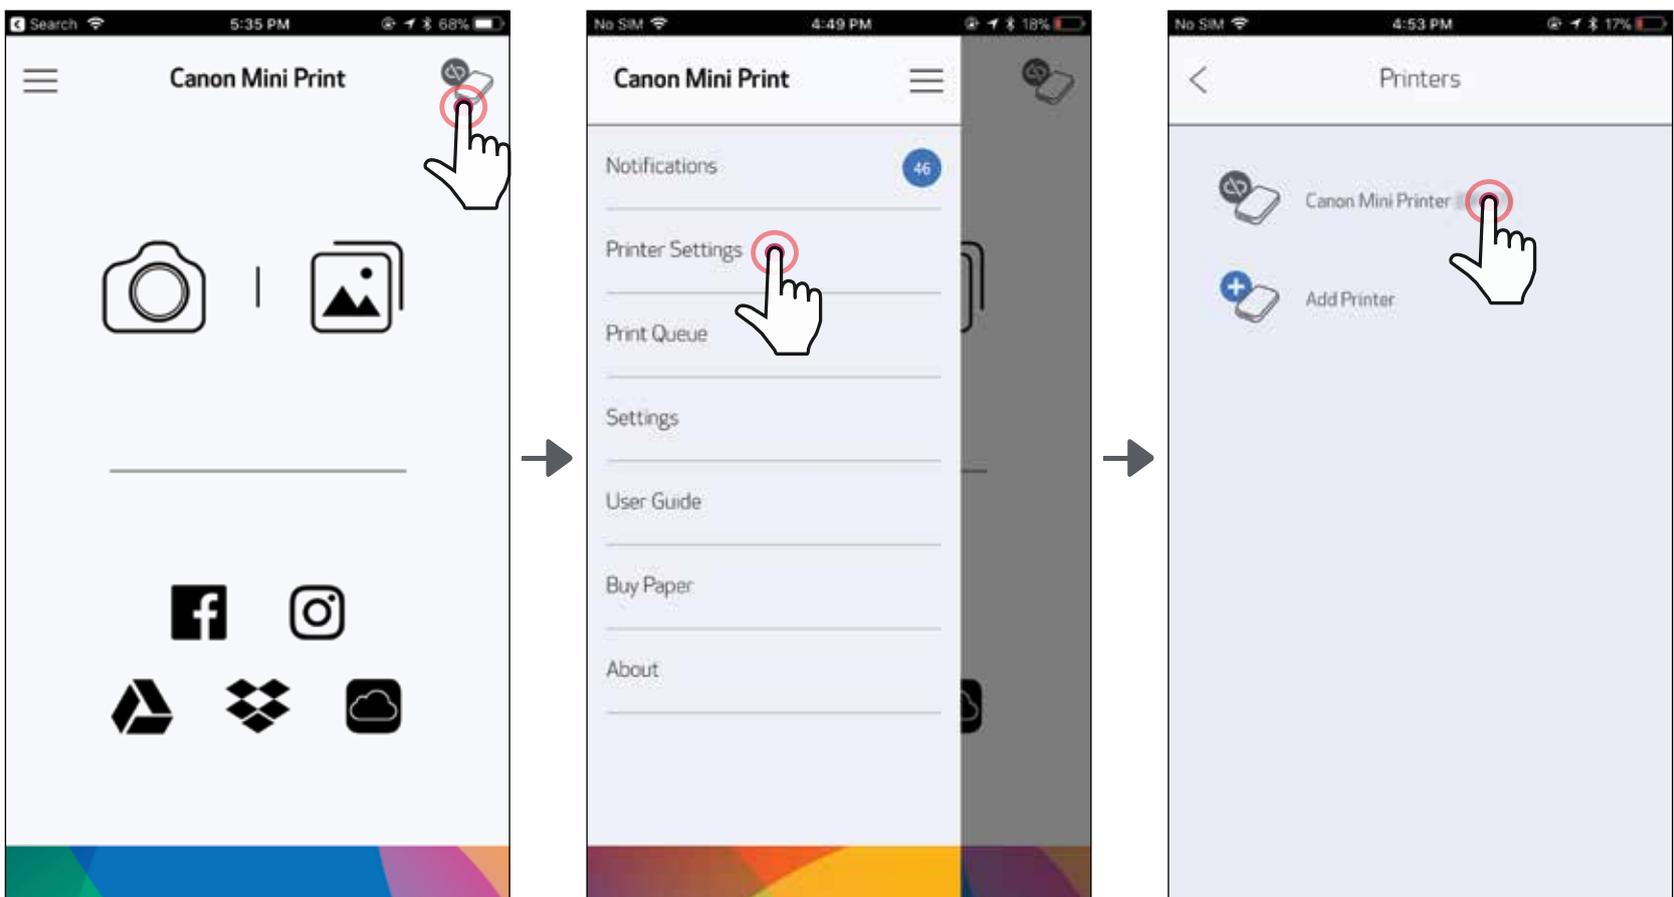



## FOR NFC (Android only)

- ① On your mobile device, ensure that NFC and Bluetooth are enabled.
- ② Place your mobile device on top of the printer.
- ③ The printer will pair automatically with the mobile device.

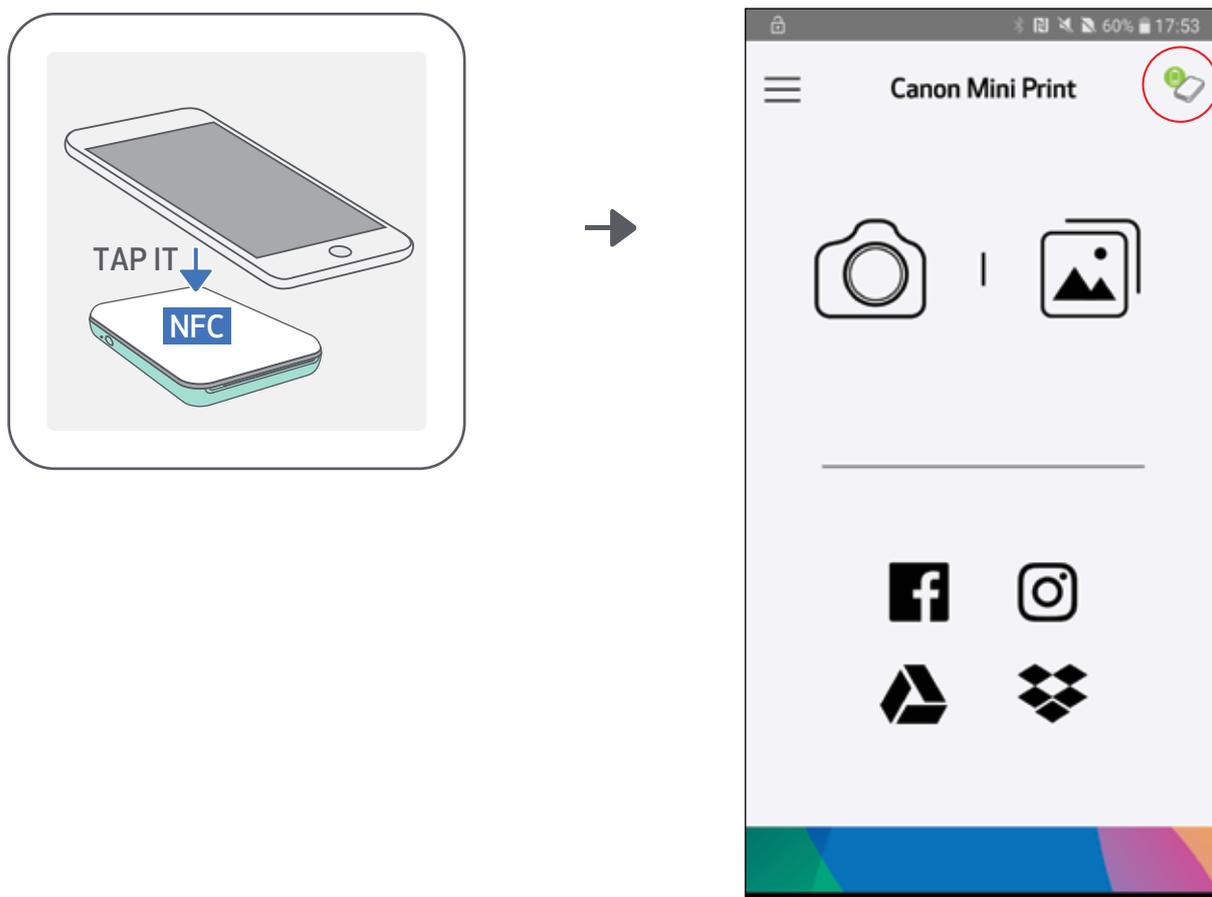

### About Pairing

- One printer can be paired with only one iOS/Android device.
- One iOS/Android device can be connected to multiple printers.
- Bluetooth searching and transferring may fail depending on the environment. Check the Bluetooth condition on your mobile device and try again.
- Search for and pair a printer named as "Canon Mini Printer (xx:xx)". Match the last 4 digits (xx:xx) as shown on the label inside the printer.

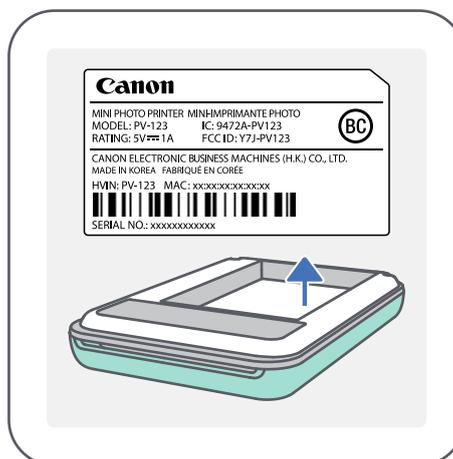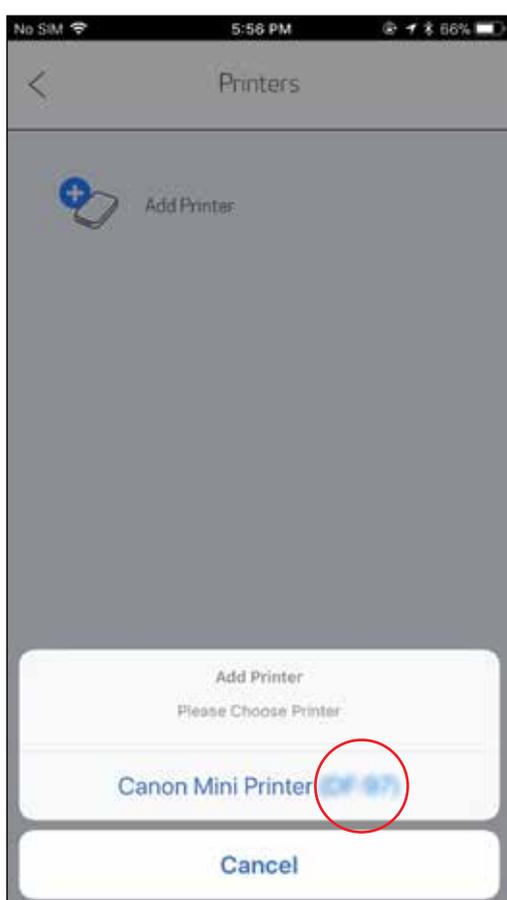



## CARING FOR YOUR CANON MINI PRINTER

---

Remove fingerprints, dust, and dirt from the printer using a dry microfiber cloth.

---

Keep the top cover on to prevent dust and debris from entering the paper path.

---

Keep printer firmware up-to-date. Make sure your mobile device is connected to the internet and then open the Canon Mini Print app. If there is a firmware update available, a firmware update screen will display.

Ensure the printer is charged to 50% or higher, and connected to a power source before updating the firmware.


---

Keep your Canon Mini Print app updated. If you don't have the apps set to automatically update, go to your device's app store and make sure the latest version is installed.


---

# USER INTERFACE

## HOME SCREEN

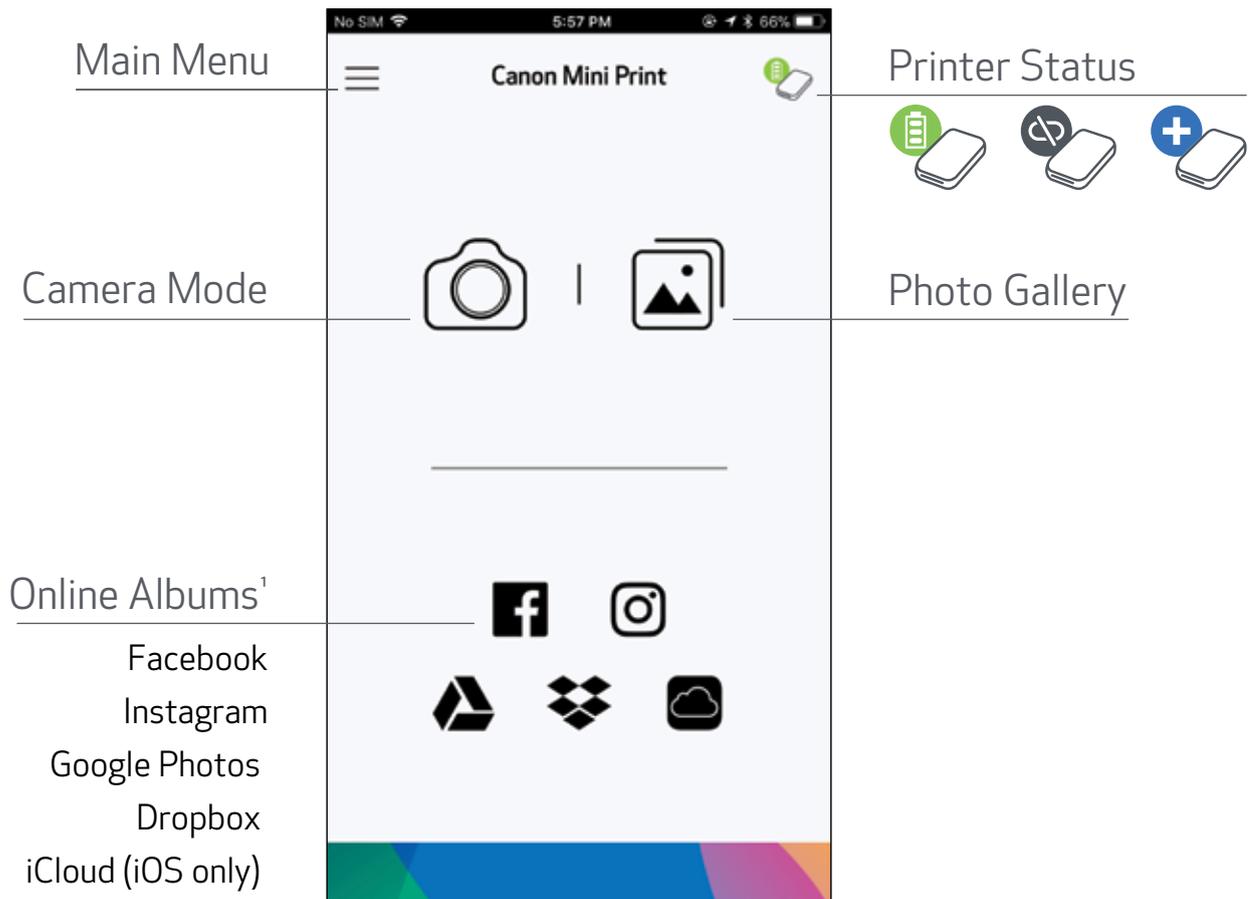


## MAIN MENU

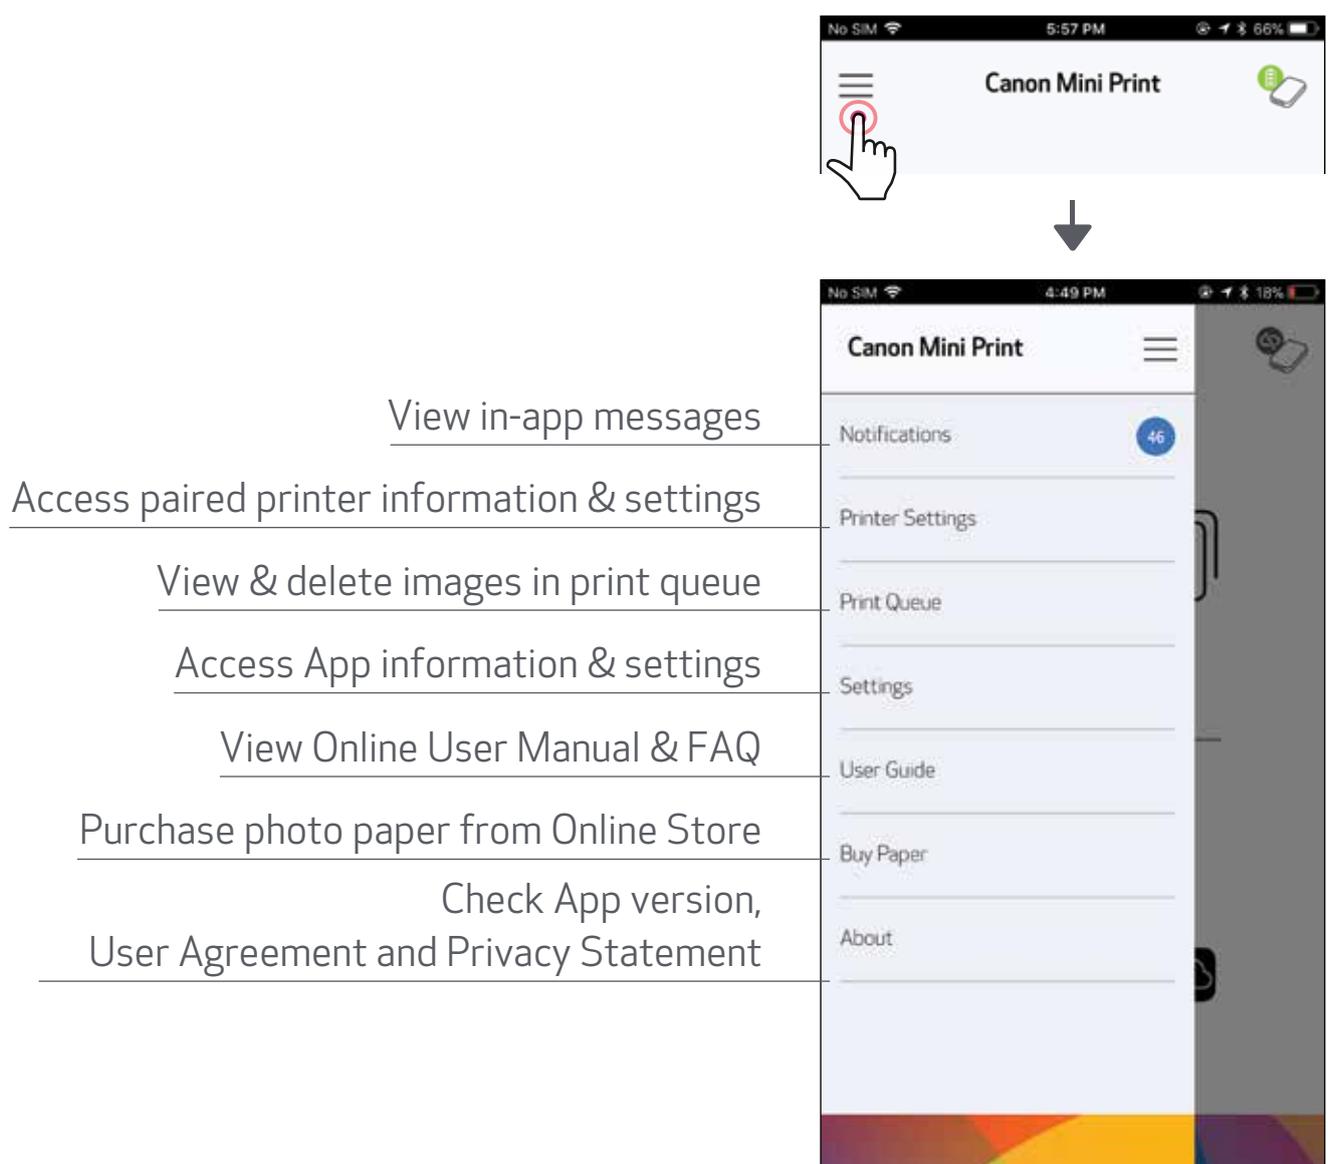

1) Internet Connection Required. Requires active social media or Cloud account(s) to use.

# CAMERA MODE



- ① On the Home Screen, tap [  ] to take a photo. (Optional, tap on the icons at the bottom to take a photo with effects.)
- ② Once you've taken a photo, you can Print, Edit, Share, or Save.
- ③ To print, tap [  ].

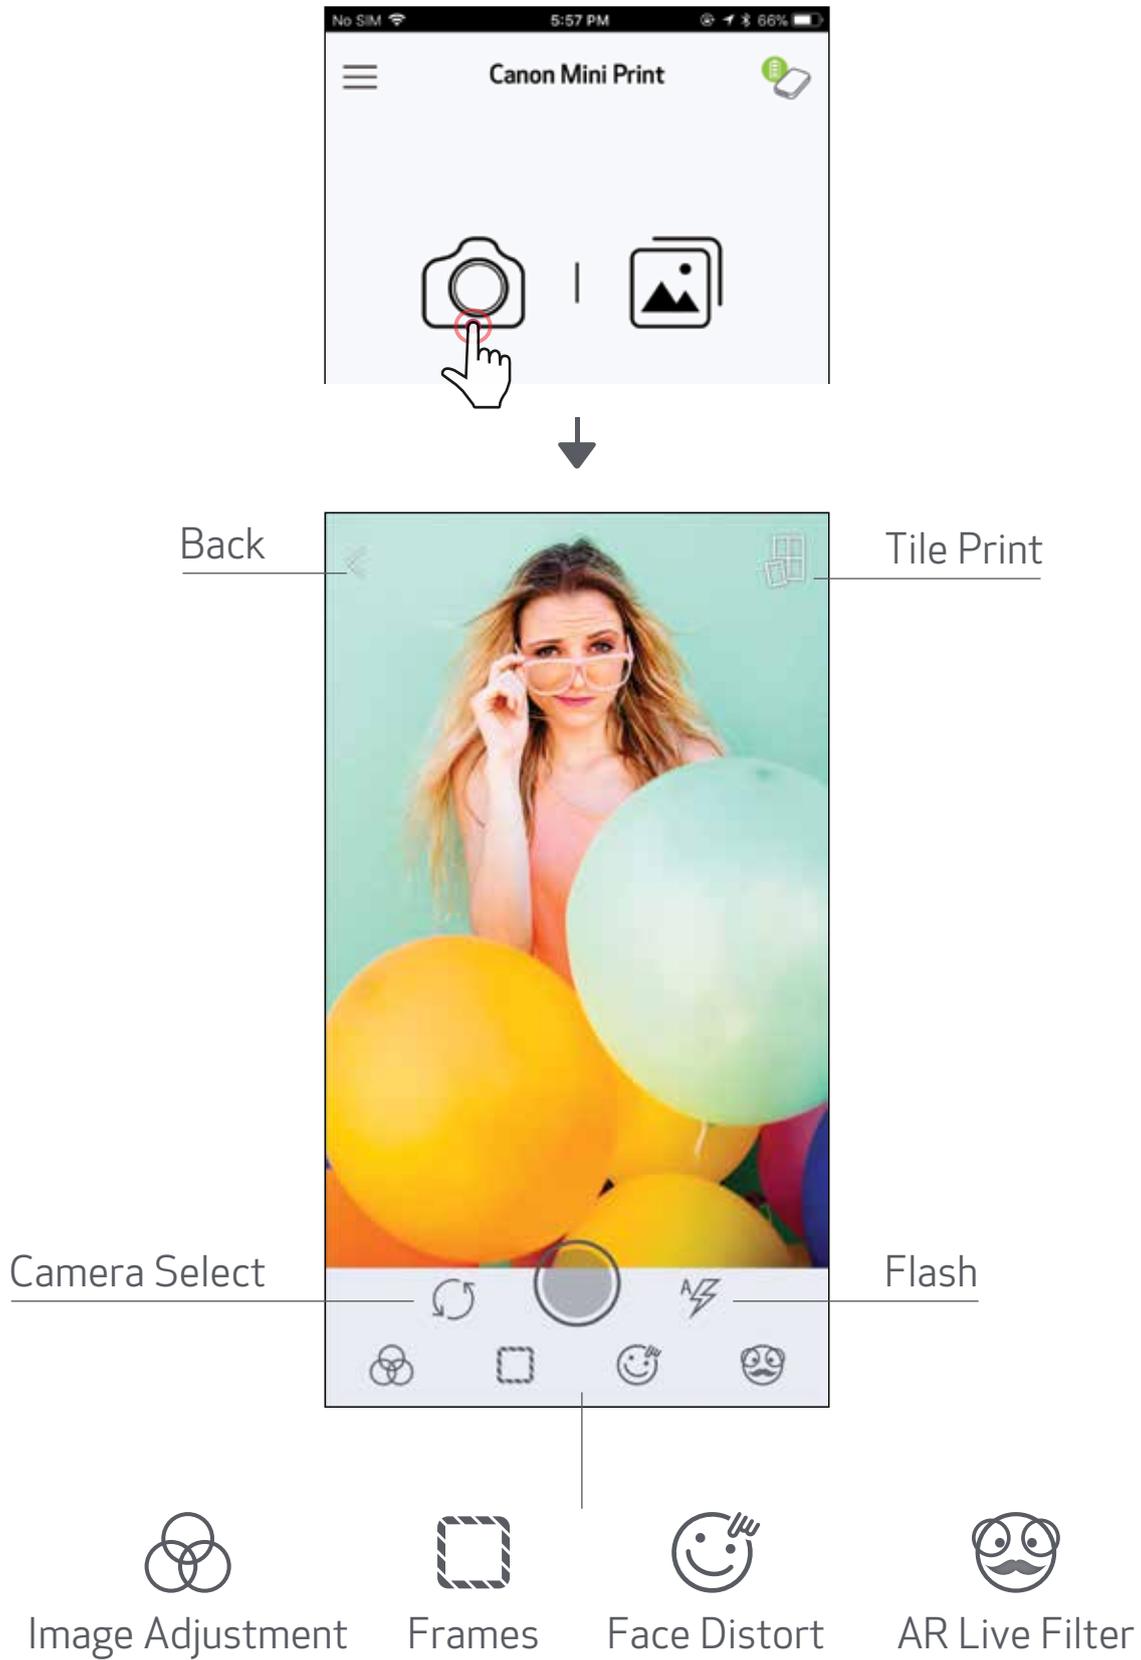


# PHOTO GALLERY

In the Photo Gallery you can browse photos in gallery view, by folders, or by calendar.

- ① On the Home Screen, tap [  ] to view the Photo Gallery.
- ② Once you've selected a photo, you can Print, Edit, Share, or Save.
- ③ To print, tap [  ].

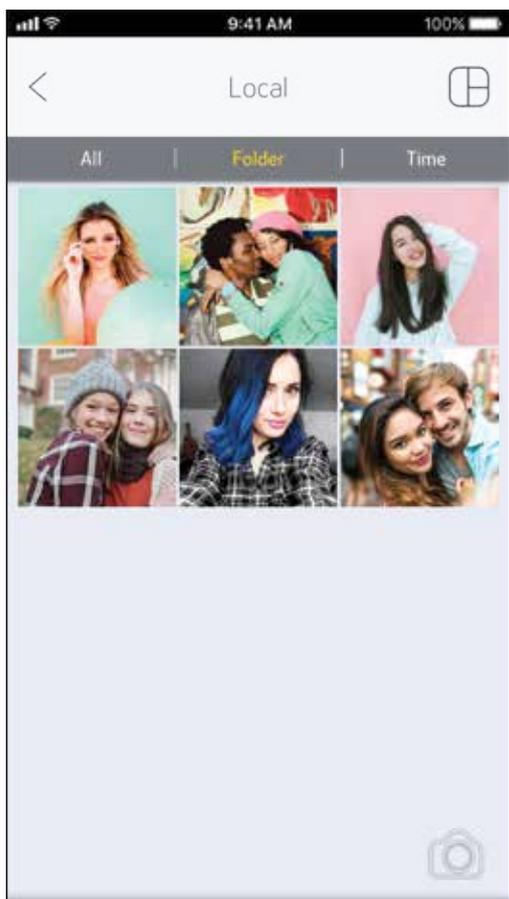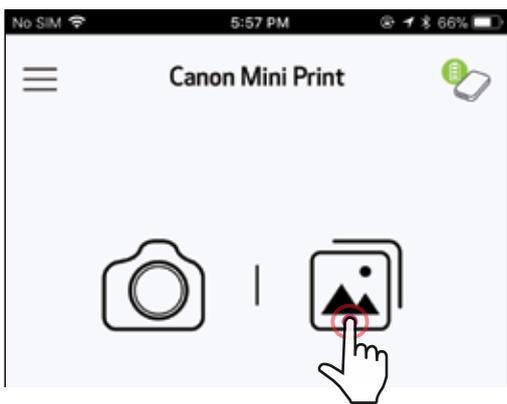

All Photos - Gallery

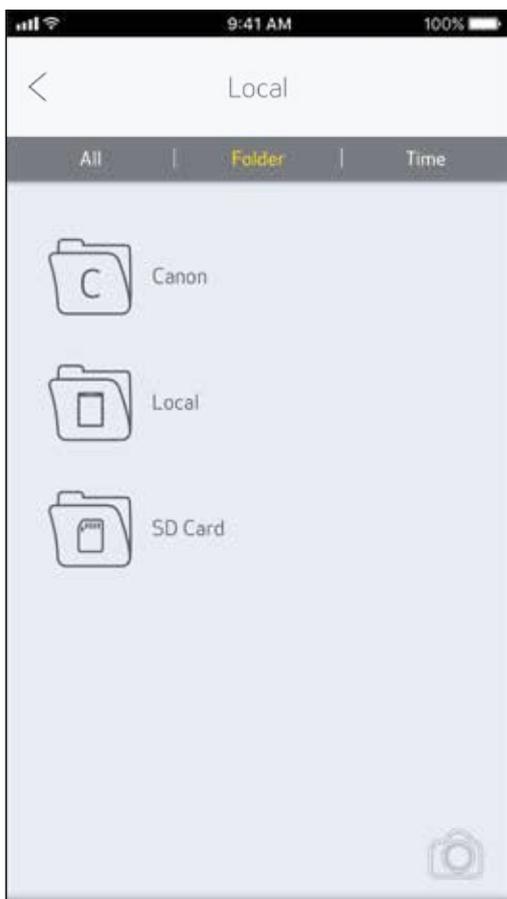

Folder View



Calendar View



## WARNING

The printed image may differ from the original image due to the "screen technology" used to display color on mobile device is difference from the "print technology" used to print color on paper. (Thermal transfer printing).

Do not pull the paper out by force during printing or paper jam.

Do not open the top cover during printing. It may affect printing quality.

If the printer is vibrated or shaken, photo print quality may be affected.

# SHARE PHOTOS


You can easily share or save your images and edits.

- ① When you're ready, tap [  ] to open the options on your device
- ② Share with a listed app, or save to your device's photo storage.



Android


iOS

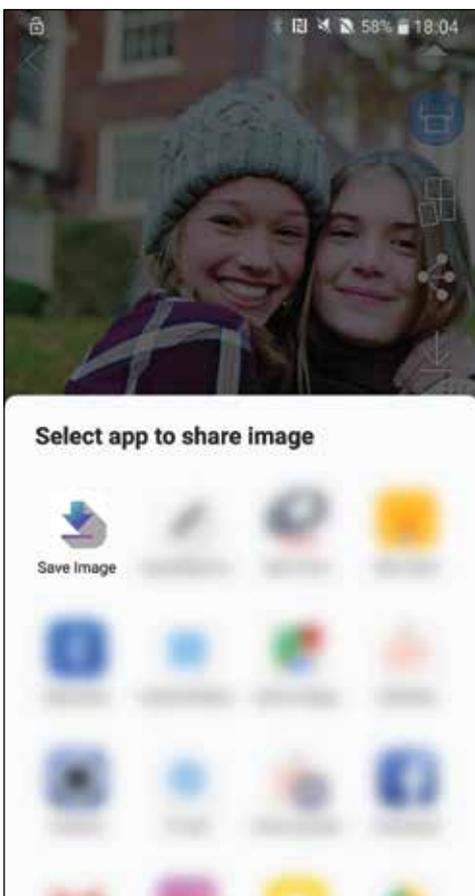

# SAVE/DELETE PHOTOS





You can delete photos in the app that have been saved to the Canon folder using the [ ↓ ] button.

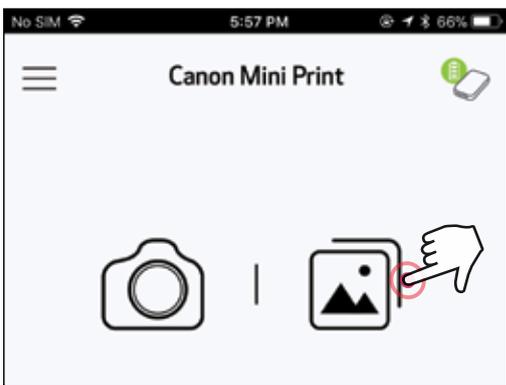

① To delete a photo tap [  ] to view the Photo Gallery

② Tap "Folder", then "Local - Canon"

③ Tap the trashcan, then select the photo(s) you wish to delete permanently.

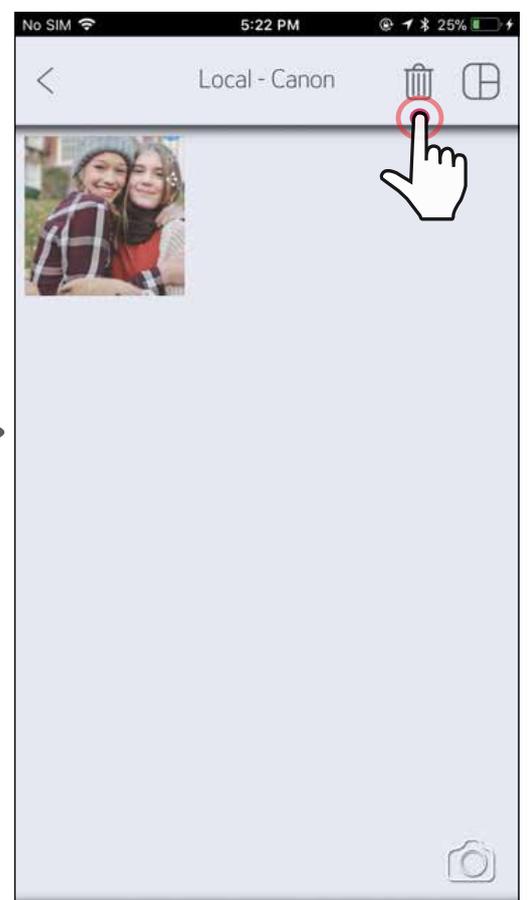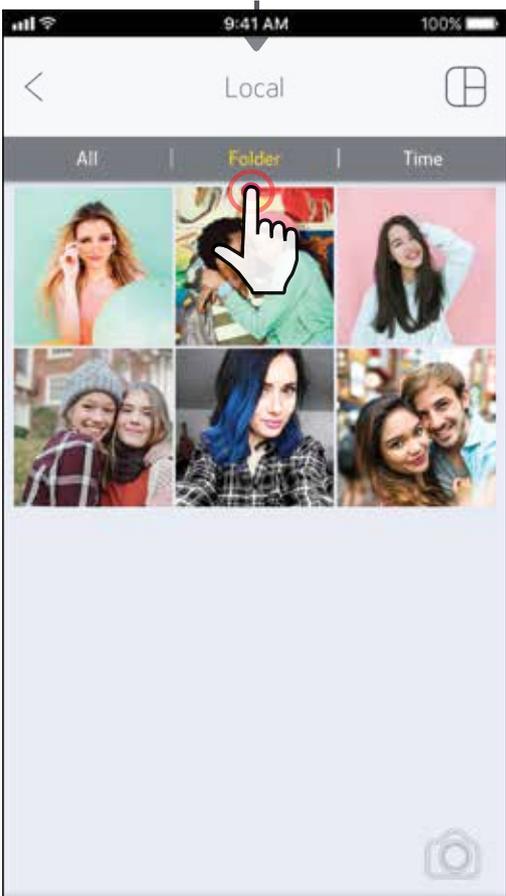


# SEND TO MINI PRINT

Send a photo in your device's photo gallery or camera roll to the Canon Mini Print app.

## For Android

- ① Find a photo in your device Gallery and tap the share button
- ② Tap the Mini Print Icon to send the photo to the app so you can edit and print.

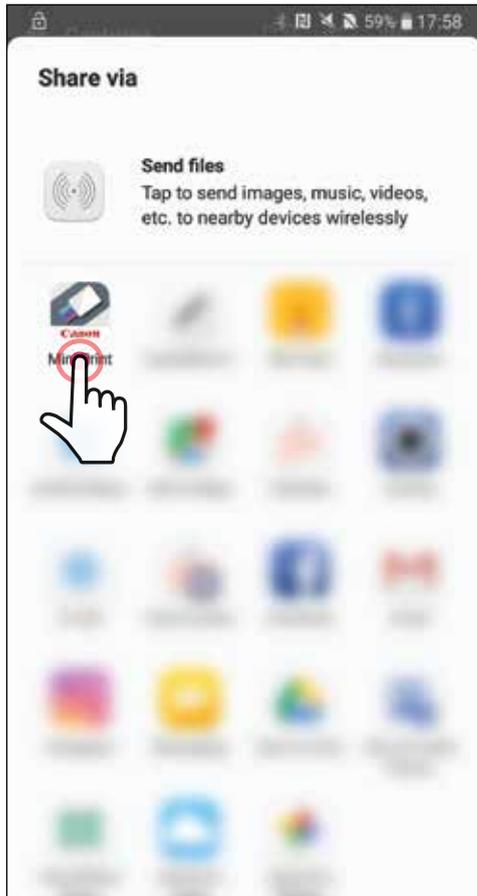


## For iOS

- ① Find a photo in your device Gallery and tap the share button
- ② **OPTION A** - Tap "Open in Mini Print" to send the photo to the app editing screen where you can edit and print.
- ② **OPTION B** - Tap the "Print to Canon" to send the photo directly to the print queue.



Editing Screen

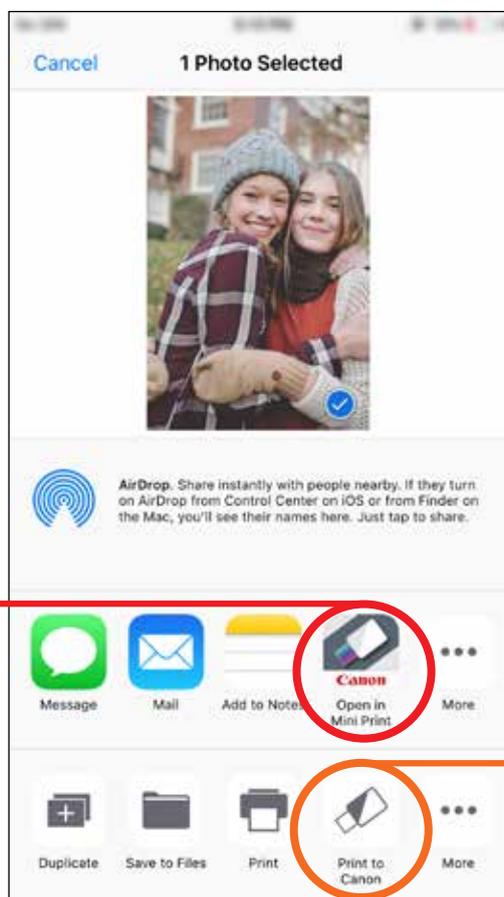

Print Queue

# SPECIFICATIONS

Power Source	Internal rechargeable battery 500 mAh Li-Polymer 7.4 V	
Charging Speed	Approximately 90 minutes (Full Charge)	
Dimension	4.7"(L) x 3.2" (W) x 0.7" (H) / 118.3 mm (L) x 82.4 mm (W) x 18.7 mm (H)	
Weight	5.4 oz (160 g)	
Connectivity	Bluetooth 4.0	
Compatible OS	iOS 9.0 or above & Android 4.4 or above	
Print Technology	ZINK™	
Print Resolution	314 x 400 dpi (dots per inch)	
Borderless Printing	Yes	
Compatible Paper	Canon ZINK™ Photo Paper: ZP-2030-20 (20 sheets) ZP-2030-50 (50 sheets) 2" x 3" / Peel-and-stick back / Smudge-free / Water & tear resistant	
Paper Capacity	Up to 10 sheets of ZINK™ photo paper + 1 SMART SHEET™	
Memory	512Mb	
Environmental Parameters	<ul style="list-style-type: none"><li>• <b>Recommended Printer Operating, Charging, and Storage Temperature:</b> 59° to 90° F (15° to 32° C)</li><li>• <b>Recommended Printer Operating, Charging, and Storage Humidity:</b> 40-55% RH</li><li>• Operating Temperature: 41° to 104°F (5° to 40°C)</li><li>• Operating Humidity: &lt;70% RH</li></ul>	
Automatic Power-off	None / 3 minutes / 5 minutes / 10 minutes (selectable in-app)	
Power Adapter	Output current: 1A (min)	Voltage: 5V

\* Subject to change without notice

## BATTERY RECYCLE



The lithium ion/polymer battery is recyclable.

Please call 1-800-8-BATTERY for information on how to recycle this battery.