



Easy Connection to a Wi-Fi Printer

Easy Connection to a Wi-Fi Printer

You can directly print images by connecting the camera with a wireless LAN compatible printer supporting PictBridge (Wireless LAN) via a wireless LAN.

 


When in or mode, or when Multi Shot Noise Reduction is set, the camera cannot be connected to a printer.

Using Camera Access Point Mode to Establish a Connection ■

The camera and a printer can be directly connected via a wireless LAN. Because the camera acts as an access point, no other access point is necessary, so you can print images easily.

To establish a connection, operations on the printer are required. For details, refer to the printer's instruction manual.

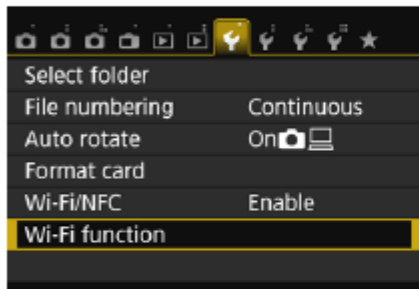


1 Select [Wi-Fi function].

- Under the [**1**] tab, set [Wi-Fi/NFC] to [Enable], then select [Wi-Fi function].




2 Select [**2**].

 - Select [**2**] (Print from Wi-Fi printer) and press <SET>.

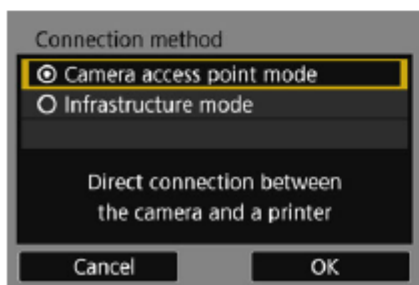


3 Select [Camera access point mode].

 - Press the <▲> <▼> keys to select [Camera access point mode], then press <SET>.
- Select [OK] and press <SET> to go to the next screen.

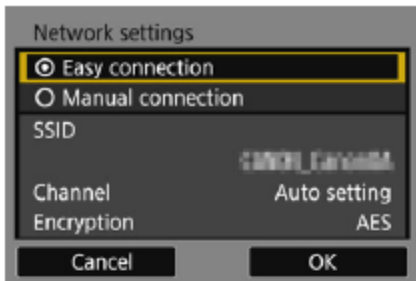

4 Select [Easy connection].

 - Press the <▲> <▼> keys to select [Easy connection], then press <SET>.
- Select [OK] and press <SET> to go to the next screen.
- For manual connection, see page 158.

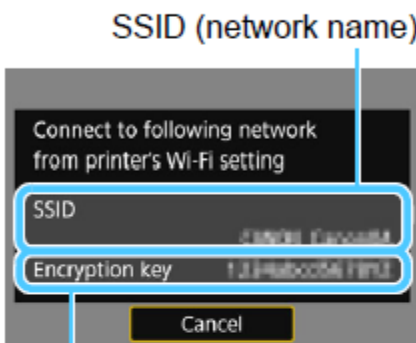


5 Set the printer's Wi-Fi settings to connect to the camera.

- On the Wi-Fi settings menu of the printer to be used, select the SSID (network name) displayed on the camera's LCD monitor.
- For the password, enter the encryption key displayed on the camera's LCD monitor.



 When connected by selecting [Easy connection] in camera access point mode, “_Canon0A” is appended to the SSID of the camera.

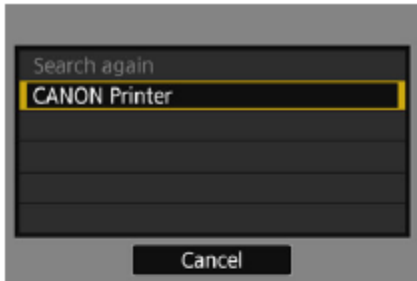

6 Select the printer to connect to.

- When a list of detected printers is displayed, select the printer to connect to and press <SET>.
- ▶ Some printers may make a beeping sound.
- When 16 or more printers are detected or search takes over 3 minutes, you can select [**Search again**].
- ▶ When a connection is established, the settings are saved and an image on the card is displayed.



7 Select the images to be printed.

- Select and print images on the camera (p.57).

The settings for communicating with a printer are now complete.

Printing Images Individually

Select and print images individually.



 
1 Select an image to print.

- Turn the <⊙> dial to select an image to print, then press <SET>.
- By pressing the <⊞> button, you can switch to the index display and select an image.




2 Select [Print image].

- Press the <◀> <▶> keys to select [Print image], then press <SET>.
- ▶ The print setting screen will appear.

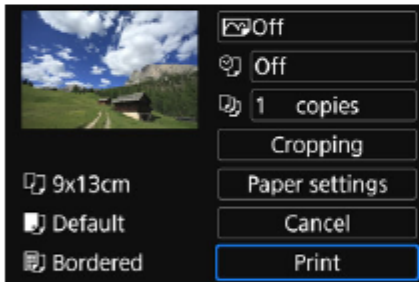

3 Start printing.

 - For the setting procedures, refer to "Printing Images" in the Camera Instruction Manual.
- ▶ When printing is completed, the screen for step 1 will reappear. To print another image, repeat steps 1 to 3.

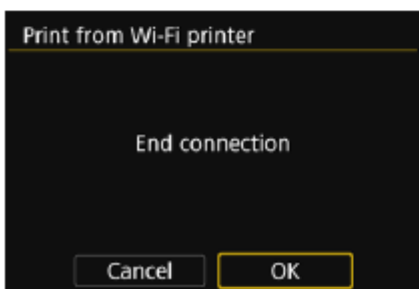

4 Terminate the connection.

- Press the <MENU> button to display the confirmation dialog. Press the <▶> key to select [OK], then press <SET> to terminate the connection.
- ▶ The [Wi-Fi function] screen will reappear.

Printing by Specifying the Options

Print by specifying the printing options.

 


1 Press <SET>.




2 Select [Print order].

- Press the <◀> <▶> keys to select [Print order], then press <SET>.
- ▶ The [Print order] screen will appear.

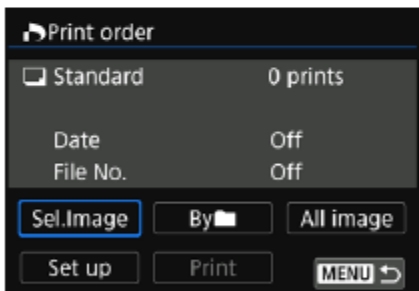


3 Set the printing options.

 - For the setting procedures, refer to "Printing Images" in the Camera Instruction Manual.

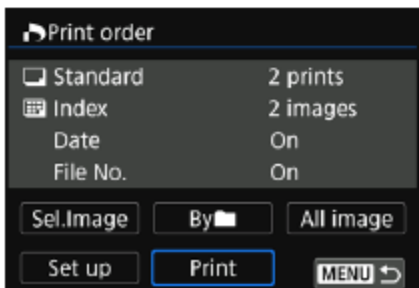

4 Start printing.

 - Select [Print] and press <SET>.
- Follow the procedures displayed to perform printing.
- ▶ When printing is complete, the [Print order] screen will reappear.

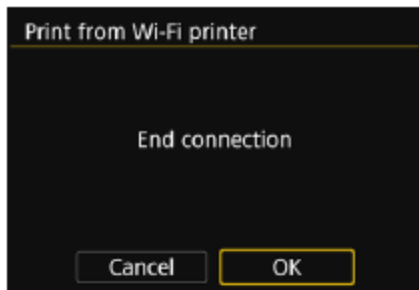

5 Terminate the connection.

- Press the <MENU> button to return to the screen in step 1.
- Press the <MENU> button again to display the confirmation dialog. Press the <▶> key to select [OK], then press <ⓈET> to terminate the connection.
- ▶ The [Wi-Fi function] screen will reappear.



 
- While connected, a picture cannot be taken even if the camera's shutter button is pressed.
- When sending a large number of images or large files (total size), make sure that the battery is adequately charged so it does not run out during the process.
- Movies cannot be printed.



You can also print RAW images taken with this camera.

Reconnecting

The camera can reconnect to a printer for which connection settings have been registered.

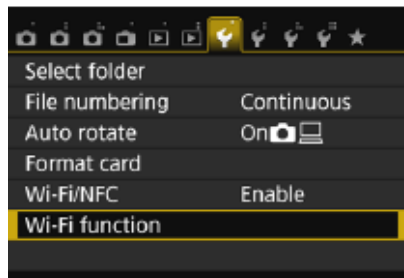


1 Select [Wi-Fi function].

- Under the [**1**] tab, set [**Wi-Fi/NFC**] to [**Enable**], then select [**Wi-Fi function**].



2 Select [**Print from Wi-Fi printer**].

 - Select [**Print from Wi-Fi printer**] and press < **SET** >.

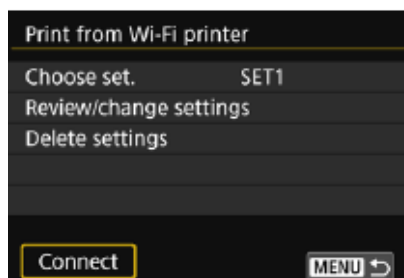

3 Establish a connection.

- Select [**Connect**] and press < **SET** >.
- On the confirmation dialog, select [**OK**].
- ▶ The camera will reconnect to the printer.
- When settings for multiple connection destinations are registered, select [**Choose set.**], select the connection destination, then connect to the destination.
- If the printer's connection destination has been changed, restore the setting to connect to the camera before performing this operation.



- If you do not know the SSID of the camera when reconnecting, select [**Review/change settings**] in step 3 to check it (p.135).
- When connected by selecting [**Easy connection**] in camera access point mode, “_Canon0A” is appended to the SSID of the camera.