

# **Getting Your Multifunction Back On Your Network After A Router Or Network Change**

**PIXMA MX712**

**Windows and Mac OS**

If any of the following situations exist

- You have replaced your Router or Access Point
- You want to use a different wireless network
- Router settings have been changed.

Please complete the following steps to apply the new configuration settings to your multifunction.


# Preparing to Connect My Multifunction To My Network

[<< Previous](#)

[Next >>](#)

## Network Requirements

Before connecting the machine to the network, make sure that configuration of the computer and access point or router is complete, and that the computer is connected to the network.

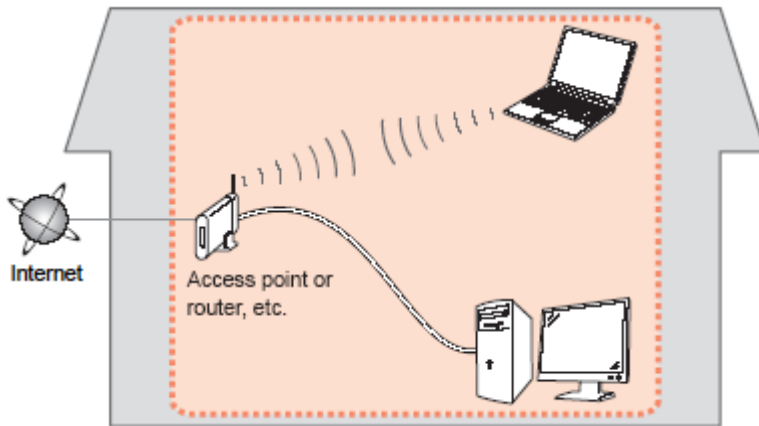

## Wireless Connection

Before connecting the machine to the network, the computer needs to be connected to the network. Make sure that configuration of the computer and access point or router is complete.

## Connect the PIXMA MX712 to Your Wireless Network

To re-establish communication on the network after changing the router / Access Point or when connecting to a different network, the settings on the Multifunction need to be changed

Simply insert the Setup CD-ROM that came with your printer into your CD-ROM drive and proceed through the easy to follow instructions On the following screen, select the Start Setup Again option

**Change Connection Method**

Change the connection method between the printer and computer from USB to LAN or from LAN to USB.

**Add Software**

Select software to add or reinstall it.

**Start Setup Again**

Start again from the initial installation to connection.

On the **Connection Method Selection** screens, be sure to select **Network Connection**, then **Wireless Connection**

## 1 -1 Connection Method Selection

Select a method to connect the printer.



Network Connection

Select this when using the printer with your computer without using a **USB** cable, or when sharing the printer with other computers. **Access point** or **router** is

## 1 -2 Connection Method Selection

Select a method to connect to the **network**.



Wireless Connection

Select this when connecting the printer to the network via Wi-Fi (without using a cable).

When the **Printer Setup** screen appears, click **Next**. You will be setting up the printer the same way as a first-time setup.

## 2 -1 Printer Setup

This section describes how to setup the printer on the **network** for the first time.

Follow the instructions until the **Completion of Connection** screen. It is not necessary to re-install the software. Click Next on the **Completion of Connection** screen, then click **Back**, then **Exit**. Setup is now finished

## 4 -7 Completion of Connection

The **network** connection setup is now complete.  
Click "Next", then wait until the next screen appears.

If you can't find your CD-ROM, you may download the MX710 series Mini Master Setup, which includes the same step-by-step installation as the CD-ROM, by following the instructions below:

1. [Click here to access the MX712 Drivers & Software page.](#)
2. Select the operating system and version of your computer (see example below).
3. Expand the '**Drivers**' section, if necessary, by clicking the red triangle.
4. Click on the '**MX710 series Mini Master Setup**' entry
5. After reading the details and disclaimer, click 'I Agree – Begin Download' and save the file to your computer.
6. Once the download is complete, double-click the file from its download location to begin the installation.

## Drivers & Software

Select an Operating System and OS Version from the drop down menu below then click on a category to view the latest supported files for your product. Click on the file description to navigate to download, then click on "I Agree - Begin Download" to start downloading.

Windows Windows 7 (x64)

Select Language:  English  Spanish  All

Show All

▼ Drivers		Sort by	Most Recent Post Date
File Description	Date	Size	
 <b>MX710 series Mini Master Setup (Windows 7/7 x64...</b>	03/01/12	23.39 MB	

7. Follow the same instructions as when using the Setup CD-ROM. See the [previous page](#)