



Connecting to a Printer

Connecting to a Printer

Connect the camera to a printer via Wi-Fi to print as follows.

When establishing a Wi-Fi connection with a printer, you can either use the camera as an access point (Camera Access Point mode) or use another access point.

Follow these instructions when using the camera as an access point. When using another access point, see [Connecting to Access Points in the List](#) (📖 98) in "Adding a Computer".



1 Access the Wi-Fi menu.

- Press the <▲> button.

2 Choose a printer.

- Press the <▲><▼><◀><▶> buttons to choose [🖨️], and then press the <FUNC SET> button.

3 Choose [Add a Device].


- Press the <▲><▼> buttons to choose [Add a Device], and then press the <FUNC SET> button.












4 Use the printer to connect to the network displayed on the camera screen.

- Choose the displayed SSID (network name) from the printer's Wi-Fi setting menu.
- Enter the encryption key displayed on the camera screen into the password field on the printer.

5 Choose the printer.

- Once the printer is ready for the connection, press the  button when the printer name is displayed on the camera.
- ▶ When the printer has been added successfully, the printing screen will be displayed.

6 Choose an image to print.

- Press the   buttons to choose an image.
- Press the , choose , and press the  button again to access the printing screen.
- Press the   buttons to choose [Print], and then press the  button.
- ▶ Printing now begins.
- For detailed printing instructions, see "Printing Images" ( 117).



- When you are in the vicinity of an access point that you have previously connected to, the camera will automatically connect to it in step 3. To change access points, select [Switch Network] from the screen that will be displayed when the connection is being established, and follow steps 4 – 5 in “Adding a Computer” (📖 96).
-



- You can connect to printers that you have already connected to by choosing them on the [Select a Device] screen in step 3.
- After you have accessed the Wi-Fi menu once, you can access it again by pressing the <▲> button. The recent target device is listed first, so you can easily connect again by pressing the <▲><▼> buttons to choose it. To add a new device, display the device selection screen by pressing the <◀><▶> buttons, and then configure the setting.

If you prefer not to display recent target devices, press the <MENU> button, and on the [⏮] tab, choose [Wi-Fi Settings] > [Target History] > [Off].