




Printing Images to a Wireless Printer Using a Direct Connection

The camera and a printer can be directly connected via a wireless LAN. Because the camera acts as an access point, no other access point is necessary, so you can print images easily no matter where you are. To print images via a Wi-Fi access point, see “Using a Wi-Fi Wireless LAN Access Point” (p.55).

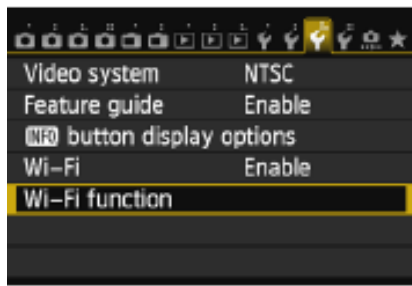


1 Select [Wi-Fi function].

- Under the [**3**] tab, set [Wi-Fi] to [Enable], then select [Wi-Fi function].




2 Select [**3**].

- Select [**3**] (Print from Wi-Fi printer) and press <SET>.

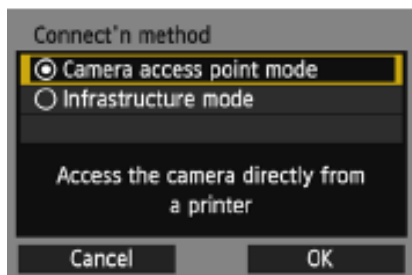

3 Select [Camera access point mode].

- Press the <▲▼> key to select [Camera access point mode], then press <SET>.
- Select [OK] and press <SET> to go to the next screen.

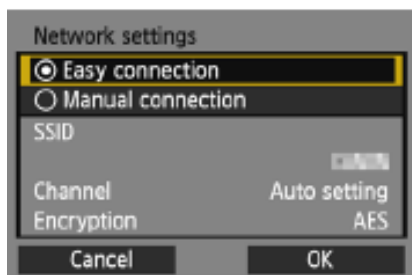


4 Select [Easy connection].

- Press the <▲▼> key to select [Easy connection], then press <SET>.
- Select [OK] and press <SET> to go to the next screen.
- For manual connection, see page 49.




5 Connect the printer.

- On the Wi-Fi settings menu of the printer to be used, select the SSID (network name) displayed on the camera's LCD monitor.
- For the password, enter the encryption key displayed on the camera's LCD monitor.
- For the printer operation procedure, refer to the printer's instruction manual.

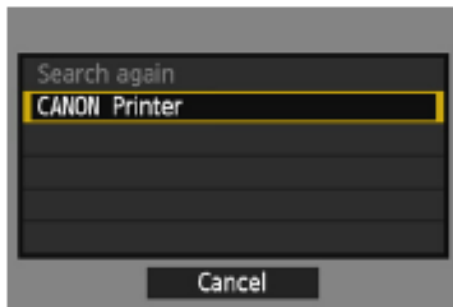


6 Select the printer to connect to.

- When a list of detected printers is displayed, select the printer to connect to and press <SET>.
- ▶ Some printers may make a beeping sound.
- When 16 or more printers are detected or search takes over 3 minutes, you can select [**Search again**].

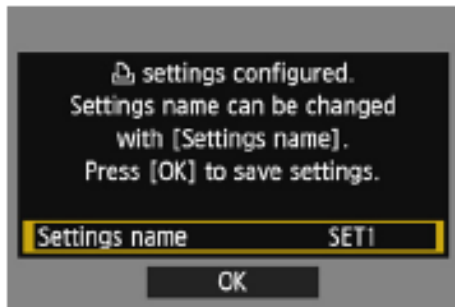


7 Perform further settings.

- To finish settings in this stage, press the <▲▼> key to select [OK], then press <SET> to go to step 8.
- To change the name of the settings, select [Settings name] and press <SET>.
- ▶ The virtual keyboard is displayed (p.14). Up to 30 characters can be entered for a settings name.

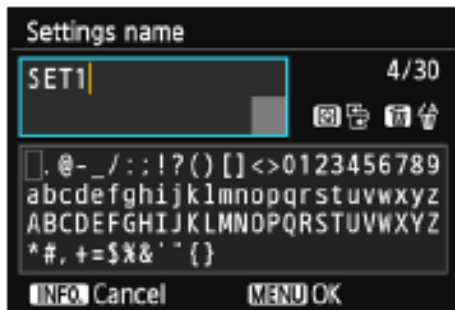

8 Save the settings.


- Select [OK] and press <SET> to save the settings.
- ▶ The [Connection] screen will be displayed.

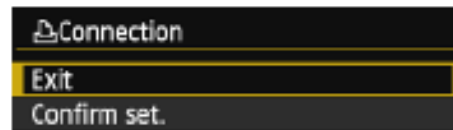

The settings for communicating with a printer are now complete.


When [Manual connection] Is Selected

Set [SSID], [Channel setting], and [Encryption settings] on each screen displayed.

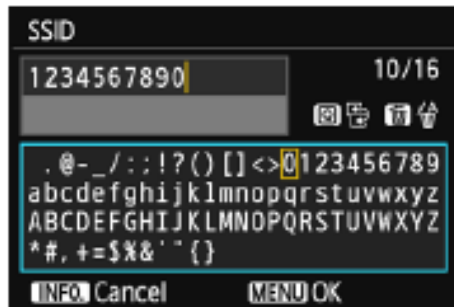


1 Enter an SSID.

- Enter any character using the virtual keyboard (p.14).
- When you are finished, press the <MENU> button.

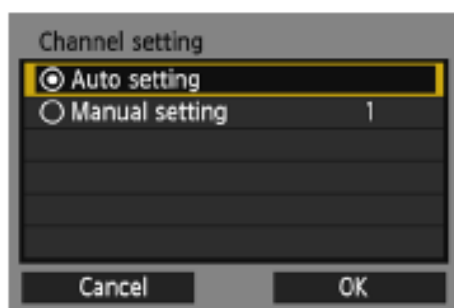

2 Select [Auto setting].

- Select [Auto setting] and press <SET>.
- Select [OK] and press <SET> to go to the next screen.
- To select manually, select [Manual setting] and turn the <DIAL> dial.

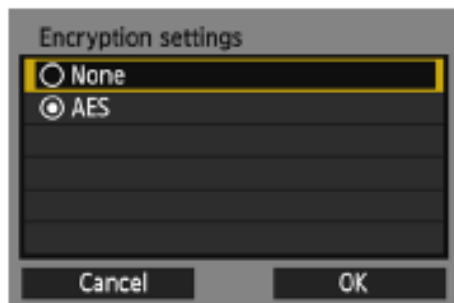

3 Select [None].

- Select [None] and press <SET>.
- Select [OK] and press <SET>. The screen shown in step 5 on page 47 will be displayed.
- For encryption, select [AES], then enter any encryption key using the virtual keyboard (p.14).

Printing



Play back an image.

- Press the <▶> button.
- ▶ An image is displayed and the <👁> icon appears on the upper left of the screen indicating that the printer is connected.
- For further operations, refer to “Printing Images” in the Camera Instruction Manual.
- You can also perform what is described in “Direct Printing of Print-Ordered Images” in the Camera Instruction Manual.