



Printing Images to a Wireless Printer Using a Direct Connection

The camera and a printer can be directly connected via a wireless LAN. Because the camera acts as an access point, no other access point is necessary, so you can print images easily no matter where you are. To connect via a Wi-Fi access point, see “Using a Wi-Fi Wireless LAN Access Point” (p.55).



 
1 Select [Wi-Fi function].

- Under the [**3**] tab, set [Wi-Fi] to [Enable], then select [Wi-Fi function].




2 Select [**Print from Wi-Fi printer**].

- Select [**Print from Wi-Fi printer**] and press <SET>.

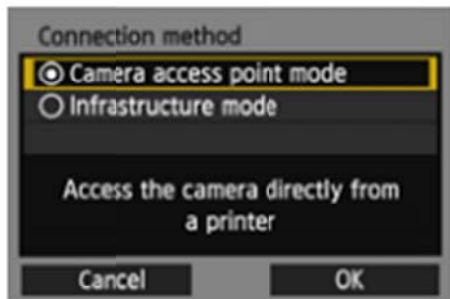

3 Select [Camera access point mode].

 - Press the <▲▼> key to select [Camera access point mode], then press <SET>.
- Select [OK] and press <SET> to go to the next screen.

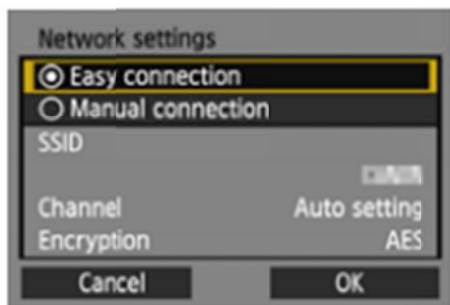


4 Select [Easy connection].

- Press the <▲▼> key to select [Easy connection], then press <SET>.
- Select [OK] and press <SET> to go to the next screen.
- For manual connection, see page 49.



5 Set the printer's Wi-Fi settings to connect to the camera.

 - On the Wi-Fi settings menu of the printer to be used, select the SSID (network name) displayed on the camera's LCD monitor.
- For the password, enter the encryption key displayed on the camera's LCD monitor.
- For the printer operation procedure, refer to the printer's instruction manual.

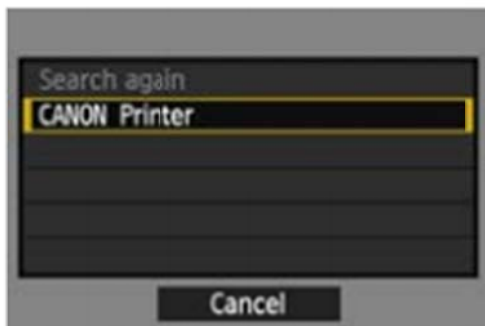


6 Select the printer to connect to.

- When a list of detected printers is displayed, select the printer to connect to and press **<SET>**.
- ▶ Some printers may make a beeping sound.
- When 16 or more printers are detected or search takes over 3 minutes, you can select [**Search again**].




7 Perform further settings.

 - To finish settings in this stage, press the <▲▼> key to select [OK], then press <SET> to go to step 8.
- To change the name of the settings, select [Settings name] and press <SET>.
- ▶ The virtual keyboard is displayed (p.14). Up to 30 characters can be entered for the name of the settings.

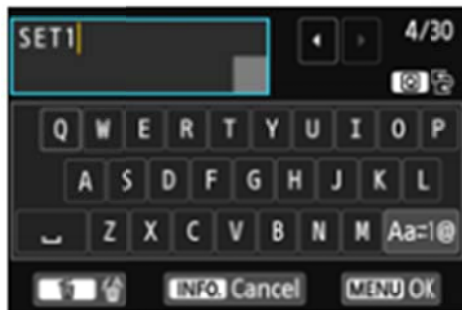

8 Save the settings.

 - Select [OK] and press <SET> to save the settings.
- ▶ The [Connection] screen will be displayed.

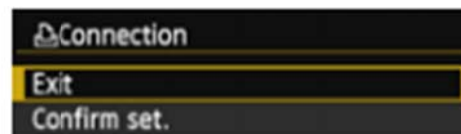

- To return to the menu, press the <MENU> button.

The settings for communicating with a printer are now complete.

 
When [Manual connection] Is Selected

If you have selected [Manual connection] in step 4 on page 46, set [SSID], [Channel setting], and [Encryption settings] on each screen displayed.




1 Enter an SSID.

- Enter any character using the virtual keyboard (p.14).
- When you are finished, press the <MENU> button.

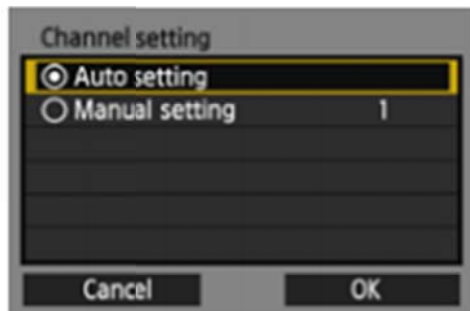

2 Select [Auto setting].

 - Select [Auto setting] and press <SET>.
- Select [OK] and press <SET> to go to the next screen.
- To select manually, select [Manual setting] and turn the <gear> dial.

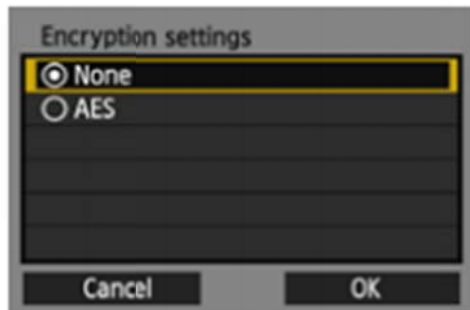

3 Select [None].

 
- Select [None] and press <SET>.
- Select [OK] and press <SET>. The screen shown in step 5 on page 47 will be displayed.
- For encryption, select [AES], then enter any encryption key using the virtual keyboard (p.14).



Play back an image.

- Press the <▶> button.
- ▶ An image is displayed and the <◀▶> icon appears on the upper left of the screen indicating that the printer is connected.
- For further operations, refer to "Printing Images" in the Camera Instruction Manual. You can also perform "Direct Printing of Print-Ordered Images".

Terminating the Connection

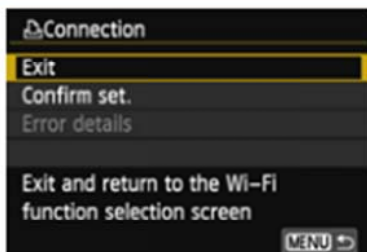

1 Select [Exit].

- If the screen on the left is not displayed, select [Wi-Fi function] under the [3] tab.
- Select [Exit] and press <SET>.



2 Select [OK].

- Press the <◀▶> key to select [OK], then press <SET> to terminate the connection.