




Printing Images to a Wireless Printer Using an Infrastructure Connection

To connect in camera access point mode, see “Using Camera Access Point Mode to Establish a Connection” (p.46).

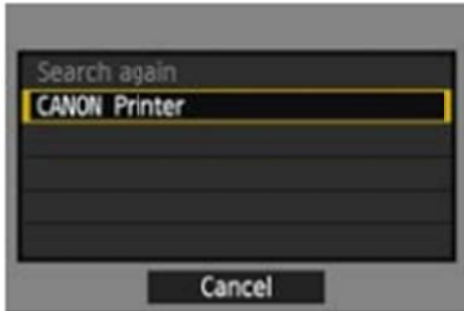

1 Select the printer to connect to.

- When a list of detected printers is displayed, select the printer to connect to and press **<SET>**.
- ▶ Some printers may make a beeping sound.
- When 16 or more printers are detected or search takes over 3 minutes, you can select [**Search again**].



2 Perform further settings.

- To finish settings in this stage, press the **<▲▼>** key to select [**OK**], then press **<SET>** to go to step 3.
- To change the name of the settings, select [**Settings name**] and press **<SET>**.
- ▶ The virtual keyboard is displayed (p.14). Up to 30 characters can be entered for the name of the settings.






3

Save the settings.

- Select [OK] and press <SET> to save the settings.
- ▶ The [Connection] screen will be displayed.

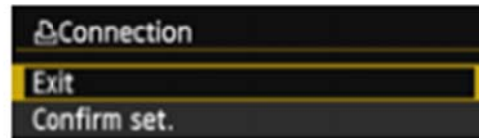

- To return to the menu, press the <MENU> button.

The settings for networking with the printer are now complete.

Printing



Play back an image.

- Press the <▶> button.
- ▶ An image is displayed and the <🔊> icon appears on the upper left of the screen indicating that the printer is connected.
- For further operations, refer to “Printing Images” in the Camera Instruction Manual. You can also perform “Direct Printing of Print-Ordered Images”.

Terminating the Connection



1

Select [Exit].

- If the screen on the left is not displayed, select [**Wi-Fi function**] under the [**3**] tab.
- Select [**Exit**] and press <SET>.



2

Select [OK].

- Press the <◀▶> key to select [OK], then press <SET> to terminate the connection.