



Connecting to a printer and printing via Wi-Fi (PowerShot SX60
HS / PowerShot G7 X)

You can connect your camera to a printer and print using Wi-Fi.

When establishing a wireless connection with a printer, you can either use the camera as an access point (Camera Access Point Mode) or use another access point.

IMPORTANT

- This camera requires a PrintBridge-compatible printer (supporting DPS over IP) for printing via Wi-Fi.
- The position and shape of the operation buttons, screens displayed, and setting items may differ according to the model you use.

NOTE


- Connections require that a memory card with saved images be in the camera.
- Follow these instructions when using the camera as an access point.

To connect using another access point, please refer to Sending images to a computer (Wi-Fi function).

Connecting your camera and printer via Wi-Fi

Register the printer you want to connect to using Wi-Fi.


1. Press the <Playback> () button to turn the camera on.
2. Press the [] button.

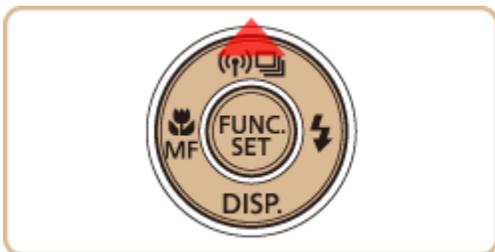

NOTE

When making Wi-Fi settings for the first time, a screen will appear for you to register a nickname for the camera.

This nickname will be displayed on the screen of target devices when connecting to other devices via Wi-Fi.

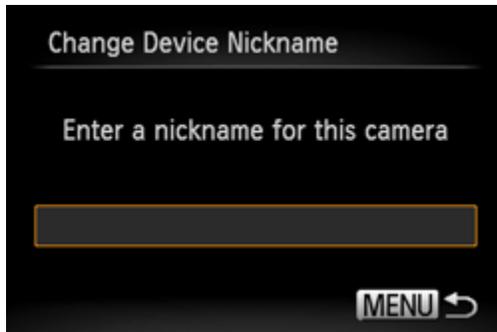

- Press the <FUNC./SET> () button to access the keyboard, and use it to enter a nickname for the camera.

3. Press the <▲><▼><◀><▶> buttons, to choose [], and then press the <FUNC./SET> () button.




4. Press the <▲><▼> buttons to choose [Add a Device], and then press the <FUNC./SET> () button.



NOTE

- Once a printer is added, the printer name will be displayed on the screen in step 4. To connect to a printer again, simply choose the printer name from the list.
- Once you have connected to devices via the Wi-Fi menu, recent destinations will be listed first when you access the Wi-Fi menu. You can easily connect again by pressing the <▲><▼> buttons to choose the device and then pressing the <  > button. To add a new device, display the device selection screen by pressing the <◀><▶> buttons, and then configure the setting. If you prefer not to display recent target devices, choose MENU > [] tab > [Wi-Fi Settings] > [Target History] > [Off].

5. Choose the displayed SSID (network name) from the printer's Wi-Fi setting menu.

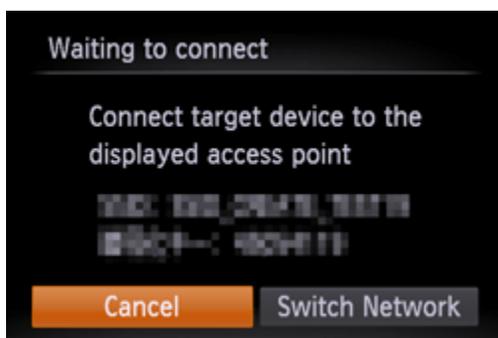

6. Once the printer is ready for the connection, the printers name will be displayed on the camera.

Press the <FUNC./SET> () button.

- The printer is added and the printing screen appears.



Printing Images

7. Press the <◀>> buttons to choose an image, and then press the <FUNC./SET> () button to access the printing screen.

8. The screen for specifying the print settings appears.




① Press the <◀>> buttons to choose the number of prints.

If you want to print the shooting date, press the ② <◀>> buttons to set the date.

Then, choose ③ [Paper Settings].


9. The screen for setting the paper size appears.

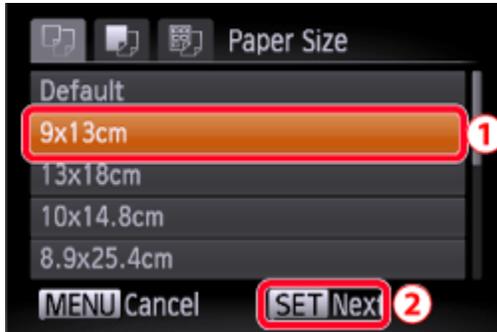

① Press the <▲><▼> buttons to choose the paper size, and then press the ② <FUNC./SET> (FUNC SET) button.

([9x13cm] has been selected in the example image above.)


10. The screen for setting the paper type appears.

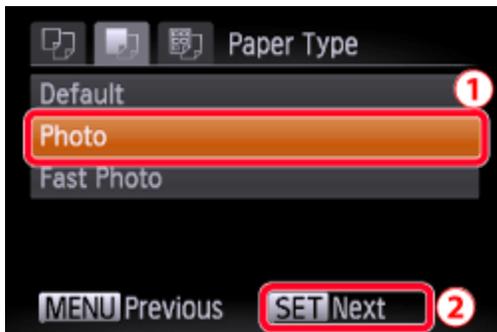

① Press the <▲><▼> buttons to choose the paper type, and then press the ② <FUNC./SET> (FUNC SET) button.

([Photo] has been selected in the example image above.)


11. The layout (border) settings screen appears.

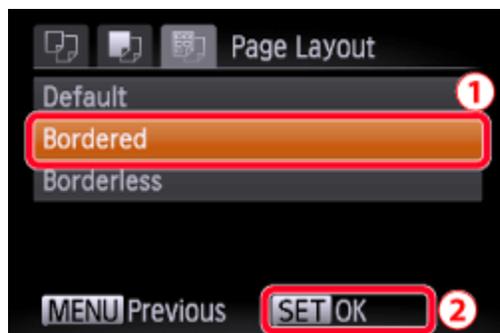

① Press the <▲><▼> buttons to choose a layout, and then press the ② <FUNC./SET> (FUNC SET) button.

([Bordered] has been selected in the example image above.)

12. The camera returns to the print setting screen

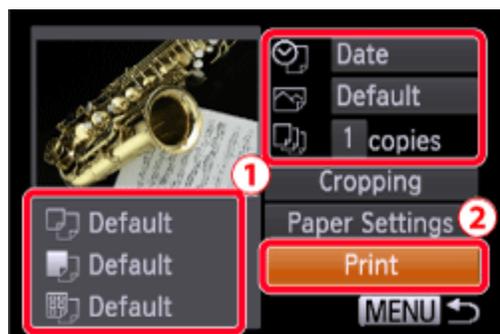

① Make sure that the settings are correct.

② Press the <FUNC./SET> (FUNC SET) with [Print] selected to begin printing.