

Obtaining Your Network Key

PIXMA MG8120

Windows OS




Obtaining Your Network Key

PIXMA MG8120

Windows OS

Introduction	3
Download the Canon PIXMA Wireless Setup Assistant	4
Using the Canon PIXMA Wireless Setup Assistant	6
TroubleShooting	7

If you are unable to proceed to the next step after any of the following screens are displayed when inputting the wireless LAN settings, you may be able to retrieve the access point name / network name (SSID), or the network key (WEP key / passphrase) using the Canon PIXMA Wireless Setup Assistant.

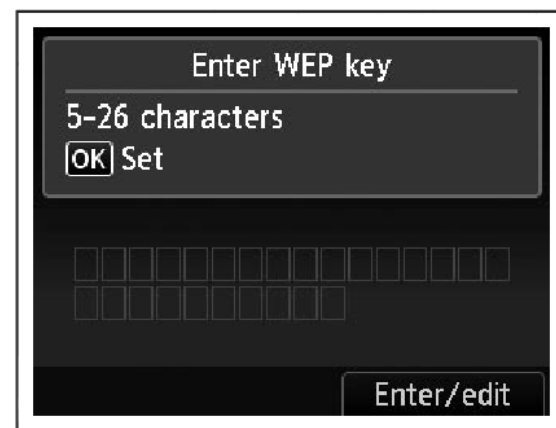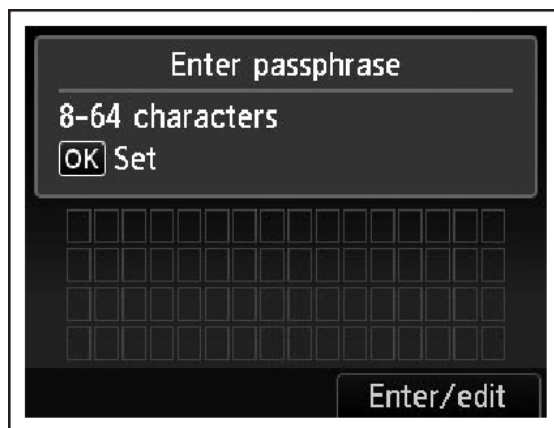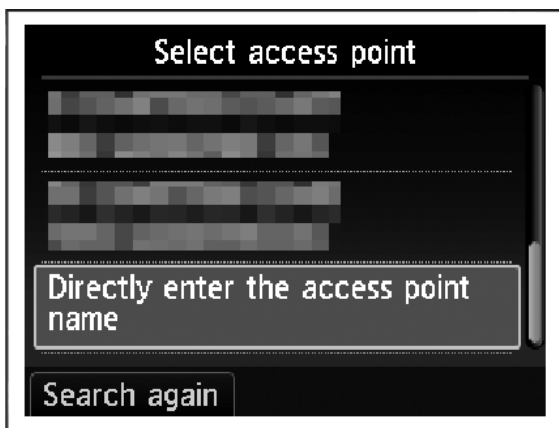

Note : The Wireless Setup Assistant is supported on the following operating systems only:

- Windows XP SP3 or later
- Windows XP x64 Edition SP3 or later
- Vista (32 & 64 bit)
- Windows 7 (32 & 64 bit)

Download the Canon PIXMA Wireless Setup Assistant


[<< Previous](#)

[Next >>](#)

Step One

Go to the [Drivers & Software](#) link for the MG8120.

Choose your Operating System (OS) in the **Select OS** dropdown list

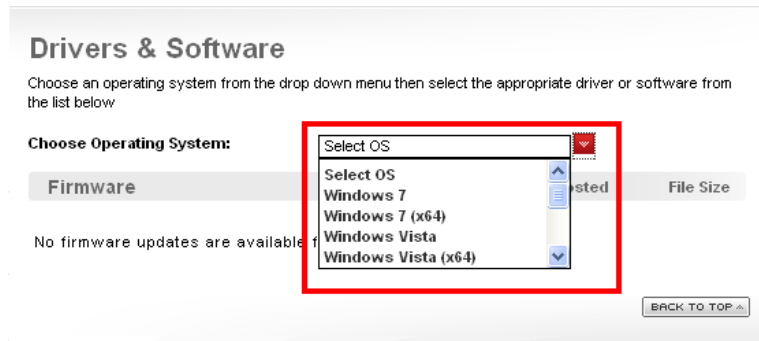

Step Two

In the **Software** section, click the link for the Canon PIXMA Wireless Setup Assistant (Windows).

In the example below the link is CanonAPChkTool_win210en.exe.*

Software	Date Posted	File Size
▶ CanonAPChkTool_win210en.exe Canon PIXMA Wireless Setup Assistant (Windows)	01/05/2010	1.03MB

The link name may vary by Operating System

Step Three

On the next screen, read the information and instructions and click **I Agree - Begin Download**

Choose to "Save" the file.

Important: Write down the file name and the location to where the file is being saved.

Using the Canon PIXMA Wireless Setup Assistant:




[<< Previous](#)

[Next >>](#)

Step One

Display the window for selecting access point using the buttons on the printer.

Please refer to the Getting Started Guide if you are unable to display the below window on the LCD screen.

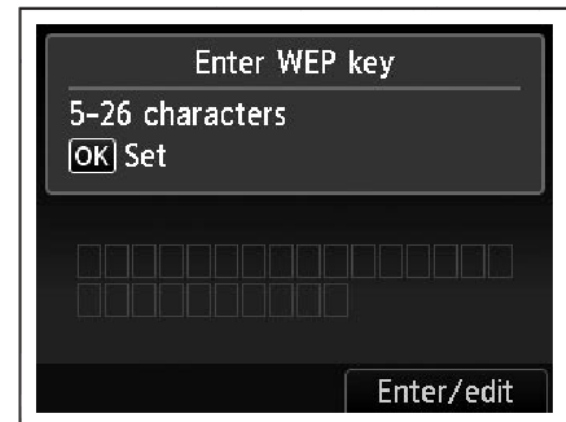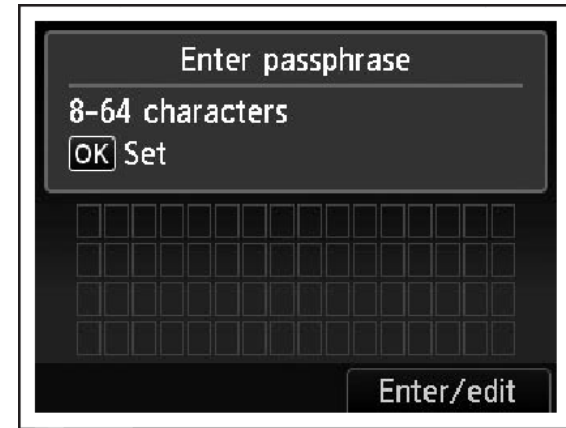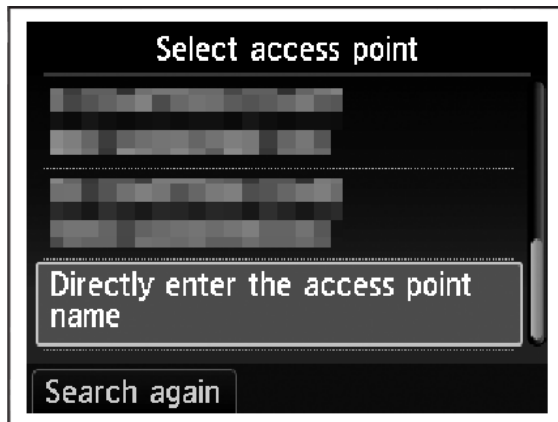

Using the Canon PIXMA Wireless Setup Assistant:

[<< Previous](#)

[Next >>](#)

Step Two

Double-click the file you downloaded.

This will create a folder of the same name as the file and this folder will be in the same location.



Example

Step Three

Open the folder and double-click the **CNMNPHLP.EXE** file.



Using the Canon PIXMA Wireless Setup Assistant:

[<< Previous](#)

[Next >>](#)

Step Four

Read the License Agreement, and then click **Yes** when you accept the agreement.



Using the Canon PIXMA Wireless Setup Assistant:

[<< Previous](#)

[Next >>](#)


Step Five

The tool "Canon PIXMA Wireless Setup Assistant" is launched.

Confirm that the same access point names are listed in the following window as the ones in the Access Points window displayed on the printer unit (Step One).

Then, write down the Network Key of the access point.

NOTE: The Network Key may be displayed with text of the letters A to F (base 16 number). Write the number down as-is.

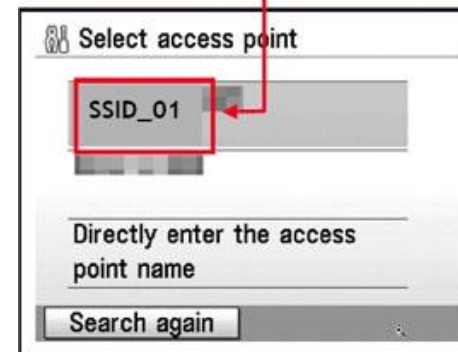

Using the Canon PIXMA Wireless Setup Assistant:

[<< Previous](#)


[Next >>](#)

Step Six

1. In the window for selecting access point of the printer unit, select the access point specified in step 4, then touch the OK button.
2. Touch the right function button (below Enter / edit). Enter the network Key or Passphrase.



3. When finished entering the Network Key, touch the Left function button (below **Done**)

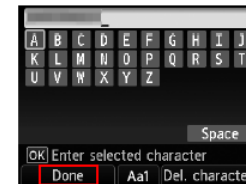


4. Touch the OK button to connect to the access point.

Using the Canon PIXMA Wireless Setup Assistant:

[<< Previous](#)


Step 7

When **Connected to the access point** displayed, touch the **OK** button. Proceed with the remainder of the setup as described in the Getting Started Guide.

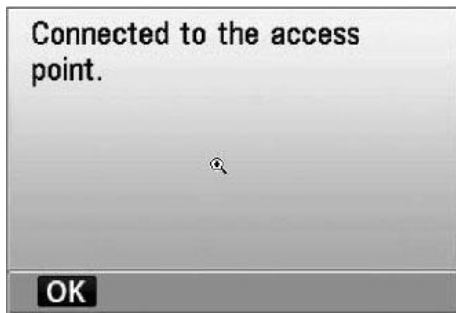

Troubleshooting

If the following error message below is displayed.

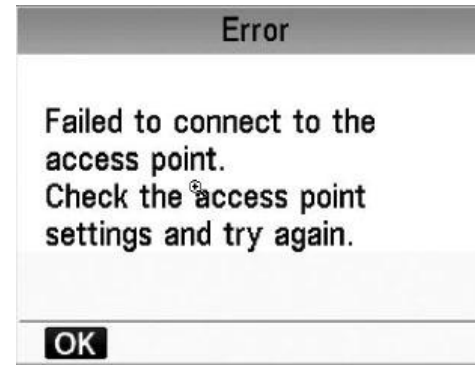

The entered network key may not match with the access point you specified.

1. Touch the **OK** button
2. You will return to the screen for entering the network key.
3. Then repeat Step Five.