



Connecting to a printer and printing via Wi-Fi (PowerShot G3 X)

You can connect your camera to a printer and print using Wi-Fi.

When establishing a wireless connection with a printer, you can either use the camera as an access point (Camera Access Point Mode) or use another access point.

IMPORTANT

- This camera requires a PrintBridge-compatible printer (supporting DPS over IP) for printing via Wi-Fi.

NOTE


- Connections require that a memory card with saved images be in the camera.
- Follow these instructions when using the camera as an access point.

To connect using another access point, please refer to Sending images to a computer (Wi-Fi function).

Connecting your camera and printer via Wi-Fi

Register the printer you want to connect to using Wi-Fi.


1. Press and hold the Playback (▶) button to turn the camera on.
2. Press the [Wi-Fi] button.

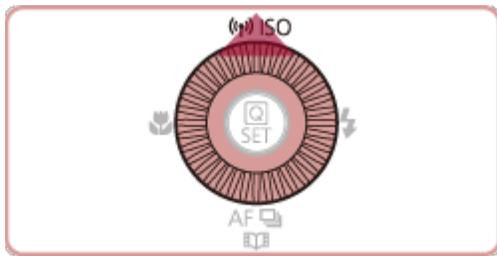

NOTE

When making Wi-Fi settings for the first time, a screen will appear for you to register a nickname for the camera.


This nickname will be displayed on the screen of target devices when connecting to other devices via Wi-Fi.

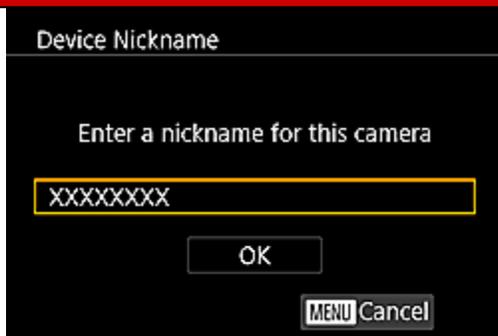

If the [Device Nickname] screen is displayed, press the [▲], [▼] buttons to choose [OK], and then press the [SET] button.

You can change the device nickname (display name) that is displayed on the camera. To change the nickname, press the [▲], [▼] buttons to choose [Change Device Nickname] and press the [SET] button.

3. Press the [▲], [▼], [◀], [▶] buttons to choose [📄], and then press the [SET] button

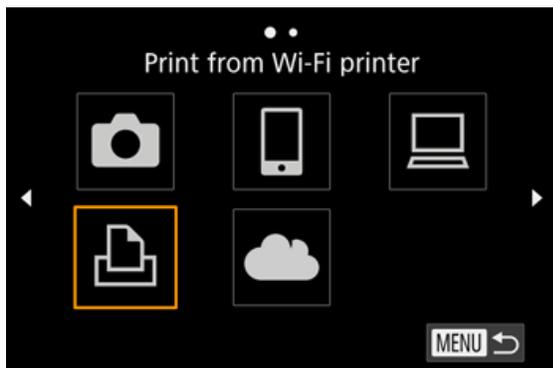


4. Press the [▲], [▼] buttons to choose [Add a Device], and then press the [SET] button.



NOTE


- Once a printer is added, the printer name will be displayed on the screen in step 4. To connect to a printer again, simply choose the printer name from the list.
- Once you have connected to devices via the Wi-Fi menu, recent destinations will be listed first when you access the Wi-Fi menu. You can easily connect again by pressing the [▲], [▼] buttons to choose the device and then pressing the [SET] button. To add a new device, display the device selection screen by pressing the [◀], [▶] buttons, and then configure the setting. If you prefer not to display recent target devices, choose MENU > [4] tab > [Wi-Fi Settings] > [Target History] > [Off].

5. Choose the displayed SSID (network name) from the printer's Wi-Fi setting menu.

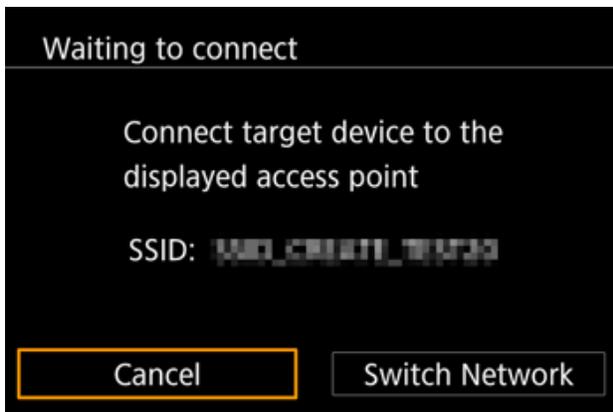


6. Once the printer is ready for the connection, the printers name will be displayed on the camera. Press the [SET] button.

- The printer is added and the printing screen appears.

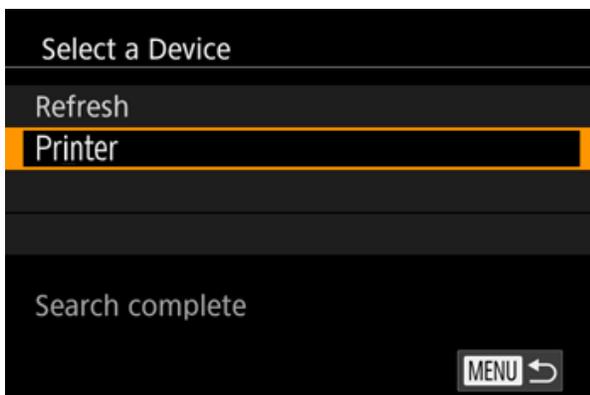


Printing Images


7. Press the [◀], [▶] buttons or turn the [🌀] dial to choose the desired image.

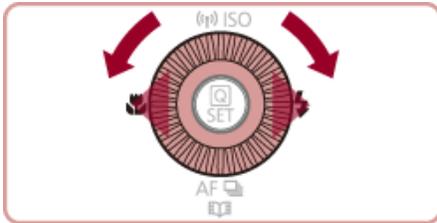

8. Press the camera's [📷/SET] button, choose [📄], and then press the [📷/SET] button again.

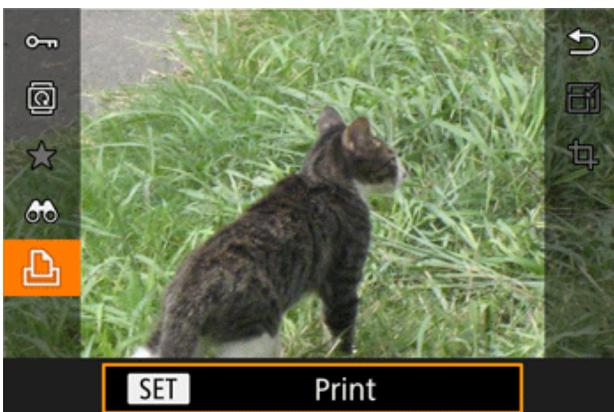

9. The screen for specifying the print settings appears.

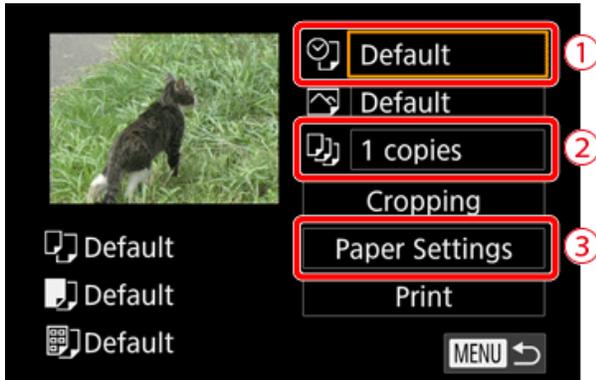

To add the date to images, press the [▲], [▼] buttons or turn the [●] dial to choose ①. Then, press the [SET] button and make the settings.

To specify the number of prints, press the [▲], [▼] buttons or turn the [●] dial to choose ②. Then, press the [SET] button and make the settings.

③ Press the [▲], [▼] buttons or turn the [●] dial to choose [Paper Settings], and then press the [SET] button.

10. The screen for setting the paper size appears.



Choose the desired paper size, and then press the [SET] button.

[Default] has been selected in the example image above.


11. The screen for setting the paper type appears.



Choose the paper type, then press the [] button.

[Photo] has been selected in the example image above.


12. The layout (border) settings screen appears.

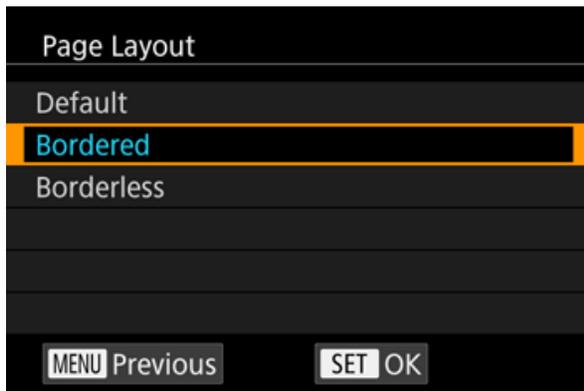

Choose the layout type, then press the [] button.

[Bordered] has been selected in the example image above.

13. The camera returns to the print setting screen.

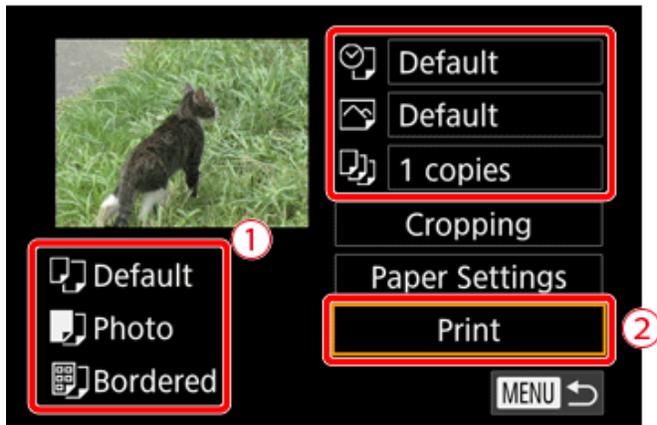

① Make sure that the settings are correct.

② Press the [] button with [Print] selected to begin printing.