

# Getting Your Multifunction Back On the Network After A Router Or Network Change PIXMA MG5620

**Windows OS** 

# Getting Your Multifunction Back On the Network After A Router Or Network Change

PIXMA MG5620 Windows OS

Preparing to Connect My Multifunction to My Network	3
Network Requirements	3
Notes on Wireless Connection	4
Setting up the Network Connection	5

#### Information

#### **Important**

If any of the following situations exist


- You have replaced your Router or Access Point
- You want to use a different wireless network
- Router settings have been changed.

Please complete the following steps to apply the new configuration settings to your multifunction.

# Preparing to Connect the Multifunction To the Network

#### **Network Requirements**


Before connecting the machine to the network, make sure that configuration of the computer and access point or router is complete, and that the computer is connected to the network.

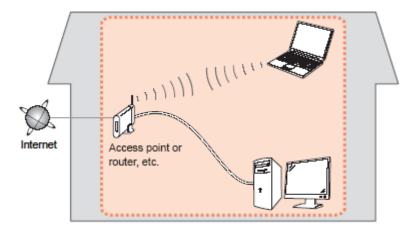


#### **Wireless Connection**

Before connecting the machine to the network, the computer needs to be connected to the network. Make sure that configuration of the computer and access point or router is complete.

# Preparing to Connect the Multifunction To the Network

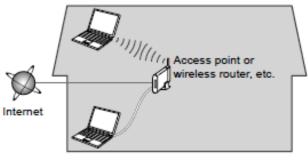



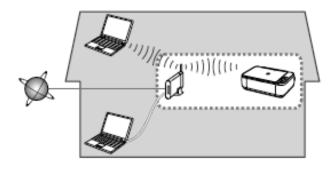

#### **Notes on Network Connection**

- The configuration, router functions, setup procedures and security settings of the network device vary depending on your system environment. For details, refer to your device's instruction manual or contact its manufacturer.
- In an office setup, consult your network administrator
- If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.
- Place the machine and computer on the same network segment.

#### **Software Installation**

To use the machine by connecting it to a computer, software including the drivers needs to be copied (installed) to the computer's hard disk. Installation time varies depending on the computer environment or the number of application software to be installed.

#### **IMPORTANT**


- Log on as the administrator (or a member of the Administrators group).
- Quit all running applications before installation.
- Do not switch users during the installation process.
- Internet connection may be required during the installation. Connection fees may apply. Consult the internet service provider.
- It may be necessary to restart your computer during the installation process. Follow the on-screen instructions and do not remove the Setup CD-ROM during restarting. The installation resumes once your computer has restarted.
- If the firewall function of your security software is turned on, a warning message may appear that Canon software is attempting to access the network. If such a warning message appears, set the security software to always allow access.

#### **Installing the PIXMA MG5620 on Your Wireless Network**

When you reinstall your printer on your network because of a router or network change, you follow the same procedure as for a first time install. A step-by-step walk through of the wireless setup is built in to the installation routine of the software that shipped with your PIXMA.

Insert the Setup CD-ROM \* that came with your printer into your CD-ROM drive and proceed through the easy to follow instructions

If the following screen appears, click Start Setup Again

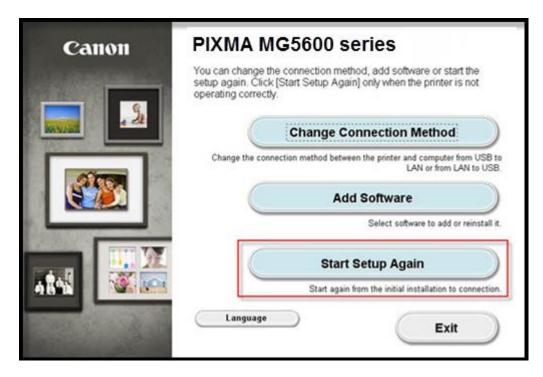

The setup program will start automatically. The setup instructions presented in this document describe the "Cableless Setup" method which does not require the need to know the Access Point / SSID (network name), or network password and does not require the printer to be temporarily connected to the computer with a USB cable.


The **Cableless Setup** is not supported in Windows XP. For Windows XP Users: Use the "<u>Standard Setup</u>" method. You will need to know your Access Point name and Network Password when using the Standard setup.

\*If you don't have or cannot use the Setup CD-ROM, follow the steps below to start the setup.


- Download the software (click the link to download)
- Double-click the downloaded .exe file (Win-mg5600-1\_0-ucd.exe)

If the User Account Control dialog box appears during the setup, click Yes or Continue.


Click **Next** on the initial screen.

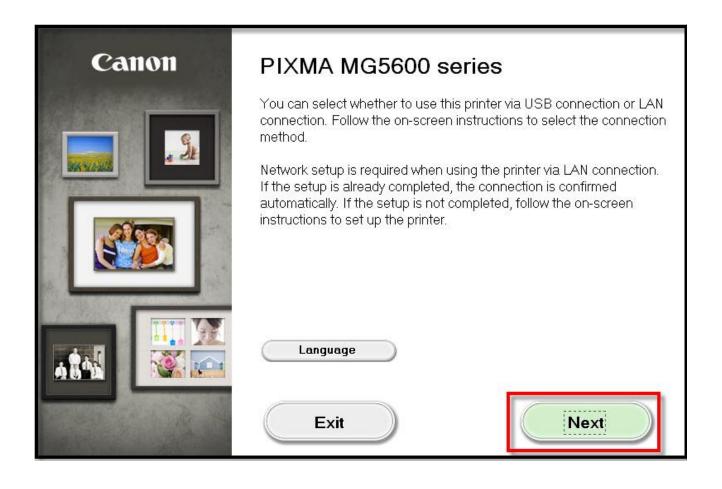


On the following screen, select Wireless LAN Connection, then click Next.

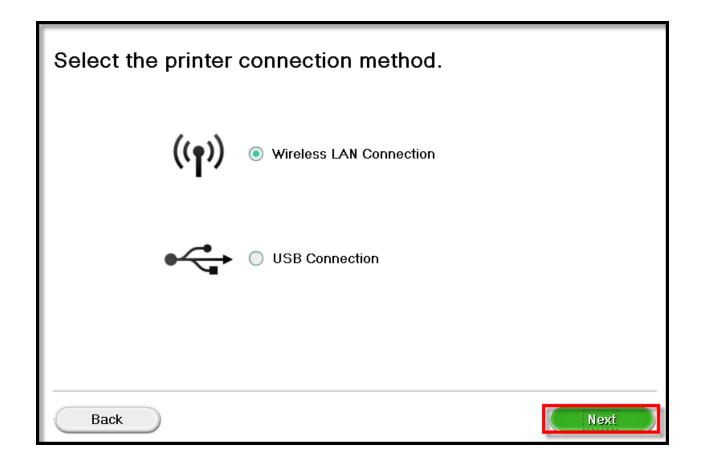


On the following screen, select Access Point Connection, then click Next.

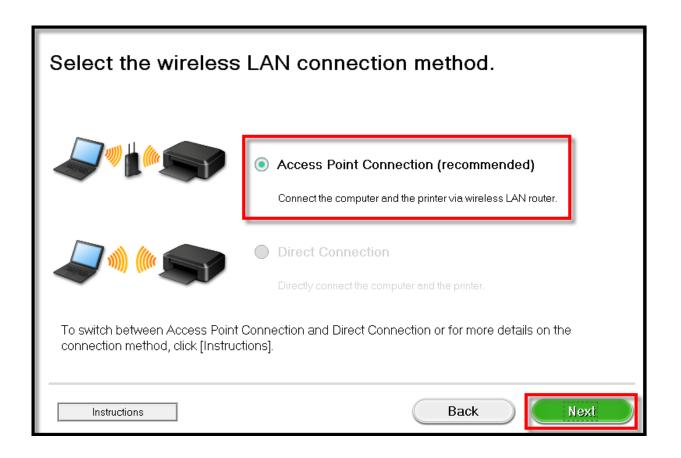


Continue following on-screen instructions. On the **Printers on Network List** screen, check the **Setting printer could not be found on the list** checkbox and click **Next**.

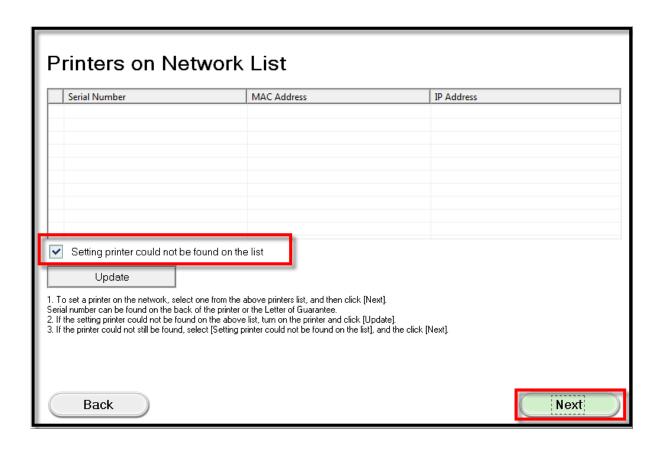


Follow the instructions on the **Printer Setup** screens (1-1 and 1-2) to select **Wireless LAN setup**.

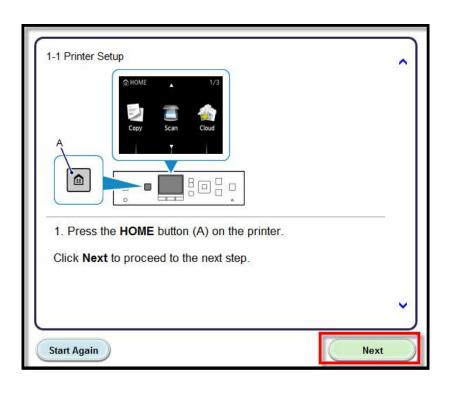

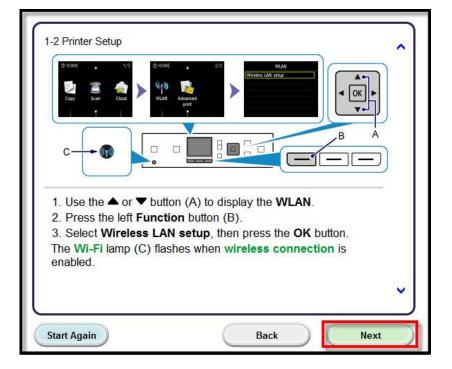

Continue to follow on-screen instructions.


Select Other Methods on the Setup Procedure Selection screen (2-1).

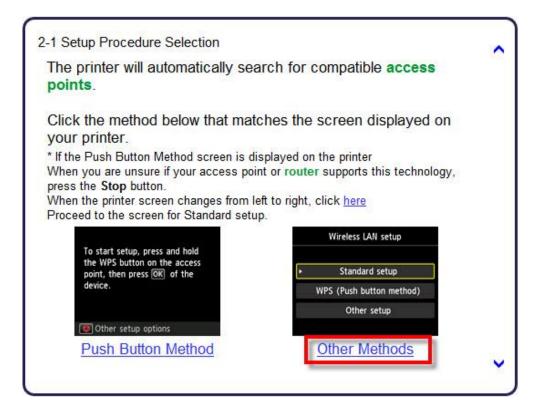


\*Note: If your printer's display looks like the screen shown above Push Button Method in the Setup Procedure Selection screen (2-1), push the Stop button on the printer before proceeding to the next instruction

Continue to follow on-screen instructions.


Select Other setup on the Setup Procedure Selection screen (2-2).

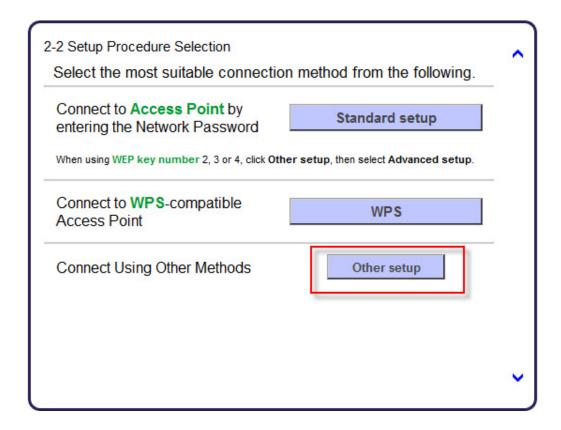


Select Cableless setup on the Setup Procedure Selection screen (2-3).

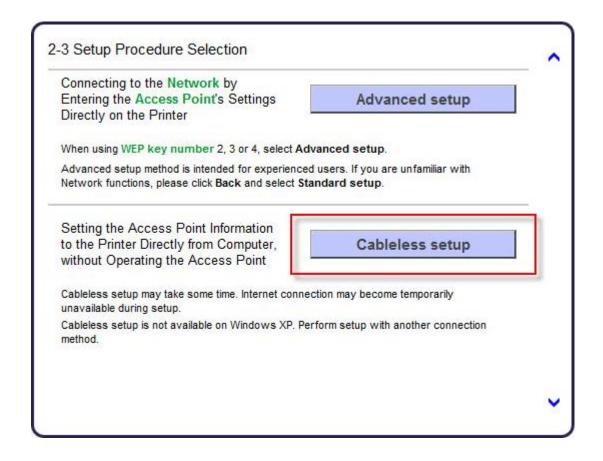


Select Other setup and press the OK button on your printer. Click Next on the Connection via Cableless setup screen. (3-1).

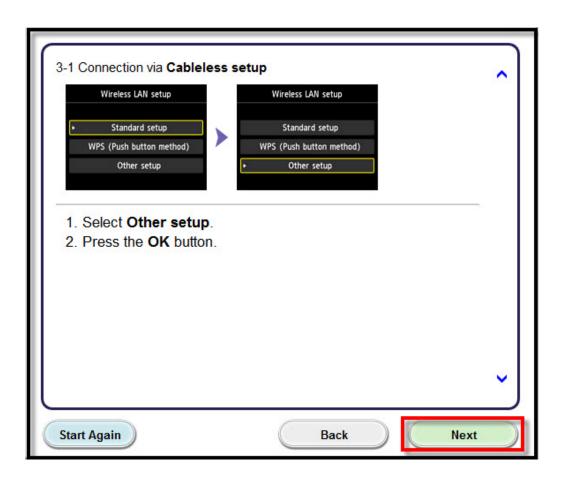


Select Cableless setup and press the OK button on your printer. Click Next on the Connection via Cableless setup screen. (3-2).

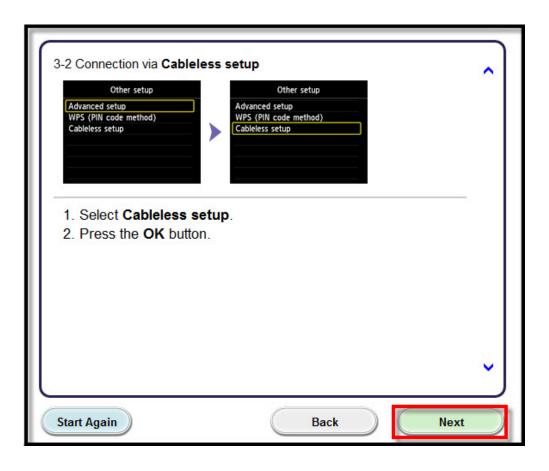

Press the **OK** button on your printer. When "Follow the instructions on the computer or smartphone...." appears on the printer's screen, click **Next** on the **Connection via Cableless setup** screen. (3-3).

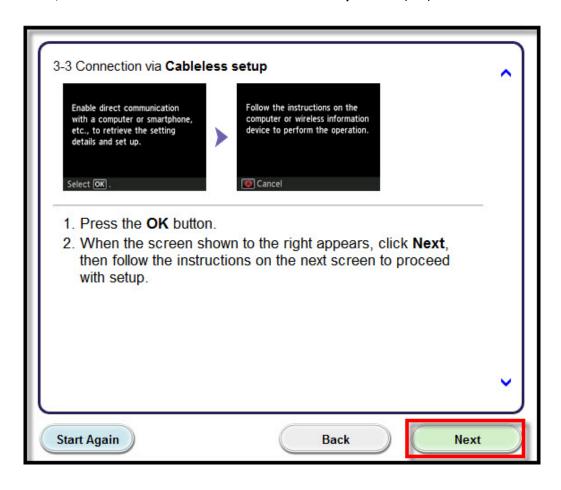


Click **Next** on the **Connection completed** screen.

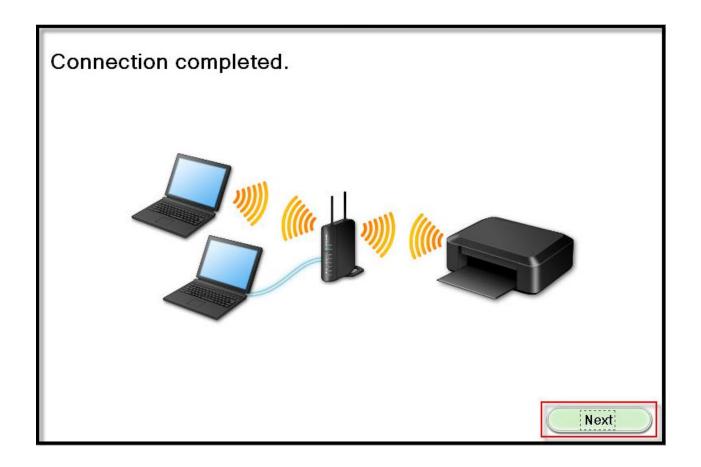

#### Installing the Drivers & Software

Continue following on-screen instructions. On the **Software Installation List**, select \*software to install and click **Next**.


\*MP Drivers is required and cannot be deselected. We recommend installing My Image Garden and Quick Menu to take full advantage of the printer's features. It is not necessary to reinstall these additional applications if they were installed previously.

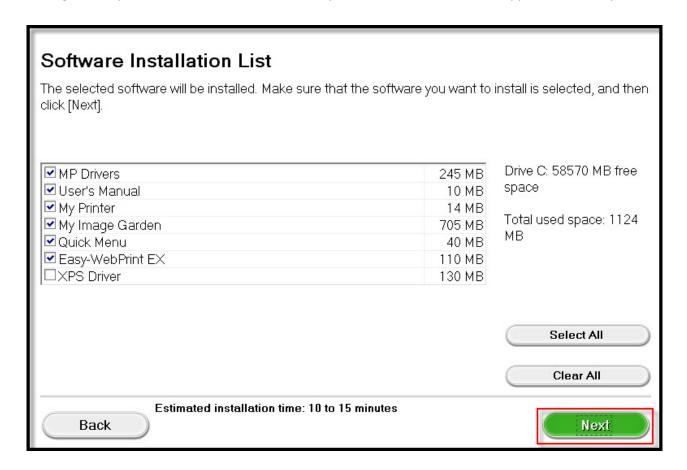

## Installing the Drivers & Software

Continue following on-screen instructions.

When the **Setup Completion** dialog box appears, click **Complete**.

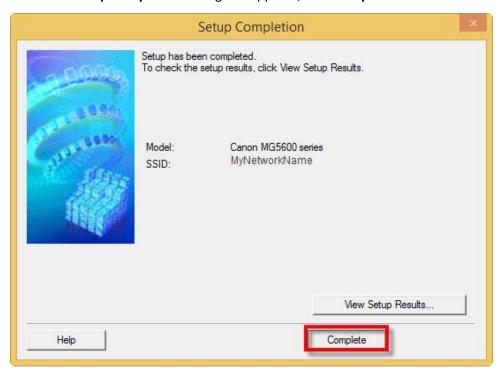

At this point, setup of the printer and network is complete. Continue to follow any remaining on-screen instructions to finish and exit the setup program.