


Connecting to a Wireless LAN by Setting the IP Address


Connecting to a wireless LAN by setting the IP address

This section explains how to enter an <u>IP address</u> manually. In the [Network Setup] process for [Wi-Fi Setup], this is the step that comes after you have connected to the wireless router (access point). Please see the following for information about the steps involved in connecting to the wireless router.

- Connecting to a Wireless LAN (WPS Setup)
- Connecting to a Wireless LAN (Manual Setup)
- 1. Touch [Manual].

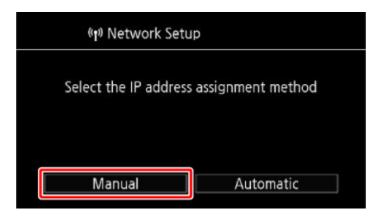


2. Touch the field under [IP Address] or [Subnet Mask].

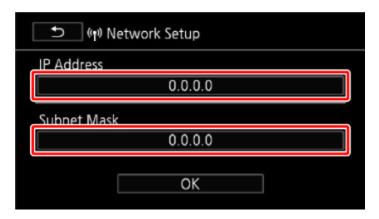

Connecting to a wireless LAN by setting the IP address


Enter the IP address or subnet mask and then touch [OK].

- Please confirm the settings of the wireless router ahead of time when entering this information.

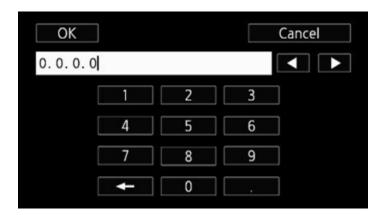


Touch [OK] after making the various settings.

3. Enter the <u>default gateway</u> and then touch [OK].

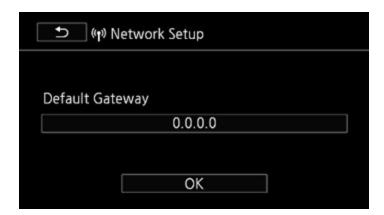

Connecting to a wireless LAN by setting the IP address

4. Enter the <u>primary and secondary DNS servers</u> (a progression of four sets of digits) and then touch [OK].

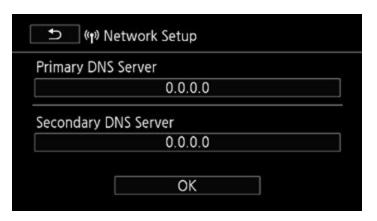

- A screen to test the settings will appear.
- 5. Save the settings of the connection point. Touch [Yes] and [OK] in that order.