



AirPrint and Printer Firmware Setup Guide

PIXMA MX712

To use AirPrint with your printer, your firmware may need to be updated with our Printer Update Utility.

This article contains information on **what is needed to perform the firmware update** if the update is needed.

Firmware is the set of instructions built into your printer. These instructions set and control all of the functions that the printer can do. Think of firmware as the printer's operating system.

To get set to use Airprint with your printer, refer to the steps on the next page.

AirPrint and Printer Firmware Setup Guide

Check to see whether or not a firmware upgrade is needed

[Click here](#) to check if the firmware update is necessary

If a firmware upgrade is needed, the following items are required.

- USB cable
- PIXMA MX712
- A computer with the printer drivers already installed

If a firmware upgrade is needed, perform the following steps. Click the links for instructions.

1. [Download the Printer Update Utility](#)
2. [Perform the Firmware Update](#)
3. [Delete the additional Printer Listing](#)

If a firmware upgrade is not needed or you have successfully completed the upgrade procedure, information is available on using AirPrint with your Canon printer. [Click here for information](#).