 


Setting Up Your MX340 In Default Mode (Tel Priority Mode) Without An Answering Machine

 
Connecting The Phone Lines

Fax to Phone Line Connection

Before

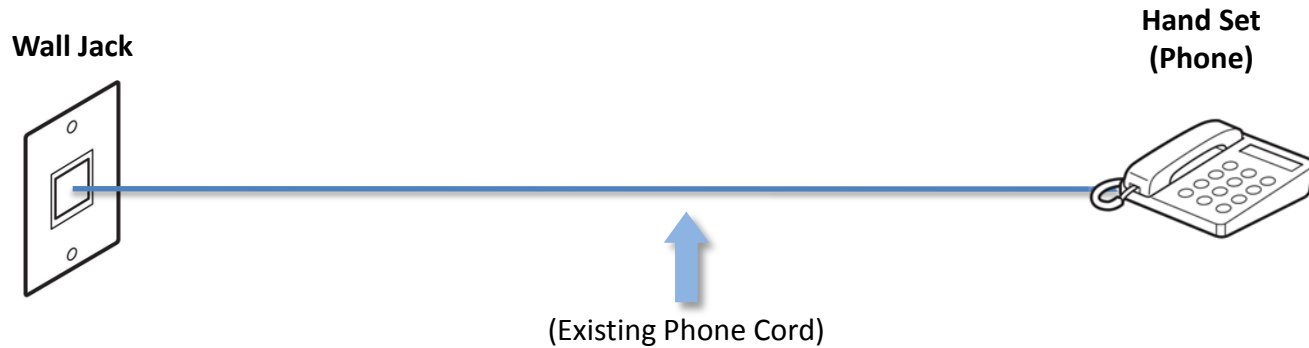


After

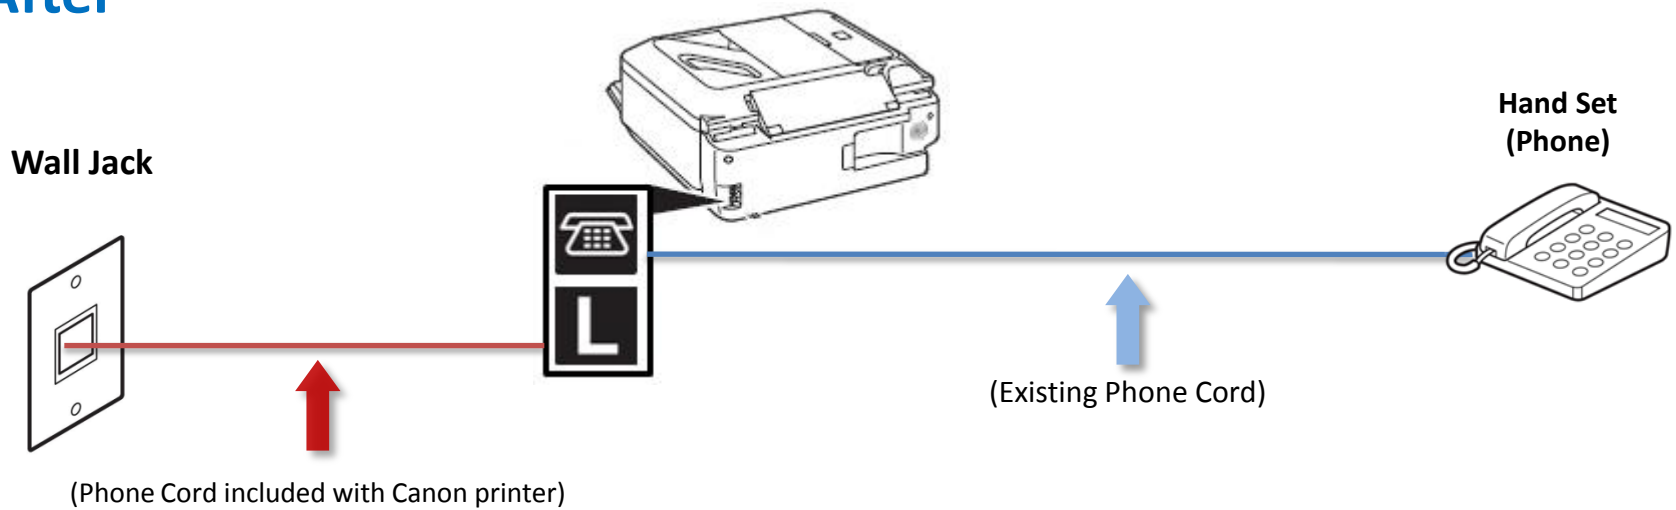


Fax to Phone Line Connection

 - Plug the provided phone cord into the wall jack

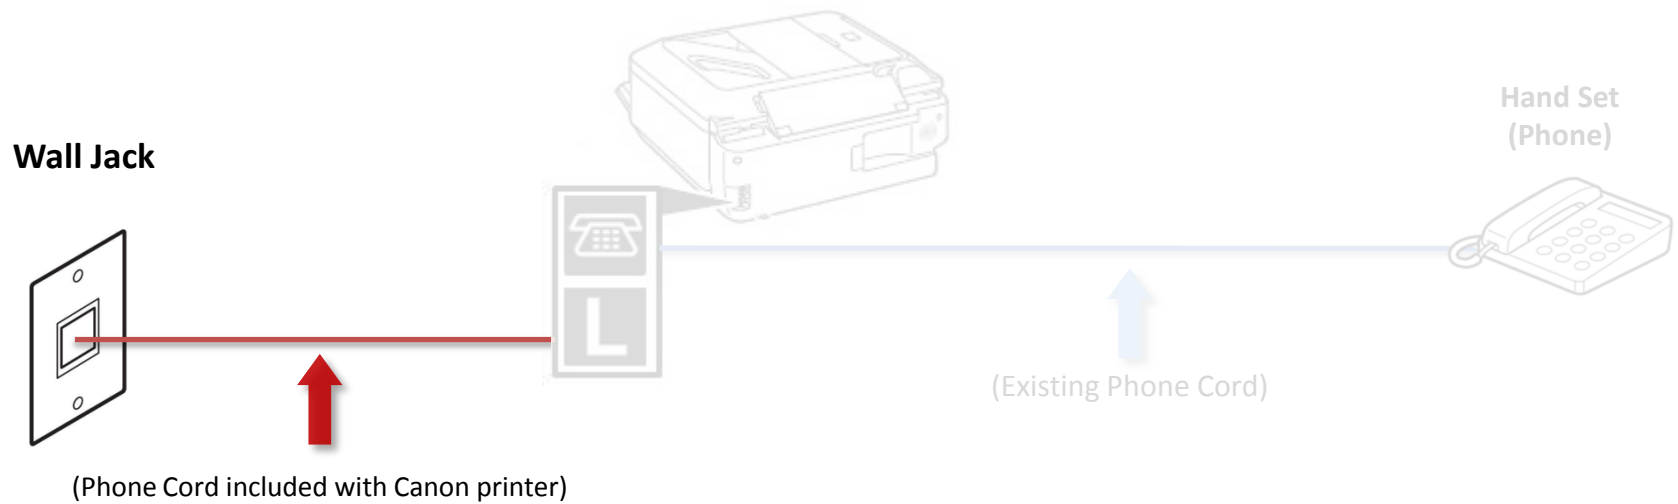


Fax to Phone Line Connection

 - Plug the provided phone cord into the “L” jack located on the rear of the multifunction

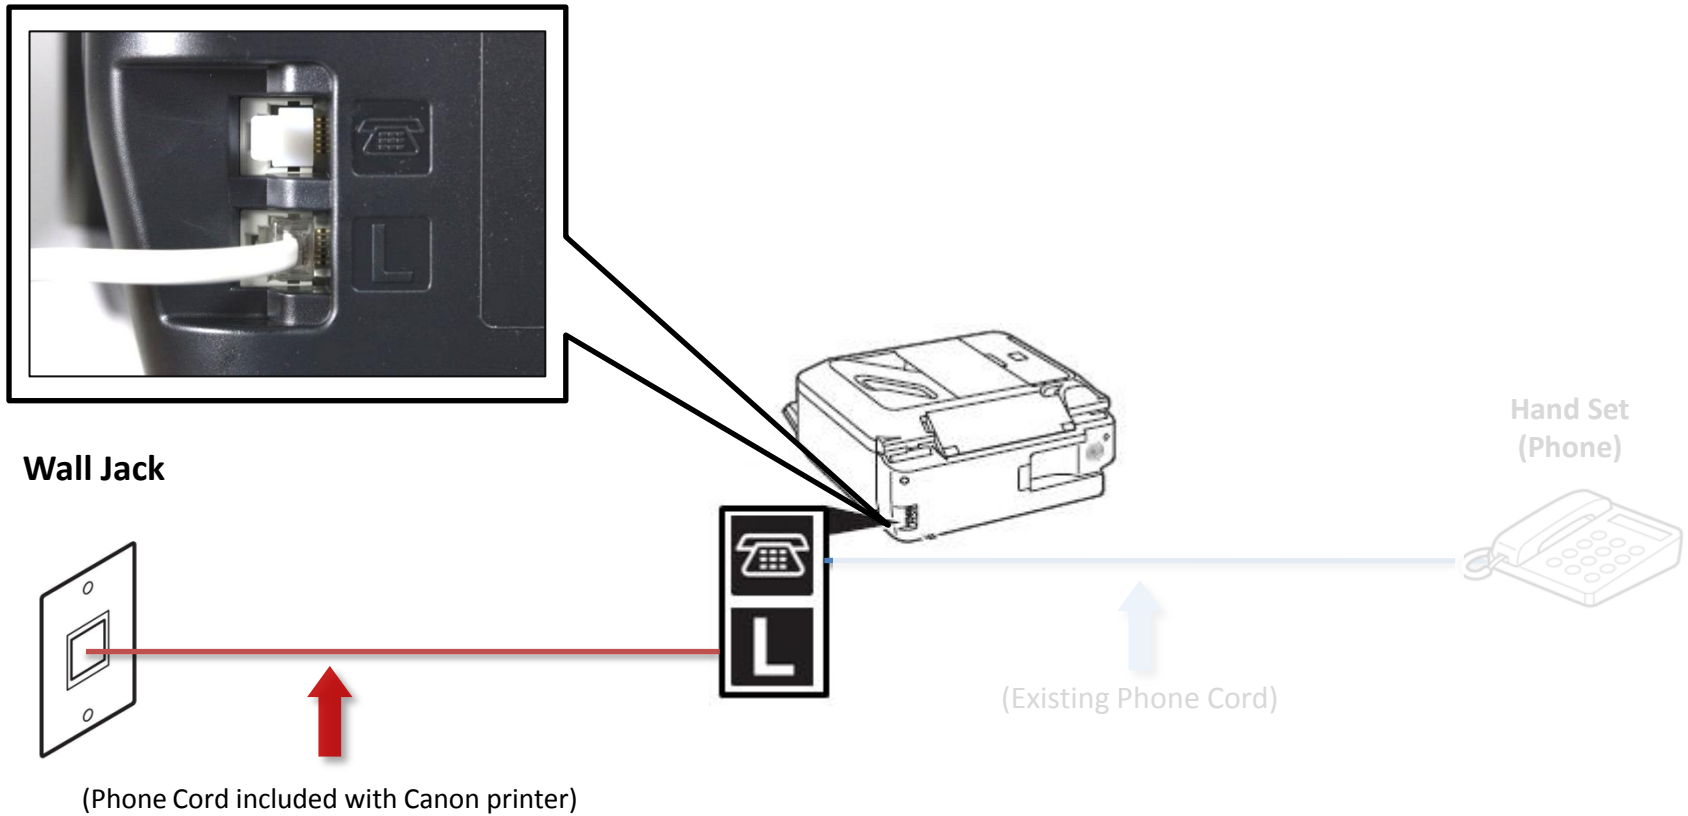


Fax to Phone Line Connection

 - Remove the white plug (D) from the upper jack.

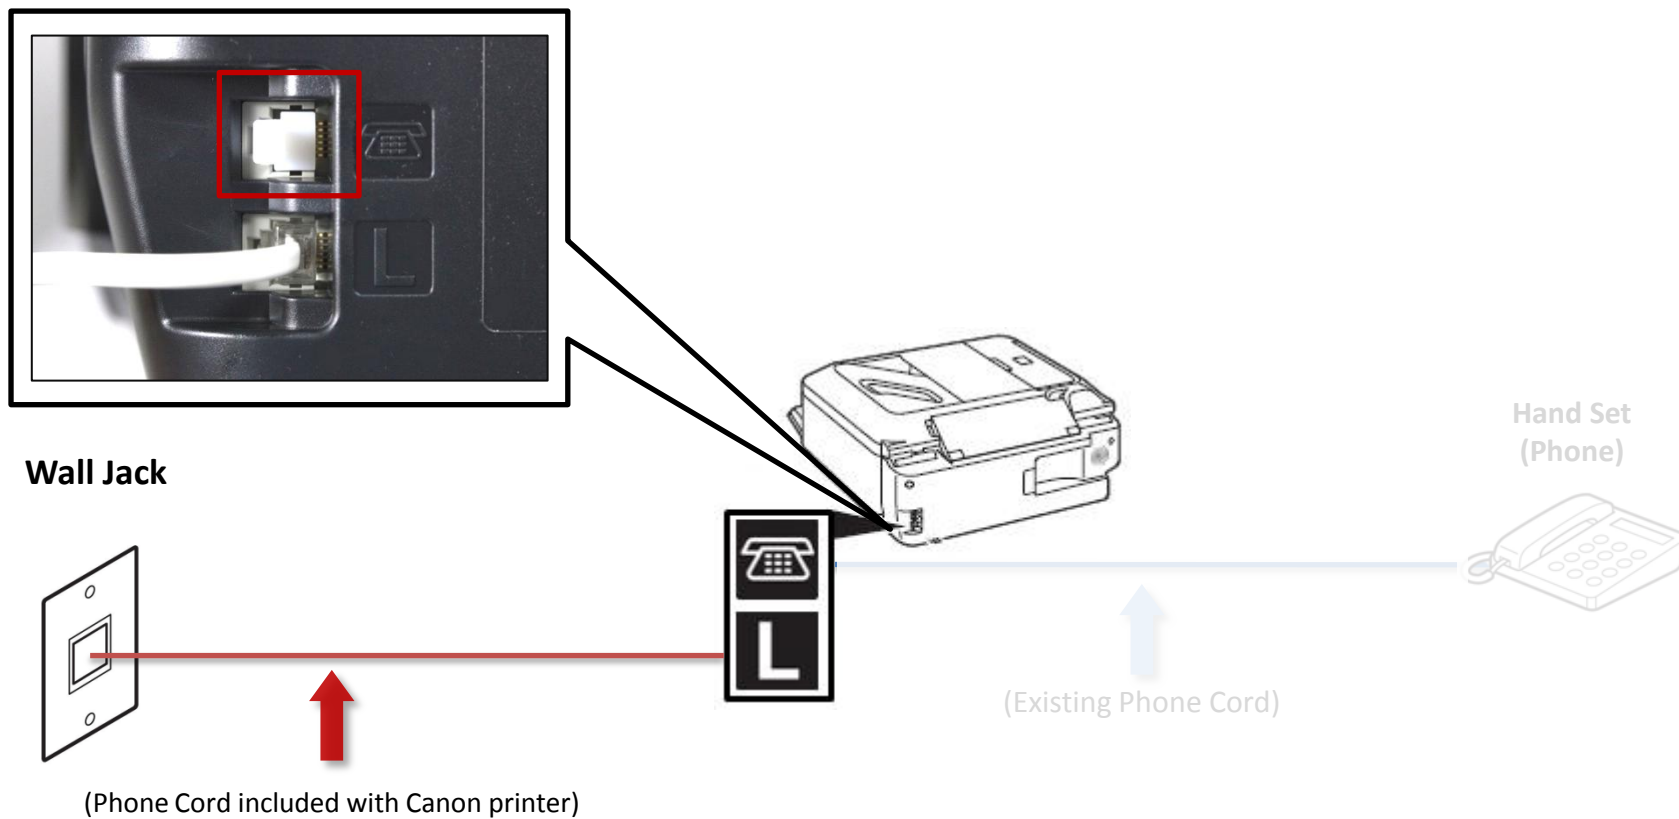


Fax to Phone Line Connection

 - Plug the second phone cord into the “telephone” jack located on the rear of the multifunction

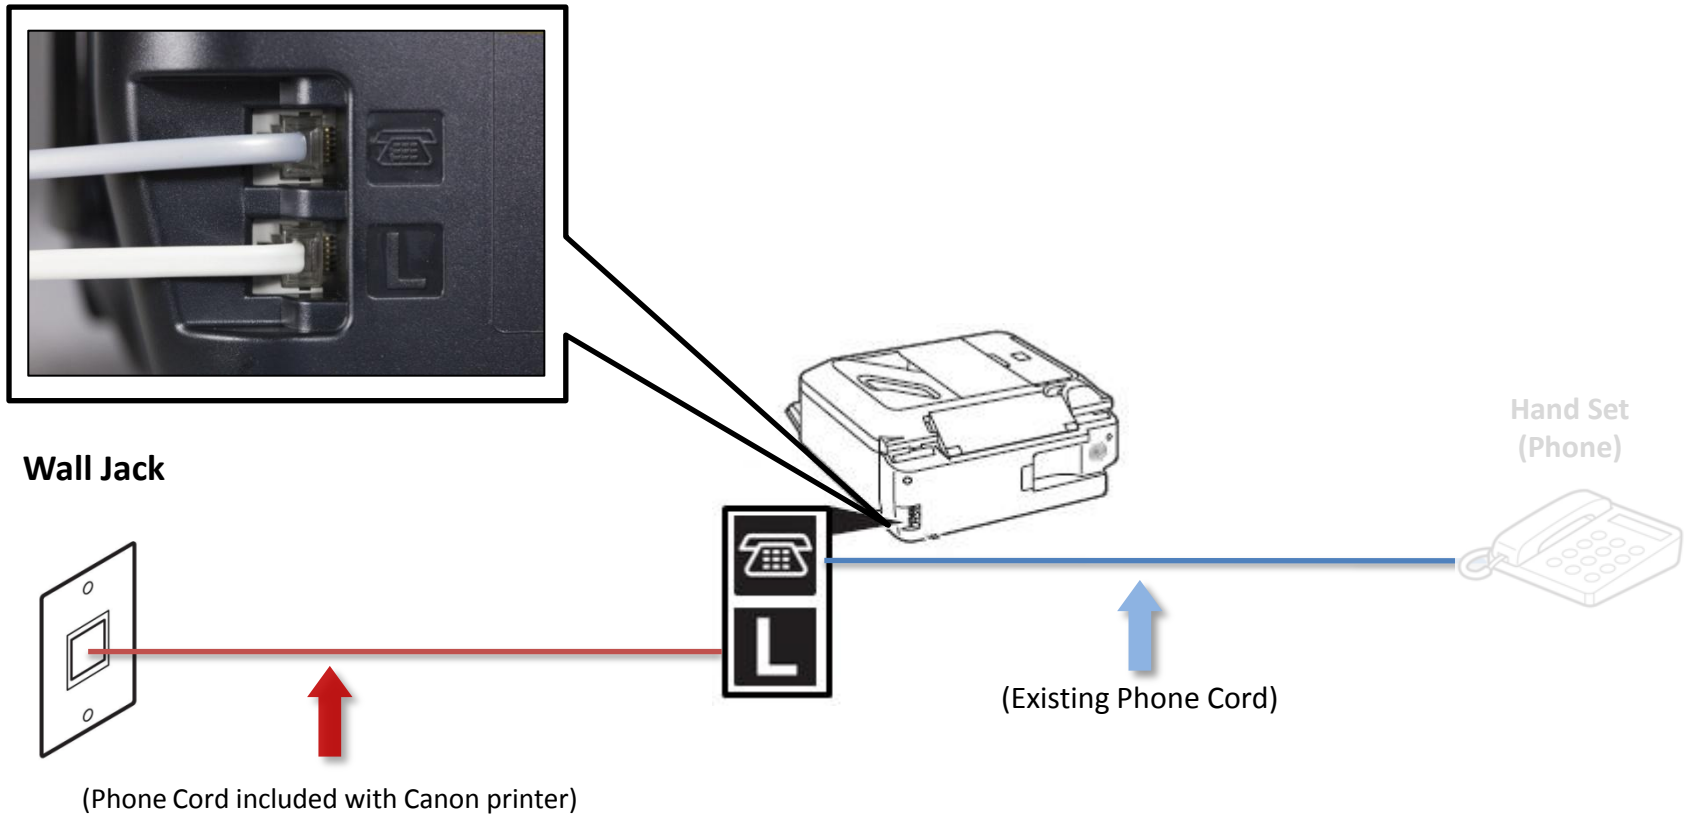

Fax to Phone Line Connection

 - Plug the second phone cord into the phone

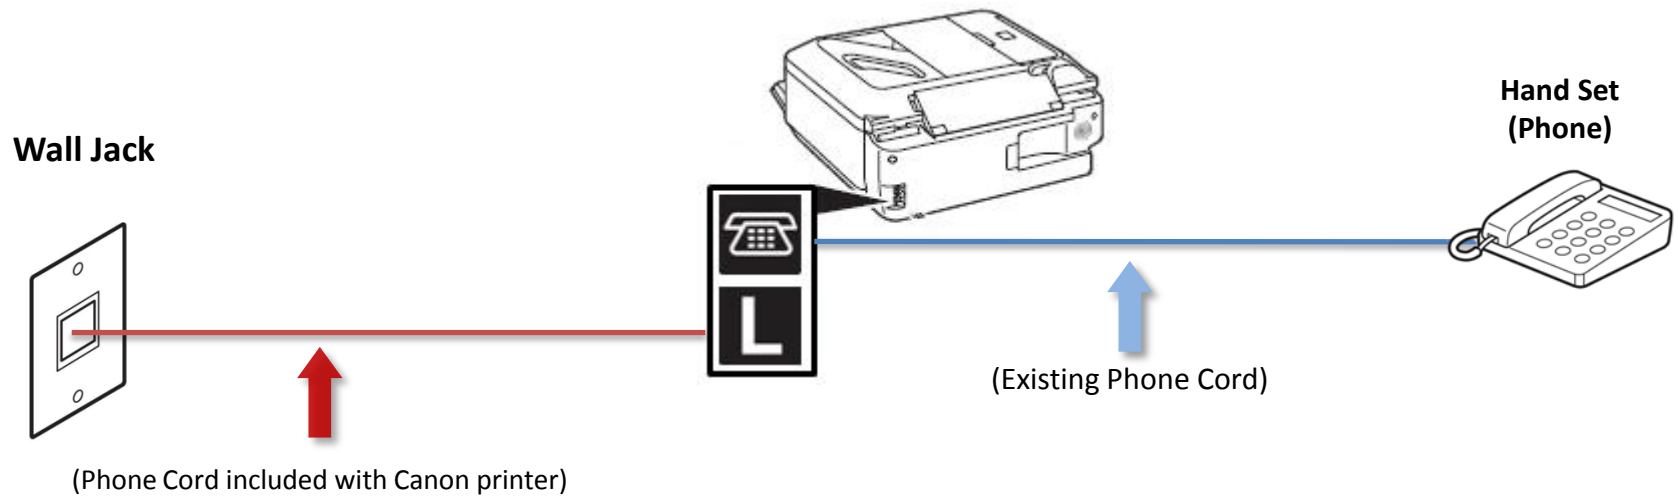

Setting Up The Receive Mode

Step 1

Turn on the MX340 by pressing the **ON** button.



Step 2

Press the **FAX** button.



Step 3

Press the **Menu** button



Step 4

Use the **Left** or **Right** Arrow button to select "Receive mode set".



Step 5

Press the **OK** button



Step 6

The "Receive mode set" screen will appear



Step 7

Use the **Left** or **Right** arrow button to select “TEL priority mode”



 
Step 8

Ensure that “TEL priority mode” is displayed



Step 9

Press the **OK** button

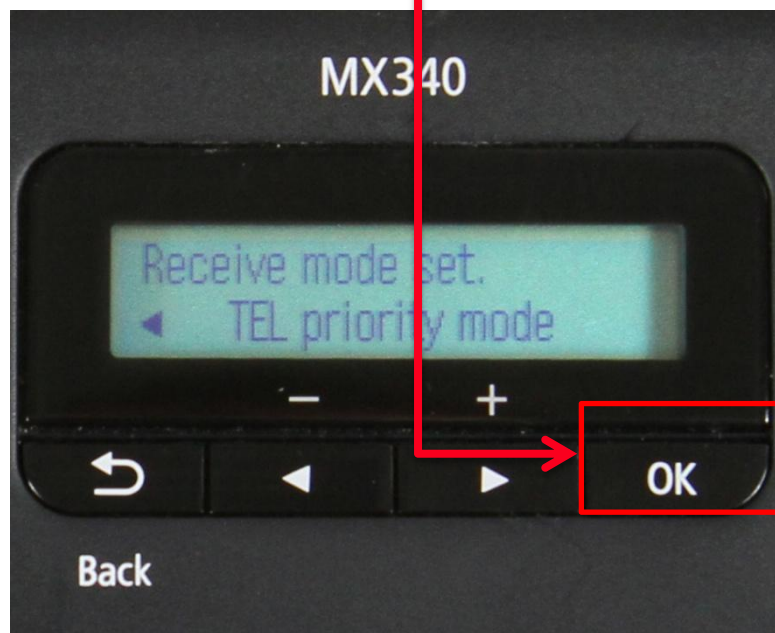

Step 10

Your MX340 is now set to TEL priority mode. Notice that the mode is listed on the fax standby screen.



Receiving A Fax

To receive a fax:

- Pick up the handset on the phone connected to the MX340.
- Listen for fax tones.
- When the tones stop hang up the handset.
- The MX340 will receive the fax document.

IMPORTANT: In order to receive a fax, you must pick up the handset on a phone that is connected to the multifunction.

