

Basic Cleaning Guidelines*

The following guidelines may be used to clean your Canon devices including the Canon imageRUNNER ADVANCE, imagePRESS, imageCLASS, LASER CLASS, varioPRINT 140/135 Series, VarioPrint 6000 Series Products, imagePROGRAF Series and imageFORMULA Scanners.

For the purpose of helping to sanitize your Canon device, it is recommended that you clean parts of the device touched by hands such as control panels, covers, and jam locations with alcohol using the following:

RECOMMENDED ITEMS TO USE

- Lint-free or microfiber cloths
- Ethanol or isopropyl alcohol of at least 70% concentration
- Glass cleaner on the device's platen glass
- Disposable gloves



CLEANING TIPS

- Refrain from spraying product directly on equipment.
- Apply the alcohol onto a lint-free or microfiber cloth and then wipe the noted surfaces of the device.

SAFETY & ENVIRONMENTAL TIPS

- Make sure the device is powered down and unplugged before cleaning. Wait until surfaces are dry before plugging in and powering the device back on.
- Alcohol is a flammable liquid and should never be used near fire or open flame.
- It is recommended that you use and properly dispose of protective disposable gloves and cloths.
- Do not use cleaners that contain volatile solvents such as paint thinners or benzene to clean your Canon devices.

*The recommended basic cleaning guidelines cannot guarantee the elimination of microbes, including but not limited to the novel coronavirus, from the Canon products. Be cautious in the storage and use of the alcohol, including following all product instructions and warnings.

Canon is a registered trademark of Canon Inc. in the United States and may also be a registered trademark or trademark in other countries. All other referenced product names and marks are trademarks of their respective owners. Certain images in this document may be simulated. Neither Canon Inc. nor Canon U.S.A., Inc. represents or warrants any third-party product or feature referenced hereunder. Specifications and availability subject to change without notice. Not responsible for typographical errors. ©2020 Canon U.S.A., Inc. All rights reserved.

