




Obtaining Your Network Key

PIXMA MX350/PIXMA MX870

Mac OS

Navigation Tips for Macintosh Users

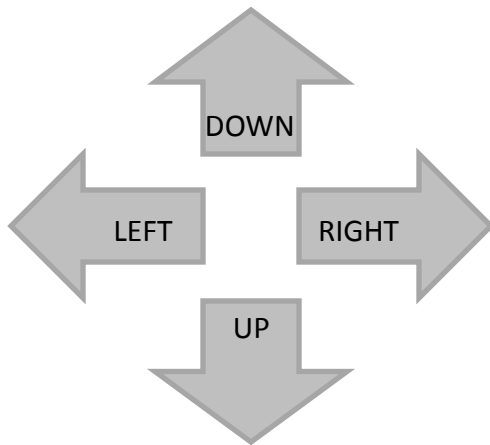

To navigate this guide, please use the arrows on the MAC keyboard or use the PAGE UP and Page DOWN keys.



Obtaining Your Network Key

PIXMA MX350/PIXMA MX870

Mac OS

| | |
|---|----|
| Introduction | 4 |
| Download the Canon PIXMA Wireless Setup Assistant | 5 |
| Using the Canon PIXMA Wireless Setup Assistant | 7 |
| Troubleshooting | 12 |

Introduction


Introduction

If you are unable to proceed past the **Access Points** screen during wireless setup because the required Network Key is not known, you may be able to retrieve the information using the **Canon PIXMA Wireless Setup Assistant**.


IMPORTANT: When you do not need this tool anymore, drag the file in the Trash, and delete it.

NOTE: The Wireless Setup Assistant is supported on Mac OS X 10.4 or greater


The screen for selecting access point.

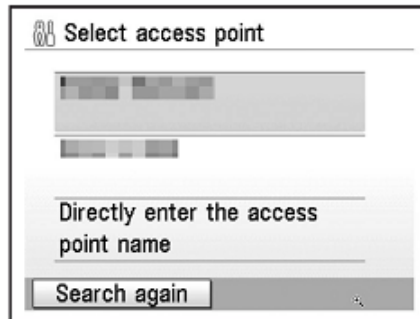

The screen for entering WEP key.

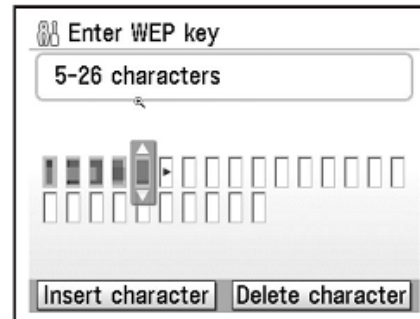

The screen for entering passphrase.

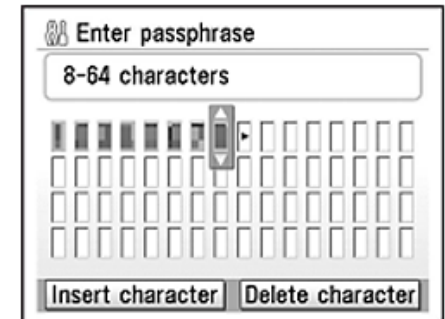

Download the Canon PIXMA Wireless Setup Assistant

[<< Previous](#)

[Next >>](#)

Download the Canon PIXMA Wireless Setup Assistant

To use the machine by connecting it to a computer, software including the drivers needs to be copied (installed) to the computer's hard disk. The installation process takes about 20 minutes. (The installation time varies depending on the computer environment or the number of applications to be installed.)

Step One

Go to the **Drivers & Software** for your model

[MX350](#)

[MX870](#)

Step Two

Select your operating system in the **Select OS** dropdown menu.

Drivers & Software


Choose an operating system from the drop down menu then select the appropriate driver from the list below

Choose Operating System:

Drivers

icaosx151m.dmg

ICA Driver Ver. 1.5.1m (Mac OS X 10.6)

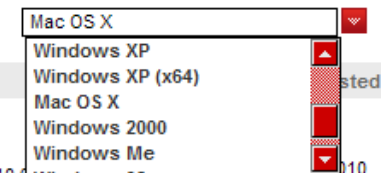


Download the Canon PIXMA Wireless Setup Assistant

[<< Previous](#)

[Next >>](#)

Step Three

In the **Software** section, click the Download icon to download the file **CanonAPChkTool**.

| ▶ Drivers | | | |
|---|-----------|--------|---|
| ▼ Software | | | |
| File Description | Post Date | Size | Download |
| <input type="checkbox"/> Canon PIXMA Wireless Setup Assistant (Macinto... File Name: CanonAPChkTool_osx100ben.dmg | 10/16/09 | 1.40MB |  |
| Canon PIXMA Wireless Setup Assistant is a tool which enables you to confirm the access point name and network key required when setting up a wireless LAN connection. | | | |

Step Four

On the next screen, read the information and instructions and click **I Agree - Begin Download**

Choose to "Save" the file. **Write down the file name and the location to where the file is being saved.**

Using the Canon PIXMA Wireless Setup Assistant


Using the Canon PIXMA Wireless Setup Assistant

Step One


Display the window for selecting access point using the buttons on the printer.

Please refer to the Getting Started Guide if you are unable to display the below window on the LCD screen.


The screen for selecting access point.

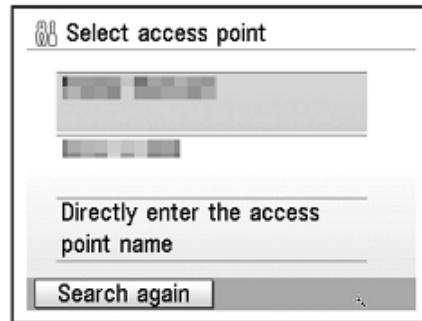

The screen for entering WEP key.

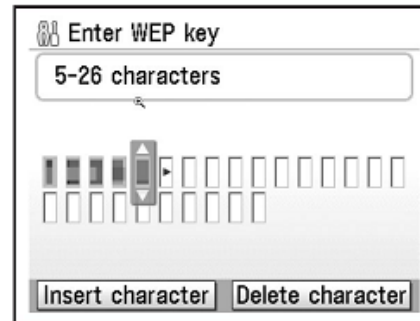

The screen for entering passphrase.

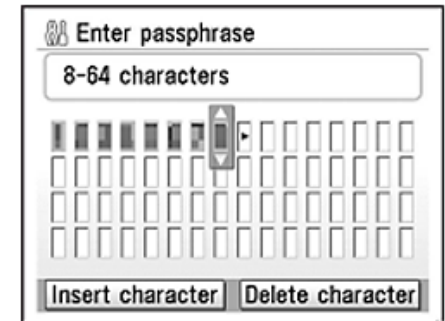


Using the Canon PIXMA Wireless Setup Assistant

Step Two

Run the downloaded tool "Wireless Setup Assistant " that you downloaded to the computer by double clicking its icon.

Step Three


Read the License Agreement, and then click **Yes** when you accept the agreement.

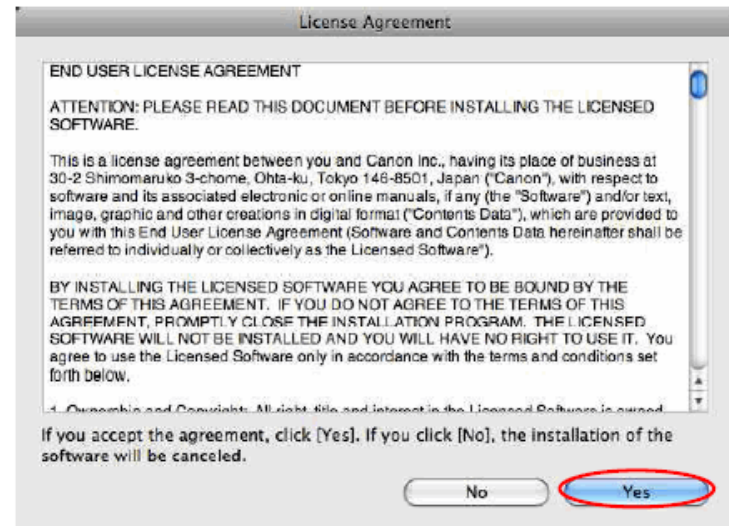

Using the Canon PIXMA Wireless Setup Assistant

Step Four

When the following dialog is displayed, click **OK**.

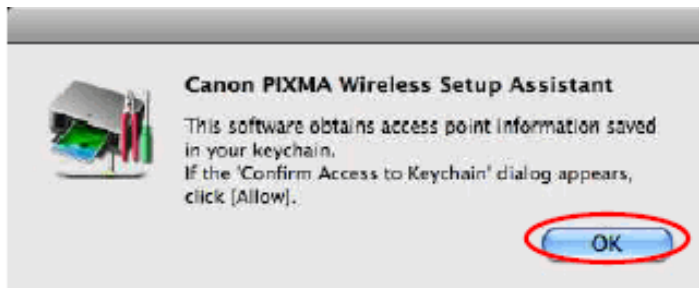

Step Five

1. When the "Confirm Access to Keychain" dialog is displayed, click **Allow Once** in Mac OS X v10.4, **Allow** in Mac OS X v10.5/v10.6.
2. If the dialog is displayed more than once, click the above-mentioned button in each dialog.
3. **Do not click Always Allow**, the information will not be obtained properly.



<Mac OS X v10.4>




<Mac OS X v10.5/v10.6>

Using the Canon PIXMA Wireless Setup Assistant

Step Six

1. The "**Canon PIXMA Wireless Setup Assistant**" tool is launched.
2. Confirm that the same access points are listed in the Assistant and Access Point windows.
3. Write down the Network Password of the access point or click **Copy Network Password**.


NOTE: The Network Password may be displayed with texts of the alphabets from A to F (base 16number). Write down it as-is.

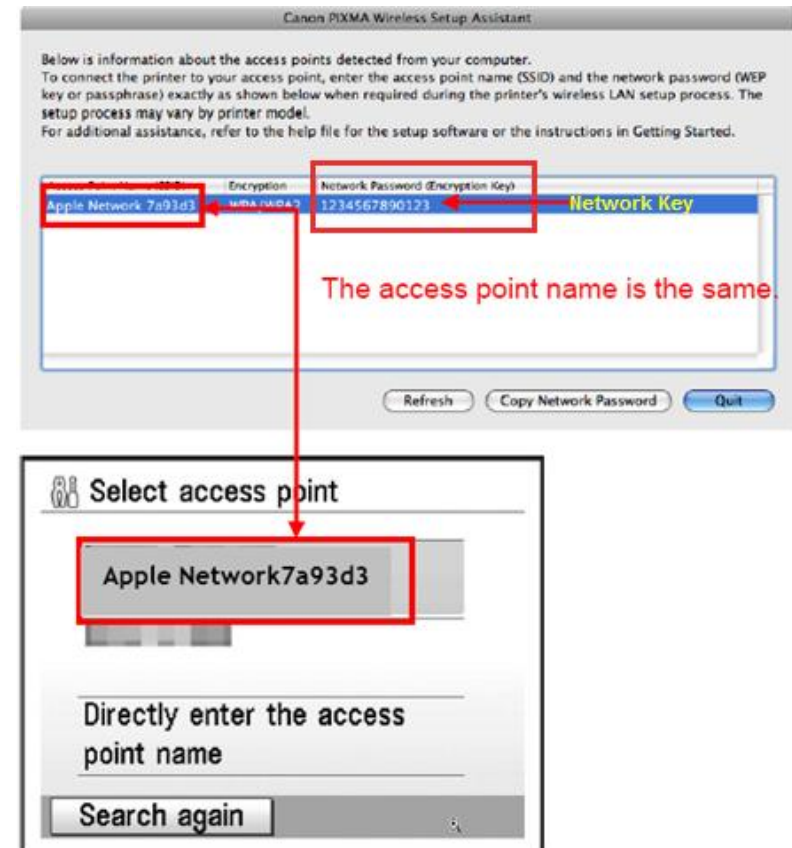

Using the Canon PIXMA Wireless Setup Assistant


Step Seven

1. In the window for selecting access point of the printer unit, select the access point specified in the step 4, then click **OK**.
2. When the window for entering the network key is displayed, enter the key you copied in Step Four.
3. Click **OK**.

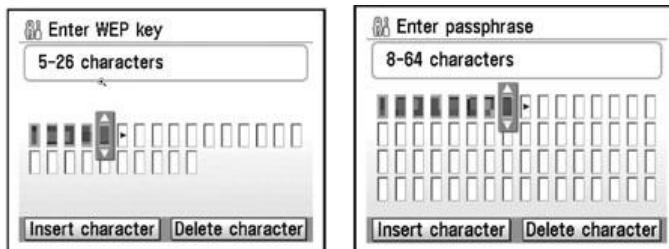


Step Eight

When the setup is completed, the "Setup Complete" dialog is displayed. Proceed with the remainder of the setup as described in the Getting Started Guide.

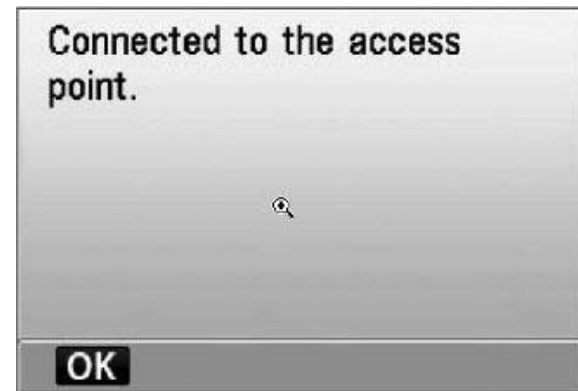

Troubleshooting

If the following error message below is displayed.

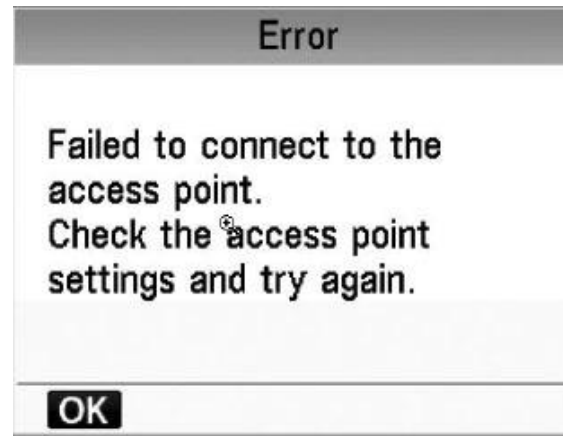

The entered network key may not match with the access point you specified.

1. Press the Set button
2. You will return to the screen for entering the network key.
3. Then repeat Steps Six and Seven.