

VIXIA HF11

English

Français

Español

HD Camcorder
Instruction Manual

Caméscope HD
Manuel d'instruction

Videocámara HD
Manual de Instrucciones



NTSC

Important Usage Instructions

WARNING!



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

COPYRIGHT WARNING:

Unauthorized recording of copyrighted materials may infringe on the rights of copyright owners and be contrary to copyright laws.

HD Camcorder, VIXIA HF11 A systems

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and use in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with the ferrite core provided with the digital video camcorder must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual.

If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516)328-5600

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Important Warning



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS

In these safety instructions the word “product” refers to the Canon HD Camcorder VIXIA HF11 A and all its accessories.


- 1** Read Instructions — All the safety and operating instructions should be read before the product is operated.
- 2** Retain Instructions — The safety and operating instructions should be retained for future reference.
- 3** Heed Warnings — All warnings on the product and in the operating instructions should be adhered to.
- 4** Follow Instructions — All operating and maintenance instructions should be followed.
- 5** Cleaning — Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. The product should be cleaned only as recommended in this manual.
- 6** Accessories — Do not use accessories not recommended in this manual as they may be hazardous.
- 7** Avoid magnetic or electric fields — Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.
- 8** Water and Moisture — Hazard of electric shock — Do not use this product near water or in rainy/ moist situations.
- 9** Placing or Moving — Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



- 10** Power Sources — The CA-570 Compact Power Adapter should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
- 11** Polarization — The CA-570 Compact Power Adapter is equipped with a polarized 2-prong plug (a plug having one blade wider than the other).
The 2-prong polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 12** Power Cord Protection — Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cords exit the product.
- 13** Outdoor Antenna Grounding — If an outside antenna is connected to the product, be sure the antenna is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI / NFPA No. 70—1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure 1.

Fig. 1 EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

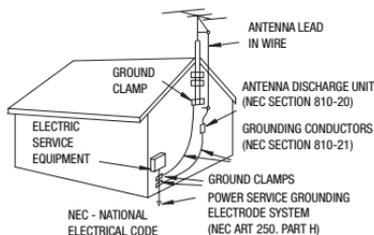

- 14** Lightning — For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet and disconnect the antenna. This will prevent damage to the product due to lightning and power-line surges.
- 15** Overloading — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 16** Objects and Liquid Entry — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.
- 17** Servicing — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 18** Damage Requiring Service — Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:
- When the power-supply cord or plug is damaged.
 - If any liquid has been spilled onto, or objects have fallen into, the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - When the product exhibits a distinct change in performance. This indicates a need for service.
- 19** Replacement Parts — When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 20** Safety Check — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order.

When replacement of the power supply is required, please return it to the responsible nearest Canon Service Center and please replace it with the same type number CA-570.

The Adapter can be used with a power supply between 100 and 240 V AC. For areas where 120 V AC power is not used, you will need a special plug adapter. Contact your nearest Canon Service Center for further information.

This Class B digital apparatus complies with Canadian ICES-003.

Online product registration for U.S.A. Customers only.

Register your product online at www.registercanon.com

✓ **Protect your product**

We will keep the model number and date of purchase of your new Canon product on file to help you refer to this information in the event of an insurance claim such as loss or theft.

✓ **Receive information on new products and promotions**

Upon your request, we will send you information on Canon new products and promotions.

The serial number of this product can be found at the battery attachment unit of the camcorder. Write down the number and other information here and retain this book as a permanent record of your purchase to aid identification in case of theft.

Date of Purchase:

Model Name: VIXIA HF11 A

Purchased From:

Serial No.:


Dealer Address:

Dealer Phone No.:

Enjoying High-Definition Video with Your Camcorder

Preserve your most treasured memories, be it unforgettable scenery or cherished moments spent with family and friends, with high-definition video recordings of a quality second only to actually being there.

What is High-Definition Video?

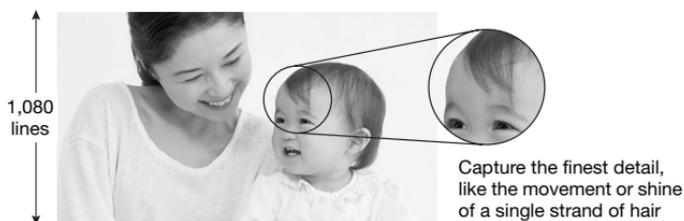

Your camcorder features a full high-definition image sensor (Full HD CMOS) that captures video at a resolution of 1,920 x 1,080 pixels¹. This results in video recordings of unparalleled high quality, fine detail and lifelike vivid colors.

How does full high definition compare with standard-definition TV broadcasts?

- 6** Approximately 6 times the number of pixels.
- 2** More than twice the number of scanning lines.

"Full HD 1080" refers to Canon camcorders compliant with high-definition video composed of 1,080 vertical pixels (scanning lines).



¹ Video is recorded at this resolution only in MXP or FXP mode. In other recording modes, the picture is resized to 1,440 x 1,080 pixels before being recorded. Even in that case, the picture captured is detailed enough to render richly detailed recordings.

What is so special about recording on flash memory?

Your videos and photos are recorded in the built-in memory or on a memory card (SD or SDHC card²) using AVCHD specifications³. Recording on flash memory means that there are no moving parts in the recorder unit of the camcorder. To you, it means a camcorder that is smaller, lighter and faster. In fact, using the Quick Start function (□ 37) you can open the LCD panel and start recording within approximately one second.

If your high-definition TV features an SD memory card slot and supports AVCHD specifications, you can easily play back your high-definition recordings directly from the memory card (□ 39). Refer to the TV's instruction manual for more details.⁴



What is Cinema Mode?

Give your recordings a cinematic look by using the [CINE MODE] recording program (□ 45). Combine this recording program with the 24 fps progressive frame rate [PF24] to get the enhanced effect of the 24p Cinema Mode.



² For usable memory cards, see *Recommended Memory Cards* (□ 31).

³ AVCHD is the new standard for recording high-definition video. With AVCHD specifications the video signal is recorded using MPEG-4 AVC/H.264 compression and the audio signal is recorded in Dolby Digital.

⁴ Discs created with the optional DW-100 DVD Burner that contain recordings in MXP mode cannot be played back on AVCHD-compatible devices. Use the DW-100 to play back such discs (□ 86).


Table of contents

Introduction

- 6 Enjoying High-Definition Video with Your Camcorder
- 12 About this Manual
- 13 Getting to Know the Camcorder**
- 13 Supplied Accessories
- 14 Components Guide
- 17 Screen Displays

Preparations

- 20 Getting Started**
- 20 Charging the Battery Pack
- 22 Preparing the Wireless Controller and Accessories
- 24 Adjusting the Position and Brightness of the LCD Screen
- 25 Basic Operation of the Camcorder**
- 25 The **EASY** Button: **EASY** Mode or Flexible Recording
- 26 Operating Modes
- 27 Joystick and Joystick Guide
- 27 Using the Menus
- 29 First Time Settings**
- 29 Setting the Date and Time
- 30 Changing the Language
- 30 Changing the Time Zone
- 31 Using a Memory Card**
- 31 Recommended Memory Cards
- 32 Inserting and Removing a Memory Card
- 33 Selecting the Memory for the Recordings
- 33 Initializing the Built-In Memory or Memory Card

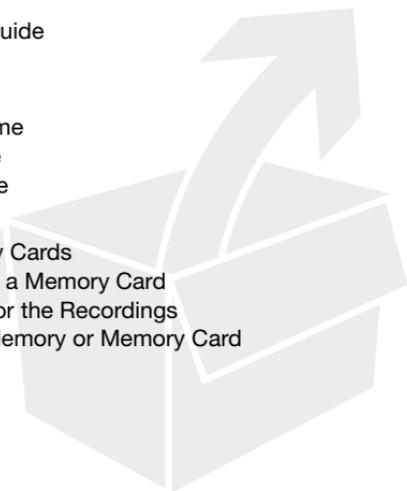

Video

- 35 Basic Recording**
 - 35 Shooting Video
 - 36 Selecting the Video Quality (Recording Mode)
 - 37 Zooming
 - 37 Quick Start Function
 - 38 Reviewing and Deleting the Last Scene Recorded
- 39 Basic Playback**
 - 39 Playing Back the Video
 - 40 Special Playback Modes
 - 41 Selecting Scenes by Recording Date
 - 42 Selecting the Playback Starting Point from the Movie Timeline
 - 43 Deleting Scenes
- 45 Advanced Functions**
 - 45 Cinema Mode: Giving a Cinematic Look to your Recordings
 - 45 Special Scene Recording Programs
 - 47 Changing the Shutter Speed and Aperture
 - 48 Mini Video Light
 - 49 Self Timer
 - 50 Automatic Backlight Correction and Manual Exposure Adjustment
 - 51 Manual Focus Adjustment
 - 51 White Balance
 - 53 Image Effects
 - 54 Digital Effects
 - 55 On-Screen Displays and Data Code
 - 55 Audio Recording Level
 - 57 Using Headphones or an External Microphone
- 59 Managing Scenes and the Memory**
 - 59 Creating a Playlist
 - 59 Deleting Scenes from the Playlist
 - 60 Moving Scenes in the Playlist
 - 60 Copying Scenes

Photos

62 Basic Recording

- 62 Taking Photos
- 62 Selecting Photo Size and Quality
- 64 Erasing a Photo Right After Recording It

64 Basic Playback

- 64 Viewing Photos
- 66 Magnifying Photos during Playback
- 66 Erasing Photos

67 Additional Functions

- 67 Flash
- 68 Drive Mode: Continuous Shooting and Exposure Bracketing
- 69 Capturing a Still Image while Recording Movies (Simultaneous Recording)
- 69 Light Metering Mode
- 70 Histogram Display
- 70 Capturing a Still Image from the Playback Scene
- 71 Protecting Photos
- 71 Copying Photos
- 72 Other Functions You Can Use when Taking Photos

73 Printing Photos

- 73 Printing Photos (Direct Print)
- 74 Selecting the Print Settings
- 76 Trimming Settings
- 77 Print Orders

External Connections

79 Terminals on the Camcorder

- 80 Connection Diagrams
- 82 Playback on a TV Screen

83 Saving and Backing Up Your Recordings

- 83 Backing Up Your Recordings on a Computer

83	Authoring High-Definition (AVCHD) Discs and Photo DVDs
86	Copying your Recordings to an External Video Recorder
87	Transferring Photos to a Computer (Direct Transfer)
90	Transfer Orders

Additional Information

91 Appendix: Menu Options Lists

91	FUNC. Menu
93	Setup Menus
93	Camera Setup (Digital Zoom, Image Stabilizer, etc.)
95	Memory Operations (Initialization, etc.)
96	Display Setup (LCD Brightness, Language, etc.)
97	System Setup (Speaker Volume, Beep, etc.)
99	Date/Time Setup

100 Trouble?


100	Troubleshooting
104	List of Messages

112 Do's and Don'ts

112	Handling Precautions
115	Maintenance/Others
116	Using the Camcorder Abroad

117 General Information

117	System Diagram
118	Optional Accessories
122	Product Codes
123	Specifications
126	Index

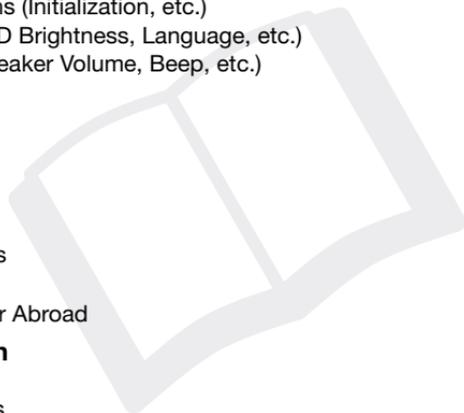

About this Manual

Thank you for purchasing the Canon VIXIA HF11. Please read this manual carefully before you use the camcorder and retain it for future reference. Should your camcorder fail to operate correctly, refer to *Troubleshooting* (□ 100).

Conventions Used in this Manual

- **!** IMPORTANT: Precautions related to the camcorder's operation.
- **i** NOTES: Additional topics that complement the basic operating procedures.
- **⚠** POINTS TO CHECK: Restrictions or requirements regarding the function described.
- **□**: Reference page number within this manual.

To complete some operations you will need to refer also to other instruction manuals. This will be indicated with the following icons and the name of the relevant chapter or section.


DVSD ➤ Refer to the “Digital Video Software” instruction manual, included as a PDF file in the supplied **DIGITAL VIDEO Solution Disk** CD-ROM.

DW-100 ➤ Refer to the instruction manual of the optional DW-100 DVD Burner.

- The following terms are used in this manual:
When not specified as “memory card” or “built-in memory”, the term “memory” by itself refers to both.
“Scene” refers to one movie unit from the point you press the START/STOP button to start recording until you press again to pause the recording.
“Photo” and “still image” are used interchangeably with the same meaning.
- The photos included in this manual are simulated pictures taken with a still camera.





Names of buttons and switches other than the joystick are indicated within a “button” frame. For example **FUNC.**

Brackets [] and capital letters are used to refer to menu options as they are displayed on screen. In tables in this manual the default value is shown in boldface. For example **[ON]**, [OFF].

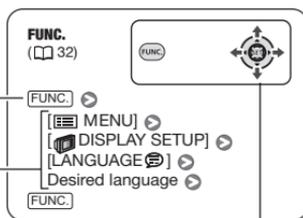

Buttons and switches to be operated

Supplied Accessories


	<p>CA-570 Compact Power Adapter (incl. power cord)</p>		<p>BP-809 Battery Pack</p>
<p>WL-D88 Wireless Controller</p>		<p>Lithium Button Battery CR2025 for Wireless Controller</p>	
	<p>CTC-100/S Component Cable Red • Green • Blue plugs</p>		<p>STV-250N Stereo Video Cable Yellow • Red • White plugs</p>
<p>IFC-400PCU USB Cable</p>		<p>Software CD-ROM¹ and Installation Guide PIXELA ImageMixer 3 SE</p>	
	<p>WS-30 Wrist Strap</p>		<p>Software CD-ROM² and Installation Guide DIGITAL VIDEO Solution Disk</p>

¹ Software for saving, managing, editing and playing back movies on your computer (□ 83). The CD-ROM includes the instruction manual of the software (electronic version on PDF file).

² Software for saving, managing, retouching and printing photos (□ 87). The CD-ROM includes the instruction manual of the software (electronic version on PDF file).


Components Guide

Left side view

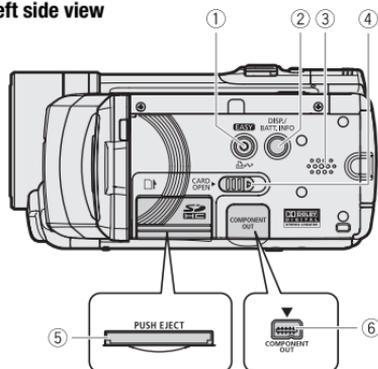


- ① **EASY** button (□ 25)/
 (print/share) button (□ 74, 87)
- ② **DISP.** (on-screen display) button
 (□ 55, 42)/
BATT. INFO button (□ 19)
- ③ **Speaker** (□ 41)
- ④ **CARD OPEN** switch (open the memory
 card slot cover) (□ 32)
- ⑤ **Memory card slot** (□ 32)
- ⑥ **COMPONENT OUT** terminal (□ 80)
- ⑦ **Mode dial** (□ 26)
- ⑧ **HDMI OUT** terminal (□ 80, 82)
- ⑨ **USB** terminal (□ 81)
- ⑩ **Instant AF sensor** (□ 93)
- ⑪ **Flash** (□ 67)
- ⑫ **Stereo microphone**
- ⑬ **Mini video light** (□ 48)

Right side view

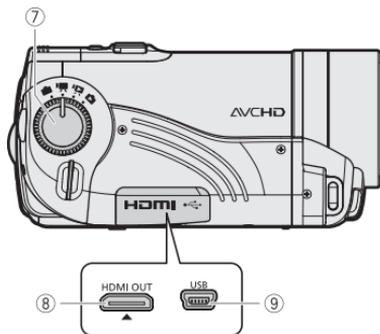


Names of buttons and switches other than the joystick are indicated within a “button” frame (for example **[FUNC.]**).


Front view

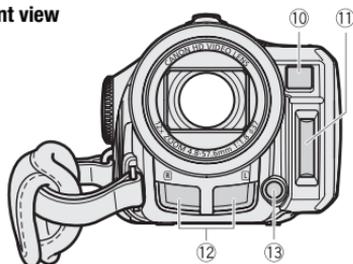


Back view

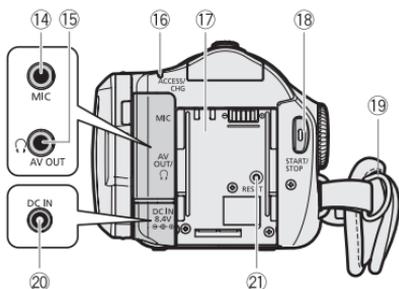

LCD panel

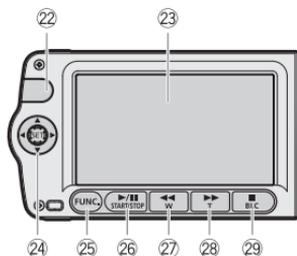


Top view

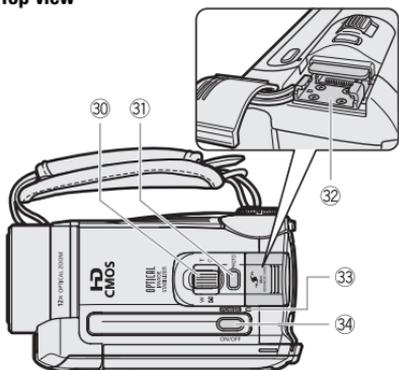

- 14 MIC terminal (80)
- 15 AV OUT/⌚ terminal (80)
- 16 ACCESS (memory access) indicator (35, 62)/CHG (charge) indicator (20)
- 17 Serial number
- 18 START/STOP button (35)
- 19 Strap mount (23)
- 20 DC IN terminal (20)
- 21 RESET button (102)
- 22 Remote sensor (22)
- 23 LCD screen (24)
- 24 Joystick (27)
- 25 FUNC. button (28, 91)
- 26 ►/⏸ (play/pause) button (39)/START/STOP button (35)
- 27 ◀◀ (fast reverse) button (39)/Zoom out **W** (wide-angle) button (37)
- 28 ▶▶ (fast forward) button (39)/Zoom in **T** (telephoto) button (37)
- 29 ■ (stop) button (39)/BLC (backlight correction) button (50)
- 30 Zoom lever (37)
- 31 PHOTO button (62)
- 32 Mini advanced shoe (58)
- 33 **POWER** indicator
- 34 ON/OFF button


Names of buttons and switches other than the joystick are indicated within a "button" frame (for example **FUNC.**).

Bottom view

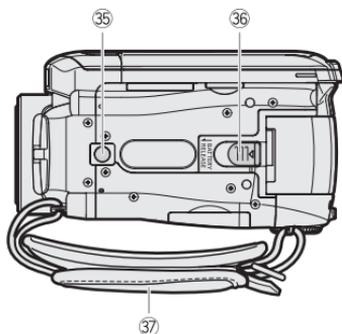

- 35 Tripod socket (□ 112)
- 36 BATTERY RELEASE switch (□ 21)
- 37 Grip belt


Wireless Controller WL-D88

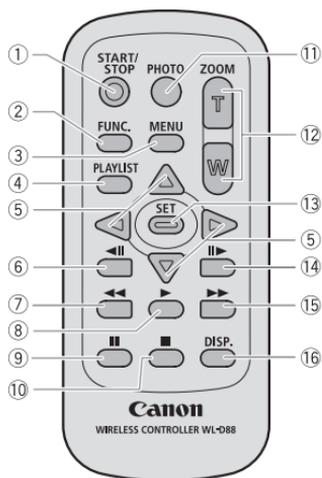

- ① START/STOP button (□ 35)
- ② FUNC. button (□ 28, 91)
- ③ MENU button (□ 28, 93)
- ④ PLAYLIST button (□ 39)
- ⑤ Navigation buttons (▲/▼/◀/▶)
- ⑥ ◀◀ (frame reverse) button (□ 40)
- ⑦ ◀◀◀ (fast reverse) button (□ 40)
- ⑧ ▶ (play) button (□ 39)
- ⑨ || (pause) button (□ 39)
- ⑩ ■ (stop) button (□ 39)
- ⑪ PHOTO button (□ 62)
- ⑫ Zoom buttons (□ 37)
- ⑬ SET button
- ⑭ ▶▶ (frame advance) button (□ 40)
- ⑮ ▶▶▶ (fast forward) button (□ 40)
- ⑯ DISP. (on-screen display) button (□ 42, 55)

Screen Displays

Recording Movies

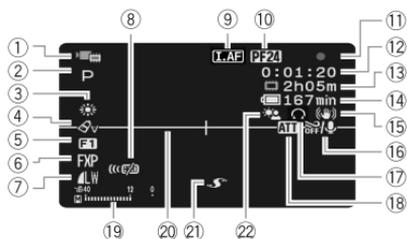


Playing Movies (During Playback)





- ① Operating mode (□ 26)
- ② Recording program (□ 45, 47)
- ③ White balance (□ 51)
- ④ Image effect (□ 53)
- ⑤ Digital effects (□ 54)
- ⑥ Recording mode (□ 36)
- ⑦ Still image quality/size (simultaneous recording) (□ 69)
- ⑧ Remote sensor off (□ 98)
- ⑨ Instant AF (□ 93),
MF Manual focus (□ 51)
- ⑩ 24F progressive frame rate (□ 19)
- ⑪ Memory operation (□ 19)
- ⑫ Time code/Playback time (hours : minutes : seconds)
- ⑬ Remaining recording time
 On the memory card
 In the built-in memory
- ⑭ Remaining battery time (□ 19)
- ⑮ Image stabilizer (□ 94)
- ⑯ Wind screen off (□ 95)
- ⑰ Headphones output (□ 57)
- ⑱ Microphone attenuator (□ 55)
- ⑲ Audio level indicator (□ 55)
- ⑳ Level marker (□ 96)
- ㉑ Mini advanced shoe (□ 58)
- ㉒ Backlight correction (□ 50)
- ㉓ Scene number
- ㉔ Data code (□ 55)

Recording Still Images

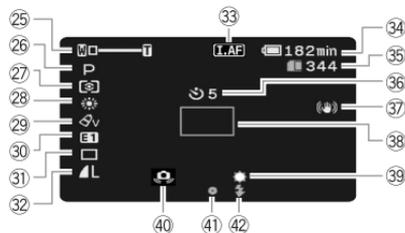

Viewing Still Images

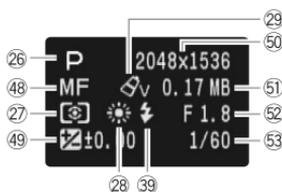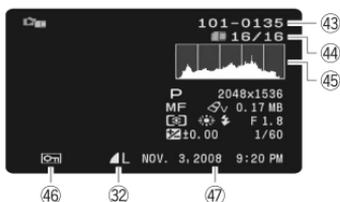

- 25 Zoom (□ 37), Exposure \bullet —|— \circ (□ 50)
- 26 Recording program (□ 45, 47)
- 27 Light metering mode (□ 69)
- 28 White balance (□ 51)
- 29 Image effect (□ 53)
- 30 Digital effects (□ 54)
- 31 Drive mode (□ 68)
- 32 Still image quality/size (□ 62)
- 33 **IAF** Instant AF (□ 93),
MF Manual focus (□ 51)
- 34 Remaining battery time (□ 19)
- 35 Number of still images available
□ On the memory card
□ In the built-in memory
- 36 Self timer (□ 49)
- 37 Image stabilizer (□ 94)
- 38 AF frame (□ 94)
- 39 Mini video light (□ 48)
- 40 Camcorder shake warning (□ 94)
- 41 Focus and exposure lock (□ 62)
- 42 Flash (□ 67)
- 43 Image number (□ 98)
- 44 Current image / Total number of images
- 45 Histogram (□ 70)
- 46 Image protection mark (□ 71)
- 47 Date and time of recording
- 48 Manual focus (□ 51)
- 49 Manual exposure (□ 50)
- 50 Image size (□ 62)
- 51 File size
- 52 Aperture value (□ 47)
- 53 Shutter speed (□ 47)

10 24F progressive frame rate

Select the 24F progressive frame rate ( 45) to give your recordings a cinematic look. You can combine this frame rate with the [ CINE MODE] recording program to enhance the effect.


11 Memory operation

- Record, ● ||| Record pause,
- ▶ Playback, ||| Playback pause,
- ▶▶ Fast playback,
- ◀◀ Fast reverse playback,
- ▶ Slow playback,
- ◀ Slow reverse playback,
- ||▶ Frame advance,
- ◀|| Frame reverse

13 Remaining recording time

When there is no more free space on the memory, “ END” (built-in memory) or “ END” (memory card) will be displayed and the recording will stop.

14, 34 Remaining battery time



- The icon shows a rough estimate of the remaining charge as a percentage of the full charge of the battery pack. The remaining recording/playback time of the battery pack is displayed, in minutes, next to the icon.
- When  is displayed in red, replace the battery pack with a fully charged one.

- When you attach an empty battery pack, the power may turn off without displaying .
- Depending on the conditions under which the camcorder and the battery pack are used, the actual battery charge may not be indicated accurately.
- When the camcorder is off, press **BATT.INFO** to display the charge status of a battery pack. The Intelligent System will display the charge status (as a percentage) and the remaining recording time (in minutes) for 5 seconds. If the battery pack is exhausted, the battery information may not be displayed.

35 Number of still images available

 in red: No card

 in green: 6 or more images

 in yellow: 1 to 5 images

 in red: No more images can be recorded

- When viewing the still images, the display will always be in green.
- Depending on the recording conditions, the number of available still images displayed may not decrease even after a recording has been made, or may decrease by 2 still images at once.

43 Image number

The image number indicates the name and location of the file on the memory card. For example, the file name of image 101-0107 is “IMG_0107.JPG”, stored under the folder “DCIM\101\CANON”.



Preparations


This chapter describes basic operations, such as navigating the menus, and first time settings to help you learn more about your camcorder.

Getting Started

Charging the Battery Pack

The camcorder can be powered with a battery pack or directly using the compact power adapter. Charge the battery pack before use.


For approximate charging times and recording/playback times with a full battery pack, refer to the tables on pages 118-119.

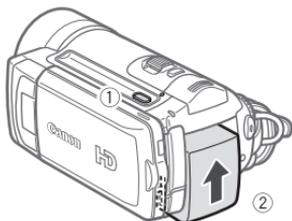

1 Turn off the camcorder.

2 Attach the battery pack to the camcorder.

Press the battery pack softly into the battery attachment unit and slide it up until it clicks in place.

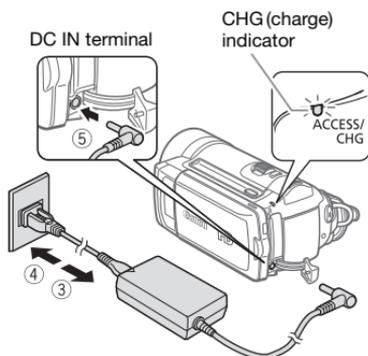

3 Connect the power cord to the compact power adapter.

4 Plug the power cord into a power outlet.

5 Connect the compact power adapter to the camcorder's DC IN terminal.

- The CHG (charge) indicator starts flashing. The indicator will stay on when the charging is completed.
- If the indicator flashes but in a different pattern, refer to *Troubleshooting* (□ 100).


ONCE THE BATTERY PACK IS FULLY CHARGED

1 Disconnect the compact power adapter from the camcorder.

2 Unplug the power cord from the power outlet and the compact power adapter.



TO REMOVE THE BATTERY PACK

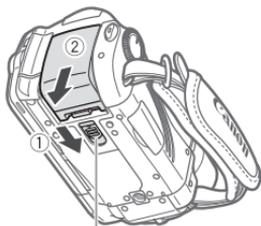

BATTERY RELEASE
switch

- 1 Slide **BATTERY RELEASE** in the direction of the arrow and hold it pressed down.
- 2 Slide the battery pack down and then pull it out.

! IMPORTANT

- Turn off the camcorder before connecting/disconnecting the compact power adapter or when recharging the battery. After pressing **ON/OFF** to turn off the camcorder, important data is updated in the memory. Be sure to wait until the **POWER** indicator turns off.
- We recommend charging the battery pack in temperatures between 10 °C and 30 °C (50 °F and 86 °F). Outside the temperature range of 0 °C to 40 °C (32 °F to 104 °F), the charging will not start.
- Do not connect to the camcorder's DC IN terminal or to the compact power adapter any electrical equipment that is not expressly recommended for use with this camcorder.

- To prevent equipment breakdowns and excessive heating, do not connect the supplied compact power adapter to voltage converters for overseas travels or special power sources such as those on aircraft and ships, DC-AC inverters, etc.


i NOTES

- If remaining battery time is an issue, you can power the camcorder using the compact power adapter so the battery pack will not be consumed.
- Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
- We recommend that you prepare battery packs to last 2 to 3 times longer than you think you might need.
- **USA and Canada only:** The Lithium ion/polymer battery that powers this product is recyclable. Please call 1-800-8-BATTERY for information on how to recycle this battery.




Preparing the Wireless Controller and Accessories

First, insert the supplied lithium button battery CR2025 into the wireless controller.

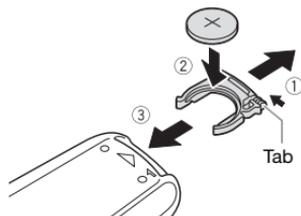

- 1 Press the tab in the direction of the arrow and pull out the battery holder.**
- 2 Place the lithium button battery with the + side facing up.**
- 3 Insert the battery holder.**

TO USE THE WIRELESS CONTROLLER

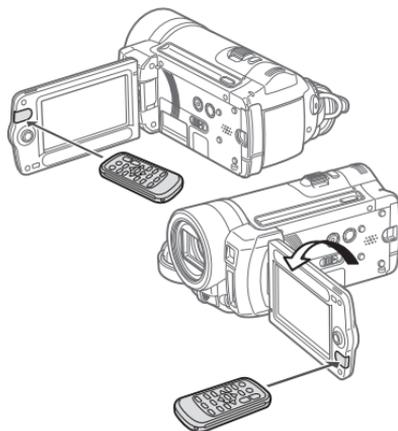

Point the wireless controller at the camcorder's remote sensor when you press the buttons.

You can rotate the LCD panel 180 degrees to use the wireless controller from the front of the camcorder.

i NOTES

- The wireless controller may not work properly when the remote sensor is situated under strong light sources or direct sunlight.
- If the wireless controller does not work, check that [WL.REMOTE] is not set to [OFF OFF] (98). Otherwise, replace the battery.


Accessories



Fasten the grip belt.

- Adjust the grip belt so that you can reach the zoom lever with your index finger, and the **[START/STOP]** button with your thumb.
- You can remove the grip belt and replace it with the supplied wrist strap.


TO REMOVE THE GRIP BELT

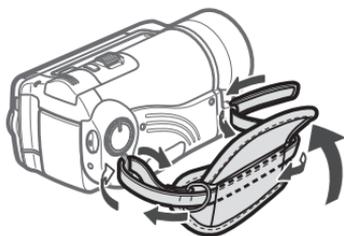

- 1 Lift the padded handgrip's flap and detach the strap from the Velcro pad.

- 2 Pull the strap to remove it first from the front bracket on the camcorder, then to unthread it from the handgrip and finally to remove it from the rear bracket on the camcorder.


TO ATTACH A WRIST STRAP

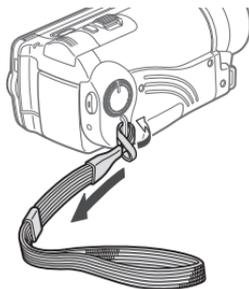

Pass the attaching end of the wrist strap through the back bracket on the camcorder, thread the wrist strap through the loop and fasten.

You can also attach the wrist strap to the strap mount on the grip belt to use both for extra convenience and protection.

TO ATTACH A SHOULDER STRAP

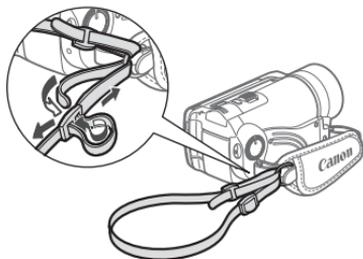

Pass the ends of the shoulder strap through the strap mount on the grip belt and adjust the length of the strap.

You can also remove the grip belt and attach the shoulder strap directly to the rear bracket on the camcorder.

TO REATTACH THE GRIP BELT



- 1 Pass the end of the strap through the rear bracket on the camcorder.**
- 2 Thread the strap through the padded handgrip and then pass it through the front bracket on the camcorder.**
- 3 Fasten the grip belt as necessary, attach the strap to the Velcro pad on the handgrip and close the flap.**

Adjusting the Position and Brightness of the LCD Screen

Rotating the LCD Panel

Open the LCD panel 90 degrees.

- You can rotate the panel 90 degrees downward.
- You can rotate the panel 180 degrees toward the lens. Rotating the LCD panel 180 degrees can be useful in the following cases:
 - When you wish to include yourself in the picture when recording with the self timer.
 - To allow the camcorder to be operated with the wireless controller from the front.

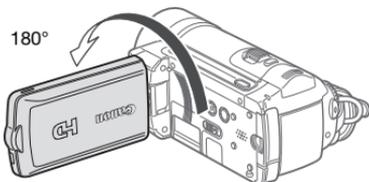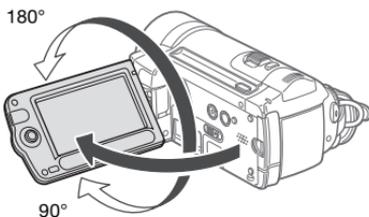

Subject can monitor the LCD screen




i NOTES

About the LCD screen: The screen is produced using extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black, red, blue or green dots. This has no effect on the recorded image and does not constitute a malfunction.

LCD Backlight

You can set the brightness of the screen to normal or bright.

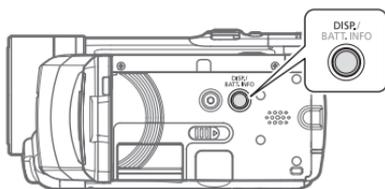

While the camcorder is on, hold [DISP.] pressed down for more than 2 seconds.

Repeat this action to toggle between the normal and bright settings.


i NOTES

- This setting does not affect the brightness of the recording.
- Using the bright setting will shorten the effective usage time of the battery pack.

Basic Operation of the Camcorder

The **EASY** Button: **EASY** Mode or Flexible Recording

The camcorder offers two basic modes for recording video or still images: **EASY** mode for beginners or if you just prefer not to bother with detailed camcorder settings, and **flexible recording** mode which lets you change the camcorder's settings to your preference.

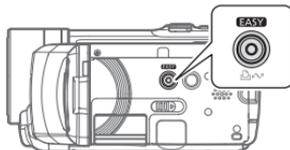

Press the **EASY** button to enter the **EASY** mode (the button's blue light will be on). You do not need to worry about any settings and can shoot video using just the zoom lever (□ 37) and **[START/STOP]** (□ 35) or take photos using just the zoom lever and **[PHOTO]** (□ 62).



Press the **EASY** button again to return to the flexible recording mode (the button's light is off). You can access the menus and change settings to your preference. Even in flexible recording mode, the camcorder can help you with the settings. For example, you can use the Special Scene recording programs (□ 45) to set at once all the optimal settings to match special recording conditions.

i NOTES

In **EASY** mode you cannot access the menus but you can change the following settings in advance, before setting the camcorder to **EASY** mode.

- Recording mode of movies
- Size/quality of still images
- Auto slow shutter
- All settings in the [SYSTEM SETUP] menu

Operating Modes

The camcorder's operating mode is determined by the position of the mode dial. In this manual,  indicates that a function is available in the operating mode shown and  indicates that the function is not available. When no operating mode icons are given, the function is available in all operating modes.

Operating mode	Mode dial	Icon display	Operation	
		 /  (Green)	Recording movies in the built-in memory / on the memory card	35
		 /  (Blue)	Recording still images in the built-in memory / on the memory card	62
		 /  (Green)	Playing movies from the built-in memory / memory card	39
		 /  (Blue)	Viewing still images from the built-in memory / memory card	64



Joystick and Joystick Guide

Use the joystick to operate the camcorder's menus.

Push the joystick up, down, left or right (▲▼, ◀▶) to select an item or change settings.



Press the joystick itself (SET) to save the settings or confirm an action. On menu screens, this is indicated by the icon .

The joystick can also be used in combination with the joystick guide to operate additional functions. Press (SET) to display/hide the joystick guide. The functions that appear on the joystick guide will change depending on the operating mode. In the illustrations of this manual, positions other than those relevant to the function explained are marked with a striped pattern.

Depending on the operating mode, these positions may be empty or show a different icon than the one on the illustration.




When the guide contains multiple "pages", [NEXT] and the page number icon (▼) will appear at the bottom position. Push the joystick (▼) toward [NEXT] to display the next "page" of the guide.

Using the Menus


Many of the camcorder's functions can be adjusted from the menus that open after pressing the FUNC. button (FUNC.). To access the menus set the camcorder to flexible recording mode. In EASY mode, except for a few exceptions, most menu settings will return to their default values (□ 25). For details about the available menu options and settings, refer to the appendix *Menu Options Lists* (□ 91).

Selecting a FUNC. Menu Option

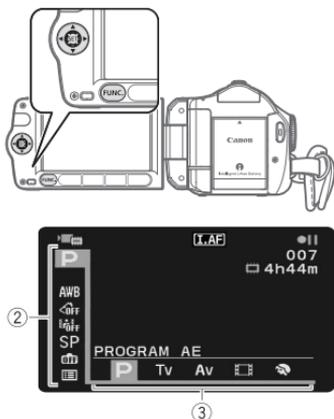

- 1 Press **[FUNC.]**.
- 2 Select (**▲▼**, **◀▶**) the icon of the function you want to change.
Menu items not available will appear grayed out.
- 3 Select (**◀▶**) the desired setting from the available options at the bottom bar.
 - The selected option will be highlighted in orange.
 - With some settings you will need to make further selections and/or press **[SET]**. Follow the additional operation guides that will appear on the screen (such as the **[SET]** icon, small arrows, etc.).
- 4 Press **[FUNC.]** to save the settings and close the menu.
You can press **[FUNC.]** to close the menu at any time.

Selecting an Option from the Setup Menus

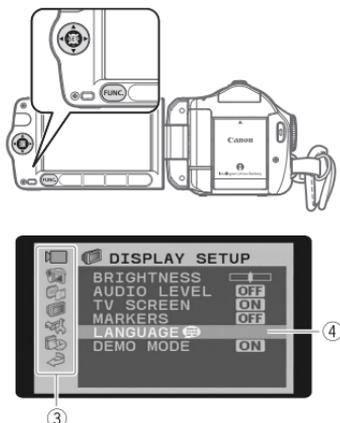

- 1 Press **[FUNC.]**.
- 2 Select (**▲▼**, **◀▶**) the **[SETUP]** icon and press **[SET]** to open the setup menus.
You can also hold **[FUNC.]** pressed down for more than 1 second or press **[MENU]** on the wireless controller to open directly the setup menu screen.
- 3 Select (**▲▼**) the desired menu from the left side column and press **[SET]**.
The title of the selected menu appears on top of the screen and under it the list of settings.
- 4 Select (**▲▼**) the setting you want to change and press **[SET]**.
 - The orange selection bar indicates the menu setting currently selected. Items not available appear in black.
 - Push the joystick (**◀**) to return to the menu selection screen (step 3).



5 Select (▲▼) the desired option and press (SET) to save the setting.

6 Press [FUNC.].

You can press [FUNC.] to close the menu at any time.

Abbreviation of Menu Selections in this Manual

In this manual, the (▶) arrow is used to abbreviate menu selections. Below is an example of changing a setting using the setup menus.

[FUNC.] (▶)

[MENU] (▶)

[DISPLAY SETUP] (▶)

[LANGUAGE] (▶)

Desired language (▶)

[FUNC.]

For selections in the FUNC. menu, the abbreviated form will always show the initial default value. In recording mode, its icon will appear on the left side column when you first open the menu. If the setting was changed, the icon of the currently selected option will appear instead.

[FUNC.] (▶)

[OFF IMAGE EFFECT OFF] (▶)

Desired image effect (▶)

[FUNC.]

First Time Settings

Setting the Date and Time

You will need to set the date and time of the camcorder before you can start using it. The [DATE/TIME] screen will appear automatically when the camcorder's clock is not set.



When the [DATE/TIME] screen appears, the year will be displayed in orange and indicated with up/down arrows.

- 1 Change (▲▼) the year and move (▶) to the month.**
- 2 Change the rest of the fields (month, day, hour and minutes) in the same way.**
- 3 Select (▶) [OK] and press (SET) to start the clock and close the setup screen.**

! IMPORTANT

- When you do not use the camcorder for about 3 months, the built-in rechargeable lithium battery may discharge completely and the date and time setting may be lost. In such case, recharge the built-in lithium battery (□ 114) and set the time zone, date and time again.

- The date appears in a year-month-day format only in the first setup screen. In subsequent screen displays the date and time will appear as month-day-year (for example, [JAN. 1, 2008 12:00 AM]). You can change the date format (□ 99).
- You can also change the date and time later on (not during the initial setup). To open the [DATE/TIME] screen:

[FUNC.] → [MENU] →
 [DATE/TIME SETUP] →
 [DATE/TIME]

Changing the Language

Options

◆ Default value

[ČEŠTINA]	[MAGYAR]	[العربية]
[DEUTSCH]	[MELAYU]	[فارسی]
[ΕΛΛΗΝΙΚΑ]	[POLSKI]	[தமிழ்]
[ENGLISH]◆	[ROMÂNĂ]	[简体中文]
[ESPAÑOL]	[TÜRKÇE]	[繁體中文]
[FRANÇAIS]	[РУССКИЙ]	[한국어]
[ITALIANO]	[УКРАЇНСЬКА]	[日本語]

FUNC.
 (□ 28)

[FUNC.]



[FUNC.] →

[MENU] →

[DISPLAY SETUP] →

[LANGUAGE] →

Desired language →

[FUNC.]

i NOTES

- If you changed the language by mistake, follow the  mark next to the menu item to change the setting.
- The displays **SET** and **FUNC** that appear in some menu screens refer to the name of buttons on the camcorder and will not change, regardless of the language selected.

Changing the Time Zone

Change the time zone to match your location. The default setting is New York.

FUNC.
 (□ 28)

[FUNC.]



TO SET THE HOME TIME ZONE

[FUNC.] →

[MENU] →

[DATE/TIME SETUP] →

[T.ZONE/DST] →  →

Your local time zone* →

[FUNC.]



WHEN YOU TRAVEL

FUNC.

[MENU]

[DATE/TIME SETUP]

[T.ZONE/DST]

Local time at your destination*

FUNC.

- * To adjust for daylight saving time, select the area name marked with a .

Using a Memory Card

Recommended Memory Cards

You can use commercially available SDHC (SD high capacity) memory cards and SD memory cards with this camcorder. However, depending on its Speed Class, you may not be able to record movies on the memory card. Refer to the following table.

As of June 2008, the movie recording function has been tested using SD/SDHC memory cards made by Panasonic, SanDisk and Toshiba.


We recommend using memory cards with a Speed Class 4 or higher.

NOTES

- **About SDHC Memory Cards:** SDHC is the new type of SD memory card with capacities over 2 GB. Please note that the specifications of SDHC memory cards are different from those of regular SD memory cards and you will not be able to use memory cards of over 2 GB with devices that do not support SDHC. However, SDHC devices (including this camcorder) are backward compatible and support regular SD memory cards.
- **About the SD Speed Class:** The SD Speed Class is a standard that indicates the minimum guaranteed data transfer speed of SD/SDHC memory cards. When you buy a new memory card, look for the Speed Class logo on the package.

Inserting and Removing a Memory Card

Make sure to initialize all memory cards before using them with this camcorder (□ 33).

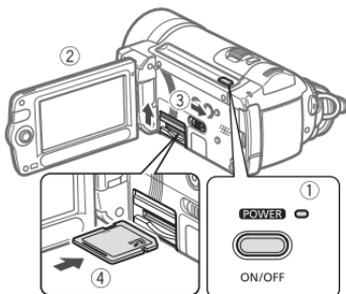

- 1 Turn off the camcorder.
- 2 Open the LCD panel.
- 3 Slide **CARD OPEN** toward the right to open the memory card slot cover.

- 4 Insert the memory card straight, with the label facing up, all the way into the memory card slot until it clicks.
- 5 Close the memory card slot cover.
 - Pull the cover down until it clicks.
 - Do not force the cover closed if the memory card is not correctly inserted.

TO REMOVE THE MEMORY CARD

- 1 Slide **CARD OPEN** toward the right to open the memory card slot cover.
- 2 Push the memory card once to release it. When the memory card springs out, pull it all the way out.
- 3 Close the memory card slot cover.

Memory cards usable for recording movies

Memory card	Capacity	SD Speed Class	Recording movies
 SD memory cards	64 MB or less	–	–
	128 MB or more	–	● ^{1,2}
		CLASS④ or higher	● ¹
 SDHC memory cards	Over 2 GB	CLASS④ or higher	● ¹
		CLASS④ or higher	●

¹ Except for the [MXP HIGH QUALITY 24 Mbps] and [FXP HIGH QUALITY 17 Mbps] recording modes.

² On some memory cards you may not be able to record movies.



! IMPORTANT

Memory cards have front and back sides that are not interchangeable. Inserting a memory card facing the wrong direction can cause a malfunction of the camcorder.

Selecting the Memory for the Recordings

You can select to record your movies and still images in the built-in memory or on the memory card. The built-in memory is the default media for recording both.



FUNC.
(book 28)

FUNC.



TO CHANGE THE MEDIA FOR RECORDING MOVIES

FUNC.

[MENU]

[MEMORY OPER.]

[MEDIA:MOVIES]*

The memory you want to use

FUNC.

* Select [MEDIA:IMAGES] to change the media to be used for recording still images.

i NOTES

When selecting the memory for the recordings, information about the memory currently selected (total capacity, amount of memory in use, and available space) will be displayed on the screen. Estimated figures about available movie recording time and available number of still images are approximate and based on the recording mode and still image quality/size settings currently in use.

Initializing the Built-In Memory or Memory Card

Initialize memory cards when you use them with this camcorder for the first time. You can also initialize a memory card or the built-in memory to permanently delete all the data it contains.

Options

[INITIALIZE]

Clears the file allocation table but does not physically erase the stored data.

[COMPL.INIT.]

Erases all data completely.

FUNC.
(book 28)

FUNC.



[FUNC.] >
[MENU] >
[MEMORY OPER.] >
[INITIALIZE] > The memory you
want to initialize >
Initialization method >
[YES]* > [OK] >
[FUNC.]

* Press **SET** to cancel the complete initialization while it is in progress. All recordings will be erased and the memory can be used without any problem.

! IMPORTANT

- Initializing the memory will permanently erase all recordings. The lost original recordings cannot be recovered. Make sure you back up important recordings in advance using an external device (□ 83).
- When initializing the memory, use the compact power adapter to power the camcorder. While the initialization is in progress, do not disconnect the power source or turn off the camcorder.




Video

This chapter covers functions related to shooting movies, including recording, playback, menu options, and memory operations.

Basic Recording

Shooting Video

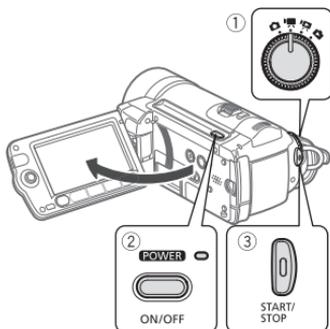

- 1 Set the mode dial to .
- 2 Turn on the camcorder.
You can select the memory to be used for recording movies (□ 33).
- 3 Press **START/STOP** to begin recording.
 - Recording starts; press **START/STOP** again to pause the recording.
 - You can also press **START/STOP** on the LCD panel.

WHEN YOU HAVE FINISHED RECORDING

- 1 Make sure that the **ACCESS** indicator is off.
- 2 Turn off the camcorder.
- 3 Close the LCD panel.

! IMPORTANT

Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss or damage to the memory.

- Do not open the memory card slot cover.
- Do not disconnect the power source or turn off the camcorder.
- Do not change the position of the mode dial.

i NOTES

- **About the Power Save mode:** To save power when the camcorder is powered by a battery pack, the camcorder will automatically shut off if left without any operations for 5 minutes when [POWER SAVE] is set to [ON ON] (□ 98). Press **ON/OFF** to turn on the camcorder.
- When recording in bright places it may be difficult to use the LCD screen. In such case, change the brightness of the LCD screen (□ 25, 96).

Selecting the Video Quality (Recording Mode)

The camcorder offers 5 recording modes. Changing the recording mode will change the recording time available on the memory. Select MXP or FXP mode for better movie quality; select LP mode for longer recording times. The following table gives approximate recording times.



FUNC.
(28)

FUNC.



FUNC.

[**SP** STANDARD PLAY 7 Mbps]
Desired recording mode

FUNC.

NOTES

- Discs created with the optional DW-100 DVD Burner that contain recordings in MXP mode cannot be played back on AVCHD-compatible DVD players or Blu-ray Disc players (as of June 2008). Use the DW-100 to play back such discs (86).
- The camcorder uses a variable bit rate (VBR) to encode video so the actual recording times will vary depending on the content of the scenes.
- The camcorder retains the last setting used even if you set the camcorder to **EASY** mode.

Approximate recording times

Default value

Recording mode	MXP*	FXP*	XP+	SP*	LP
Memory					
Built-in memory	2 hr. 55 min.	4 hr. 10 min.	5 hr. 45 min.	9 hr. 35 min.	12 hr. 15 min.
4 GB memory card	20 min.	30 min.	40 min.	1 hr. 10 min.	1 hr. 30 min.
8 GB memory card	40 min.	1 hr.	1 hr. 25 min.	2 hr. 20 min.	3 hr.
16 GB memory card	1 hr. 25 min.	2 hr. 5 min.	2 hr. 50 min.	4 hr. 45 min.	6 hr. 5 min.
32 GB memory card	2 hr. 55 min.	4 hr. 10 min.	5 hr. 45 min.	9 hr. 35 min.	12 hr. 15 min.


* Recorded in 1,920 x 1,080 resolution. Movies recorded using other recording modes are recorded in 1,440 x 1,080 resolution.



Zooming



 mode: In addition to the optical zoom, digital zoom is also available ( 93).

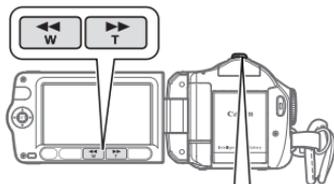

W Zoom out



T Zoom in

12x Optical Zoom

Move the zoom lever toward **W to zoom out (wide angle). Move it toward **T** to zoom in (telephoto).**

Press gently for a slow zoom; press harder for faster zooms. You can also set [ZOOM SPEED] ( 93) to one of three constant speeds (3 is the fastest, 1 the slowest).

NOTES

- Keep at least 1 m (3.3 ft.) away from the subject. At full wide angle, you can focus on a subject as close as 1 cm (0.39 in.).
- When [ZOOM SPEED] is set to [VAR VARIABLE]:
 - When you use the **T** and **W** buttons on the wireless controller or LCD panel, the zoom speed will be constant at [ZOOM SPEED 3].
 - The zoom speed will be faster in record pause mode than when actually recording.

Quick Start Function

When you close the LCD panel with the camcorder on, the camcorder enters the standby mode. In standby mode the camcorder consumes only about half the power used when recording, saving energy when you are using a battery pack. Additionally, when you open the LCD panel, the camcorder is ready to start recording in approximately 1 second, ensuring you do not miss important shooting opportunities.



1 With the camcorder on and in a recording mode, close the LCD panel.

A beep will sound and the **POWER** indicator will change to orange to indicate the camcorder entered the standby mode.

2 When you wish to resume recording, open the LCD panel.

Within less than 1 second, the **POWER** indicator will return to green and the camcorder will be ready to record.

! IMPORTANT

Do not disconnect the power source during standby mode (while the **POWER** indicator is lit in orange).

i NOTES

- If you close the LCD panel under some circumstances (for example while a menu is being displayed or the **ACCESS** indicator is on or flashing), the camcorder may not enter the standby mode. Check that the **POWER** indicator changes to orange.
- The camcorder will shut off if left in standby mode for 10 minutes, regardless of the **[POWER SAVE]** setting (□ 98). Press **[ON/OFF]** to turn on the camcorder.
- You can select the length of time until shut-off or turn off the Quick Start function with the **[QUICK START]** setting (□ 98).
- If the position of the mode dial is changed during standby mode, the camcorder will be in the selected mode when you open the LCD panel.

Reviewing and Deleting the Last Scene Recorded

Even in  mode you can play back the last scene recorded in order to

check it. You can also delete the scene while reviewing it.



1 If the joystick guide does not appear on screen, press **SET** to display it.

If  does not appear on the joystick guide, repeatedly push the joystick () toward **[NEXT]** to display it.

2 Push the joystick () toward .

The camcorder plays back the last scene (but without sound) and returns to record pause mode.

Deleting a Scene After Recording It

After recording a scene:

- 1 Review the scene as described in the previous section.
- 2 While reviewing the scene, select () the  icon and press **SET**.
- 3 Select () **[YES]** and press **SET**.


i NOTES

- Avoid any other operations on the camcorder while the scene is being deleted.
- You will not be able to delete the last scene if after the scene was recorded you changed the operating mode or turned the camcorder off.



Basic Playback

Playing Back the Video

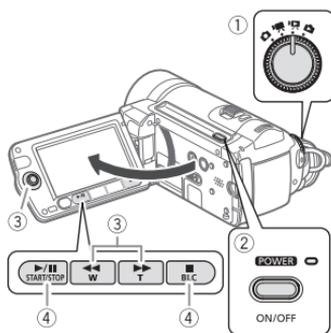

1 Set the mode dial to **▶**.

2 Turn on the camcorder.

The scene index screen appears after a few seconds.

3 Move (**▲▼**, **◀▶**) the selection frame to the scene you want to play back.

When you have recorded a large number of scenes, press **◀▶** or **▶▶** to move between index screen pages.

4 Press **▶/II** or **SET** to begin the playback.


- Playback will start from the scene selected and continue until the end of the last scene recorded.
- Press **▶/II** again to pause the playback.

- Press **■** to stop the playback and return to the scene index screen.

TO SELECT WHICH SCENES TO PLAY BACK

After creating a playlist (p. 59), you can switch between the original movies and the playlist you edited according to your choice. You can also switch between the scenes or playlist recorded in the built-in memory and those recorded on the memory card.

- 1** In the index screen, move (**▲▼**) the orange selection frame to the tabs on the top of the screen.
- 2** Select (**◀▶**) the location of the scenes you want to play back.
- 3** Return (**▲▼**) to the index screen to select the scene.

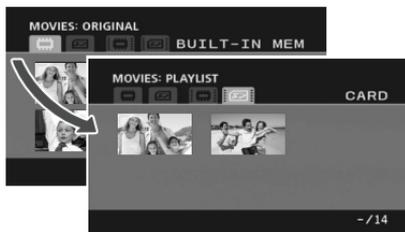

- Original movies in the built-in memory
- Original movies on the memory card
- Playlist in the built-in memory
- Playlist on the memory card

! IMPORTANT

- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.

- Do not disconnect the power source or turn off the camcorder.
- Do not change the position of the mode dial.
- You may not be able to play back with another AVCHD device the movies you recorded on the memory card with this camcorder. In such case, play back the movies on the memory card using this camcorder.
- You may not be able to play back with this camcorder movies recorded using another AVCHD device.

NOTES

- Depending on the recording conditions, you may notice brief stops in video or sound playback between scenes.

Special playback modes

To enter the special playback modes, you can use the buttons on the LCD panel or wireless controller (□ 16). There is no sound during the special playback modes.

Special playback mode	Initial mode	Operation on the camcorder () or on the wireless controller ()
Fast playback	Normal playback	 ,  : Press  or  Press again to increase the playback speed 5x → 15x → 60x the normal speed ¹
Slow playback	Playback pause	 ,  : Press  or  Press again to increase the playback speed 1/8 → 1/4 the normal speed ²
Frame advance/reverse	Playback pause	 : Press  or  to reverse several frames (at 0.5-second intervals) or advance one frame. Press and hold the button for continuous playback.
Skipping Scenes:		
To the beginning of the next scene	Normal playback	 : Push the joystick ()  : Press 
To the beginning of the current scene		 : Push the joystick ()  : Press 
To the previous scene		 : Push the joystick () twice  : Press  twice
End special playback	Any special playback mode	 : Press   : Press 

During some special playback modes, you may notice some anomalies (blocky video artifacts, banding, etc.) in the playback picture.


¹ The speed indicated on the screen is approximate.

² In reverse, playback occurs at 0.5-second intervals.



- You can press **PLAYLIST** on the wireless controller to switch between the original movies index screen and the playlist of the respective memory.

ADJUSTING THE VOLUME

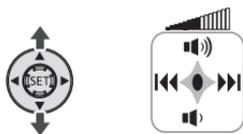

- 1 If the joystick guide does not appear on screen, press **SET** to display it.
- 2 Adjust (**▲▼**) the volume.
 - To turn off the volume, keep the joystick pressed (**▼**) toward until the volume icon changes to .
 - You can press **SET** again to hide the joystick guide during playback.

Selecting Scenes by Recording Date

You can search for all the recordings you made on a particular date, for example, to find all the movies you shot during a special event.



POINTS TO CHECK

Selecting scenes by recording date is available only from the original movies index screen.

Selecting from the List of Recordings

FUNC.

(28)



- 1 Select the original movies index screen.

You can select the original movies in the built-in memory or on the memory card.

- 2 Open the list of recordings.

FUNC. [SELECT DATE]


- The list of recordings displays all dates in which recordings were made. An orange selection frame appears on the day.
- The thumbnail shows a still image from the first scene recorded on that day. Below it will appear the number of scenes recorded and the total recording time for the same day.

- 3 Change (**▲▼**) the day and move (**◀▶**) to the month or year.

- 4 Change the other fields in the same way to select the desired date and press **SET**.

The index screen will appear with the selection frame on the first scene recorded on the selected date.

Selecting from the Calendar Screen



1 Select the original movies index screen.

You can select the original movies in the built-in memory or on the memory card.

2 Move the zoom lever toward W.

- The calendar screen appears.
- Dates that contain scenes (that is, movies were recorded on that date) appear in white. Dates without recordings appear in black.

3 Move (▲▼, ◀▶) the cursor to the desired date.

- When you move the cursor to a date displayed in white, a thumbnail showing a still image from the first scene recorded on that date will be displayed next to the calendar. Below it will appear the number of scenes recorded and the total recording time for the same day.
- You can select (▲) the year or month field and change (◀▶) the year or month to move faster between calendar months.
- You can press (◀◀) or (▶▶) to skip directly to the previous/next date that contains scenes.

4 Press (SET) to return to the index screen.


The orange selection frame will appear on the first scene recorded on the selected date.

i NOTES

- You can change on what day to start the week for the calendar display (□ 96).
- You can press (FUNC) to return to the index screen at any time.


Selecting the Playback Starting Point from the Movie Timeline

You can display a timeline of the scene and select where to begin the playback. This is very convenient when you want to play back a long scene from a specific point.

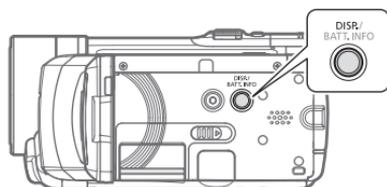

1 In the index screen select the scene you want to view and press (DISP.).

- The timeline screen appears. The large thumbnail will show the first frame of the scene. Below it, the timeline ruler shows frames taken from the scene at fixed intervals.
- Press (DISP.) again to return to the index screen.

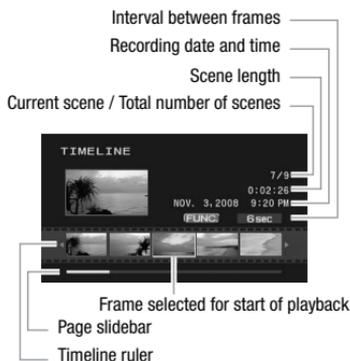

- 2 Select (◀▶) the playback starting point from the timeline ruler.
- 3 Press (SET) to begin the playback.

TO SELECT ANOTHER SCENE

Move (▲▼) the orange selection frame to the large thumbnail and change (◀▶) the scene.

TO MOVE BETWEEN TIMELINE RULER PAGES

Move (▲▼) the orange selection frame to the sidebar below the ruler and display (◀▶) the previous/next 5 frames in the scene.

TO CHANGE THE INTERVAL BETWEEN FRAMES

[FUNC.] (▶) Desired interval (▶) [FUNC.]

Deleting Scenes

You can delete those scenes that you are not interested in keeping. Deleting scenes also allows you to free up space on the memory. To delete scenes in the playlist, refer to *Deleting Scenes from the Playlist* (📖 59).



Deleting a Single Scene or All Scenes from a Selected Date

Options

[ALL SCENES (THIS DATE)]
Deletes all the scenes recorded on the same day as the selected scene.
[ONE SCENE]
Deletes only the selected scene.

FUNC.
(📖 28)

[FUNC.]



- 1 Select (▲▼, ◀▶) the scene you want to delete, or a scene recorded on the date you want to delete.

Select in advance the memory from which you want to delete scenes (📖 39).

- 2 Delete the scene(s).

[FUNC.] (▶) [🗑️ DELETE] (▶)
Desired option (▶) [YES]* (▶) [OK] (▶)
[FUNC.]

* Press (SET) twice to interrupt deleting all scenes from a selected date.

Deleting All Scenes

Select in advance the memory from which you want to delete scenes (□ 39).

FUNC. >
 [MENU] >
 [MEMORY OPER.] >
 [DEL.ALL MOVIES] >
 [YES]* > [OK] >

FUNC.

* Press **SET** twice to interrupt the operation while it is in progress.

! IMPORTANT

- Be careful when deleting original recordings. Once deleted, an original scene cannot be recovered.
- Back up important scenes before deleting them (□ 83).
- Observe the following precautions while the ACCESS indicator is on or flashing (while scenes are being deleted).
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the position of the mode dial.

i NOTES

- Deleting a scene from the original index screen also deletes that scene from the playlist.
- To delete all movies and make all recordable space available again you may prefer to initialize the memory (□ 33).
- You may not be able to delete scenes recorded or edited using another device.



Advanced Functions

Cinema Mode: Giving a Cinematic Look to your Recordings

Give your recordings a cinematic look by using the [CINE MODE] recording program. Combine this recording program with the 24 fps progressive frame rate [PF24 PF24] to get the enhanced effect of the 24p Cinema Mode.



FUNC.
(28)



To Set the [CINE MODE] Recording Program

FUNC. >

[PROGRAM AE] >

[CINE MODE] >

FUNC.

To Change the Frame Rate

FUNC. >

[MENU] >

[CAMERA SETUP] >

[FRAME RATE] >

[PF24 PF24] >

FUNC.



Special Scene Recording Programs

Recording in a very bright ski resort or capturing the full colors of a sunset or a fireworks display becomes as easy as selecting a Special Scene recording program. For details about the available options, refer to the sidebar on page 46.



FUNC.
(28)



FUNC. >

[PROGRAM AE] >

[PORTRAIT] >

Press [SET] to display the Special Scene (SCN) recording programs >

Desired recording program >

FUNC.

i NOTES

- [🌙 NIGHT]**
 - Moving subjects may leave a trailing afterimage.
 - Picture quality may not be as good as in other modes.
 - White points may appear on the screen.
 - Autofocus may not work as well as in other modes. In such case, adjust the focus manually.
- [🎆 FIREWORKS]**
 - To avoid camcorder shake, we recommend using a tripod. Make sure to use a tripod especially in **[📷]** mode, as the shutter speed slows down.
- [👤 PORTRAIT]/[🏃 SPORTS]/[🏖️ BEACH]/[❄️ SNOW]**
 - The picture may not appear smooth during playback.
- [👤 PORTRAIT]**
 - The blur effect of the background increases the more you zoom in (**T**).
- [❄️ SNOW]/[🏖️ BEACH]**
 - The subject may become overexposed on cloudy days or in shaded places. Check the image on the screen.

[👤 PORTRAIT]

The camcorder uses a large aperture, achieving a focus on the subject while blurring other distracting details.



[🏖️ BEACH]

Use this mode to record on a sunny beach. It prevents the subject from being underexposed.



[🏃 SPORTS]

Use this mode to record sports scenes such as tennis or golf.



[🌅 SUNSET]

Use this mode to record sunsets in vibrant colors.



[🌙 NIGHT]

Use this mode to record in dimly lit places.



[🎤 SPOTLIGHT]

Use this mode to record spotlight scenes.



[❄️ SNOW]

Use this mode to record in bright ski resorts. It prevents the subject from being underexposed.



[🎆 FIREWORKS]

Use this mode to record fireworks.





Changing the Shutter Speed and Aperture

Use the automatic exposure (AE) program to use functions like the white balance or image effects, or give priority to the exposure value or the shutter speed.

Use faster shutter speeds to record subjects moving quickly; use slower shutter speeds to add motion blur, emphasizing the feel of movement.

Use low aperture values (larger lens opening) to softly blur the background in a portrait; use high aperture values (smaller lens opening) to get a wider depth of field, giving a sharp focus all throughout a landscape.



Options

◆ Default value

[PROGRAM AE]◆
The camcorder automatically adjusts the aperture and shutter speed to obtain the optimal exposure for the subject.
[SHUTTER-PRIO.AE]
Set the shutter speed value. The camcorder automatically sets the appropriate aperture value.
[APERTURE-PRIO.AE]
Set the aperture value. The camcorder automatically sets the appropriate shutter speed.

FUNC.
(28)

FUNC.



FUNC. [PROGRAM AE] Desired recording program

FUNC.

TO SET THE SHUTTER SPEED OR APERTURE VALUE

When you select [SHUTTER-PRIO.AE] or [APERTURE-PRIO.AE], a numeric value will appear next to the recording program icon.

- 1 If the joystick icon appears on the screen, press to hide it.**
- 2 Adjust () the shutter speed or aperture value to the desired value.**

Shutter speed guidelines

Note that on screen only the denominator is displayed – [250] indicates a shutter speed of 1/250 second, etc.

1/2*, 1/4*, 1/8, 1/15, 1/30
To record in dimly lit places.
1/60
To record under most ordinary conditions.
1/100
To record indoor sports scenes.
1/250, 1/500, 1/1000**
To record from within a moving car or train or to shoot fast-moving subjects such as roller coasters.
1/2000**
To record outdoor sports scenes on sunny days.

* mode only.

** mode only.

In  mode, when the frame rate is set to [PF24 PF24], the shutter speeds available will be the following: 1/6, 1/12, 1/24, 1/48, 1/60, 1/100, 1/250, 1/500, 1/1000 and 1/2000.

Available Aperture Values

[1.8], [2.0], [2.4], [2.8], [3.4], [4.0], [4.8], [5.6], [6.7], [8.0]

NOTES

- When setting a numeric value (aperture or shutter speed), the number displayed will flash if the aperture or shutter speed is not appropriate for the recording conditions. In such case, select a different value.
-  SHUTTER-PRIO.AE
 - If you use a slow shutter speed in dark places, you can obtain a brighter image, but image quality may be lower, and autofocus may not work well.
 - The image may flicker when recording with fast shutter speeds.
 - **Recording movies under fluorescent lights:** If the screen starts to flicker, select  SHUTTER-PRIO.AE and set the shutter speed to 1/100.
-  APERTURE-PRIO.AE
The actual range of values available for selection will vary depending on the initial zoom position.

Mini Video Light

You can turn on the mini video light to shoot video or take photos in dark places.



1 If the joystick guide does not appear on screen, press to display it.

If  does not appear on the joystick guide, push the joystick (▼) toward [NEXT] to display it.

2 Push the joystick (▶) toward .

-  appears on the screen.
- Push the joystick (▶) again to turn the mini video light off.



TO USE THE OPTIONAL VL-5 VIDEO LIGHT

You can attach the optional VL-5 Video Light to the mini advanced shoe if you want a more powerful video light than the built-in mini video light. For details about attaching and using the video light, refer to the instruction manual of the VL-5. When the video light is attached and the power switch is set to ON or AUTO,  will appear on the screen.

NOTES

- We recommend not using the mini video light while the optional Wide-converter or Tele-converter is attached; its shadow can appear on the screen.
- The built-in mini video light will be disabled automatically when you attach the optional VL-5 Video Light. To use the built-in mini video light, set the switch on the VL-5 to OFF first.

Self Timer



FUNC.

( 28)



FUNC. 

[ MENU] 

[ CAMERA SETUP] 

[SELF TIMER]  [ON ] 

FUNC.

 appears.

 **mode:**

In record pause mode, press

[START/STOP].

The camcorder starts recording after a 10-second countdown*. The countdown appears on the screen.

 **mode:**

Press [PHOTO], first halfway to activate the autofocus and then fully.

The camcorder will record the still image after a 10-second countdown*. The countdown appears on the screen.

* 2 seconds when using the wireless controller.

NOTES

Once the countdown has begun, you can press [START/STOP] (when recording movies), press [PHOTO] fully (when recording still images) or turn off the camcorder to cancel the self timer.

Automatic Backlight Correction and Manual Exposure Adjustment

At times, backlit subjects may appear too dark (underexposed) or subjects under very strong lights may appear too bright or glaring (overexposed). To correct this, you can manually adjust the exposure or use the automatic backlight correction.




POINTS TO CHECK

Select a recording mode other than [FIREWORKS].

Automatic Backlight Correction


When shooting subjects with a strong light source behind them, you can have the camcorder automatically correct for the backlight with the press of a single button.

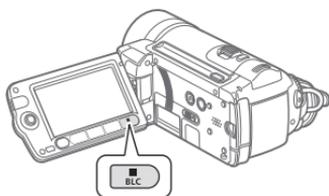

Press [BLC].

- * appears.
- Press [BLC] again to end the backlight correction mode.

Manual Exposure Adjustment



- 1 If the joystick guide does not appear on screen, press [SET] to display it.

If [EXP] does not appear on the joystick guide, repeatedly push the joystick (▼) toward [NEXT] to display it.

- 2 Push the joystick (▲) toward [EXP].

The exposure adjustment indicator ◯←→◯ and the neutral value “±0” appear on the screen.

- 3 Adjust the (◀▶) the brightness of the image as required.

The adjustment range and the length of the exposure adjustment indicator will vary depending on the initial brightness of the picture.

- 4 Press [SET].

- The exposure adjustment indicator will change to white and the exposure will be locked.
- If you operate the zoom during exposure lock, the brightness of the image may change.
- During exposure lock, press [SET] and push the joystick (▲) toward [EXP] again to return the camcorder to automatic exposure.



Manual Focus Adjustment

Autofocus may not work well on the following subjects. In such case, focus manually.

- Reflective surfaces
- Subjects with low contrast or without vertical lines
- Fast moving subjects
- Through wet windows
- Night scenes



POINTS TO CHECK

Adjust the zoom before you start the procedure.



- 1 If the joystick guide does not appear on screen, press to display it.**

If [FOCUS] does not appear on the joystick guide, repeatedly push the joystick () toward [NEXT] to display it.

- 2 Push the joystick () toward [FOCUS].**
“MF” appears.
- 3 Push the joystick () or () once to verify if the image is focused.**
The center of the screen will be magnified to help you focus more easily. You can also turn off the focus assist function (94).

- 4 Adjust () or () the focus as necessary.**

- 5 Press .**

- The focus will be locked.
- During focus lock, press and push the joystick () toward [FOCUS] again to return the camcorder to autofocus.

Infinity Focus

Use this function when you wish to focus on faraway subjects such as mountains or fireworks.

Instead of step 2 in the previous procedure:

Push the joystick () toward [FOCUS] and hold it for more than 2 seconds.

- ∞ appears.
- Push the joystick () toward [FOCUS] again to return the camcorder to autofocus.
- If you operate the zoom or joystick () or () , ∞ changes to “MF” and the camcorder returns to manual focus.

White Balance

The white balance function helps you to accurately reproduce colors under different lighting conditions so that white objects will always look truly white in your recordings.



POINTS TO CHECK

Select a recording mode other than the Special Scene recording programs.

Options

◆ Default value

[ AUTO]◆
Settings are automatically set by the camcorder. Use this setting for outdoor scenes.
[ DAYLIGHT]
For recording outdoors on a bright day.
[ SHADE]
For recording in shaded places.
[ CLOUDY]
For recording on a cloudy day.
[ TUNGSTEN]
For recording under tungsten and tungsten type (3-wavelength) fluorescent lighting.
[ FLUORESCENT]
For recording under warm white, cool white or warm white type (3-wavelength) fluorescent lighting.
[ FLUORESCENT H]
For recording under daylight or daylight type (3-wavelength) fluorescent lighting.
[ SET]
Use the custom white balance setting to make white subjects appear white under colored lighting.

FUNC.
( 28)

()



[**FUNC.**] 

[**AMB AUTO**] 

Desired option* 

[**FUNC.**]

* When you select [ SET], do not press [**FUNC.**] and continue instead with the following procedure.

TO SET THE CUSTOM WHITE BALANCE

- 1 Point the camcorder at a white object, zoom in until it fills the whole screen and press .**
When the adjustment is completed,  stops flashing and stays on. The camcorder retains the custom setting even if you turn off the camcorder.
- 2 Press [**FUNC.**] to save the setting and close the menu.**

NOTES

- When you select the custom white balance:**
 - Set the custom white balance in a sufficiently illuminated place.
 - Turn off the digital zoom ( 93).
 - Reset the white balance when the lighting conditions change.
 - Depending on the light source,  may keep flashing. The result will still be better than with [**AMB AUTO**].
- Custom white balance may provide better results in the following cases:
 - Changing lighting conditions
 - Close-ups
 - Subjects in a single color (sky, sea or forest)
 - Under mercury lamps and certain types of fluorescent lights



- Depending on the type of fluorescent light, optimal color balance may not be obtained with [FLUORESCENT] or [FLUORESCENT H]. If the color looks unnatural, adjust it using [AUTO] or [SET].

Image Effects

You can use the image effects to change the color saturation and contrast to record images with special color effects.



POINTS TO CHECK

Select a recording mode other than the Special Scene recording programs.

Options

◆ Default value

[OFF IMAGE EFFECT OFF]◆
Records with no image enhancing effects.
[VIVID]
Emphasizes the contrast and color saturation.
[NEUTRAL]
Tones down the contrast and color saturation.
[LOW SHARPENING]
Records subjects with softened outlines.
[SOFT SKIN DETAIL]
Softens the details in the skin tone area for a more complimentary appearance. To obtain the best effect, use this setting when recording a person in close-up. Note that areas similar to the skin color may lack in detail.

[CUSTOM]

Allows you to adjust the color depth, brightness, contrast, and sharpness of the image.

- [COL.DEPTH]: (–) Shallower colors,
(+) Richer color tonality
- [BRIGHTN.]: (–) Darker picture,
(+) Brighter picture
- [CONTRAST]: (–) Flatter picture,
(+) More defined light and shade
- [SHARPNESS]: (–) Vaguer outlines,
(+) Sharper outlines

FUNC.
(p. 28)

FUNC.



FUNC. →

[OFF IMAGE EFFECT OFF] →

Desired option* →

FUNC.

* When you select [CUSTOM], do not press FUNC. and continue instead with the following procedure.

TO SET THE CUSTOM IMAGE EFFECT

- Press **SET** and select (**▲▼**) the custom setting options.
- Adjust (**◀▶**) each setting as desired.
- When you finish all the adjustments, press **SET** then **FUNC.** to save the setting and close the menu.

Digital Effects



Options

♦ Default value

[OFF] D.EFFECT OFF ♦
Select this setting when you do not intend to use the digital effects.
[] FADE-T (fade trigger), [] WIPE
Select one of the faders to begin or end a scene with a fade from or to a black screen.
[] BLK&WHT *
Records images in black and white.
[] SEPIA *
Records images in sepia tones for an "old" look.
[] ART
Select this effect to add "flavor" to your recordings.

* Only these digital effects are available in mode.

Setting

FUNC.
(28)

()



FUNC.

[OFF] **D.EFFECT OFF**
Desired fader/effect*

FUNC. **

* You can preview the digital effect on the screen.

**The icon of the selected digital effect appears.

Applying



1 If the joystick guide does not appear on screen, press to display it.

If does not appear on the joystick guide, repeatedly push the joystick () toward [NEXT] to display it.

2 Push the joystick () toward .

- The icon of the selected effect turns green.
- Push the joystick () again to deactivate the digital effect (its icon will turn white again).

TO FADE IN

Activate the selected fader in record pause mode (), then press to start recording with a fade in.

TO FADE OUT

Activate the selected fader while recording () , then press to fade out and pause the recording.

TO ACTIVATE AN EFFECT

mode: Activate the selected effect while recording or in record pause mode.

mode: Activate the selected effect and then press to record the still image.




i NOTES

- When you apply a fader, not only the picture but also the sound will fade in or out. When you apply an effect, the sound will be recorded normally.
- The camcorder retains the last setting used even if you turn off the digital effects or change the recording program.

On-Screen Displays and Data Code

With every scene or still image recorded, the camcorder keeps a data code that includes the date, time and information about the camera setup at the time of recording. While viewing a still image, all the data is displayed in the form of information icons. During movie playback you can select what to display with the [DATA CODE] setting (p. 96). You can also turn most on-screen displays on or off.

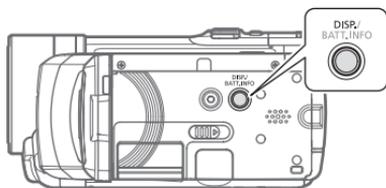

Repeatedly press **DISP.** to turn the on-screen displays on/off in the following sequence:

- mode:
- All displays on
- Most displays off*

- mode:
- All displays on
- Data code only
- All displays off

- mode:
- All displays on
- Regular displays only (removes the histogram and information icons)
- All displays off

* The following icons will appear even when all other on-screen displays are turned off: The icons ● and ●|| (in mode), the ● icon and AF frames when the autofocus is locked (in mode), screen markers (both recording modes).

Audio Recording Level

You can adjust the audio recording level for the built-in or for an external microphone. You can display the audio level indicator while recording.



Manual Adjustment of the Audio Recording Level




1 If the joystick guide does not appear on screen, press **SET** to display it.

If [**MIC**] does not appear on the joystick guide, repeatedly push the joystick (**▼**) toward [NEXT] to display it.

2 Push the joystick (**▲**) toward [**MIC**].

The manual adjustment icon **M** will appear to the left of the audio level indicator and the manual adjustment bar (green) will appear below it.



3 Adjust (**◀▶**) the audio level as necessary.

- Push the joystick (**▶**) toward **+** to raise the audio recording level or push it (**◀**) toward **-** to lower it.
- As a guideline, adjust the audio recording level so that the audio level meter will go to the right of the -12 dB mark only occasionally.

4 Press **SET** to save the setting and hide the joystick guide.

- The audio level selected will be locked and the audio level adjustment bar will disappear from the indicator.
- During manual adjustment, press **SET** and push the joystick (**▲**) toward [**MIC**] to return the camcorder to automatic audio level.

i NOTES

- When the 0 dB mark turns red, the sound may be distorted.
- If the audio level is too high and the sound gets distorted, activate the microphone attenuator (□ 93).
- We recommend using headphones (□ 57) to check the sound level while adjusting the audio recording level or when the microphone attenuator is activated.

TO DISPLAY THE AUDIO LEVEL METER

Usually, the audio level indicator will be displayed only after the manual adjustment of the audio recording level. You can choose to display it also when the audio level is adjusted automatically.

FUNC.
(□ 28)

FUNC.




FUNC. **▶**
 [**≡**] **MENU** **▶**
 [**📺**] **DISPLAY SETUP** **▶**
 [**AUDIO LEVEL**] **▶** [**ON**] **▶**
FUNC.



Using Headphones or an External Microphone

Using Headphones

Use headphones for playback or to check the audio level while recording. The headphones are connected to the AV OUT/Ω terminal, which is used for both the headphones and the audio/video output. Before connecting the headphones, follow the procedure below to change the function of the terminal from AV output to Ω (headphones) output.

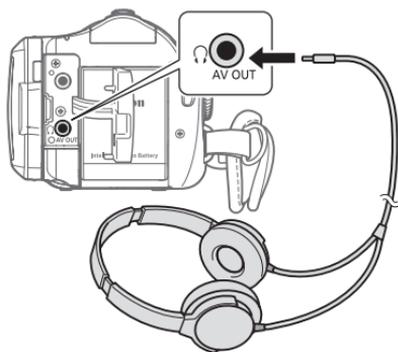

FUNC.
(28)



FUNC. ○

[MENU] ○

[SYSTEM SETUP] ○

[AV/PHONES] ○ [PHONES] ○

FUNC.

Ω appears.

TO ADJUST THE VOLUME OF THE HEADPHONES

In  mode, adjust the volume of the headphones with the [PHONES VOL.] setting (97). In  mode, adjust the headphones volume the same way you adjust the speaker's volume (41).



! IMPORTANT

- When using headphones, make sure to lower the volume to an appropriate level.
- Do not connect the headphones to the AV OUT/Ω terminal if the Ω icon does not appear on the screen. If you connect the headphones while the terminal is set to AV output, only noise will be output.

i NOTES

- Use commercially available headphones with a ∅ 3.5 mm minijack.
- When you turn off the camcorder or change the operating mode, the [AV/PHONES] setting in  mode will return to [AV AV].

Using the DM-100 Directional Stereo Microphone




Retract the mini advanced shoe cover and attach the optional DM-100 Directional Stereo Microphone to the mini advanced shoe. For details, refer to the instruction manual of the microphone.

When a compatible accessory is attached to the mini advanced shoe,  will appear on the screen.



Using other microphones

You can also use commercially available microphones not compatible with the mini advanced shoe, by connecting the external microphone to the MIC terminal. Use commercially available condenser microphones with their own power supply. You can connect almost any stereo microphone with a \varnothing 3.5 mm plug but audio recording levels may vary.

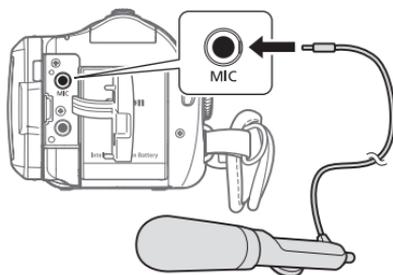

NOTES

- When an external microphone is connected to the camcorder, [WIND SCREEN] will automatically be set to [OFF OFF ].
- Accessories designed for the Advanced Accessory Shoe cannot be used with this camcorder. Look for video accessories bearing this logo to ensure compatibility with the **mini advanced shoe**.


Mini
ADVANCED SHOE
- If the audio level is too high and the sound gets distorted, activate the microphone attenuator ( 93) or adjust the audio recording level manually ( 55).



Managing Scenes and the Memory

Creating a Playlist

Create a playlist to play back only the scenes you prefer and in the order of your choice. Moving or deleting scenes in the playlist will not affect the original recordings.

Options

[ALL SCENES (THIS DATE)]
Adds to the playlist all the scenes that were recorded on the same day as the selected scene.
[ONE SCENE]
Adds only the selected scene to the playlist.



(□ 26)

FUNC.
(□ 28)



1 In the original movies index screen, select (▲▼, ◀▶) the scene you want to add to the playlist, or a scene recorded on the date you want to add to the playlist.

2 Add the scene(s) to the playlist.

FUNC. 
[E] ADD TO PLAYLIST 
Desired option  [YES]

- When the operation is completed [ADDED TO PLAYLIST] will be displayed.

- To check the playlist, select (▲▼, ◀▶) the playlist index screen from the tabs on top of the index screen (□ 39).

NOTES

- The playlist is created on the same memory you are playing back from. Select in advance the location of the scenes to play back (□ 39). You can also copy scenes from the built-in memory to the memory card (□ 60) to include in your playlist movies recorded on both.
- You may not be able to add scenes to the playlist if they were recorded or edited using another device or if there is not enough space available in the memory.

Deleting Scenes from the Playlist

Deleting scenes from the playlist will not affect your original recordings.



(□ 26)

Deleting a Single Scene

FUNC.
(□ 28)



1 Select (▲▼, ◀▶) the playlist index screen from the tabs on top of the index screen.

You can select the playlist in the built-in memory or the playlist on the memory card (□ 39).

2 Select (**▲▼**, **◀▶**) the scene you want to delete.

3 Delete the scene.

[FUNC.] **▶** [🗑️ DELETE] **▶**
[YES]

Deleting the Entire Playlist

[FUNC.] **▶**
[☰ MENU] **▶**
[🗑️ MEMORY OPER.] **▶**
[DEL.PLAYLIST] **▶**
[YES] **▶**
[FUNC.]

Moving Scenes in the Playlist

Move the scenes in the playlist to play them back in the order of your choice.



FUNC.
(📖 28)

[FUNC.]



1 Select (**▲▼**, **◀▶**) the playlist index screen from the tabs on top of the index screen.

You can select the playlist in the built-in memory or the playlist on the memory card (📖 39).

2 Select (**▲▼**, **◀▶**) the scene you want to move.

3 Open the scene moving screen.

[FUNC.] **▶** [⇄ MOVE]

4 Move (**▲▼**, **◀▶**) the orange marker to the desired position of the scene and press **[SET]**.

The original position of the scene and the current position of the marker are displayed at the bottom of the screen.

5 Select (**▶**) **[YES]** and press **[SET]** to move the scene.

i NOTES

You may not be able to move scenes in the playlist if there is not enough space available in the memory.

Copying Scenes

You can copy original movies or the entire playlist from the built-in memory to the corresponding location on the memory card.



Options for copying original movies

[ALL SCENES]
Copies all the scenes to the memory card.
[ALL SCENES (THIS DATE)]
Copies all the scenes that were recorded on the same day as the selected scene to the memory card.
[ONE SCENE]
Copies only the selected scene to the memory card.

FUNC.

(28)

()



1 Select one of the index screens of movies recorded in the built-in memory (original movies or playlist).

Refer to *To select which scenes to play back* (39).

2 Select (, , ,) the scene you want to copy to the memory card, or a scene recorded on the date you want to copy.

3 Copy the scene(s).

[FUNC.] [COPY]
 Desired option* [YES]**
 [OK] [FUNC.]

* Only when copying original movies. From the playlist index screen, only the entire playlist can be copied so this step is not necessary.

** Press () twice to interrupt the operation while it is in progress.

IMPORTANT

Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.

- Do not open the memory card slot cover.
- Do not disconnect the power source or turn off the camcorder.
- Do not change the position of the mode dial.

NOTES

- If the memory card slot cover is open, or the LOCK switch on the memory card is set to prevent writing, you will not be able to copy movies to the memory card.
- Scenes edited with the supplied software PIXELA ImageMixer 3 SE and written back to the camcorder cannot be copied to the memory card. In addition, scenes recorded with another device may not be copied correctly.



Photos


Refer to this chapter for details on shooting photos – from capturing and playing back images to printing them.

Basic Recording

Taking Photos



(□ 26)

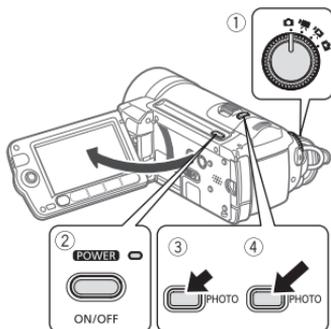

1 Set the mode dial to .

2 Turn on the camcorder.

You can select the memory to be used for recording still images (□ 33).

3 Press **PHOTO halfway.**

- Once the focus is automatically adjusted,  will turn green and one or more AF frames will appear.
- When you press **PHOTO** on the wireless controller, the still image is

recorded after the autofocus is activated and locked.

4 Press **PHOTO fully.**

The ACCESS indicator will flash as the still image is being recorded.

! IMPORTANT

Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.

- Do not open the memory card slot cover.
- Do not disconnect the power source or turn off the camcorder.
- Do not change the position of the mode dial.

i NOTES

- If the subject is not suitable for autofocus,  turns yellow. Adjust the focus manually (□ 51).
- When the subject is too bright, “OVEREXP.” starts flashing. In such case, use the optional FS-H37U ND filter.

Selecting Photo Size and Quality

Still images are recorded as JPG files. As a general rule, select a larger image size for higher quality. Select the **[LW 1920x1080]** size for photos with an aspect ratio of 16:9.



Options

Image size options and the approximate number of still images that can be recorded on memory cards of various sizes are given in the following table.

FUNC.

(28)

(FUNC.)



(FUNC.)

[2048x1536]

Desired image size*

Desired image quality*

(FUNC.)

- * Press to move back and forth between size and quality selection. The number displayed on the right corner indicates the approximate number of images that can be recorded with the current quality/size setting.

NOTES

- The camcorder retains the last setting used even if you set the camcorder to **EASY** mode.
- When printing still images, use the following guidelines as a reference for selecting the print size.

Image size	Recommended use
L 2048x1536	To print photos up to A4 size.
M 1440x1080	To print photos up to L size (9 x 13 cm, 3.5 x 5 in.) or postcard size (10 x 14.8 cm, 4 x 6 in.).
S 640x480	To send images as e-mail attachments or to post on the Web.
LW 1920x1080, SW 848x480	To print photos with a 16:9 aspect ratio. Wide-sized photo paper is required.

Approximate number of still images on a memory card

♦ Default value

Memory card	128 MB			512 MB			1 GB		
LW 1920x1080	85	130	260	350	525	1,035	705	1,055	2,080
L 2048x1536♦	55	85	175	230	345	700	470	700	1,400
M 1440x1080	115	175	345	470	700	1,365	940	1,400	2,740
SW 848x480 ²	450	635	1,275	1,775	2,515	5,030	3,550	5,030	10,060 ³
S 640x480	585	845	1,525	2,315	3,350	6,030	4,640	6,705	12,070 ³

¹ : [SUPER FINE], : [FINE], : [NORMAL].

² This size is only available for recording a still image at the same time you are recording video (simultaneous recording) (69).

³ Approximate number of still images that can actually be recorded on the memory card. (The maximum number of remaining still images displayed on the screen is 9999.)

Erasing a Photo Right After Recording It

You can erase the still image recorded last while reviewing it within the time set for the [REVIEW] option or immediately after recording it, if [REVIEW] is set to [OFF OFF].




While reviewing the image immediately after recording:

- 1 Push the joystick (▼) toward .
- 2 Select (▶) [ERASE] and press .

Basic Playback

Viewing Photos

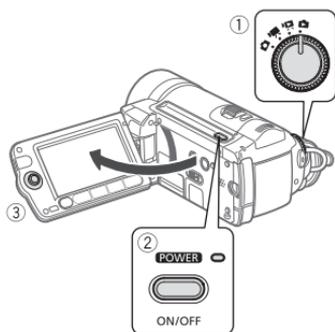

- 1 Set the mode dial to .
- 2 Turn on the camcorder.
- 3 Push the joystick (◀▶) to move between images.

Push the joystick (◀▶) and hold it down to run quickly through the still images.


Image Jump Function

When you have recorded a large number of still images, you can jump 10 or 100 still images at a time.





- 1 If the joystick guide does not appear on screen, press **SET** to display it.
- 2 Push the joystick (**▲**) toward .



- 3 Select (**▲▼**) [**↔**₁₀ **JUMP 10 IMAGES**] or [**↔**₁₀₀ **JUMP 100 IMAGES**].
- 4 Jump (**◀▶**) the number of images selected and press **SET**.
You can press **SET** again to hide the joystick guide.

! IMPORTANT

- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the power source or turn off the camcorder.
 - Do not change the position of the mode dial.
- The following may not be displayed correctly.
 - Images not recorded with this camcorder.
 - Images edited on or transferred from a computer.
 - Images whose file names have been changed.

Slideshow

You can play a slideshow of all the still images.

- 1 Select (**◀▶**) the first still image of the slideshow.
- 2 Press **▶||** to play back the still images one after another.

Press  to stop the slideshow.

Index Screen

- 1 Move the zoom lever toward **W**.
The still images index screen appears.
- 2 Select (**▲▼**, **◀▶**) an image.
 - Move the orange selection frame to the image you want to view.
 - Repeatedly press **◀◀** or **▶▶** to extend the selection frame and browse through whole index pages.
- 3 Press **SET**.
The index screen closes and the selected image is displayed.

TO SELECT WHICH STILL IMAGES TO PLAY BACK

You can switch between the still images recorded in the built-in memory and those recorded on the memory card.

- 1 In the index screen, move (**▲▼**) the orange selection frame to the tabs on the top of the screen.
- 2 Select (**◀▶**) the location of the still images you want to play back.
- 3 Return (**▲▼**) to the index screen to select the still image.



-  Still images in the built-in memory
-  Still images on the memory card

Magnifying Photos during Playback

During playback, still images can be magnified up to 5 times.



1 Move the zoom lever toward **T**.

- The image is magnified by 2 times and a frame appears indicating the position of the magnified area.
- To further enlarge the image, move the zoom lever toward **T**. To reduce the magnification to less than 2 times, move it toward **W**.
- will appear for images that cannot be enlarged.

2 Move (**▲▼**, **◀▶**) the frame to the part of the image you want to see enlarged.

To cancel the magnification, move the zoom lever toward **W** until the frame disappears.

Erasing Photos

You can erase those still images that you are not interested in keeping.



POINTS TO CHECK

Select in advance the memory from which you want to erase the still images (65).

Erasing a Single Image



- 1 If the joystick guide does not appear on screen, press **SET** to display it.
- 2 Push the joystick (**▼**) toward .
- 3 Select (**▶**) [ERASE] and press **SET**.

Erasing All Images

FUNC.
(28)



FUNC.

[MENU]

[MEMORY OPER.]

[ERASE ALL IMAGES]

[YES]* [OK]

FUNC.

* Press **SET** twice to interrupt the operation while it is in progress.

IMPORTANT

Be careful when erasing images. Erased images cannot be recovered.

i NOTES

Protected images cannot be erased.



Additional Functions

Flash

You can use the flash to record still images in dark places. The flash features the red-eye reduction function.



Options

◆ Default value

(auto) ◆
The flash fires automatically according to the brightness of the subject.
(red-eye reduction, auto)
The flash fires automatically according to the brightness of the subject. The assist lamp lights up to reduce the red-eye effect.
(flash on)
The flash always fires.
(flash off)
The flash does not fire.



1 If the joystick guide does not appear on screen, press to display it.

If does not appear on the joystick guide, push the joystick () toward [NEXT] to display it.

2 Push the joystick () toward .

- Repeatedly push the joystick () to cycle between the flash modes.
- The icon of the flash mode appears. disappears after 4 seconds.

3 Press , first halfway to activate the autofocus and then fully to record the still image.

NOTES

- The flash will not fire in the following cases:
 - When you manually adjust the exposure in (auto) or (red-eye reduction) mode.
 - During auto exposure bracketing.
 - In the [FIREWORKS] recording program.
 - When the optional VL-5 Video Light is attached.
- **About the AF-Assist Lamp:** While you press halfway, if the subject is too dark the assist lamp may light up briefly in order to enable the camcorder to focus more accurately (AF-assist lamp).
 - You can also set [AF AST LAMP] to [OFF OFF] so the assist lamp does not light up (93).
 - The camcorder may not be able to focus even if the AF-assist lamp is on.
- The practical range of the flash is approx. 1 to 2 m (3.3 to 6.6 ft.). The actual range will depend on the recording conditions.
- The range of the flash decreases in continuous shooting mode.
- For red-eye reduction to be effective, the subject needs to look at the assist lamp. The degree of reduction depends on the distance and on each individual.
- The flash mode cannot be selected when the exposure is locked.

- We recommend not using the flash while the optional Wide-converter or Tele-converter is attached; its shadow can appear on the screen.

Drive Mode: Continuous Shooting and Exposure Bracketing

Take a series of pictures of a moving subject or record the same picture in 3 levels of exposure in order to choose later the picture you like the best.



POINTS TO CHECK

Select a recording mode other than [FIREWORKS].

Options

◆ Default value

[<input type="checkbox"/> SINGLE] ◆
Records a single still image.
[CONT.SHOOT.] (Continuous Shooting), [HISPEED CONT.SHOOT.] (High-Speed Continuous Shooting)
Captures a series of still images as long as you hold [PHOTO] pressed down. For the number of shots per second, refer to the following sidebar.
[AEB] (Auto Exposure Bracketing)
The camcorder records a still image in three different exposures (dark, normal, light in 1/2 EV steps), allowing you to choose the shot you like the best.

FUNC.

[] (28)

[]



[**FUNC.**] >

[SINGLE] >

Desired option >

[**FUNC.**]

Maximum number of continuous shots

Number of shots per second	
Normal speed	3 frames
High speed	5 frames
Using the flash	2.1 frames

Maximum number of continuous shots

60 images

These figures are approximate and vary with the recording conditions and subjects. The actual number of frames per second will be lower when the shutter speed is 1/30 or slower.



CONTINUOUS SHOOTING/ HIGH-SPEED CONTINUOUS SHOOTING

1 Press **[PHOTO]** halfway to activate the autofocus.

2 Press **[PHOTO]** fully and hold it pressed down.

A series of still images will be recorded as long as you hold the button pressed.

AUTO EXPOSURE BRACKETING

Press **[PHOTO]**, first halfway to activate the autofocus and then fully to record the still images.

Three still images in different exposures will be recorded.

Capturing a Still Image while Recording Movies (Simultaneous Recording)

You can record still images even while the camcorder is set to **[MOVIE]** mode. Moreover, you can capture the still image at the same time you are recording video.

Still images recorded with simultaneous recording will have the same aspect ratio of movies (16:9).



FUNC.
(28)

FUNC.



FUNC. **[OFF STILL I.REC OFF]**
Desired image size*
Desired image quality*

FUNC.

* Press **[SET]** to move back and forth between size and quality selection. The number displayed on the right corner indicates the approximate number of images that can be recorded with the current quality/size setting.

While recording, or in record pause mode, press **[PHOTO] to capture the still image.**

NOTES

- The still image cannot be recorded simultaneously while the digital zoom or a digital effect is activated.
- To record still images we recommend using the **[CAMERA]** mode, which offers the best quality for still images.
- The still image will be recorded to the memory selected for recording still images (33).

Light Metering Mode

The camcorder measures the light reflected from the subject in order to calculate the optimal exposure settings. Depending on the subject, you may want to change the way the light is measured and evaluated.



Options

◆ Default value

<input checked="" type="checkbox"/> [EVALUATIVE]◆
Appropriate for standard shooting conditions, including backlit scenes. The camcorder divides the picture into several areas and the light is measured in all of them to achieve the optimal exposure for the subject.
<input type="checkbox"/> [CENT.WEIGHT.AVERAGE]
Averages the light metered from the entire screen, giving more weight to the subject in the center.
<input type="checkbox"/> [SPOT]
Meters only the area within the spot AE point frame. Use this setting to adjust the exposure to match the subject in the center of the screen.

FUNC.
(28)

FUNC.



FUNC. ⌵

[EVALUATIVE] ⌵

Desired option ⌵

FUNC.


Histogram Display

When viewing still images you can display the histogram and the icons of all the functions used at the time of recording. Use the histogram as a reference to verify the correct exposure of the still image.



The area to the right of the histogram represents highlights and the left side

represents shadows. A still image whose histogram skews to the right is relatively bright; while one whose histogram peaks to the left, is relatively dark.

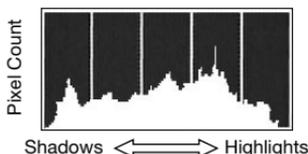

i NOTES

The histogram will appear also after recording a still image, while reviewing it within the time set for the [REVIEW] option (or immediately after recording it, if [REVIEW] is set to [OFF OFF]). You can choose to turn off the histogram by pressing [DISP.] (55).

Capturing a Still Image from the Playback Scene

You can capture as still images frames from a scene. The size of the captured still image will be **LW** 1920x1080 and it cannot be changed, but you can select the image quality.



✓ POINTS TO CHECK

Set [TV TYPE] to [**16:9** WIDE TV] before using this function (98).

FUNC.
(28)

FUNC.





FUNC.

[MENU]

[SYSTEM SETUP]

[IMG QUALITY]

Desired image quality*

FUNC.

* The number displayed at the bottom indicates the approximate number of images that can be recorded with the current quality setting.

TO CAPTURE THE STILL IMAGE

- 1 Play back the scene containing the picture you want to capture.
- 2 Pause the playback at the point you want to capture.
- 3 Press **[PHOTO]** fully.

NOTES

- The data code of the still image will reflect the date and time of recording of the original scene.
- A still image captured from a scene with lots of fast movement may be blurred.
- The still image will be recorded to the memory selected for recording still images (□ 33).

Protecting Photos

You can protect still images from accidental erasure.



FUNC.
(□ 28)

FUNC.



1 Open the image selection screen.

FUNC. **[ON PROTECT]**

[ON PROTECT] appears on the screen.

2 Select (◀▶) the still image you want to protect.

3 Press **[SET]** to protect the still image.

[ON] appears on the bottom bar and the image cannot be erased. Press **[SET]** again to cancel the image protection.

4 Repeat steps 2-3 to protect additional images or press **FUNC.** twice to close the menu.

IMPORTANT

Initializing the memory (□ 33) will permanently erase all recordings, including protected still images.

Copying Photos

You can copy still images from the built-in memory to the memory card and vice versa.



POINTS TO CHECK

Select in advance the memory from which you want to copy the still images (□ 65).

FUNC.
(□ 28)

FUNC.



Copying a Single Image

[FUNC.] > [COPY] > [YES] > [FUNC.]

Copying Images from the Index Screen

Options

[ALL IMAGES]
Copies all the still images.
[ONE IMAGE]
Copies only the selected still image.

1 Move the zoom lever toward W.

The still image index screen appears.

2 Select the memory from which you want to copy the still images.

Refer to *To select which still images to play back* (□ 65).

3 If you want to copy only one image, select (▲▼, ◀▶) the still image you want to copy.

4 Copy the still image(s).

[FUNC.] > [COPY] > Desired option > [YES]* > [OK]** > [FUNC.]

* When copying all the still images, press  twice to interrupt the operation while it is in progress.

** Only when copying all still images.

IMPORTANT

Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.

- Do not open the memory card slot cover.
- Do not disconnect the power source or turn off the camcorder.
- Do not change the position of the mode dial.

NOTES

- If there is not enough space on the destination memory, the camcorder will copy as many still images as possible before stopping the operation.
- If the memory card slot cover is open, or the LOCK switch on the memory card is set to prevent writing, you will not be able to copy still images to the memory card.
- Still images recorded with another device may not be copied correctly.

You can also use the following functions...

The following functions and features of the camcorder can be used either for shooting video or for taking photos. The way to set and use them was already explained in detail, so we refer you to the relevant page in the “Video” section.

- Zoom (□ 37)
- Quick Start (□ 37)
- Recording programs (□ 45, 47)
- Mini video light (□ 48)
- Self timer (□ 49)
- Automatic backlight correction and manual exposure adjustment (□ 50)
- Manual focus adjustment (□ 51)
- White balance (□ 51)
- Image effects (□ 53)
- Digital effects (□ 54)



Printing Photos

Printing Photos (Direct Print)

The camcorder can be connected to any PictBridge-compatible printer. You can mark in advance the still images you want to print and set the desired number of copies as a print order (□ 77).

PictBridge

Canon printers: SELPHY printers of the CP, DS and ES series and PIXMA printers marked with the PictBridge logo.



Connecting the Camcorder to the Printer

1 Insert the memory card containing the still images you want to print.

- Select in advance the memory from which you want to print the still images (□ 65).
- If the still image index screen is displayed, move the zoom lever toward T.

2 Turn on the printer.

3 Connect the camcorder to the printer using the supplied USB cable.

- Connection . Refer to *Connection Diagrams* (□ 80).

- If the device type selection screen appears, select [PC/PRINTER] and press .
-  appears and changes to .
- The  (print/share) button lights up and the current print settings will be displayed for approx. 6 seconds.

IMPORTANT

- If  continues to flash (for more than 1 minute) or if  does not appear, the camcorder is not correctly connected to the printer. In such case, disconnect the USB cable and turn off the camcorder and the printer. After a short while, turn them on again, set the camcorder to  mode and restore the connection.
- During the following operations, even if you connect a printer to the camcorder it will not be recognized.
 - Erasing all still images
 - Erasing all transfer orders
 - Erasing all print orders


NOTES

-  will appear for images that cannot be printed.
- We recommend powering the camcorder using the compact power adapter.
- Refer also to the printer's instruction manual.
- If you have no intention to use the optional DW-100 DVD Burner, you can set [USB SETTING] to [ PC/PRINTER] (□ 97) so the device type selection screen does not appear every time you connect the camcorder to a printer.
- Connection to a PictBridge-compatible printer will not work when the memory contains 1,800 images or more.

- For best performance, we recommend keeping the number of images on the memory card under 100.

Printing with the (Print/Share) Button

You can print a still image without changing the settings simply by pressing .

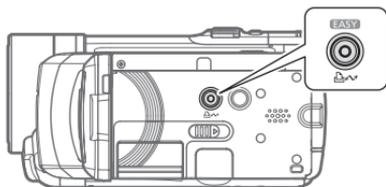

1 Select () the still image you wish to print.

2 Press .

- Printing starts. The  button flashes and stays on when the printing is completed.
- To continue printing, select () another still image.

Selecting the Print Settings

You can select the number of copies and other settings for printing. The setting options vary depending on your printer model.



Options

[PAPER]

[] PAPER SIZE: Available paper sizes vary depending on the printer model.

[] PAPER TYPE: Select [PHOTO], [FAST PHOTO], [PLAIN] or [DEFAULT].

[] PAGE LAYOUT: Select [DEFAULT], [BORDERED] or one of the following page layouts.

[BORDERLESS]: The image is enlarged and may be slightly cropped at the edges to fit the paper.
[2-UP], [4-UP], [8-UP], [9-UP], [16-UP]: Refer to the following sidebar.

[] (Date print)

Select [ON], [OFF] or [DEFAULT].

[] (Print Effect)

Available only with printers compatible with the Image Optimize function. Select [ON], [OFF] or [DEFAULT].

Canon PIXMA/SELPHY DS printers: You can also select [VIVID], [NR] and [VIVID+NR].

[] (Number of Copies)

Select 1-99 copies.

NOTES


Print setting options and [DEFAULT] settings vary depending on the printer model. For details, refer to the printer's instruction manual.



Printing after Changing the Print Settings



- 1 If the joystick guide does not appear on screen, press **SET** to display it.
- 2 Push the joystick (**▼**) toward . The print settings menu appears.

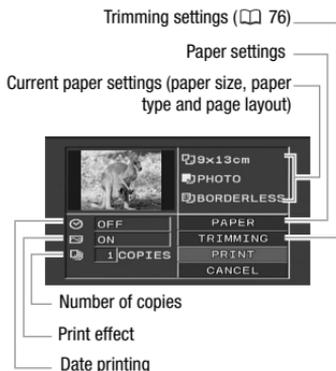

- 3 In the print settings menu, select (**▲▼**, **◀▶**) the setting you want to change and press **SET**.
- 4 Select (**▲▼**) the desired setting option and press **SET**.
- 5 Select (**▲▼**, **◀▶**) [**PRINT**] and press **SET**.
 - Printing starts. The print settings menu disappears when the printing is completed.
 - To continue printing, select (**◀▶**) another still image.

TO CANCEL THE PRINTING

- 1 Press **SET** while printing.
- 2 Select (**◀**) [**OK**] and press **SET**.

WHEN YOU HAVE FINISHED PRINTING

Disconnect the cable from the camcorder and printer and turn off the camcorder.

Printing multiple images on the same sheet [2-UP], [4-UP], etc.

When using Canon printers you can print the same still image multiple times on the same sheet of paper. Use the following table as a guideline for the recommended number of copies depending on the [**PAPER SIZE**] setting.

[PAPER SIZE]→	[CREDITCARD]	[9 x 13 cm]	[10 x 14.8 cm]	[A4]
Canon printer ↓				
PIXMA SELPHY DS	–	–	2, 4, 9 or 16 ¹	4
SELPHY CP/ES	2, 4 or 8 ²	2 or 4	2 or 4	–

¹ You can also use the special sticker sheets.

² With the [8-UP] setting, you can also use the special sticker sheets.

SELPHY CP: When you use the wide-sized photo paper with the [DEFAULT] setting, you can also use [2-UP] or [4-UP].

PRINT ERRORS

If an error occurs while printing, an error message, for example [NO PAPER], will appear on the camcorder. Solve the problem referring to the error message list (□ 109) and to the printer's instruction manual.

- **Canon's PictBridge-compatible printers:** If printing does not resume automatically after you solved the problem, select [CONTINUE] and press **SET** to resume printing. If that option is not available, select [STOP] and press **SET** and then restart printing from the beginning.
- **Other printers or if the error still persists with a Canon printer:** If printing does not resume automatically, disconnect the USB cable and turn off the camcorder. After a short while, turn on the camcorder and restore the USB connection.

! IMPORTANT

- You may not be able to print correctly with a PictBridge-compatible printer still images whose file names have been changed or that were recorded, created, edited or changed with any device other than this camcorder.
- If [BUSY] does not disappear, disconnect the USB cable and restore the connection after a short while.

Trimming Settings

Set the paper size and page layout before changing the trimming settings.

1 Open the print settings menu.

Refer to steps 1-2 in *Printing after Changing the Print Settings* (□ 75).



2 Select (▲▼, ◀▶) [TRIMMING] and press **SET**.

The trimming frame appears.

3 Change the size of the trimming frame.

- Move the zoom lever toward **T** to shrink the frame, and move it toward **W** to enlarge it. Press **SET** to change the orientation of the frame (portrait/landscape).
- To cancel the trimming settings, move the zoom lever toward **W** until the trimming frame disappears.



4 Move (▲▼, ◀▶) the trimming frame to the area of the picture you want to print.



5 Press **[FUNC.]** to return to the print settings menu.

- The print area selected will be indicated by a green frame within the still image's thumbnail.
- To change other print settings and print the area you selected refer to steps 3-5 in *Printing after Changing the Print Settings* (□ 75).

i NOTES

- The trimming settings apply to one image only.
- The trimming settings are canceled in the following cases:
 - When you turn off the camcorder.
 - When you disconnect the USB cable.
 - When you expand the trimming frame beyond its maximum size.
 - When you change the [PAPER SIZE] setting.
- You may not be able to set the trimming settings for a still image not recorded with this camcorder.

Print Orders

You can mark in advance the still images you want to print and set the desired number of copies as a print order. Later, you can easily print out the print orders by connecting the camcorder to a PictBridge-compatible printer (□ 73). You can set print orders for up to 998 still images.



Selecting Still Images for Printing (Print Order)

POINTS TO CHECK

Set the print orders before connecting the USB cable to the camcorder.

FUNC.
(□ 28)

[FUNC.]



1 Open the image selection screen.

[FUNC.]  **[PRINT ORDER]**
 **0** appears on the screen.

2 Select (**◀▶**) the still image you want to mark with a print order.

3 Press **[SET]** to set the print order.

The number of copies appears in orange.

4 Set (**▲▼**) the number of copies desired and press **[SET]**.

To cancel the print order, set the number of copies to 0.

5 Repeat steps 2-4 to mark additional images with print orders or press **[FUNC.]** twice to close the menu.

Printing the Still Images Marked with Print Orders

FUNC.
(28)



1 Connect the camcorder to the printer using the supplied USB cable.

Connection (). Refer to *Connection Diagrams* (80).

2 Open the print settings menu.

[MENU]
[PRINT]

- The print settings menu appears.
- If there are no still images marked with print orders, [SET PRINT ORDER] appears.

3 Select (, ,) [PRINT] and press .

Printing starts. The print settings menu disappears when the printing is completed.

NOTES

- Depending on the connected printer, you can change some print settings before step 3 (74).
- To cancel the printing, refer to page 75.
- **Restarting Printing:** Open the print settings menu as explained in step 2. In the print settings menu, select [RESUME]* and press . The remaining images will be printed. Printing cannot be restarted when the print order settings have been changed or if you deleted a still image with print order settings.

* In case the print order was interrupted after the first still image, this menu option will appear as [PRINT] instead.

Erasing All Print Orders

FUNC.
(28)



[MENU]

[MEMORY OPER.]

[ERASE ALL ORD]

[YES]




4

External Connections

This chapter explains how to connect your camcorder to an external device such as a TV, VCR, or computer.

Terminals on the Camcorder

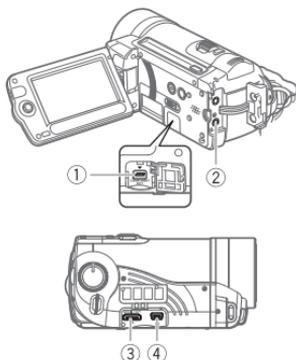

① COMPONENT OUT Terminal*

Access: Open the LCD panel and the terminal cover. The component video terminal is for video only. When you use connection **(B)** do not forget the audio connections using the AV OUT/**(Q)** terminal.



② AV OUT/**(Q)** Terminal

Access: Open the rear terminal cover. Sound from the built-in speaker will be muted while the STV-250N Stereo Video Cable is connected to the camcorder.



③ HDMI OUT Terminal*



Access: Move the grip belt and open the terminal cover. The HDMI OUT terminal offers a high-quality digital connection that combines audio and video in a single convenient cable.



④ USB Terminal




Access: Move the grip belt and open the terminal cover.

* When connecting a cable to the camcorder, make sure to align the triangle marks on the cable's connector and on the camcorder's terminal (▶◀).

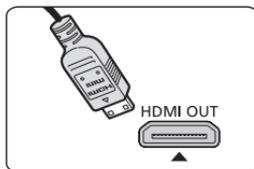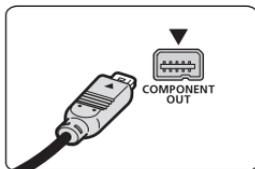

Connection Diagrams

Connections that can be used to connect the camcorder to a TV are listed in falling order of picture quality. Connections that require cables or accessories not supplied with the camcorder are marked with an asterisk; prepare the necessary equipment in advance.

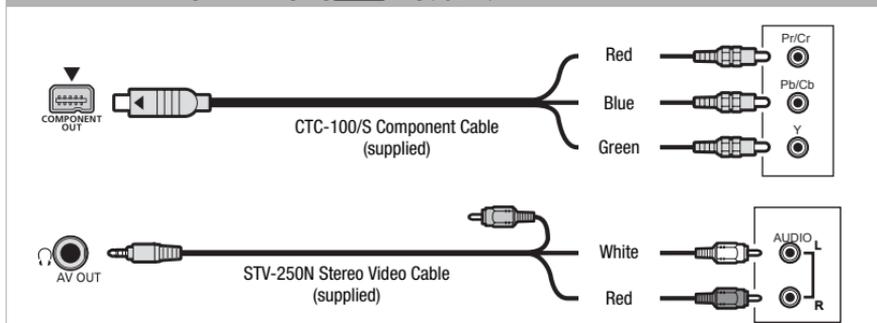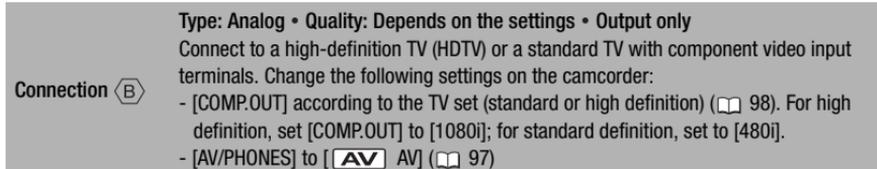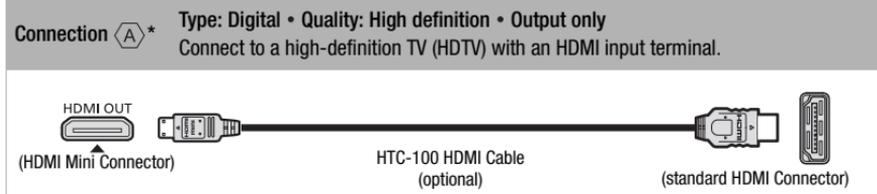



Type: Analog • Quality: Standard definition • Output only

Connect to a standard TV or a VCR with audio/video input terminals. Change the following settings on the camcorder:

Connection

- [TV TYPE] according to the TV set (widescreen or 4:3), if the TV cannot automatically detect and change the aspect ratio (98)
- [AV/PHONES] to [**AV**] AV (97)



Type: Digital data connection

Connection

Connect to a computer to transfer and back up your recordings, to the optional DW-100 DVD Burner to create DVD discs from them, or to a printer to print out photos.



Playback on a TV Screen

Connect the camcorder to a TV to enjoy your recordings with family and friends. Playback on an HDTV using one of the high-definition connections will ensure the best playback quality.



1 Turn off the camcorder and the TV.

2 Connect the camcorder to the TV.

Refer to *Connection Diagrams* (□ 80) and select the most appropriate connection for your TV.

3 Turn on the connected TV.

On the TV, select as the video input the same terminal to which you connected the camcorder. Refer to the instruction manual of the connected TV.

4 Turn on the camcorder and set it to mode (□ 39) or mode (□ 64).

Start the playback of movies or still images.

NOTES

- We recommend powering the camcorder using the compact power adapter.
- Sound from the built-in speaker will be muted while the STV-250N Stereo Video Cable is connected to the camcorder.
- Connection : When you play back your 16:9 movies on standard TV sets with a 4:3 aspect ratio, the TV set will switch automatically to widescreen mode if it is compatible with the Video ID-1 system. Otherwise, change the aspect ratio of the TV manually.

About the HDMI™ connection

The HDMI (High-Definition Multimedia Interface) connection () is a convenient all-digital connection using a single cable for both video and audio. When you connect the camcorder to an HDTV equipped with an HDMI terminal, you can enjoy video and audio playback at the highest quality.

- The HDMI OUT terminal on the camcorder is for output only. Do not connect it to an HDMI output terminal on an external device, as this may damage the camcorder.
- Correct operation cannot be guaranteed when connecting the camcorder to DVI monitors.
- Depending on the HDTV, correct playback of personal video content may not be possible using connection . Try one of the other connections.
- While the camcorder is connected to an HDTV using connection , there will be no video output from other terminals.



Saving and Backing Up Your Recordings

Backing Up Your Recordings on a Computer

Movies recorded with this camcorder are saved on the memory card or in the built-in memory. Because space on the memory is limited, make sure to back up your movies onto a computer on a regular basis.

PIXELA ImageMixer 3 SE

With the software supplied on the **PIXELA ImageMixer 3 SE** CD-ROM you can select scenes and back them up on your computer's hard disk, and restore your backup files back to the camcorder if necessary. On the computer, you can neatly organize all your video recordings into albums and add comments for quick and easy searches; you can also edit scenes, convert and resize them to upload them to your Web site or to take with you on your portable video player and more. For details about the functions available, refer to the software's instruction manual (PDF file). For details about installing the software refer to **PIXELA ImageMixer 3 SE Installation Guide**.

Saving your Recordings without a Computer

The following options are also available if you prefer to save your recordings without having to use a computer.

- Use the optional DW-100 DVD Burner to create high-definition (AVCHD) discs of your movies and Photo DVDs of your still images (□ 83).
- Connect the camcorder to an external recording device (DVD or HDD recorder, VCR, etc.) to save standard-definition copies of your movies (□ 86).

! IMPORTANT

When the camcorder is connected to a computer: Do not access, change or delete folders and files in the camcorder directly from the computer as this may result in permanent data loss. Always back up your recordings to the computer and restore the backup files to the camcorder using only the supplied software ImageMixer 3.

Authoring High-Definition (AVCHD) Discs and Photo DVDs

You can connect the camcorder to the optional DW-100 DVD Burner to create high-definition DVD discs (AVCHD specifications). This way, you can preserve your video recordings in the highest video quality available. You can also create Photo DVDs from your still images that you can play back with most standard DVD players.

For important information on handling your discs, refer to **DW-100** > *Cautions on handling*.



Options for creating AVCHD discs

(mode)

[ALL SCENES]
Add all the scenes to the disc(s).
[REM.SCENES]
Add only those scenes that have not been previously added to a disc.
[PLAYLIST]
Add only the scenes included in the playlist (59).

Options for creating Photo DVDs

(mode)

[ALL IMAGES]
Add all the still images to the slideshow on the disc.
[TRANS.ORD]
Add only still images marked with transfer orders (90).

Preparations on the Camcorder

1 Turn on the camcorder and set it to mode to create high-definition discs of your movies or mode to create Photo DVDs of your still images.

- Power the camcorder using the compact power adapter.
- Select in advance the memory from which you want to add the scenes (39) or still images (65).

2 Select the scenes or still images you want to add to the disc.



Connecting to the DW-100 DVD Burner and Creating a Disc

1 Turn on the DVD burner.


DW-100 > Refer to *Creating DVDs*.

2 Connect the camcorder to the DVD burner using the USB cable.

- Connection (). Refer to *Connection Diagrams* (80) and **DW-100** > *Connections*.
- If the device type selection screen appears, select [DVD BURNER] and press **SET**.
- When the connection is completed, [NO DISC] will be displayed.

3 Insert a brand new disc into the DVD burner.

- Use the OPEN/CLOSE button on the DVD burner to open and close the disc tray.
- After the disc is recognized, an information screen will display the type of DVD you are creating and the estimated time and number of discs it will require (based on the disc you inserted).
- If you inserted a DVD-RW disc that already contains data, [THE DISC CONTAINS DATA] will be displayed. To overwrite the data (erasing the previous content of the disc), press **SET**, select [YES] and press **SET** again.

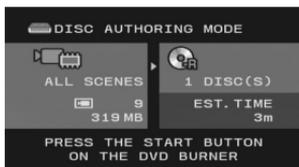

4 Press the start button on the DVD burner.

- A progress bar will be displayed on the screen.
- After pressing the start button (while the current disc is being written) the operation cannot be canceled.
- When the last disc is finalized, [TASK COMPLETED] will be displayed. Take out the disc and close the disc tray.

WHEN THE DATA REQUIRES MULTIPLE DISCS

After a disc is finalized it will be ejected automatically and [INSERT A NEW/ BLANK DISC AND CLOSE THE DISC TRAY] will appear. Insert the next disc and close the disc tray.

TO CREATE AN ADDITIONAL COPY OF THE SAME DISC

After the operation is finished, [INSERT A NEW/BLANK DISC] will be displayed again. Insert a brand new disc and close the disc tray.

! IMPORTANT

- Discs created with the optional DW-100 DVD Burner that contain recordings in MXP mode (24 Mbps) cannot be played back on AVCHD-compatible DVD players or Blu-ray Disc players (as of June 2008). Use the DW-100 to play back such discs (□ 86). Do not insert such discs into a device that is not compatible with MXP mode as you may not be able to eject the disc.
- Discs with recordings in FXP/XP+/SP/LP mode created using the optional DW-100 DVD Burner can be played back only with AVCHD-compatible DVD players. Do not insert a high-definition disc into a DVD player that is not compatible with AVCHD specifications as you may not be able to eject the disc.
- While the camcorder is connected to the DVD burner, do not open the memory card slot cover and do not remove the memory card.
- Observe the following precautions while the ACCESS indicator on the camcorder is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the USB cable.
 - Do not disconnect the power source or turn off the camcorder or the DVD burner.

i NOTES

If a scene does not fit on a disc, a portion will be saved on the disc and the remaining portion will be saved on the next disc.

Playing Back AVCHD Discs Using the DW-100 DVD Burner

You can use the optional DW-100 DVD Burner and the camcorder also to play back on a TV high-definition (AVCHD) discs created with the DVD burner. This is very convenient, for example to play back your discs even in a location where an AVCHD-compatible DVD player is not available.



1 Connect the camcorder to the TV.

Refer to *Connection Diagrams* (□ 80). Select connection or to enjoy high-definition playback.

2 Turn on the DVD burner and set it to Disc Playback mode.

Refer to *Playing DVDs*.

3 Connect the camcorder to the DVD burner using the USB cable.

- Connection . Refer to *Connection Diagrams* (□ 80) and *Connections*.
- If the device type selection screen appears, select [DVD BURNER] and press .

4 Insert the disc you want to play back into the DVD burner.

- Use the OPEN/CLOSE button on the DVD burner to open and close the disc tray.
- After the disc is recognized, the disc's content will be displayed in an index screen.

5 Select (,) the scene you want to play back and press to begin the playback.

TO PLAY BACK PHOTO DVDs

Photo DVDs are created using DVD-Video specifications (standard definition) and cannot be played back using the DVD burner. Play back your Photo DVDs using standard DVD players.

If your computer has a DVD drive, you can play back the slideshow as a DVD and you can also access the individual still images as JPG files.

IMPORTANT

While the camcorder is connected to the DVD burner, do not open the memory card slot cover and do not remove the memory card.

NOTES

- Only AVCHD discs created with the DW-100 DVD Burner can be played back using the DVD burner.
- The FUNC. menu and setup menus cannot be accessed while the camcorder is connected to the DVD burner.
- With the exception of fast playback at 60x speed, special playback modes (□ 40) can be used also for disc playback.

Copying your Recordings to an External Video Recorder

You can copy your recordings by connecting the camcorder to a VCR or a digital video device. Video output will be in standard definition, although the original scenes are in high definition.



Connecting

Connect the camcorder to the VCR using Connection . Refer to *Connection Diagrams* ( 80).

Recording

- 1 External device: Load a blank cassette or disc and set the device to record pause mode.**
- 2 Camcorder: Locate the scene you wish to copy and pause playback shortly before the scene.**
- 3 Camcorder: Resume the movie playback.**
- 4 External device: Begin recording when the scene you wish to copy appears. Stop recording when copying is complete.**
- 5 Camcorder: Stop playback.**

NOTES

- If remaining battery time is an issue, you can power the camcorder using the compact power adapter so the battery pack will not be consumed.
- By default, on-screen displays will be embedded in the output video signal. You can change the displays by repeatedly pressing  ( 55).

Transferring Photos to a Computer (Direct Transfer)

With the software supplied on the **DIGITAL VIDEO Solution Disk** CD-ROM you can transfer still images to a computer simply by pressing .

Refer also to the relevant sections in the “Digital Video Software” instruction manual (PDF file).



Preparations

Install the software before you connect the camcorder to the computer for the first time. (Windows users only: you also need to select CameraWindow's auto-launch setting.) After that, just connect the camcorder to the computer (steps 2 and 3) and proceed directly to transfer the still images ( 89).

1 Install the supplied Digital Video Software.

Refer to the installation guide (separate leaflet included with the CD-ROM).

2 Set the camcorder to mode.

Select in advance the memory from which you want to transfer still images ( 65).

3 Connect the camcorder to the computer using the USB cable.

- Connection . Refer to *Connection Diagrams* ( 80).
- If the device type selection screen appears, select [PC/PRINTER] and press .

- The direct transfer menu appears on the camcorder screen and the  button lights up.

FIRST-TIME CONNECTION TO A COMPUTER RUNNING WINDOWS

Windows users only: The first time you connect the camcorder to the computer, you need also to select the CameraWindow auto-launch setting.

 Refer to *Starting CameraWindow*.

! IMPORTANT

- While the camcorder is connected to the computer, do not open the memory card slot cover and do not remove the memory card.
- Observe the following precautions while the ACCESS indicator is on or flashing. Failing to do so may result in permanent data loss.
 - Do not open the memory card slot cover.
 - Do not disconnect the USB cable.
 - Do not turn off the camcorder or the computer.
- Operation may not work correctly depending on the software and the specifications/settings of your computer.
- If you wish to use the image files on your computer, make copies of them first. Use the copied files, retaining the originals.
- During the following operations, even if you connect the camcorder to the computer it will not be recognized.
 - Erasing all still images
 - Erasing all transfer orders
 - Erasing all print orders

i NOTES

- We recommend powering the camcorder using the compact power adapter.
- Refer also to the computer's instruction manual.
- **Users of Windows Vista, Windows XP and Mac OS X:** Your camcorder is equipped with the standard Picture Transfer Protocol (PTP) allowing you to transfer still images (JPEG only) simply by connecting the camcorder to a computer using the USB cable without having to install the supplied software.
- If you have no intention to use the optional DW-100 DVD Burner, you can set [USB SETTING] to [ PC/PRINTER] ( 97) so the selection screen does not appear every time you connect the camcorder to a computer.
- Depending on the number of images in the memory (Windows: 1,800 images or more; Macintosh: 1,000 images or more), you may not be able to transfer images to a computer. Try using a card reader (for images in the internal memory, copy them to the memory card first).



Transferring Still Images



(26)

Automatic Transfer Options


All the relevant still images will be transferred to the computer in one batch and their thumbnails will be displayed on the computer.

[ALL IMAGES]
Transfers all still images.
[NEW IMAGES]
Transfers only those still images that have not yet been transferred to the computer.
[TRANSFER ORDERS]
Transfers still images marked with transfer orders (90).

Manual Transfer Options

You can select the still image(s) to transfer.

[SELECT & TRANSFER]
Select the still image(s) to transfer.
[WALLPAPER]
Select a still image and set it as your computer's desktop background.

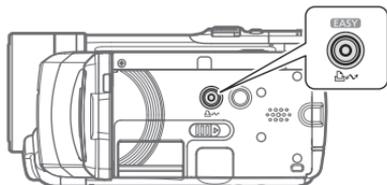

AUTOMATIC TRANSFER OPTIONS

Select () a transfer option and press ().

- The camcorder returns to the transfer menu once the transfer is completed.
- To cancel the transfer, select () [CANCEL] and press (), or press ().

MANUAL TRANSFER OPTIONS

- 1 Select () a transfer option and press ().
- 2 Select () the image you wish to transfer and press ().
 - [SELECT & TRANSFER]: Repeat this step to select other still images to transfer.
 - The button will flash while the images are being transferred.
- 3 Press () to return to the transfer menu.

NOTES

When the camcorder is connected to the computer and the image selection screen is displayed, press () to return to the transfer menu.

Transfer Orders

You can mark in advance the still images you want to transfer to the computer as transfer orders. You can set transfer orders for up to 998 still images.



Selecting Still Images to Transfer (Transfer Order)

Set the transfer orders before connecting the camcorder to the computer.

Select in advance the memory from which you want to transfer still images (page 65).

FUNC.
(page 28)

FUNC.



1 Open the image selection screen.

FUNC. >

[TRANSFER ORDER]

[] appears on the screen.

2 Select (◀▶) the still image you want to mark with a transfer order.

3 Press (SET) to set the transfer order.

A checkmark ✓ appears in the box next to the transfer order icon [].

Press (SET) again to cancel the transfer order.

4 Repeat steps 2-3 to mark additional images with transfer orders or press (FUNC.) twice to close the menu.

TO TRANSFER THE STILL IMAGES MARKED WITH TRANSFER ORDERS

Connect the camcorder to the computer and select [TRANSFER ORDERS] in the transfer menu (page 89).

Erasing All Transfer Orders

FUNC.
(page 28)

FUNC.



FUNC. >

[MENU] >

[MEMORY OPER.] >

[ERASE ALL [] ORD] >

[YES] >

FUNC.



Additional Information

This chapter contains troubleshooting advice, screen messages, handling and maintenance tips, and other information.

Appendix: Menu Options Lists

Menu items not available appear grayed out in the FUNC. menu or in black in the setup menus. For details about how to select an item, refer to *Using the Menus* (□ 27). For details about each function, see the reference page. Menu options without a reference page are explained below the tables.

FUNC. Menu - Recording Modes

Menu item	Setting options			
Recording programs	[] PROGRAM AE], [] SHUTTER-PRIO.AE], [] APERTURE-PRIO.AE]	●	●	47
	[] CINE MODE]	●	–	45
	[] PORTRAIT], [] SPORTS], [] NIGHT], [] SNOW], [] BEACH], [] SUNSET], [] SPOTLIGHT], [] FIREWORKS]	●	●	45
Light metering mode	[] EVALUATIVE], [] CENT.WEIGHT.AVERAGE], [] SPOT]	–	●	69
White balance	[] AUTO], [] DAYLIGHT], [] SHADE], [] CLOUDY], [] TUNGSTEN], [] FLUORESCENT], [] FLUORESCENT H], [] SET]	●	●	51
Image effects	[] IMAGE EFFECT OFF], [] VIVID], [] NEUTRAL], [] LOW SHARPENING], [] SOFT SKIN DETAIL], [] CUSTOM]	●	●	53
Digital effects	[] D.EFFECT OFF], [] FADE-T], [] WIPE], [] BLK&WHT], [] SEPIA], [] ART]	●	–	54
	[] D.EFFECT OFF], [] BLK&WHT], [] SEPIA]	–	●	
Drive mode	[] SINGLE], [] CONT.SHOOT.], [] HISPEED CONT.SHOOT.], [] AEB]	–	●	68

Menu item	Setting options			
Recording mode	[MX] HIGH QUALITY 24 Mbps], [FX] HIGH QUALITY 17 Mbps], [XP] HIGH QUALITY 12 Mbps], [SP] STANDARD PLAY 7 Mbps], [LP] LONG PLAY 5 Mbps]	●	–	36
Still image simultaneous recording	[OFF] STILL I.REC OFF], [LW 1920x1080], [SW 848x480] ----- [] SUPER FINE], [] FINE], [] NORMAL]	●	–	69
Still image size/quality	[LW 1920x1080], [L 2048x1536], [M 1440x1080], [S 640x480] ----- [] SUPER FINE], [] FINE], [] NORMAL]	–	●	62

FUNC. Menu - Playback Modes

Menu item	Setting options			
[COPY]	Original movies: [ALL SCENES], [ALL SCENES (THIS DATE)], [ONE SCENE], [CANCEL] Scenes in the playlist: [NO], [YES]	●	–	60
	From the index screen: [ALL IMAGES], [ONE IMAGE], [CANCEL] While displaying a single still image: [NO], [YES]	–	●	71
[ADD TO PLAYLIST] ¹	[ALL SCENES (THIS DATE)], [ONE SCENE], [CANCEL]	●	–	59
[MOVE] ²	–	●	–	60
[DELETE]	Original movies: [ALL SCENES (THIS DATE)], [ONE SCENE], [CANCEL] Scenes in the playlist: [NO], [YES]	●	–	43
		●	–	59
[SELECT DATE] ¹	–	●	–	41
[PROTECT]	–	–	●	71
[PRINT ORDER]	–	–	●	77
[TRANSFER ORDER]	–	–	●	90

¹ Option available only from the original movies index screen.

² Option available only from the playlist index screen.



CAMERA SETUP

Menu item	Setting options			
[SELF TIMER]	[ON ON], [OFF OFF]	●	●	49
[D.ZOOM]	[OFF OFF], [40x 40X], [200x 200X]	●	–	–
[ZOOM SPEED]	[VAR VARIABLE], [>>> SPEED 3], [>> SPEED 2], [> SPEED 1]	●	●	37
[AF MODE]	[IAF INSTANT AF], [AF NORMAL AF]	●	●	–
[FOCUS ASSIST]	[ON ON], [OFF OFF]	●	●	–
[AF AST LAMP]	[A AUTO], [OFF OFF]	–	●	67
[FOCUS PRI.]	[AiAF ON:AI AF], [ON :CENTER], [OFF OFF]	–	●	–
[IMG STAB]	[ON ON], [OFF OFF]	●	●	–
[FRAME RATE]	[60i 60i NORMAL], [PF30 PF30], [PF24 PF24]	●	–	–
[A.SL SHUTTER]	[ON ON], [OFF OFF]	●	●	–
[REVIEW]*	[OFF OFF], [2sec 2 sec], [4sec 4 sec], [6sec 6 sec], [8sec 8 sec], [10sec 10 sec]	–	●	–
[WIND SCREEN]	[A AUTO], [OFF OFF]	●	–	–
[MIC ATT]	[ON ON ATT], [OFF OFF]	●	–	55

* Option available only when the drive mode is set to [SINGLE].

[D.ZOOM]: Determines the operation of the digital zoom. The color of the indicator indicates the zoom.

- When activated, the camcorder will switch automatically to the digital zoom when you zoom in beyond the optical zoom range.
- With the digital zoom the image is digitally processed, so the image resolution will deteriorate the more you zoom in.

Optical zoom	Digital zoom	
White	Light blue	Dark blue
Up to 12x	12x - 40x	40x - 200x

[AF MODE]: Select how fast the autofocus will operate.

- With [**IAF** INSTANT AF] the autofocus adjusts quickly to a new subject. This is convenient for example when changing the focus from a near subject to a far subject in the background, or when recording fast-moving subjects.
- When the optional Wide-converter or Tele-converter is attached to the camcorder, it may partially obstruct the Instant AF sensor. Set the AF mode to [**AF** NORMAL AF].

[FOCUS ASSIST]: The focus assist function magnifies the image that appears at the center of the screen to help you focus manually (□ 51).

- Using the focus assist function will not affect the recordings. The focus assist function will be cancelled when you start recording.

[FOCUS PRI.]: When the focus priority is activated, the camcorder records a still image only after the focus has been adjusted automatically. You can also select which AF frames to use.

[ATAF ON: AiAF]: One or more AF frames out of the nine frames available are automatically selected and the focus is fixed on them.

[□ ON: CENTER]: A single focusing frame appears in the center of the screen and the focus is automatically fixed on it.

[OFF OFF]: No AF frame will appear and the still image will be recorded immediately after you press **[PHOTO]**.

- When the recording mode is set to **[FIREWORKS]**, focus priority is automatically set to **[OFF OFF]**.

[IMG STAB]: The image stabilizer compensates for camcorder shake even at full telephoto.

- The image stabilizer is designed to compensate for a normal degree of camcorder shake.
- We recommend setting the image stabilizer to **[OFF OFF]** when using a tripod.

[FRAME RATE]: Selects the frame rate to be used when recording.

[PF30 PF30]: 30 frames per second, progressive. You can use this setting to easily edit your recordings, for example, to post them on the Web.

[PF24 PF24]: 24 frames per second, progressive. Using this frame rate will give your recordings a cinematic look. When combined with the **[CINE MODE]** recording program (□ 45), the cinematic look will be enhanced.

[A.SL SHUTTER]: The camcorder automatically uses slow shutter speeds to obtain brighter recordings in places with insufficient lighting.

- The setting will not change even if you set the camcorder to **[EASY]** mode.
- In **[CAMERA]** mode, set the flash mode to **[OFF]** (flash off).
- If a trailing afterimage appears, set the slow shutter to **[OFF OFF]**.
- If **[CAMERA SHAKE]** (camcorder shake warning) appears, we recommend stabilizing the camcorder, for example, by mounting it on a tripod.

Operating mode	Shutter speed used
[CAMERA] mode	As low as 1/30
[CAMERA] mode with [PF24 PF24] frame rate	As low as 1/12
[CAMERA] mode	As low as 1/15

[REVIEW]: Selects the time to display a still image after it has been recorded to the memory.

- If you press **[DISP.]** while reviewing a still image it will continue to be displayed indefinitely. Press **[PHOTO]** halfway to return to the normal display.



[WIND SCREEN]: The camcorder automatically reduces the background sound of wind when recording outdoors.

- Some low-frequency sounds will be suppressed along with the sound of wind. When recording in surroundings unaffected by wind or if you want to record low-frequency sounds, we recommend setting the wind screen to [**OFF** OFF ].

MEMORY OPER.

Menu item	Setting options					
[MEMORY INFO]	–	●	●	●	●	–
[CARD INFO]	–	●	●	●	●	–
[MEDIA:MOVIES]	[BUILT-IN MEM], [CARD]	●	●	–	–	33
[MEDIA:IMAGES]	[BUILT-IN MEM], [CARD]	●	●	●	–	33
[DEL.ALL MOVIES] ¹	[NO], [YES]	–	–	●	–	44
[DEL.PLAYLIST] ²	[NO], [YES]	–	–	●	–	60
[ERASE ALL  ORD]	[NO], [YES]	–	–	–	●	78
[ERASE ALL  ORD]	[NO], [YES]	–	–	–	●	90
[ERASE ALL IMAGES]	[NO], [YES]	–	–	–	●	66
[INITIALIZE]	[BUILT-IN MEM], [CARD], [CANCEL] [INITIALIZE], [COMPL.INIT.], [CANCEL]	●	●	● ¹	●	33


¹ Option available only from the original movies index screen.

² Option available only from the playlist index screen.

[MEMORY INFO]/[CARD INFO]: Displays a screen where you can verify how much of the built-in memory or the memory card is currently in use (total recording time and total number of still images) and how much memory remains available for recording.

- Estimated figures about available movie recording time and available number of still images are approximate and based on the recording mode and still image quality/size settings currently in use.
- In the [CARD INFO] screen you can also verify the Speed Class of the memory card.
- The maximum number of remaining still images displayed on the screen is 9999.

 DISPLAY SETUP

Menu item	Setting options					
[BRIGHTNESS]		●	●	●	●	–
[AUDIO LEVEL]	[ON ON], [OFF OFF]	●	–	–	–	56
[TV SCREEN]	[ON ON], [OFF OFF]	●	●	–	–	–
[DATA CODE]	[ DATE], [ TIME], [ DATE & TIME], [ CAMERA DATA]	–	–	●	–	–
[MARKERS]	[OFF OFF], [ LEVEL(WHT)], [ LEVEL(GRY)], [ GRID(WHT)], [ GRID(GRY)]	●	●	–	–	–
[LANGUAGE ]	[ČEŠTINA], [DEUTSCH], [ΕΛΛΗΝΙΚΑ] [ENGLISH], [ESPAÑOL], [FRANÇAIS], [ITALIANO], [MAGYAR], [MELAYU], [POLSKI], [ROMÂNĂ], [TÜRKÇE], [РУССКИЙ], [УКРАЇНСЬКА], [العربية], [فارسی], [ภาษาไทย], [简体中文], [繁體中文], [한국어], [日本語]	●	●	●	●	30
[START WEEK]	[SATURDAY], [SUNDAY], [MONDAY]	–	–	●	–	–
[DEMO MODE]	[ON ON], [OFF OFF]	●	●	–	–	–

[BRIGHTNESS]: Adjusts the brightness of the LCD screen.

- Changing the brightness of the LCD screen does not affect the brightness of your recordings or that of the playback image on a TV.

[TV SCREEN]

- When set to [**ON ON**], the camcorder's on-screen displays will appear also on the screen of a connected TV or monitor.

[DATA CODE]: Displays the date and/or time when the scene was recorded.

[ CAMERA DATA]: Displays the aperture (f-stop) and shutter speed used when recording the image.

[MARKERS]: You can display a grid or a horizontal line at the center of the screen. Use the markers as a reference to make sure your subject is framed correctly (vertically and/or horizontally).

- Using the markers will not affect the recordings.

[START WEEK]: Select the day on which the week starts for the calendar display ( 41).



[DEMO MODE]: The demonstration mode displays the camcorder's main features. It starts automatically when the camcorder is powered with the compact power adapter if you leave it turned on for more than 5 minutes.

- To cancel the demo mode once it has started, press any button or turn off the camcorder.

SYSTEM SETUP

Menu item	Setting options					
[BATTERY INFO]	–	●	●	●	●	–
[WL.REMOTE]	[ ON], [ OFF ]	●	●	●	●	–
[BEEP]	[ HIGH VOLUME], [ LOW VOLUME], [ OFF]	●	●	●	●	–
[POWER SAVE]	[ ON], [ OFF]	●	●	●	●	–
[QUICK START]	[ OFF], [ 10 min], [ 20 min], [ 30 min]	●	●	–	–	–
[AV/PHONES]	[ AV], [ PHONES]	●	–	●	–	57
[PHONES VOL.]		●	–	●	–	57
[SPEAKER VOL.]		–	–	●	–	–
[IMG NUMBERS]	[ RESET], [ CONTINUOUS]	●	●	●	●	–
[IMG QUALITY]	[ LW SUPER FINE], [ LW FINE], [ LW NORMAL]	–	–	●	–	–
[TV TYPE]*	[ 4:3 NORMAL TV], [ 16:9 WIDE TV]	–	–	●	–	–
[COMP.OUT]*	[ 480], [ 1080i]	●	●	●	●	–
[HDMI STATUS]	–	●	●	●	●	–
[USB SETTING]	[ DVD BURNER], [ PC/PRINTER], [ CONNECT&SET]	–	–	●	●	–
[ADD TO DISC]	[ALL SCENES], [REM.SCENES], [PLAYLIST]	–	–	●	–	83
	[ALL IMAGES], [ TRANS.ORD]	–	–	–	●	
[FIRMWARE]	–	–	–	–	●	–

* Option not available when the camcorder is connected to an HDTV using the HDMI cable.

[BATTERY INFO]: Displays a screen where you can verify the battery charge (as a percentage) and the remaining recording time (,  mode) or playback time (,  mode).

[WL.REMOTE]: Allows the camcorder to be operated with the wireless controller.

[BEEP]: A beep will accompany some operations like turning on the camcorder, the self-timer countdown, etc.

[POWER SAVE]: In order to save power when the camcorder is powered by a battery pack, it will automatically shut off if left without any operation for 5 minutes.

- Approximately 30 seconds before the camcorder shuts off, [AUTO POWER OFF] will appear.
- In standby mode, the camcorder will shut off after the time selected for the [QUICK START] setting.

[QUICK START]: Select whether to activate the Quick Start function when you close the LCD panel in a recording mode (□ 37) and the length of time after which the camcorder will end the standby mode and shut off automatically.

[SPEAKER VOL.]: Adjust (◀▶) the volume of the playback. You can also adjust the volume using the joystick guide (□ 57).

[IMG NUMBERS]: Select the image numbering method to be used on a new memory card. Images are automatically assigned consecutive image numbers from 0101 to 9900, and stored in folders containing up to 100 images. Folders are numbered from 101 to 998.

[ RESET]: Image numbers will restart from 101-0101 every time you insert a new memory card.

[ CONTINUOUS]: Image numbers will continue from the number following that of the last image recorded with the camcorder.

- If the memory card you insert already contains an image with a larger number, a new image will be assigned a number one higher than that of the last image on the memory card.
- We recommend using the [ CONTINUOUS] setting.

[IMG QUALITY]: Select the quality of a still image captured from a scene.

[TV TYPE]: In order to display the picture in full and in the correct aspect ratio, select the setting according to the type of television to which you will connect the camcorder.

[ NORMAL TV]: TV sets with 4:3 aspect ratio.

[ WIDE TV]: TV sets with 16:9 aspect ratio.

- When the TV type is set to [ NORMAL TV], the picture displayed on the LCD screen will be smaller than the full display area.
- When the TV type is set to [ NORMAL TV], still images cannot be captured from the playback scene (□ 70). Set [TV TYPE] to [ WIDE TV].

[COMP.OUT]: You can select the video specifications to use when connecting the camcorder to a high-definition TV using the component video connection.

[ 480i]: To use the 480i specification (standard definition).

[ 1080i]: To use the full 1080i high definition specification.

[HDMI STATUS]: You can verify the specification of the video output signal from the HDMI OUT terminal.



[USB SETTING]: Select the connection protocol to use when connecting the camcorder to an external device using the USB cable.

[DVD BURNER]: To connect exclusively to the optional DW-100 DVD Burner.

[PC/PRINTER]: To connect to a computer, a printer or similar USB peripherals.

[CONNECT&SET]: To make the selection from a screen that appears at the time of the connection to the external device.

[FIRMWARE]: You can verify the current version of the camcorder's firmware. This menu option is usually unavailable.

DATE/TIME SETUP

Menu item	Setting options					
[T.ZONE/DST]	List of world time zones.	●	●	●	●	30
[DATE/TIME]	–	●	●	●	●	29
[DATE FORMAT]	[Y.M.D (2008.1.1 AM 12:00)], [M.D,Y (JAN. 1, 2008 12:00 AM)], [D.M.Y (1.JAN.2008 12:00 AM)]	●	●	●	●	–

[DATE FORMAT]: Select the date format to be used for most on-screen displays, and (if selected) for the date printed on photos.

Troubleshooting

If you have a problem with your camcorder, refer to this section. Sometimes what you think is a malfunction of the camcorder may have the simplest of solutions - please read the "CHECK THIS FIRST" box before going on to the more detailed problems and solutions. Consult your dealer or a Canon Service Center if the problem persists.

CHECK THIS FIRST

Power supply

Is the battery charged? Is the compact power adapter correctly connected to the camcorder? (□ 20)

Recording

Did you turn the camcorder on and set the mode dial to  or ? (□ 26). If you are recording to a memory card, is one correctly inserted into the camcorder? (□ 32)

Playback

Did you turn the camcorder on and set the mode dial to  or ? (□ 26). If you are playing back recordings from a memory card, is one correctly inserted into the camcorder? (□ 32) Does it contain any recordings?

Power source

The camcorder will not turn on or it turns off by itself.

- The battery pack is exhausted. Replace or charge the battery pack (□ 20).
- Remove the battery pack and reattach it correctly.

Cannot charge the battery pack.

- The battery pack is too hot. The charging will start once the battery pack temperature is below 40 °C (104 °F).
- Charge the battery pack in temperatures between 0 °C and 40 °C (32 °F and 104 °F).
- The battery pack is damaged. Use a different battery pack.
- Turn off the power before charging the battery pack (□ 20).

A noise can be heard from the compact power adapter.

- A faint sound can be heard while the compact power adapter is connected to a power outlet. This is not a malfunction.

After using the camcorder for a long time, it becomes hot.

- The camcorder may become hot after using it continuously for long periods of time; this is not a malfunction. If it becomes hot very quickly or it becomes too hot to touch, it may indicate a problem with the camcorder. Consult a Canon Service Center.



The battery pack is exhausted extremely quickly even at normal temperatures.

- The battery may have reached the end of its battery life. Buy a new battery pack.

Recording

Pressing **START/STOP** will not start recording.

- You cannot record while the camcorder is writing previous recording onto the memory (while the ACCESS indicator is on or flashing).
- The memory is full or it already contains the maximum number of scenes. Delete some recordings (□ 43, 66) or initialize the memory (□ 33) to free some space.

The point where **START/STOP** was pressed does not match the beginning/end of the recording.

- There is a slight interval between pressing **START/STOP** and the actual start of recording. This is not a malfunction.

The camcorder will not focus.

- Autofocus does not work on the subject. Focus manually (□ 51).
- Lens or Instant AF sensor is dirty. Clean the lens or sensor with a soft lens-cleaning cloth (□ 115). Never use tissue paper to clean the lens.

When a subject flits across in front of the lens, the image appears slightly bent.

- This is a phenomenon typical of CMOS image sensors. When a subject crosses very quickly in front of the camcorder, the image may seem slightly warped. This is not a malfunction.

Changing the operating mode between recording (●)/record pause (●|||)/playback (▶) takes longer than usual.

- When the memory contains a large number of scenes, some operations may take longer than usual. Back up your recordings (□ 83) and initialize the memory (□ 33).

Reviewing the last scene recorded takes longer than usual.

- When the memory contains a large number of scenes, some operations may take longer than usual. Back up your recordings (□ 83) and initialize the memory (□ 33).

Cannot record a still image.

- In  mode: You cannot record a still image if simultaneous recording (FUNC. menu) is set to [STILL I. REC OFF] (□ 69), or if either the digital zoom (□ 93) or a digital effect (□ 54) is activated.

Movies or still images cannot be recorded properly.

- This may occur as movies and still images are recorded/deleted over time. Back up your recordings (□ 83) and initialize the memory (□ 33).

Playback

Cannot add scenes to the playlist.

- You cannot add more than 999 scenes to the playlist.
- You may not be able to add scenes to the playlist if they were recorded or edited using another device.

Cannot delete a scene.

- You may not be able to delete scenes recorded or edited using another device.

Deleting scenes takes longer than usual.

- When the memory contains a large number of scenes, some operations may take longer than usual. Back up your recordings (□□ 83) and initialize the memory (□□ 33).

Cannot erase a still image.

- The still image is protected. Remove the protection (□□ 71).

Indicators and Onscreen Displays

 **lights up in red.**

- Battery pack is exhausted. Replace or charge the battery pack (□□ 20).

 **appears on the screen.**

- The camcorder cannot communicate with the battery pack attached so the remaining battery time cannot be displayed.

 **lights up in red.**

- A memory card error occurred. Turn off the camcorder. Remove and reinsert the memory card. Initialize the memory card (□□ 33) if the display does not change back to normal.
- The memory card is full. Replace the memory card or delete some recordings to free some space on the memory card.

 **flashes in red on the screen.**

- The camcorder has malfunctioned. Consult a Canon Service Center.

The CHG (charge) indicator flashes rapidly.

-  (one flash at 0.5-second intervals)
Charging has stopped because the compact power adapter or the battery pack is faulty. Consult a Canon Service Center.

The CHG (charge) indicator flashes very slowly.

-  (one flash at 2-second intervals)
The battery pack is too hot. The charging will start once the battery pack temperature is below 40 °C (104 °F).
- Charge the battery pack in temperatures between 0 °C and 40 °C (32 °F and 104 °F).
- The battery pack is damaged. Use a different battery pack.

The CHG (charge) indicator does not turn on even though a battery pack is attached.

- The camcorder cannot communicate with the battery pack attached. Such battery packs cannot be charged using this camcorder.

Picture and Sound

Screen displays turn on and off repeatedly.

- The battery pack is exhausted. Replace or charge the battery pack (□□ 20).
- Remove the battery pack and reattach it correctly.

Abnormal characters appear on the screen and the camcorder does not operate properly.

- Disconnect the power source and reconnect it after a short time. If the problem still persists, disconnect the power source and press the RESET button with a pointed item. Pressing the RESET button resets all settings.



Video noise appears on screen.

- When using the camcorder close to devices that emit strong electromagnetic fields (plasma TVs, cellular phones, etc.), keep a distance between the camcorder and these devices.

Horizontal bands appear on the screen.

- This is a phenomenon typical of CMOS image sensors when recording under some types of fluorescent, mercury or sodium lamps. To reduce the symptoms set the camcorder to **EASY** mode. This is not a malfunction.

Sound is distorted or is recorded at lower levels.

- When recording near loud sounds (such as fireworks, shows or concerts), sound may become distorted or it may not be recorded at the actual levels. Activate the microphone attenuator or adjust the audio recording level manually (□□ 55).

The picture is displayed correctly but there is no sound from the built-in speaker.

- Speaker volume is turned off. Adjust the volume (□□ 41).
- If the STV-250N Stereo Video Cable is connected to the camcorder, disconnect it.

A rattling can be heard from the camcorder.

- The internal lens fixture can move when the camcorder is turned off. This is not a malfunction.

Memory Card and Accessories

Cannot insert the memory card.

- The memory card was not facing the correct direction. Turn the memory card over and insert it (□□ 32).

Cannot record on the memory card.

- The memory card is full. Erase some recordings to free some space or replace the memory card.
- Initialize the memory card (□□ 33) when you use it with the camcorder for the first time.
- The LOCK switch on an SD or SDHC memory card is set to prevent accidental erasure. Change the position of the LOCK switch (□□ 114).
- The folder and file numbers have reached their maximum value. Set [IMG NUMBERS] to [RESET] (□□ 98) and insert a new memory card.
- Still images cannot be captured from the playback scene when [TV TYPE] is set to [NORMAL TV]. In such case,  appears. Set [TV TYPE] to [WIDE TV] (□□ 98).

The wireless controller will not work.

- Set [WL.REMOTE] to [ON].
- Replace the battery of the wireless controller.

Connections with External Devices

Video noise appears on the TV screen.

- When using the camcorder in a room where a TV is located, keep a distance between the compact power adapter and the power or antenna cables of the TV.

Playback looks fine on the camcorder but there is no image on the TV screen.

- The video input on the TV is not set to the video terminal to which you connected the camcorder. Select the correct video input.

There is no sound from the TV.

- When connecting the camcorder to an HDTV using the CTC-100/S Component Cable, make sure to connect also the audio connections using the white and red plugs of the STV-250N Stereo Video Cable.

The camcorder is connected using the optional HTC-100 HDMI Cable, but there is no picture or sound from the HDTV.

- Disconnect the HTC-100 HDMI Cable and then restore the connection or turn the camcorder off and then on again.

The computer doesn't recognize the camcorder even though the camcorder is connected correctly.

- [USB SETTING] is set to [DVD BURNER]. Set it to [PC/PRINTER] or to [CONNECT&SET] (□ 97).
- Disconnect the USB cable and turn off the camcorder. After a short while, turn it on again and restore the connection.

The printer is not working even though the camcorder and printer are connected correctly.

- [USB SETTING] is set to [DVD BURNER]. Set it to [PC/PRINTER] or to [CONNECT&SET] (□ 97).
- Disconnect the USB cable. Turn the printer off and then on again and restore the connection.

The camcorder doesn't recognize the DW-100 DVD Burner even though it is connected correctly.

- [USB SETTING] is set to [PC/PRINTER]. Set it to [DVD BURNER] or to [CONNECT&SET] (□ 97).

List of Messages (in alphabetical order)

Following the list of messages for the camcorder you can find separate lists for print-related messages (□ 109) and for messages that appear only when using the optional DW-100 DVD Burner (□ 108).

ACCESSING THE CARD DO NOT REMOVE THE CARD

- You opened the memory card slot cover while the camcorder was accessing the memory card or the camcorder started accessing the memory card as you opened the memory card slot cover. Do not remove the memory card until this message disappears.

BACK UP RECORDINGS REGULARLY

- This message may appear when you turn on the camcorder. In the event of a malfunction, recordings may be lost so back up your recordings regularly.

BUFFER OVERFLOW RECORDING WAS STOPPED

- The data transfer rate was too high for the memory card in use and the recording was stopped. Replace the memory card with one rated Speed Class 2 or higher.

BUILT-IN MEMORY ERROR

- The built-in memory could not be read.

BUILT-IN MEMORY FULL

- The built-in memory is full ("END" appears on the screen). Delete some recordings (□ 43, 66) to free some space.

**CANNOT ACCESS THE BUILT-IN MEMORY**

- There is a problem with the built-in memory.

CANNOT COMMUNICATE WITH THE BATTERY PACK CONTINUE USING THIS BATTERY PACK?

- You attached a battery pack that is not recommended by Canon for use with this camcorder.

CANNOT COPY

- The total size of the scenes you selected to copy exceeds the available space on the memory card. Delete some recordings on the memory card (□ 43, 66) or reduce the number of scenes to copy (□ 60).

CANNOT EDIT

- Cannot move or delete original scenes or scenes in the playlist of the selected memory.

CANNOT EDIT CHECK THE CARD

- The memory card in the camcorder was initialized using a computer. Initialize the memory card with this camcorder (□ 33).

CANNOT ENTER THE STANDBY MODE NOW

- The camcorder cannot enter the standby mode if the remaining battery charge is too low.

CANNOT PLAY BACK

- There is a problem with the memory.

CANNOT PLAY BACK CANNOT ACCESS THE BUILT-IN MEMORY

- There is a problem with the built-in memory.

CANNOT PLAY BACK CHECK THE CARD

- There is a problem with the memory card.

CANNOT PLAY THE MOVIES IN THE BUILT-IN MEMORY INITIALIZE USING ONLY THE CAMCORDER

- The camcorder's built-in memory was initialized using a computer. Initialize the built-in memory with this camcorder (□ 33).

CANNOT PLAY THE MOVIES ON THIS CARD

- Movies cannot be played back from a 64 MB or smaller memory card.

CANNOT PLAY THE MOVIES ON THIS CARD INITIALIZE USING ONLY THE CAMCORDER

- The memory card in the camcorder was initialized using a computer. Initialize the memory card with this camcorder (□ 33).

CANNOT RECORD

- There is a problem with the memory.

CANNOT RECORD MOVIES IN THE BUILT-IN MEMORY INITIALIZE USING ONLY THE CAMCORDER

- The camcorder's built-in memory was initialized using a computer. Initialize the built-in memory with this camcorder (□ 33).

CANNOT RECORD MOVIES ON THIS CARD

- Movies cannot be recorded on a 64 MB or smaller memory card.

CANNOT RECORD MOVIES ON THIS CARD INITIALIZE USING ONLY THE CAMCORDER

- The memory card in the camcorder was initialized using a computer. Initialize the memory card with this camcorder (□ 33).

CANNOT RECORD ON THIS CARD USING MXP/FXP MODE

- Movies cannot be recorded in MXP or FXP mode on a memory card if it is rated Speed Class 2. Select a different recording mode (□ 36) or replace the memory card with one rated Speed Class 4 or higher.

CANNOT RECORD CANNOT ACCESS THE BUILT-IN MEMORY

- There is a problem with the built-in memory.

CANNOT RECORD CHECK THE CARD

- There is a problem with the memory card.

CARD FULL

- The memory card is full. Erase some recordings to free some space or replace the memory card.

CARD REACHED THE MAXIMUM NUMBER OF SCENES

- The memory card already contains the maximum number of scenes; no further scenes can be copied onto the memory card. Delete some scenes (□ 43).

CARD UNABLE TO RECOGNIZE THE DATA

- The memory card contains scenes recorded in a different television system (PAL or SECAM).

CHANGE THE BATTERY PACK

- Battery pack is exhausted. Replace or charge the battery pack (□ 20).

CHECK THE CARD

- Cannot access the memory card. Check the memory card and make sure it is inserted correctly (□ 32).
- A memory card error occurred. The camcorder cannot record or display the image.
- A MultiMedia Card was inserted into a camcorder. Insert a compatible SD/SDHC memory card.
- If after the message disappears, □ appears in red, perform the following: Turn off the camcorder and remove and reinsert the memory card. If □ turns back to green you can resume recording/playback.
- Initialize the memory card (□ 33). (Doing so will erase all the still images on the memory card.)

CONNECT THE COMPACT POWER ADAPTER

- When the camcorder is in  mode and is connected to the computer, this message will appear if the camcorder is being powered by the battery pack. Connect the compact power adapter to the camcorder.

COULD NOT ADD TO PLAYLIST

- Scene could not be added to the playlist (□ 59). The playlist cannot contain more than 999 scenes. If scenes recorded in MXP or FXP mode are also added to the playlist, the maximum number of scenes in the playlist may be less than 999. Delete some scenes (□ 43).

DATA INCLUDES MXP/FXP SCENES CANNOT COPY TO THIS CARD

- Movies recorded in MXP or FXP mode cannot be copied onto a memory card if it is rated Speed Class 2. Replace the memory card with one rated Speed Class 4 or higher.

ERROR WRITING THE CARD DATA MAY BE RECOVERED IF CARD WAS NOT REMOVED RECOVER FILES?

- If power supply was accidentally interrupted while the camcorder was writing to the memory card, this message will appear the next time you turn on the camcorder. Select [YES] to try to recover the recordings. If you removed the memory card and used it with another device after this happened, we recommend you select [NO].

INITIALIZE USING ONLY THE CAMCORDER

- There is a problem with the file system that prevents accessing the selected memory. Initialize the built-in memory or memory card with this camcorder (□ 33).



MAY NOT BE POSSIBLE TO RECORD MOVIES ON THIS CARD

- You may not be able to record movies on a memory card without a Speed Class rating. Replace the memory card with one rated Speed Class 2 or higher.

NAMING ERROR

- The folder and file numbers have reached their maximum value. Set [IMG NUMBERS] to [RESET] (📄 98) and erase all the images on the memory card or initialize it.

NEED TO RECOVER FILES FROM THE CARD. CHANGE THE POSITION OF THE CARD'S LOCK SWITCH.

- This message will appear the next time you turn on the camcorder if power supply was accidentally interrupted while the camcorder was writing to the memory card and later the position of the card's LOCK switch was changed to prevent erasure. Change the position of the LOCK switch (📄 114).

NO CARD

- There is no memory card in the camcorder.

NO IMAGES

- There are no still images to play back.

NO SCENES

- There are no scenes recorded in the memory selected.

NOT AVAILABLE IN **EASY MODE**

- You pressed a button that cannot be used in **EASY** mode (while the **EASY** button's blue light is on). Press the **EASY** button to set the camcorder to flexible recording mode.

PROCESS CANCELED

- The process was canceled following user intervention.

REACHED THE MAXIMUM NUMBER OF SCENES

- The maximum number of scenes has been reached. Delete some scenes (📄 43).

READING THE BUILT-IN MEMORY

- Reading data from the built-in memory.

READING THE CARD

- Reading data from the memory card.

SOME SCENES COULD NOT BE DELETED

- Movies that were protected/edited with other devices cannot be deleted.

TASK IN PROGRESS DO NOT DISCONNECT THE POWER SOURCE

- The camcorder is updating the memory. Do not disconnect the compact power adapter or remove the battery pack.

THE CAMCORDER IS SET TO STILL IMAGE MODE

- You pressed **START/STOP** while recording still images (📷 mode).

THE CARD IS SET FOR ERASURE PREVENTION

- The LOCK switch on an SD or SDHC memory card is set to prevent accidental erasure. Change the position of the LOCK switch (📄 114).

THE MEMORY CARD COVER IS OPEN

- After inserting a memory card, close the memory card slot cover by pulling it down until it clicks (📄 32).

TOO MANY STILL IMAGES DISCONNECT USB CABLE

- Disconnect the USB cable and decrease the number of still images in the memory (for printers or Windows: less than 1,800; Macintosh: less than 1,000). If a dialog appeared on the computer screen, close it and then reconnect the USB cable.

 **TRANSFER ORDER ERROR**

- You attempted to set more than 998 transfer orders. Reduce the number of still images marked with transfer orders.

UNABLE TO RECOGNIZE THE DATA

- You transferred data to the camcorder recorded in a different television system (PAL or SECAM).

UNABLE TO RECOVER DATA

- Could not recover a corrupted file.

WHILE THE CAMCORDER IS CONNECTED TO A PC DO NOT DISCONNECT THE USB CABLE OR POWER SOURCE CANNOT TURN OFF POWER OR CHANGE MODES

- When the camcorder is in  mode and is connected to the computer with a USB cable, the camcorder cannot be operated. Disconnecting the USB cable or power source while this message appears may result in permanent loss of the recordings in the camcorder. To avoid this, use the computer's Safely Remove Hardware function to end the connection and disconnect the USB cable before using the camcorder.

Messages Related to the Optional DW-100 DVD Burner

If an error message appears while the camcorder is connected to the optional DW-100 DVD Burner, refer to the following section and also to the instruction manual of the DVD burner.

CANNOT READ THE DISC CHECK THE DISC

- During disc recording mode, this message can appear when a commercially available DVD disc (a DVD disc containing movies, software, etc.) or an 8 cm mini DVD disc is inserted.
- During disc playback mode, this message can appear when a commercially available DVD disc or a brand new DVD disc is inserted.

CLOSE THE MEMORY CARD SLOT COVER

- The memory card slot cover is open. Close the cover after correctly inserting the memory card ( 32).

CONNECT THE COMPACT POWER ADAPTER

- Connect the compact power adapter to the camcorder.

DISC ACCESS FAILURE CHECK THE DISC

- There was an error when reading the disc or attempting to write onto it.
- This message can appear also if condensation has formed. Wait until the DVD burner dries completely before resuming use.
- The disc may not be loaded correctly. Try removing the disc and reinserting it.

ERROR READING THE DATA

- Error while reading the recordings from the camcorder.
- Check that the USB cable was not accidentally disconnected.

LOADING THE DISC

- Reading data from the disc.



NO DISC

- Insert a disc into the DVD burner.
- This message can appear also if condensation has formed. Wait until the DVD burner dries completely before resuming use.

NO IMAGES

- There are no still images to add to the disc.

NO SCENES

- There are no movies to add to the disc.

NO SCENES LEFT TO ADD

- You selected to create a DVD with the [REM.SCENES] setting, but all the scenes have already been added to discs created in the past; there are no applicable scenes.

NO TRANSFER ORDERS

- You selected to create a DVD with the [TRANS.ORD] setting, but no still images have been marked with transfer orders (□ 90).

OPERATION CANCELED

- The USB cable was disconnected and the operation was canceled. Check the USB connection.

UNABLE TO RECOVER DATA

- Could not recover a corrupted file.

Direct Print Related Messages

CANNOT PRINT!

- You attempted to print an image that was recorded with another camcorder, has a different compression, or was edited on a computer.

CANNOT TRIM

- You attempted to trim an image that was recorded with another camcorder.

CHECK PRINT SETTINGS

- Current print settings cannot be used for printing with the button.

COMMUNICATION ERROR

- The printer is experiencing a data transfer error. Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. When you are printing using the button, check the print settings.
Or, you attempted to print from a memory card that contains a large number of images. Reduce the number of images.

COULD NOT PRINT X IMAGES

- You attempted to use the print order settings to print X images that were recorded with another camcorder, with a different compression or were edited on a computer.

FILE ERROR

- You attempted to print an image that was recorded with another camcorder, has a different compression, or was edited on a computer.

HARDWARE ERROR

- Cancel printing. Turn off the printer and turn it back on. Check the printer status. If the printer is equipped with a battery, it might be exhausted. In such case, turn off the printer, replace the battery and turn it back on.

INCOMPATIBLE PAPER SIZE

- The paper settings of the camcorder conflict with the printer's settings.

INK ABSORBER FULL

- Select [CONTINUE] to resume printing. Consult a Canon Service Center (refer to the list included with the printer) to replace the ink absorber.

INK ERROR

- There is a problem with the ink. Replace the ink cartridge.

LOW INK LEVEL

- The ink cartridge needs to be replaced soon. Select [CONTINUE] to restart printing.

NO INK

- The ink cartridge is not inserted or is out of ink.

NO PAPER

- Paper is not correctly inserted or there is no paper.

NO PRINTHEAD

- No print head is installed in the printer or the print head is defective.

PAPER ERROR

- There is a problem with the paper. The paper is not correctly loaded or the paper size is wrong. Alternatively, if the paper output tray is closed, open it to print.

PAPER JAM

- The paper jammed during printing. Select [STOP] to cancel printing. After removing the paper, set some paper again and retry printing.

PAPER LEVER ERROR

- Paper lever error occurred. Adjust the paper selection lever to the proper position.

PRINT ERROR

- Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. Check the printer status.
- When you are printing using the   button, check the print settings.

 **PRINT ORDER ERROR**

- You attempted to set more than 998 still images in the print order.

PRINTER COVER OPEN

- Close the printer cover securely.

PRINTER ERROR

- A malfunction has occurred that may require repairs. (Canon PIXMA printers: the printer's green power lamp and orange error lamp flash alternately.)
- Disconnect the USB cable and turn off the printer. Unplug the printer's power cord from the power outlet and contact the appropriate customer support center or service center.



PRINTER IN USE

- The printer is in use. Check the printer status.

READJUST TRIMMING

- You changed the [PAPER] settings after applying the trimming settings.

SET PRINT ORDER

- No still image has been marked with a print order.

NOTES

About Canon PIXMA/SELPHY DS Printers: If the printer's error indicator flashes or an error message appears on the printer's operation panel, refer to the printer's instruction manual.

- If you cannot solve the problem even after consulting this list and the printer's instruction manual, contact the closest Canon Service Center (refer to the list included with the printer).

Handling Precautions


Camcorder

Be sure to observe the following precautions to ensure maximum performance.

- **Back up your recordings periodically.** Make sure to transfer your recordings to an external device such as a computer or digital video recorder (□ 83) and back them up on a regular basis. This will protect your important recordings in case of damage and create more free space on the memory. Canon shall not be liable for any data loss.
- Do not carry the camcorder by the LCD panel. Be careful when closing the LCD panel.
- Do not subject the camcorder to vibrations or strong impacts. When using a wrist strap, do not allow the camcorder to swing and hit an object.
- Do not leave the camcorder in places subject to high temperatures (like the inside of a car under direct sunlight), or high humidity.
- Do not use the camcorder near strong electromagnetic fields such as above TVs, near plasma TVs or mobile phones.
- Do not point the lens at strong light sources. Do not leave the camcorder pointed at a bright subject.
- Do not use or store the camcorder in dusty or sandy places. The camcorder is not waterproof – avoid also water, mud or salt. If any of the

above should get into the camcorder it may damage the camcorder and/or the lens.

- Be careful of heat generated by lighting equipment.
- Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage.
- When mounting the camcorder on a tripod, make sure that the tripod's fastening screw is shorter than 5.5 mm (0.2 in.) and that its camera-positioning pin is retractable (not fixed). Using other tripods may damage the camcorder.

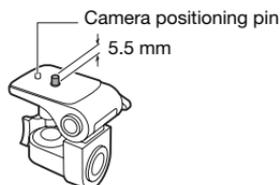

- **When recording movies, try to get a calm, stable picture.**

Excessive camcorder movement while shooting and extensive use of fast zooms and panning can result in jittery scenes. In extreme cases, the playback of such scenes may result in visually induced motion sickness. If you experience such a reaction, immediately stop the playback and take a rest break as necessary.



Long-term storage

If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 °C (86 °F).

Battery Pack

DANGER!

Treat the battery pack with care.

- Keep it away from fire (or it might explode).
 - Do not expose the battery pack to temperature higher than 60 °C (140 °F). Do not leave it near a heater or inside a car in hot weather.
 - Do not try to disassemble or modify it.
 - Do not drop it or subject it to shocks.
 - Do not get it wet.
-
- Attach the terminal cover whenever a battery pack is not in use. Contact with metallic objects may cause a short circuit and damage the battery pack.
 - Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.

Long-term storage

- Store battery packs in a dry place at temperatures no higher than 30 °C (86 °F).
- To extend the battery life of the battery pack, discharge it completely before storing it.
- Charge and discharge all your battery packs fully at least once a year.

Remaining battery time

If the remaining battery time displayed is not correct, charge the battery pack fully. However, the correct time may not be displayed if a fully charged battery pack is used continuously in high temperatures or it is left unused for long periods of time. Additionally, depending on the battery life, the correct time may not be displayed. Use the time shown on the screen as an approximation.

Regarding the use of non-Canon battery packs

- For your safety, battery packs that are not genuine Canon battery packs will not be charged even if you attach them to this camcorder or to the optional CG-800 Battery Charger.
- We recommend using genuine Canon battery packs bearing the  Intelligent Li-ion Battery mark.
- If you attach to the camcorder battery packs that are not genuine Canon battery packs,  will appear and the remaining battery time will not be displayed.

Memory Card

- We recommend backing up the recordings on the memory card onto your computer. Data may be corrupted or lost due to memory card defects or exposure to static electricity. Canon makes no warranties for corrupted or lost data.
- Do not touch or expose the terminals to dust or dirt.

- Do not use memory cards in places subject to strong magnetic fields.
- Do not leave memory cards in places subject to high humidity and high temperature.
- Do not disassemble, bend, drop, or subject memory cards to shocks and do not expose them to water.
- Check the direction before inserting the memory card. Forcing a memory card into the slot if it is not correctly oriented may damage the memory card or the camcorder.
- Do not attach any labels or stickers on the memory card.
- SD/SDHC memory cards have a physical switch to prevent writing on the card so as to avoid the accidental erasure of the card's content. To write-protect the memory card set the switch to the LOCK position.



Built-in Rechargeable Lithium Battery

The camcorder has a built-in rechargeable lithium battery to keep the date/time and other settings. The built-in lithium battery is recharged while you use the camcorder; however, it will become totally discharged if you do not use the camcorder for about 3 months.

To recharge the built-in lithium battery:

Connect the compact power adapter to

the camcorder and leave it connected for 24 hours with the camcorder off.

Lithium Button Battery

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mishandled.
- Do not disassemble, modify, immerse in water, heat above 100 °C (212 °F) or incinerate the battery.
- Replace with a CR2025 battery made by Panasonic, Hitachi Maxell, Sony, Sanyo, or with Duracell2025. Use of other batteries may present a risk of fire or explosion.
- Do not insert the battery into the mouth. If swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may cause internal damage.
- Keep the battery out of the reach of children.
- Do not recharge, short-circuit or insert the battery in the wrong direction.
- Dispose of the used battery according to applicable recycling regulations.

- Do not pick up the battery using tweezers or other metal tools, as this will cause a short circuit.
- Wipe the battery with a clean dry cloth to ensure proper contact.
- **For California, USA only:** The lithium battery included contains Perchlorate Material – special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate for details.



Disposal

When you delete movies or initialize the built-in memory or memory card, only the file allocation table is altered and stored data is not physically erased.

Take the necessary precautions when you dispose of the camcorder or memory card, for example by physically damaging it to prevent the leakage of private data.

If giving the camcorder to another person, initialize the built-in memory using the [COMPL.INIT.] setting (□ 33). Fill it up with unimportant recordings, and then initialize it again using the same method. This makes recovering the original recordings very difficult.

Maintenance/Others

Cleaning

Camcorder Body

- Use a soft, dry cloth to clean the camcorder body. Never use chemically treated cloths or volatile solvents such as paint thinner.

Lens and Instant AF Sensor

If the lens surface or Instant AF sensor is dirty, the autofocus may not work properly.

- Remove any dust or dirt particles using a non-aerosol type blower brush.
- Use a clean, soft lens-cleaning cloth to gently wipe the lens. Never use tissue paper.

LCD Screen

- Clean the LCD screen using a clean, soft lens-cleaning cloth.
- Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.

Condensation

Moving the camcorder rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.

Condensation may form in the following cases:

- When the camcorder is moved quickly from cold to warm places
- When the camcorder is left in a humid room
- When a cold room is heated rapidly

TO AVOID CONDENSATION

- Do not expose the camcorder to sudden or extreme changes in temperature.
- Place the camcorder in an airtight plastic bag and let it adjust to temperature changes slowly before removing it from the bag.

WHEN CONDENSATION IS DETECTED

The camcorder automatically shuts off. The precise time required for water droplets to evaporate will vary depending on the location and weather conditions. As a general rule, wait for 2 hours before resuming use of the camcorder.

Using the Camcorder Abroad

Power Sources

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult a Canon Service Center for information on plug adapters for overseas use.


Playback on a TV Screen

You can only play back your recordings on TVs compatible with the NTSC system. The NTSC system is used in the following countries/areas:

American Samoa, Antigua, Aruba, Bahamas, Barbados, Bermuda, Bolivia, Canada, Chile, Colombia, Costa Rica, Cuba, Ecuador, El Salvador, Greenland, Guam, Guatemala, Haiti, Honduras, Jamaica, Japan, Korea, Mexico, Micronesia, Myanmar, Nicaragua, Panama, Peru, Philippines, Puerto Rico, Saint Kitts and Nevis, Saint Lucia, Saint Vincent and the Grenadines, Surinam, Taiwan, Trinidad and Tobago, USA, Venezuela, Virgin Islands.



System Diagram (Availability differs from area to area)

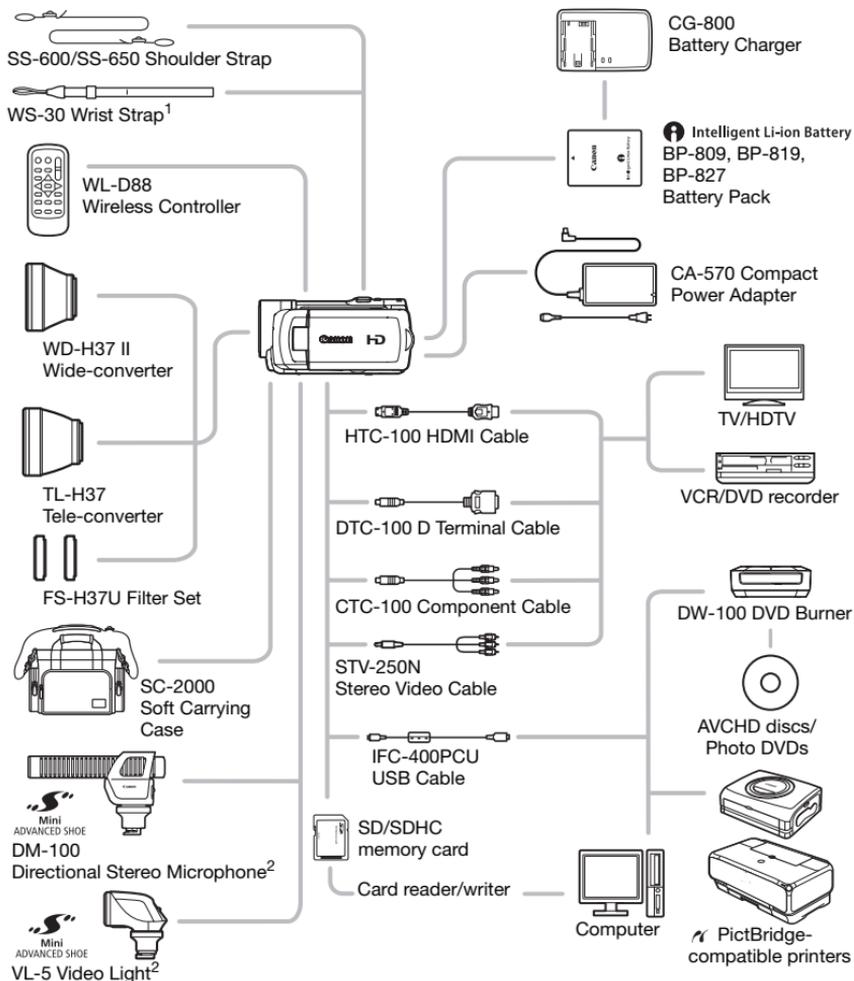

¹ This product is included with the camcorder and not sold separately.

² Accessories that are compatible with the Advanced Accessory Shoe cannot be attached to this camcorder. Look for the  logo to ensure compatibility with the mini advanced shoe.

Optional Accessories

Call or visit your local retailer/dealer for genuine Canon video accessories. You can also obtain genuine accessories for your Canon camcorder by calling: 1-800-828-4040, Canon U.S.A. Information Center.

Use of genuine Canon accessories is recommended.


This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Battery Packs

When you need extra battery packs, select one of the following models: BP-809, BP-819 or BP-827.


 Intelligent Li-ion Battery

When you use battery packs bearing the Intelligent System mark, the camcorder will communicate with the battery and display the remaining usage time (accurate to 1 minute). You can only use and charge these battery packs with camcorders and chargers compatible with Intelligent System.

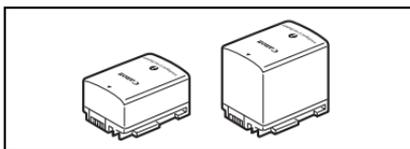

CG-800 Battery Charger

Use the battery charger to charge the battery packs. It plugs directly into a power outlet without a cable.

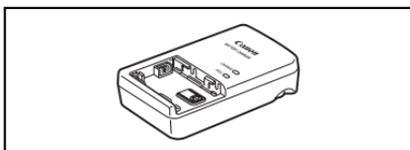

Charging Times

The charging times given in the following table are approximate and vary according to charging conditions and initial charge of the battery pack.

Battery pack→	BP-809	BP-819	BP-827
Charging conditions↓			
Using the camcorder	155 min.	275 min.	395 min.
Using the CG-800 Battery Charger	105 min.	190 min.	260 min.



Recording and Playback Times

The recording and playback times given in the following table are approximate and vary according to recording mode and charging, recording or playback conditions. The effective usage time of the battery pack may decrease when recording in cold surroundings, when using the brighter screen settings, etc.

Using a memory card

Battery pack	Recording mode→	MXP	FXP	XP+	SP	LP
	Usage time↓					
BP-809	Maximum recording time	80 min.	80 min.	90 min.	90 min.	90 min.
	Typical recording time*	50 min.	50 min.	55 min.	55 min.	55 min.
	Playback time	110 min.	110 min.	115 min.	115 min.	115 min.
BP-819	Maximum recording time	165 min.	165 min.	180 min.	180 min.	180 min.
	Typical recording time*	105 min.	105 min.	110 min.	110 min.	110 min.
	Playback time	225 min.	225 min.	230 min.	235 min.	235 min.
BP-827	Maximum recording time	255 min.	265 min.	285 min.	285 min.	285 min.
	Typical recording time*	165 min.	170 min.	180 min.	180 min.	180 min.
	Playback time	345 min.	350 min.	370 min.	370 min.	375 min.

Using the internal memory


Battery pack	Recording mode→	MXP	FXP	XP+	SP	LP
	Usage time↓					
BP-809	Maximum recording time	80 min.	80 min.	90 min.	90 min.	90 min.
	Typical recording time*	50 min.	50 min.	55 min.	55 min.	55 min.
	Playback time	110 min.	115 min.	120 min.	120 min.	120 min.
BP-819	Maximum recording time	165 min.	170 min.	180 min.	185 min.	185 min.
	Typical recording time*	105 min.	105 min.	115 min.	115 min.	115 min.
	Playback time	230 min.	235 min.	240 min.	245 min.	245 min.
BP-827	Maximum recording time	260 min.	265 min.	285 min.	285 min.	290 min.
	Typical recording time*	170 min.	170 min.	180 min.	180 min.	185 min.
	Playback time	350 min.	360 min.	380 min.	380 min.	380 min.

* Approximate times for recording with repeated operations such as start/stop, zooming, and power on/off.

TL-H37 Tele-converter

This Tele-converter lens increases the focal length of the camcorder lens by a factor of 1.5.


- The image stabilizer is not as effective when the Tele-converter is attached.
- The minimum focusing distance at full telephoto with the TL-H37 is 3 m (9.8 ft.).
- When the Tele-converter is attached, a shadow may appear in the picture when you record with flash or mini video light.

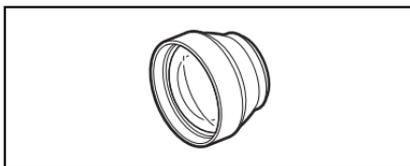

WD-H37 II Wide-converter


This lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views.

- When the Wide-converter is attached, a shadow may appear in the picture when you record with flash or mini video light.

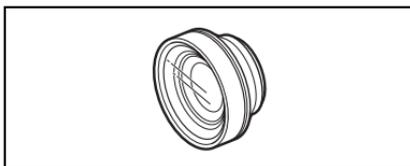


FS-H37U Filter Set

Neutral density and MC protector filters help you to control difficult lighting conditions.

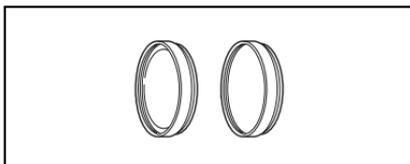


HTC-100 HDMI Cable

Use this cable to connect the camcorder to an external device using an all-digital connection, allowing you to enjoy playback at the highest quality. This cable sends both video and audio signals.

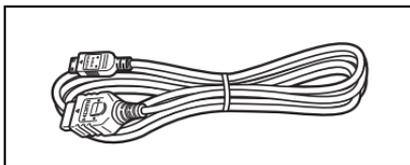

DM-100 Directional Stereo Microphone


This highly sensitive, super-directional microphone attaches to the camcorder's mini advanced shoe. It can be used as directional microphone (monaural) or stereo microphone.

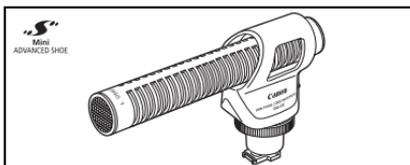




VL-5 Video Light

This video light enables you to record brightly in color even in dark places. It attaches to the camcorder's mini advanced shoe for cable-free operation.

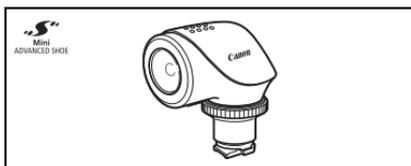

Shoulder Strap

You can attach a shoulder strap for more security and portability.

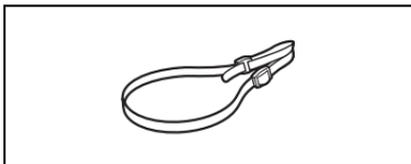

SC-2000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.



This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



Product Codes**Provided Accessories**

CA-570 Compact Power Adapter	8468A002AA
BP-809 Battery Pack	2588B003AA (silver), 2588B004AA (black)
WL-D88 Wireless Controller	D83-0770-000
CTC-100 Component Cable	1719B001AA
STV-250N Stereo Video Cable	3067A002AA (D82-0590-002)
IFC-400PCU USB Cable	9370A001AA
WS-30 Wrist Strap	D81-1530-000

Optional Accessories

BP-819 Battery Pack	2589B002AA
BP-827 Battery Pack	3185B002AA
CG-800 Battery Charger	2590B002AA
TL-H37 Tele-converter	8835A001AA
WD-H37 II Wide-converter	3187B001AA
FS-H37U Filter Set	8837A001AA
VL-5 Video Light	3186B001AA
HTC-100 HDMI Cable	2384B001AA
SS-650 Shoulder Strap	3123A001AA
SS-600 Shoulder Strap	3122A001AA
SC-2000 Soft Carrying Case	9389A001AA



Specifications

HF11

System													
Recording System	<p>Movies: AVCHD Video compression: MPEG-4 AVC/H.264, Audio compression: Dolby Digital 2ch</p> <p>Still images: DCF (Design rule for camera system), compatible with Exif¹ Ver. 2.2 and with DPOF Still image compression: JPEG (Super Fine, Fine, Normal)</p>												
Size of Video Recordings	<p>MPX and FXP modes: 1920 x 1080 pixels Other recording modes: 1440 x 1080 pixels</p>												
Size of Still Images	<p> mode: 2048 x 1536, 1920 x 1080, 1440 x 1080, 640 x 480 pixels Simultaneous recording: 1920 x 1080, 848 x 480 pixels</p>												
Television System	1080/60i ²												
Recording Media	Built-in flash memory, 32 GB; SD or SDHC (SD High Capacity) memory card (not included)												
Maximum Recording Time (approximate figures)	<p>Built-in memory: <table border="0"> <tr> <td>MPX mode: 2 hr. 55 min.</td> <td>FXP mode: 4 hr. 10 min.</td> </tr> <tr> <td>XP+ mode: 5 hr. 45 min.</td> <td>SP mode: 9 hr. 35 min.</td> </tr> <tr> <td>LP mode: 12 hr. 15 min.</td> <td></td> </tr> </table> </p> <p>4 GB memory card: <table border="0"> <tr> <td>MPX mode: 20 min.</td> <td>FXP mode: 30 min.</td> </tr> <tr> <td>XP+ mode: 40 min.</td> <td>SP mode: 1 hr. 10 min.</td> </tr> <tr> <td>LP mode: 1 hr. 30 min.</td> <td></td> </tr> </table> </p>	MPX mode: 2 hr. 55 min.	FXP mode: 4 hr. 10 min.	XP+ mode: 5 hr. 45 min.	SP mode: 9 hr. 35 min.	LP mode: 12 hr. 15 min.		MPX mode: 20 min.	FXP mode: 30 min.	XP+ mode: 40 min.	SP mode: 1 hr. 10 min.	LP mode: 1 hr. 30 min.	
MPX mode: 2 hr. 55 min.	FXP mode: 4 hr. 10 min.												
XP+ mode: 5 hr. 45 min.	SP mode: 9 hr. 35 min.												
LP mode: 12 hr. 15 min.													
MPX mode: 20 min.	FXP mode: 30 min.												
XP+ mode: 40 min.	SP mode: 1 hr. 10 min.												
LP mode: 1 hr. 30 min.													
Image Sensor	<p>1/3.2-inch CMOS, approx. 3,310,000 pixels Effective pixels: <table border="0"> <tr> <td>Movies:</td> <td>approx. 2,070,000</td> </tr> <tr> <td>Still images (LW):</td> <td>approx. 2,070,000</td> </tr> <tr> <td>Still images (L, M, S):</td> <td>approx. 2,760,000</td> </tr> </table> </p>	Movies:	approx. 2,070,000	Still images (LW):	approx. 2,070,000	Still images (L, M, S):	approx. 2,760,000						
Movies:	approx. 2,070,000												
Still images (LW):	approx. 2,070,000												
Still images (L, M, S):	approx. 2,760,000												
LCD Screen	2.7 in., wide, TFT color, approx. 211,000 dots												
Microphone	Stereo electret condenser microphone												
Lens	<p>f=4.8-57.6 mm, F/1.8-3.0, 12x optical zoom 35 mm equivalent: <table border="0"> <tr> <td>Movies:</td> <td>42.9-514.8 mm</td> </tr> <tr> <td>Still images (LW):</td> <td>42.9-514.8 mm</td> </tr> <tr> <td>Still images (L, M, S):</td> <td>39.3-471.6 mm</td> </tr> </table> </p>	Movies:	42.9-514.8 mm	Still images (LW):	42.9-514.8 mm	Still images (L, M, S):	39.3-471.6 mm						
Movies:	42.9-514.8 mm												
Still images (LW):	42.9-514.8 mm												
Still images (L, M, S):	39.3-471.6 mm												
Lens Configuration	11 elements in 9 groups (2 aspheric elements)												
Filter Diameter	37 mm												
AF System	Autofocus (TTL + external distance sensor when set to [INSTANT AF]); Manual focus available												
Minimum Focusing Distance	1 m (3.3 ft); 1 cm (0.39 in.) at full wide angle												
White Balance	Auto white balance, custom white balance and preset white balance settings: DAYLIGHT, SHADE, CLOUDY, TUNGSTEN, FLUORESCENT, FLUORESCENT H												
Minimum Illumination	0.2 lx ([NIGHT] recording program, Shutter speed at 1/2) 3 lx ([PROGRAM AE], Auto slow shutter [ON], Shutter speed at 1/30)												
Recommended Illumination	More than 100 lx												
Image Stabilization	Optical-Shift Image Stabilizer												

¹ This camcorder supports Exif 2.2 (also called "Exif Print"). Exif Print is a standard for enhancing the communication between camcorders and printers. By connecting to an Exif Print-compliant printer, the camcorder's image data at the time of shooting is used and optimized, yielding extremely high quality prints.

² Recordings made with the [PF24], [PF30] frame rate are converted and recorded on the memory as 60i.

Terminals

AV OUT/Ⓞ Terminal	<p>∅ 3.5 mm minijack; Output only (dual purpose terminal also for headphones stereo output)</p> <p>Video: 1 V_{p-p} / 75 ohms unbalanced</p> <p>Audio: -10 dBV (47 kohm load) / 3 kohm or less</p>
USB Terminal	mini-B, USB 2.0 (Hi-Speed USB)
COMPONENT OUT Terminal (Proprietary mini-D terminal)	<p>Luminance (Y): 1 V_{p-p} / 75 ohms</p> <p>Chrominance (P_B/P_R (C_B/C_R)): ±350 mV</p> <p>1080i (D3) / 480i (D1) compatible</p>
HDMI OUT Terminal	Mini Connector; Output only
MIC Terminal	<p>∅ 3.5 mm stereo minijack</p> <p>-57 dBV (with 600 ohm microphone) / 5 kohms or more</p>

Power/Others

Power supply (rated)	7.4 V DC (battery pack), 8.4 V DC (compact power adapter)
Power consumption (SP mode, AF on)	<p>3.9 W (LCD screen, normal brightness, recording in the built-in memory)</p> <p>4.0 W (LCD screen, normal brightness, recording on a memory card)</p>
Operating temperature	0 - 40 °C (32 - 104 °F)
Dimensions (W x H x D)	73 x 64 x 129 mm (2.9 x 2.5 x 5.1 in.) excluding the grip belt
Weight (camcorder body only)	380 g (13.4 oz.)

CA-570 Compact Power Adapter

Power supply	100 - 240 V AC, 50/60 Hz
Rated output / consumption	8.4 V DC, 1.5 A / 29 VA (100 V) - 39 VA (240 V)
Operating temperature	0 - 40 °C (32 - 104 °F)
Dimensions	52 x 29 x 90 mm (2.1 x 1.1 x 3.5 in.)
Weight	135 g (4.8 oz.)



BP-809 Battery Pack

Battery type	Rechargeable lithium ion battery, compatible with Intelligent System
Rated voltage	7.4 V DC
Operating temperature	0 – 40 °C (32 – 104 °F)
Battery capacity	890 mAh
Dimensions	30.7 x 27.5 x 40.2 mm (1.2 x 1.1 x 1.6 in.)
Weight	47 g (1.7 oz)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

Index

24F progressive frame rate 19, 94
 24p Cinema Mode 45

A

Abroad, using the camcorder 116
 AEB - Auto exposure bracketing 68
 AF-assist lamp 67
 Aperture (f number) 47
 Aspect ratio of a connected TV
 (TV type) 98
 Audio recording level 55
 Auto slow shutter 93
 Autofocus (AF)
 AF frame
 (9-point AiAF/Center point) 94
 Instant AF/Normal AF 93
 Av (recording program) 47
 AV OUT/ Ω terminal 57, 79
 AVCHD specifications 6

B

Backlight correction 50
 Battery pack
 Battery information 19
 Charging 20
 Remaining charge indicator 19
 Beach (recording program) 46
 Beep 98
 Built-in backup battery 114

C

Calendar display 41
 Cine Mode (recording program) 45
 COMPONENT OUT terminal 80
 Condensation 116
 Connections to external devices 80
 Continuous shooting 68

Copying

Movies 60
 Still images 71

D

Data code 55, 96
 Date and time 29
 Date format 99
 Daylight saving time 30
 Time zone 30
 Deleting/Erasing
 Movies 38, 43, 59
 Still images 64, 66
 Digital effects 54
 Direct print 73
 Direct transfer 87
 Drive mode 68
 DVD authoring 83

E

EASY mode 25
 Error messages 104
 Exposure 50

F

Fireworks (recording program) 46
 Flash 67
 Focus
 Assist functions 51, 94
 Focus priority 94
 Manual 51, 94
 Frame rate 45, 94
 FUNC. menu 28, 91

H

HDMI OUT terminal 80, 82
 Headphones 57



I		
Image effects	..53	
Image stabilizer	..94	
Index screen	..39, 65	
Initializing the memory	..33	
J		
Joystick	..27	
Joystick guide	..27	
L		
Language	..30	
LCD screen	..24	
Light metering mode	..69	
M		
Magnifying a still image	..66	
Maintenance	..115	
Manual exposure adjustment	..50	
Markers	..96	
Memory card	..113	
MIC terminal	..58	
Microphone	..57	
Microphone attenuator	..55	
Mini advanced shoe	..58	
Mini video light	..48	
N		
Night (recording program)	..46	
O		
Onscreen display selection	..55	
Original recordings	..59	
P		
P (recording program)	..47	
Playback		
Movies	..39	
Still images	..64	
Playlist	..59	
Portrait (recording program)	..46	
Power save	..35	
Print order	..77	
Print/share button	..74, 88	
Printing still images	..73	
Protecting still images	..71	
Q		
Quick Start function	..37	
R		
Recording		
Movies	..35	
Still images	..62	
Recording mode	..36	
Recording programs	..45, 47	
Recording time	..36	
Remote sensor	..22	
RESET	..102	
Reviewing		
Movies (Record review)	..38	
Still images (Review)	..94	
S		
Screen icons	..17	
SD/SDHC memory card	..31	
Searching scenes by date	..41	
Selecting the memory		
for playback	..39, 65	
for recording	..33	
Self timer	..49	
Serial number	..15	
Setup menus	..28, 93	
Shutter speed	..47	
Simultaneous recording	..69	
Slideshow	..65	
Snow (recording program)	..46	
Special Scene		
(recording programs)	..45	
Sports (recording program)	..46	
Spotlight (recording program)	..46	
Still image numbers	..98	
Still image quality	..62	

Still image size 62
 Sunset (recording program) 46

T

Telephoto 37
 Timeline 42
 Transfer order 90
 Transferring to a computer
 Movies 83
 Still images 87
 Troubleshooting 100
 Tv (recording program) 47

U

USB terminal 79

V

Volume 41, 98

W

White balance 51
 Wide angle 37
 Wind screen 95
 Wireless controller 22

Z

Zoom 37
 Digital zoom 93
 Zoom speed 37, 93

Trademark Acknowledgements

- The SD logo is a trademark. The SDHC logo is a trademark.
- Microsoft, Windows and Windows Vista are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- "AVCHD" and the "AVCHD" logo are trademarks of Matsushita Electric Industrial Co., Ltd. and Sony Corporation.
- Manufactured under license from Dolby Laboratories.
 "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.
- This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and non-commercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant video. No license is granted or implied for any other use for MPEG-4 standard.



U.S.A.

CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY FOR THE UNITED STATES

The limited warranty set forth below is given by Canon U.S.A., Inc. ("Canon USA") with respect to Canon Consumer Digital Video Equipment (the "Equipment") purchased in the United States. This limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase.

The Equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or comparable rebuilt parts for a period of ONE YEAR from the date of original purchase, except for a defective Video Head, which will be exchanged for a period of three months from the date of purchase.

Labor: For a period of ONE YEAR from the date of original purchase, labor will be provided free of charge by our factory service centers or designated service facilities located in the United States.

When returning Equipment under this warranty, you must pre-pay the shipping charges, and you must enclose the Bill of Sale or other proof of purchase with a complete explanation of the problem. During the ONE-YEAR warranty period, repairs will be made and the Equipment will be return-shipped to you free of charge. For repairs after the warranty period is over, you will be given an estimate of the cost of repair and an opportunity to approve or disapprove of the repair expense before it is incurred. If you approve, repairs will be made and the Equipment will be return-shipped to you. (shipping charges apply). If you disapprove, we will return-ship the equipment at no charge to you.

Non-Canon brand peripheral equipment and software which may be distributed with, or factory loaded on, the Equipment, are sold "AS IS" without warranty of any kind by Canon USA, including any implied warranty regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such non-Canon brand items is given by the manufacturer or producer thereof. If the Equipment contains a hard disk drive, Canon USA recommends that data stored on that drive be duplicated or backed up to prevent its loss in the event of failure or other malfunction of such drive.

Canon USA shall have no responsibility under this limited warranty for use of the Equipment in conjunction with incompatible peripheral equipment and incompatible software.

In order to obtain warranty service, contact the authorized Canon retail dealer from whom you purchased the Equipment or call the CANON INFORMATION CENTER AT 1-800-OK-CANON). You will be directed to the nearest service facility for your Equipment.

This Limited Warranty covers all defects encountered in normal use of the Equipment and does not apply in the following cases:

- A) Loss or damage to the Equipment due to abuse, mishandling, accident, improper maintenance, or failure to follow operating instructions;
- B) If the Equipment is defective as a result of leaking batteries, sand, dirt or water damage;
- C) If defects or damages are caused by the use of unauthorized parts or by service other than by Canon USA's factory service centers or authorized service facilities;
- D) If the Equipment is used for commercial or industrial use.

This Limited Warranty does not cover cabinet (exterior finish), video cassette tape, head cleanings, nor does it apply to Equipment purchased outside the United States. This warranty does not cover units sold to rental firms, military operations, hotels, schools, hospitals or for other commercial, industrial, or institutional applications. These uses are covered only by such specific warranty as Canon may issue with such sales.

This Limited Warranty does not apply to accessories or consumables for the Equipment, which are sold "AS IS", without warranty of any kind by Canon USA.

Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card is most important in order to be sure you are contacted right away should there be a safety inspection, modification or product recall under applicable laws or regulations.

NO IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE APPLIES TO THIS EQUIPMENT AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS EQUIPMENT SHALL BIND THE UNDERSIGNED (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU). CANON USA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, INCLUDING WITHOUT LIMITATION, LOSS OR CORRUPTION OF DATA STORED ON THE EQUIPMENT'S HARD DRIVE, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE EQUIPMENT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON USA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON USA BE GREATER THAN THE PURCHASE PRICE OF THE EQUIPMENT SOLD BY CANON USA AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE THE EQUIPMENT NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CANON USA. (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU). THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS EQUIPMENT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. CANON U.S.A., INC.

CANADA

CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY

The limited warranty set forth below is given by Canon Canada Inc. ("Canon Canada") with respect to Canon Consumer Digital Video Equipment (the "Equipment") purchased in Canada. This limited warranty is only effective upon presentation of a bill of sale or other proof of purchase for this Equipment to a Canon Service Facility when repairs are required.

The Equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or, at Canon Canada's option, comparable rebuilt parts for a period of one year from the date of original purchase, except Video Heads which will be exchanged for a period of 3 months from the date of purchase.

Labour: For a period of one year from the date of original purchase, labour will be provided free of charge by our Canon Service Facilities in Canada. This limited warranty covers all defects except where:

(a) The loss or damage to the product results from:

- i) accident, natural disaster, mishandling, abuse, neglect, unauthorized product modification or failure to follow instructions contained in the instruction manual;
- ii) the use of accessories, attachments, products, supplies, parts or devices with the Equipment that do not conform to Canon specifications or that cause abnormally frequent service problems;
- iii) repairs or services performed by any party other than a Canon Service Facility;
- iv) defective batteries or any exposure to water, sand or dirt;
- v) shipping (claim must be presented to the shipper);

(b) Any serial number on the video equipment is altered or removed.

(c) The Equipment is used for commercial, professional or industrial purposes.

This limited warranty does not cover the cabinet (exterior finish) of the Equipment, media, nor does it apply to Equipment purchased outside Canada. If the Equipment contains a hard disk drive, Canon Canada recommends that data stored on that drive be duplicated or backed up to prevent its loss in the event of a failure or other malfunction of such drive.

TO OBTAIN WARRANTY SERVICE

Ship your Equipment in its original carton, box or equivalent, properly packed, fully insured with shipping charges prepaid, together with a copy of your bill of sale or other proof of purchase and a description of the problem to any of the Canon Service Facilities in Canada.

LIMITATIONS

Except as otherwise required by applicable legislation, this warranty is in lieu of all other warranties, conditions, guarantees or representations, express or implied, statutory or otherwise, relative to the Equipment, including implied warranties or conditions of merchantability or fitness for a particular purpose.

Canon Canada assumes no liability for special, consequential or incidental damages, loss or corruption of data including, without limitation, data stored on the hard disk drive of the Equipment or loss that may arise, whether on account of negligence or otherwise, from the use, misuse or inability to use the Equipment (including loss of profit, revenue, media or enjoyment) or from failure to conform to any express or implied warranties, conditions, guarantees or representations. Any recovery under this limited warranty shall not exceed the purchase price of the equipment. Canon Canada does not assume or authorize any other person to assume for Canon Canada any other liability with respect to this equipment.

This warranty does not extend to any person other than the original purchaser of the Equipment or the person for whom it was purchased as a gift and states your exclusive remedy.

NOTICE TO CONSUMER

If you plan to take important videos or if the product has not been used for some time, please check all functions with the instruction book before using it.

Canon



DIM-883

U.S.A.

CANON U.S.A., INC. NEW JERSEY OFFICE

100 Jamesburg Road, Jamesburg, NJ 08831 USA

CANON U.S.A., INC. CHICAGO OFFICE

100 Park Blvd., Itasca, IL 60143 USA

CANON U.S.A., INC. LOS ANGELES OFFICE

15955 Alton Parkway, Irvine, CA 92618 USA

CANON U.S.A., INC. HONOLULU OFFICE

210 Ward Avenue, Suite 200, Honolulu, HI 96814 USA

- ❖ If you have any questions, call the Canon U.S.A. Information Center toll-free at 1-800-828-4040 (U.S.A. only).

CANADA

CANON CANADA INC. NATIONAL HEADQUARTERS

6390 Dixie Road, Mississauga, Ontario L5T 1P7

CANON CANADA INC. CALGARY

2828 16th Street NE, Calgary, Alberta T2E 7K7

CANON CANADA INC. MONTREAL

8801 Route Transcanadienne, Saint-Laurent, Quebec H4S 1Z6

- ❖ If you have any questions, call the Canon Canada Information Center toll free (in Canada only) at 1-800-OK-CANON (1-800-652-2666).
- ❖ Si vous avez des questions, veuillez téléphoner 1-800-OK-CANON (1-800-652-2666, sans frais au Canada seulement).

MEXICO

CANON MEXICANA, S DE RL DE CV

Blvd. Manuel Ávila Camacho No. 138, Piso 17

Col. Lomas de Chapultepec

C.P. 11000 México, D.F. México

CANON U.S.A., INC. NEW JERSEY OFFICE

100 Jamesburg Road, Jamesburg, NJ 08831 USA

CENTRO Y SURAMÉRICA

CANON LATIN AMERICA, INC.

703 Waterford Way, Suite 400, Miami, FL 33126 USA

ASIA

CANON HONGKONG COMPANY LTD.

19/F, The Metropolis Tower, 10 Metropolis Drive,
Hunghom, Kowloon, Hong Kong

For support concerning PIXELA ImageMixer 3 SE, please call PIXELA customer support (details in the **PIXELA ImageMixer 3 SE Installation Guide**).

Pour toute assistance concernant PIXELA ImageMixer 3 SE, veuillez contacter le service clientèle de PIXELA (reportez-vous au **Guide d'installation PIXELA ImageMixer 3 SE** pour les détails).

Para solicitar ayuda con respecto a PIXELA ImageMixer 3 SE, llame al centro de atención al cliente PIXELA (detalles en la **Guía de instalación PIXELA ImageMixer 3 SE**).