Canon

Color
imageCLASS
LBP7110Cw

Wireless Setup Manual

Before you begin the wireless setup process, please choose the installation method.

1) To setup your printer using drivers from the web *continue to page 2*
2) To setup your printer using the included User Software CD *continue to page 32*

To download the Color imageCLASS LBP7110Cw driver and Network Setup Tool

Before the wireless setup can begin the LBP7110Cw Driver/Network Setup Tool must be downloaded, follow the steps below to download the Driver/Network Setup Tool from the Canon USA website.

1) To download the imageCLASS LBP7110Cw printer driver, go to **usa.canon.com/support**.
2) Select the [**Consumer & Home Office**] tab, and then select [**Service & Support**].

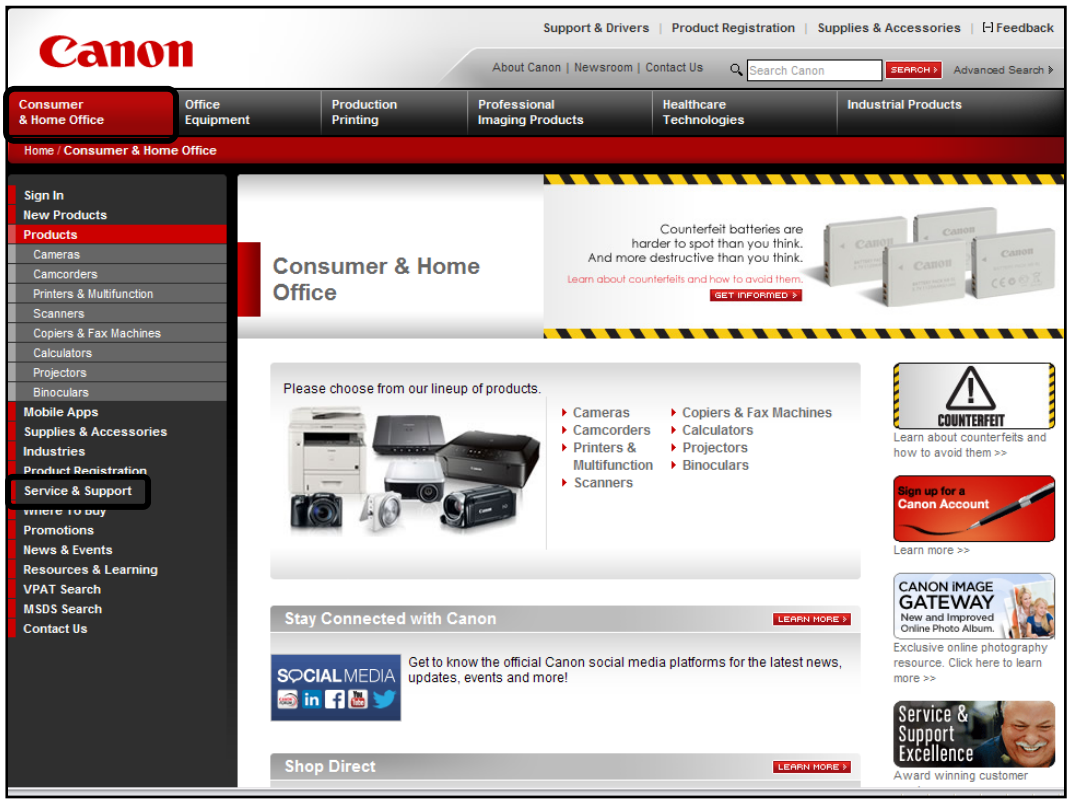

3) Enter **LBP7110** into the **search box**, and then select it from the list that appears.

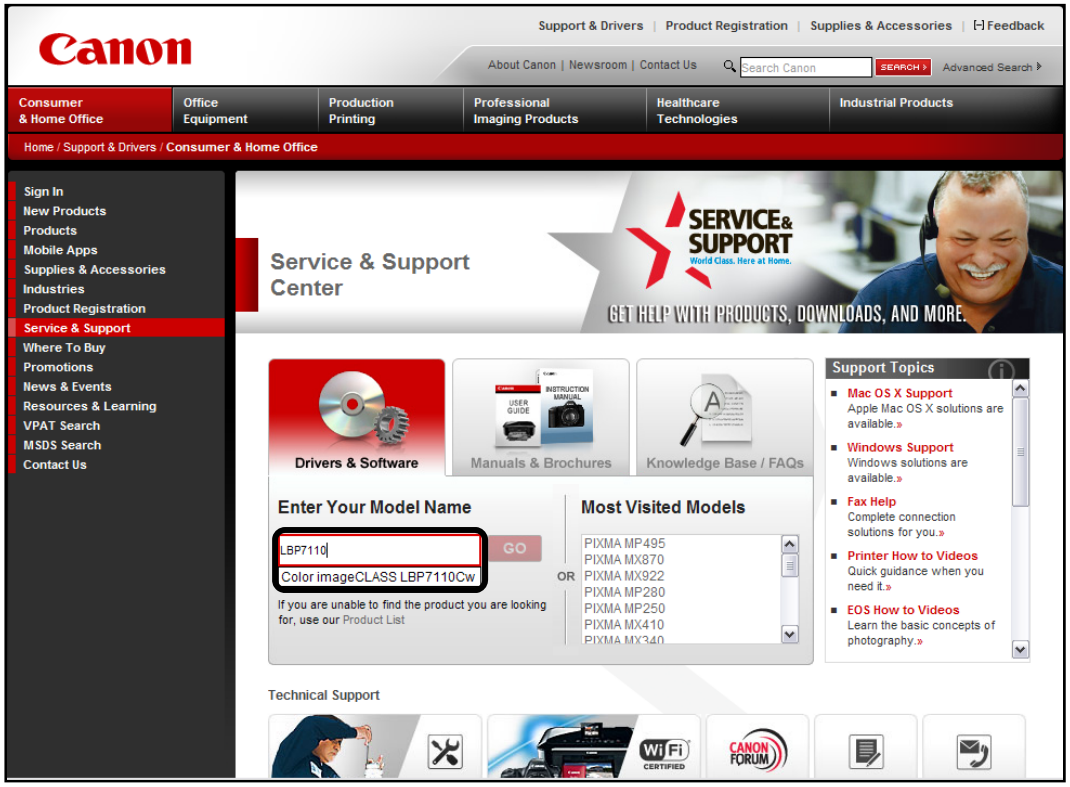

4) Click [**GO**].

5) Click [**Drivers & Software**], and then select [**Drivers**].

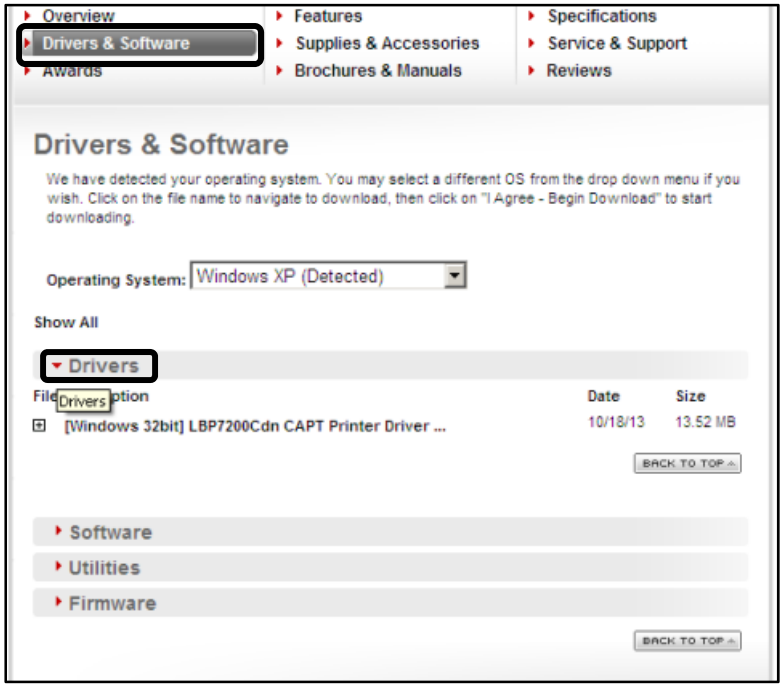

If your operating system is not automatically detected, select the operating system you are using from the Operating System drop-down list.

6) Select the most recent driver, according to date and then click [**I Agree – Begin Download**].

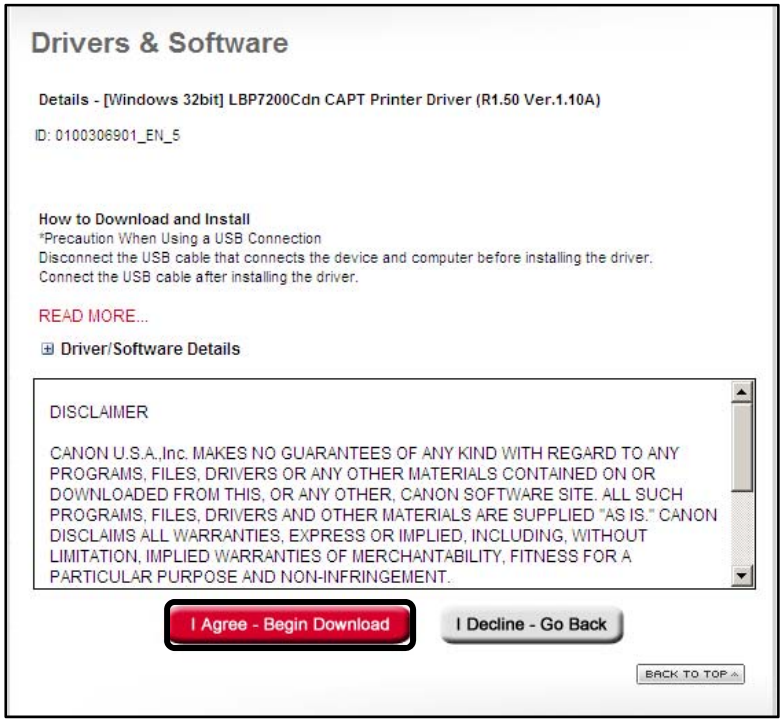

7) Save the driver to your **desktop** so you can easily access the driver.

To install the Color imageCLASS LBP7110Cw driver and setup your LBP7110Cw Wirelessly

To setup the LBP7110Cw wirelessly, you must install the printer driver first.

1) **Double-click** the newly downloaded **LBP7110Cw Driver** on your desktop.

2) **Open** the LBP7110Cw **Driver** folder.

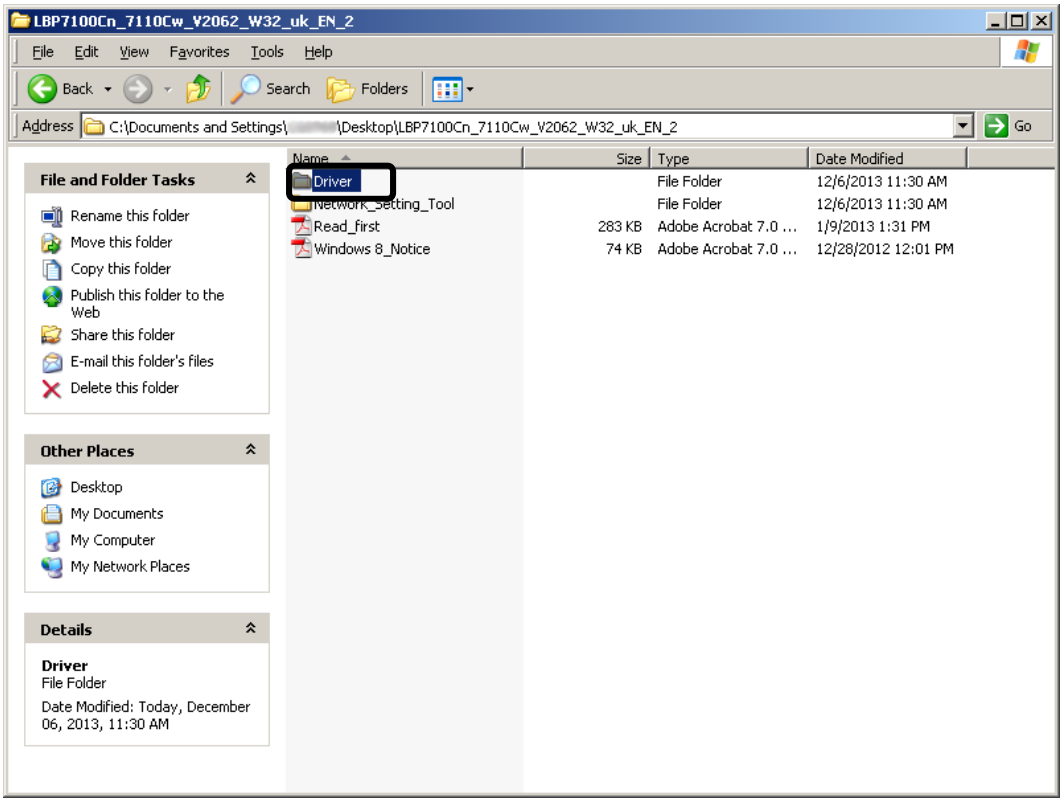

3) Double-click the **Setup** icon.

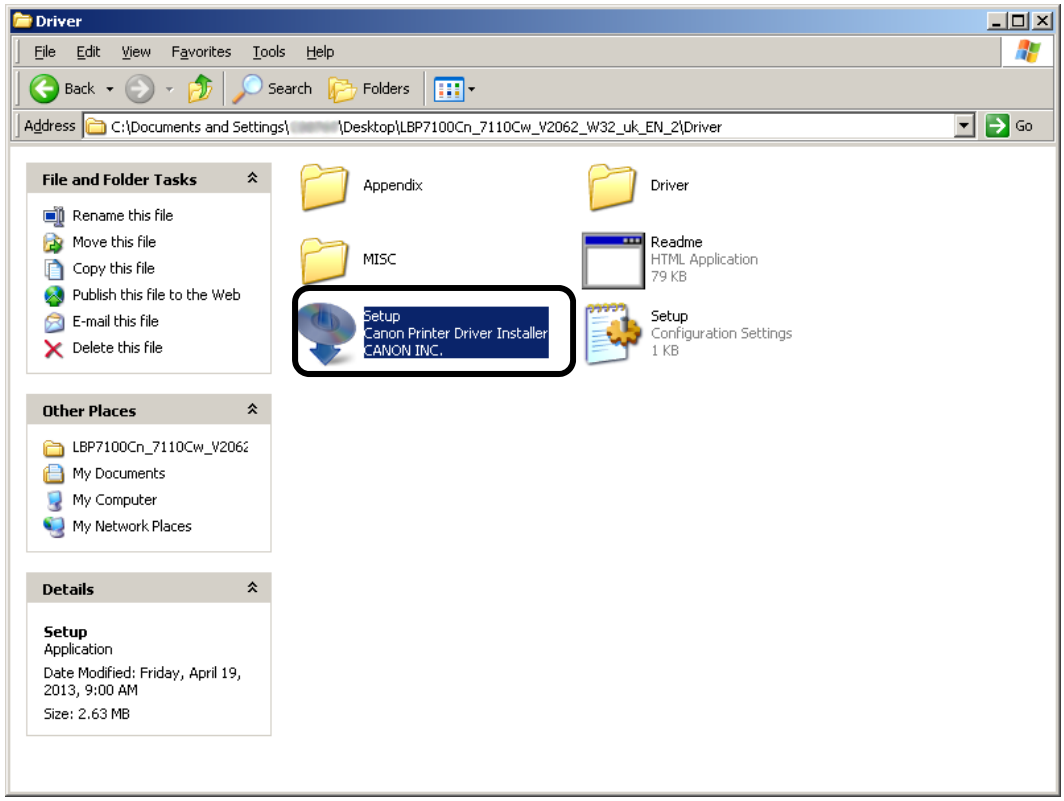

4) When the Print Driver Setup Wizard launches, click [**Next**].

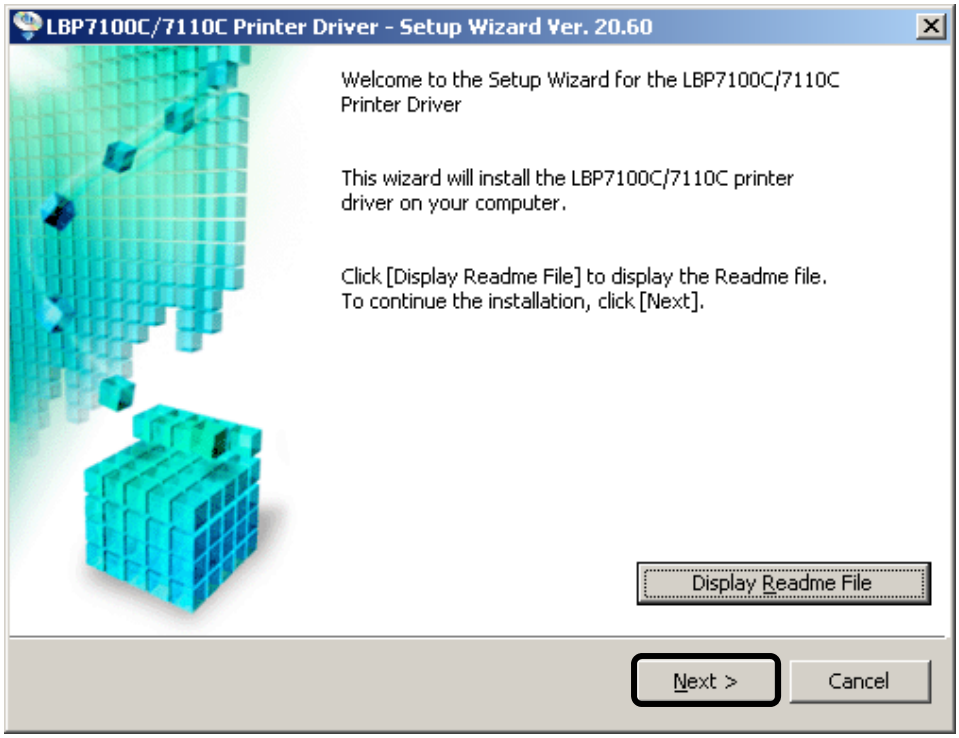

5) Click [**Yes**] to accept the terms of the License Agreement.

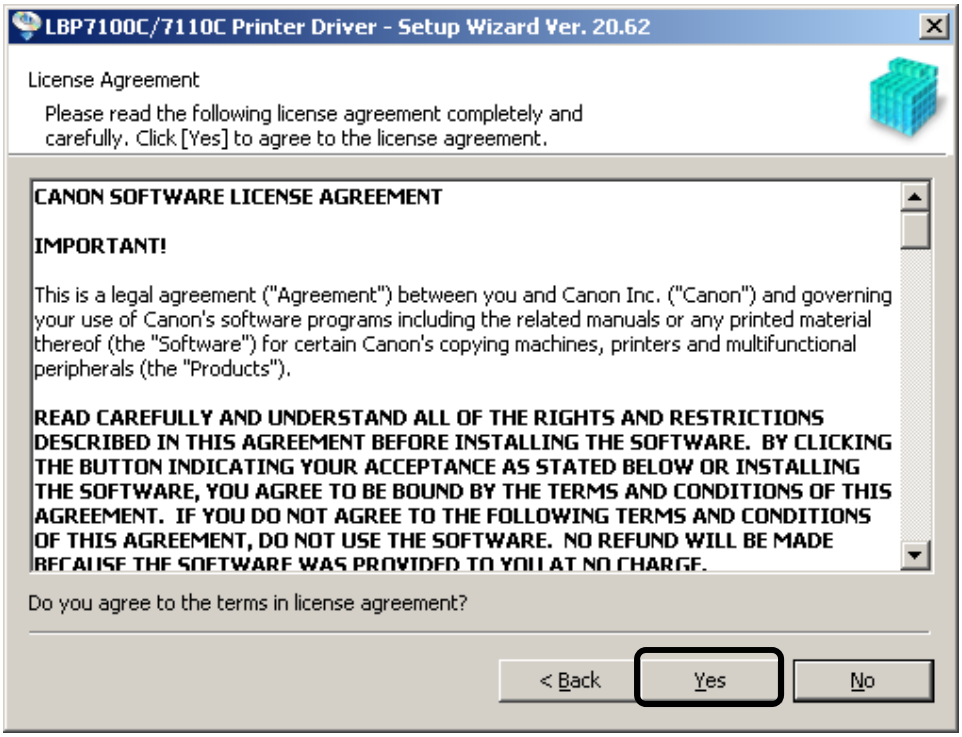

6) Select the [**Install with USB Connection**] radio button, and then click **[Next]**.

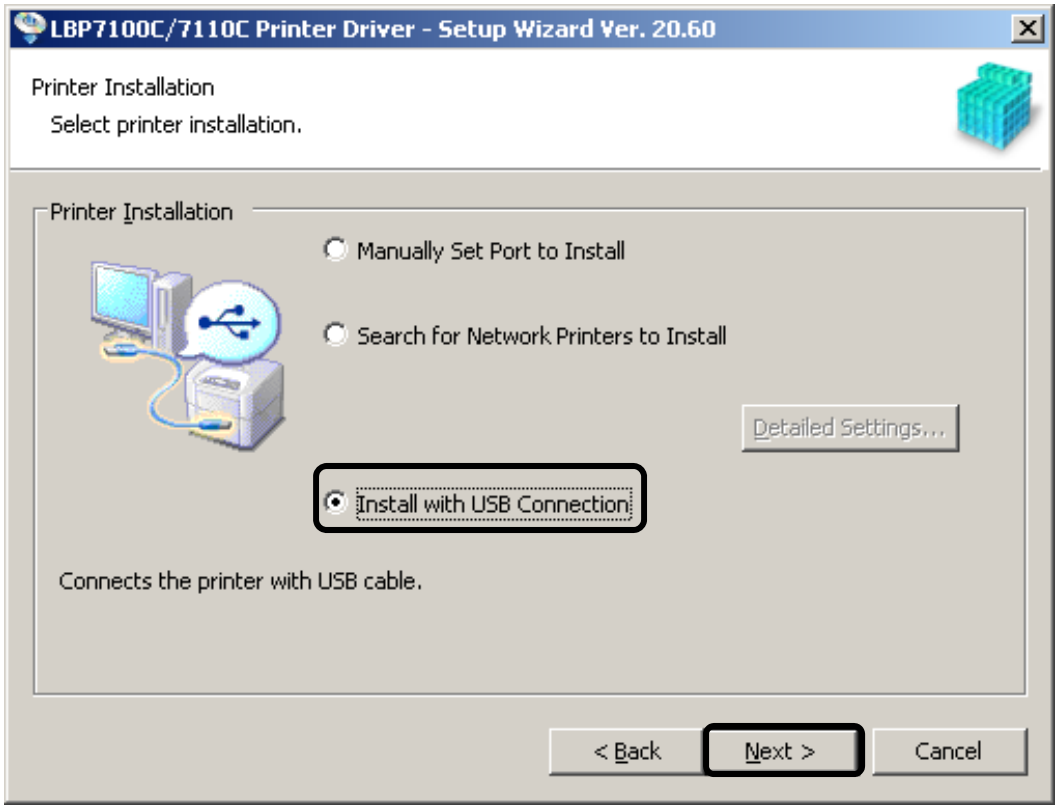

7) Click **[Yes]**.

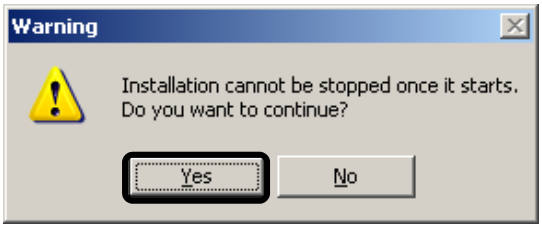

8) When the screen below appears, **make sure that the printer is ON** and the **USB cable is connected to the computer and printer**.

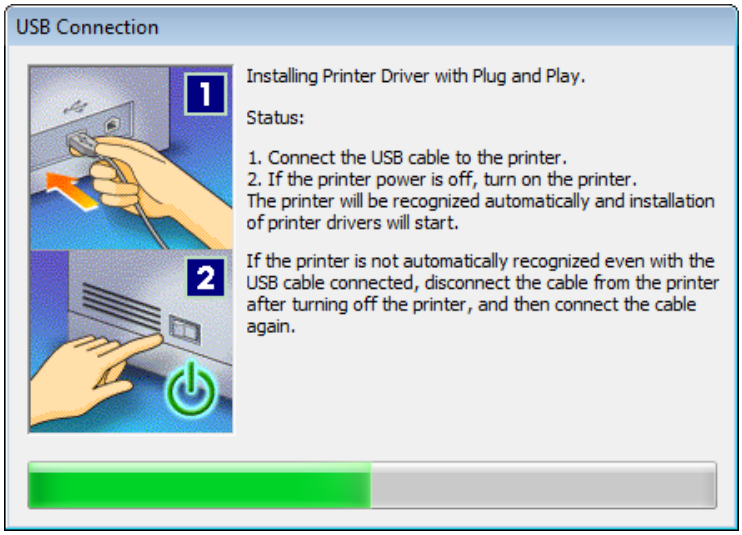

9) If you see this message, follow the on screen instructions, then click [**Retry].**

*If the message reappears, **try a different USB port** on the computer.

10) When the message below appears, the driver installation is complete. Click [**Exit].**

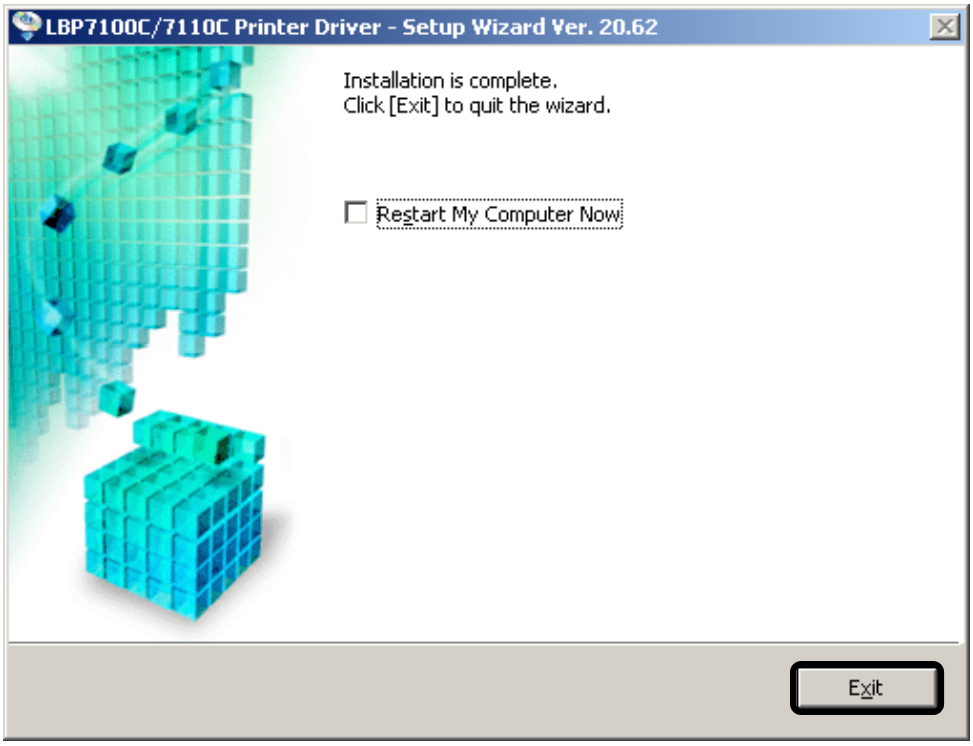

Follow the procedure below to set up your printer wirelessly.

1) **Double-click** the LBP7110Cw Driver on your desktop.

2) Open the [**Network_Setting_Tool**] folder.

3) Depending on your OS you will either see a 32-bit or 64-bit folder. Open the appropriate folder for your operating system, and then double-click the [**Canon MF/LBP Network Setup Tool]** icon.

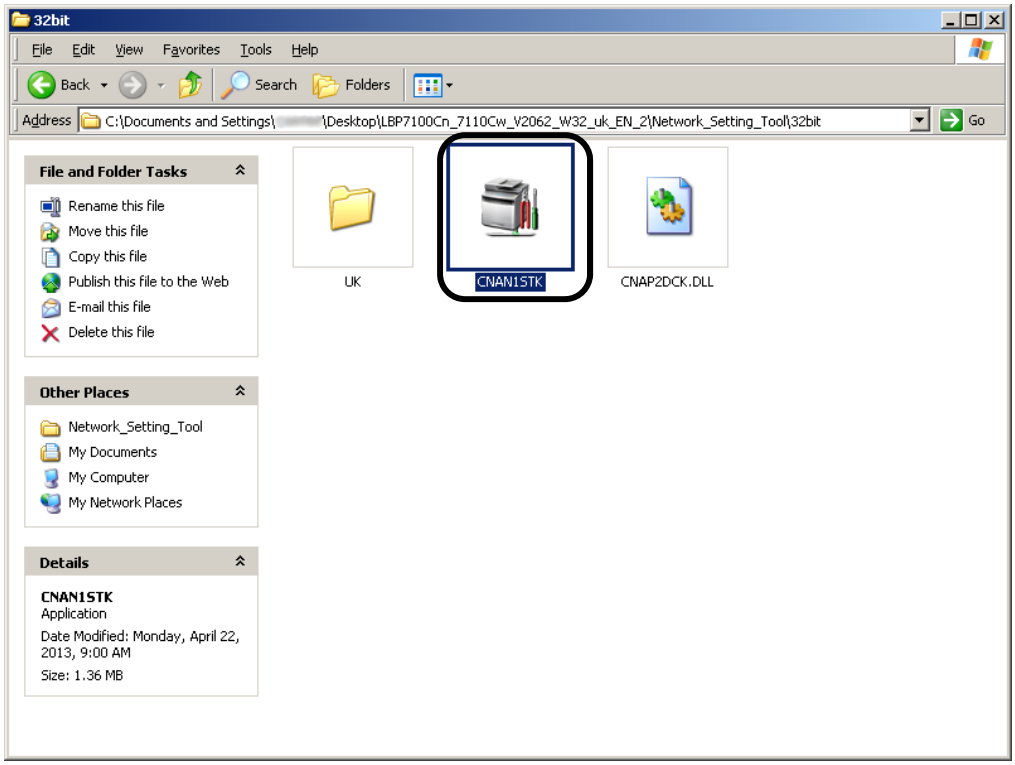

4) If the User Account Control dialog box appears, click [**YES] or [CONTINUE].**

5) Select the [**Wireless LAN Connection]** radio button, and then click [**NEXT].**

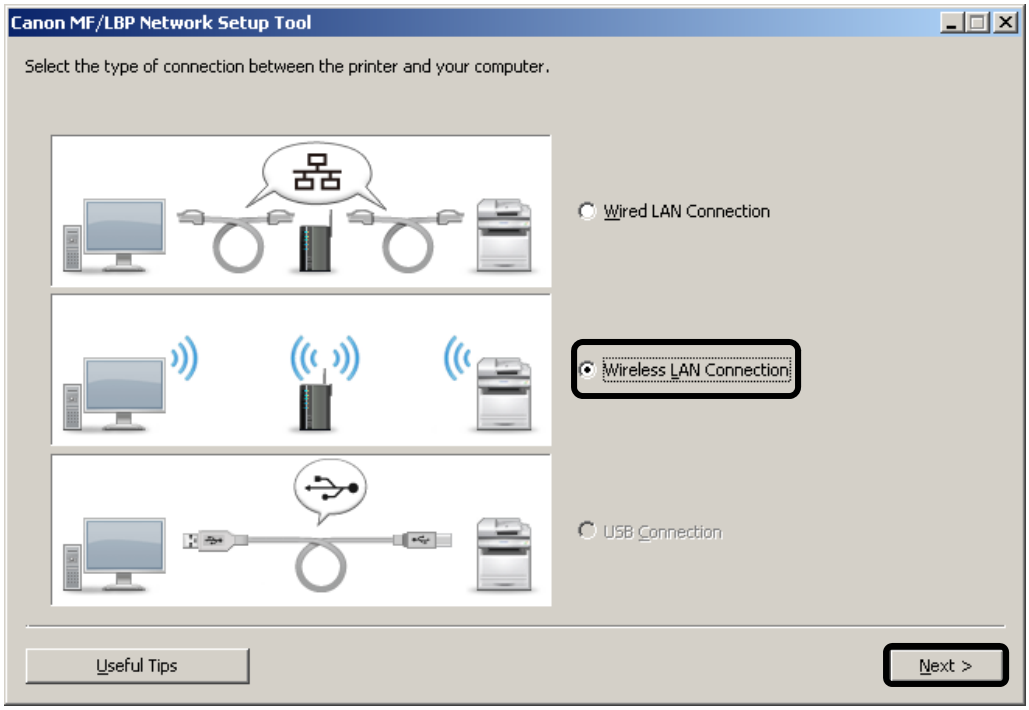

6) Select the [**Yes, I want to configure network settings]** radio button, and then click [**Next].**

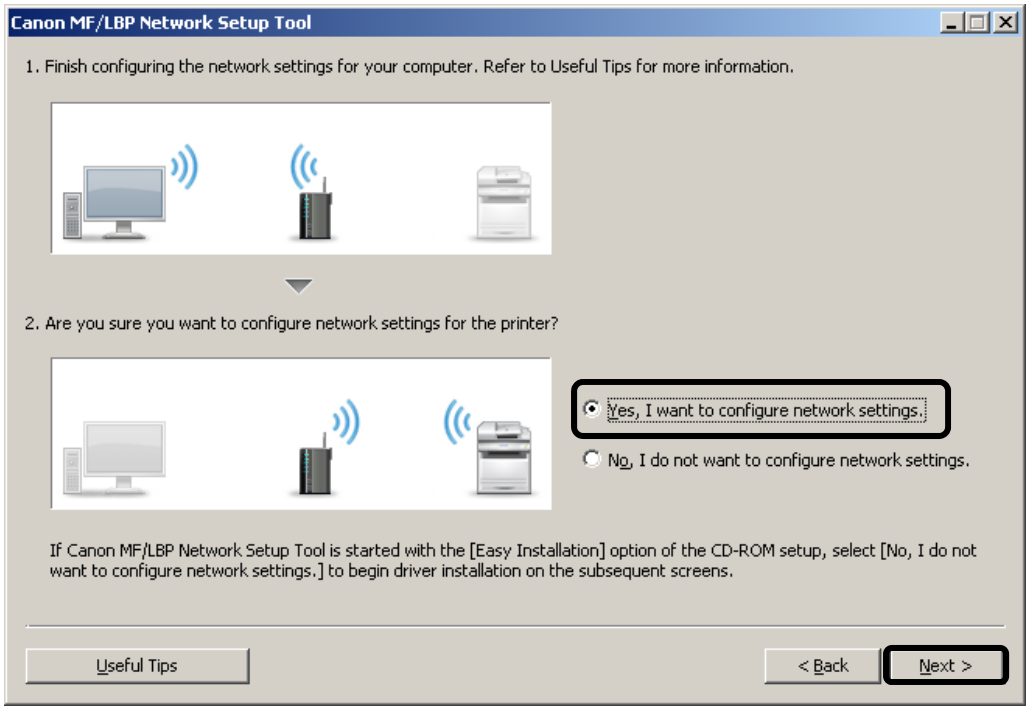

7) Select the [**Easy Setup]** radio button, and then click **[Next]**.

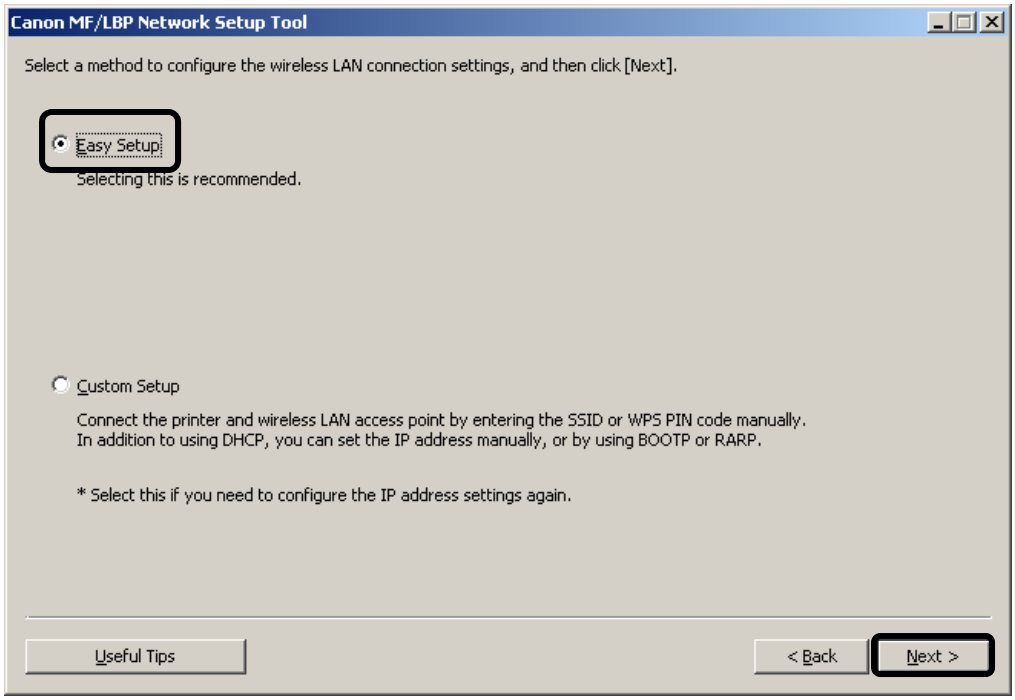

8) Check to see if your wireless router has a WPS button, and select the appropriate radio button, as shown in the screen below.

If you are not sure which connection method to use, click [**Useful Tips]** first or select **My wireless LAN access point does not have a WPS button or I cannot find the button.**

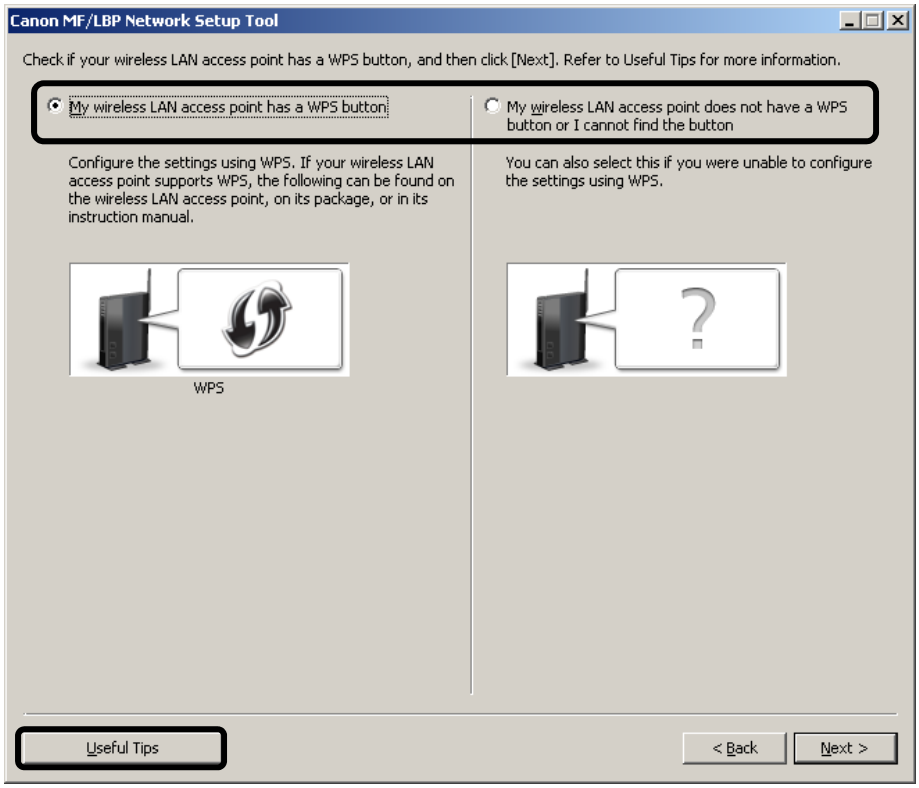

WPS Router Instructions

1) If your router has a WPS button, select **[My wireless LAN access point has a WPS button]**, and then click **[Next]**.

   If your router does not have a WPS button, follow the instructions on "Non-WPS Supporting Router Instructions," on p. 19.

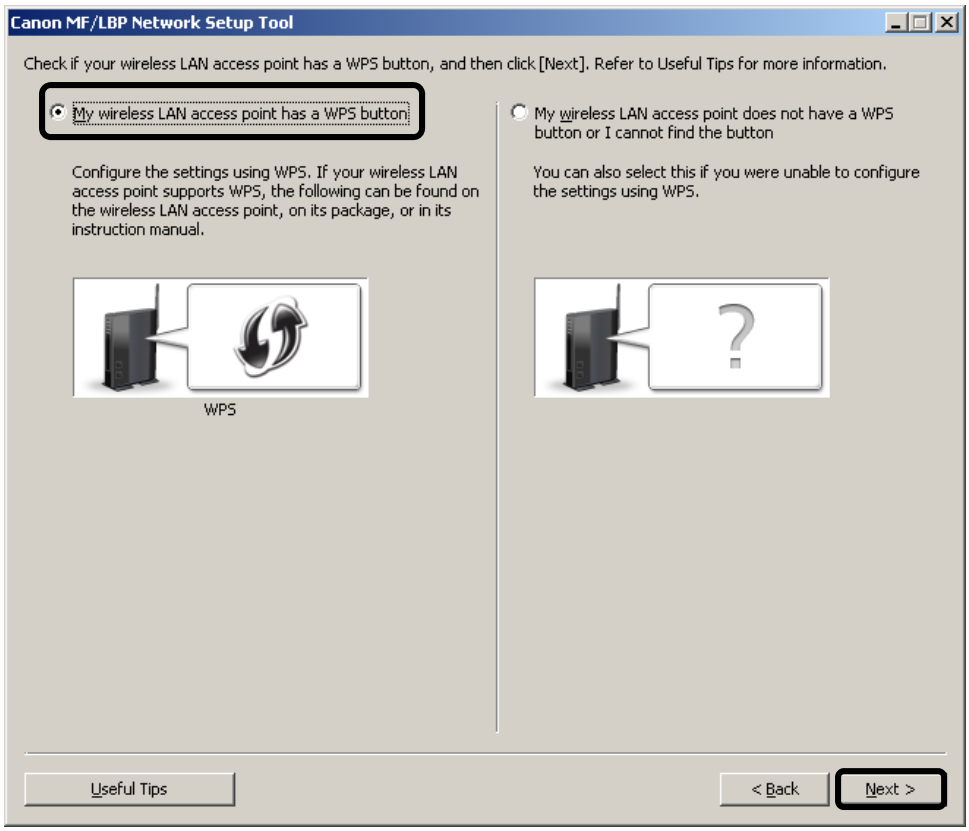

2) Follow the instructions on the screen, as shown below, and then click **[Next].**

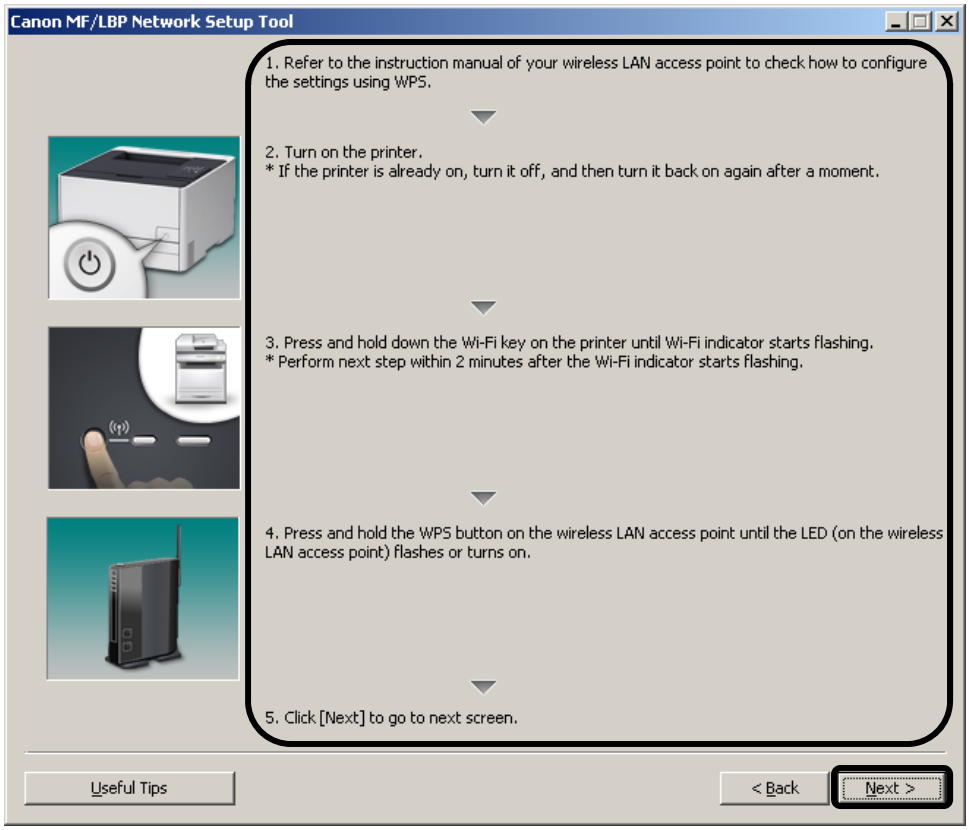

3) When the Wi-Fi indicator turns **solid blue**, the printer is connected wirelessly. Click **[Next]**.

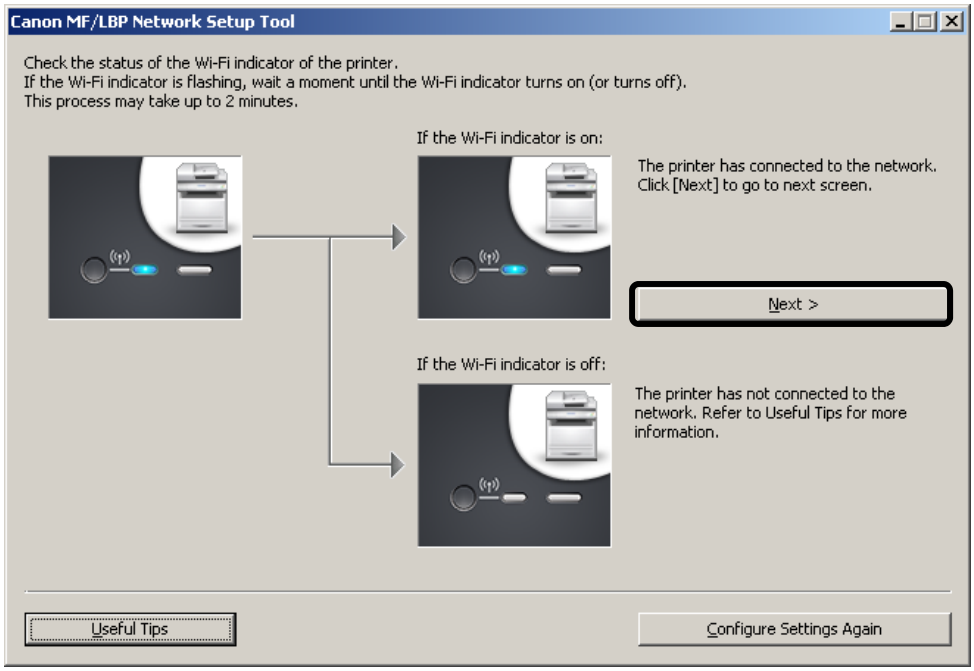

4) Click **[Exit]**.

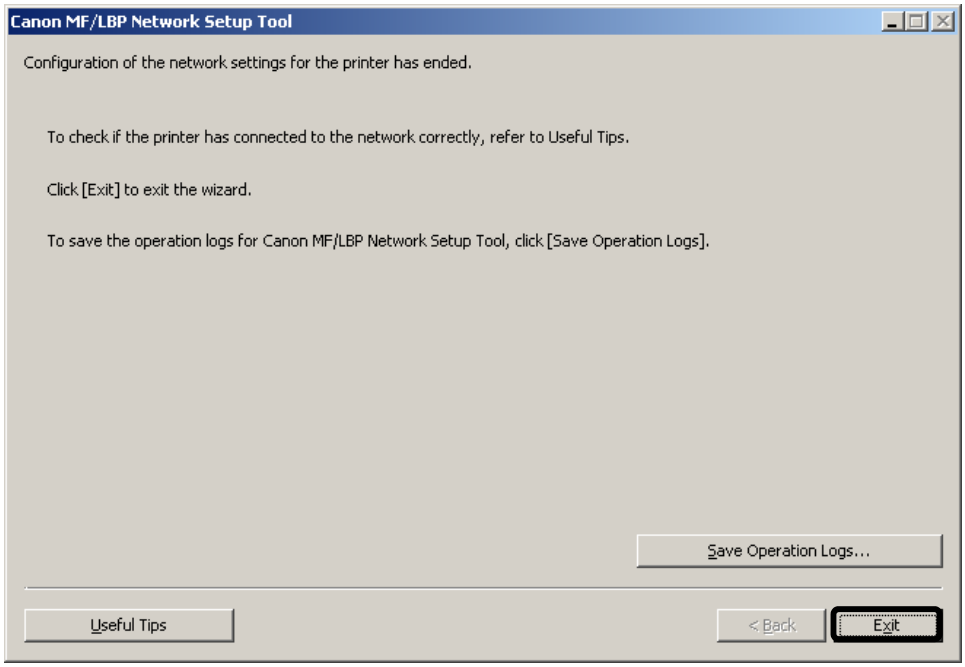

5) To complete the wireless setup process, proceed to "Completing the Wireless Set Up," on p. 24.

Non-WPS Supporting Router

1) If your router does not have a WPS button, select **[My wireless LAN access point does not have a WPS button or I cannot find the button]**, and then click **[Next]**.

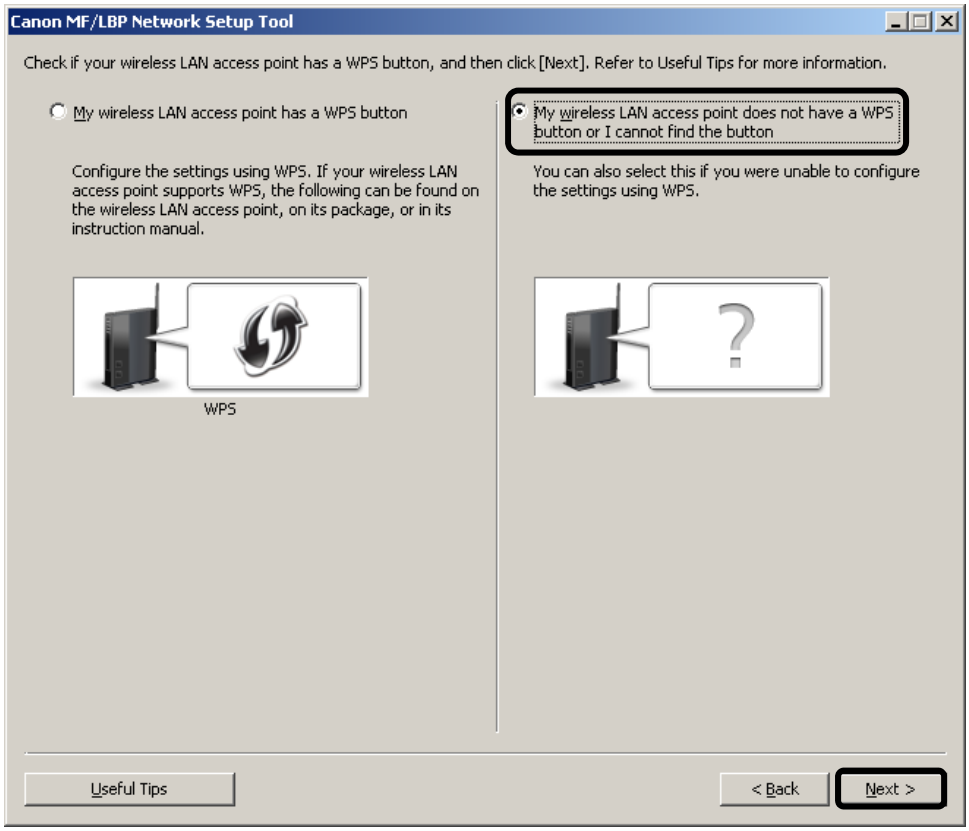

2) Follow the instructions on the screen, as shown below, and then click **[Next].**

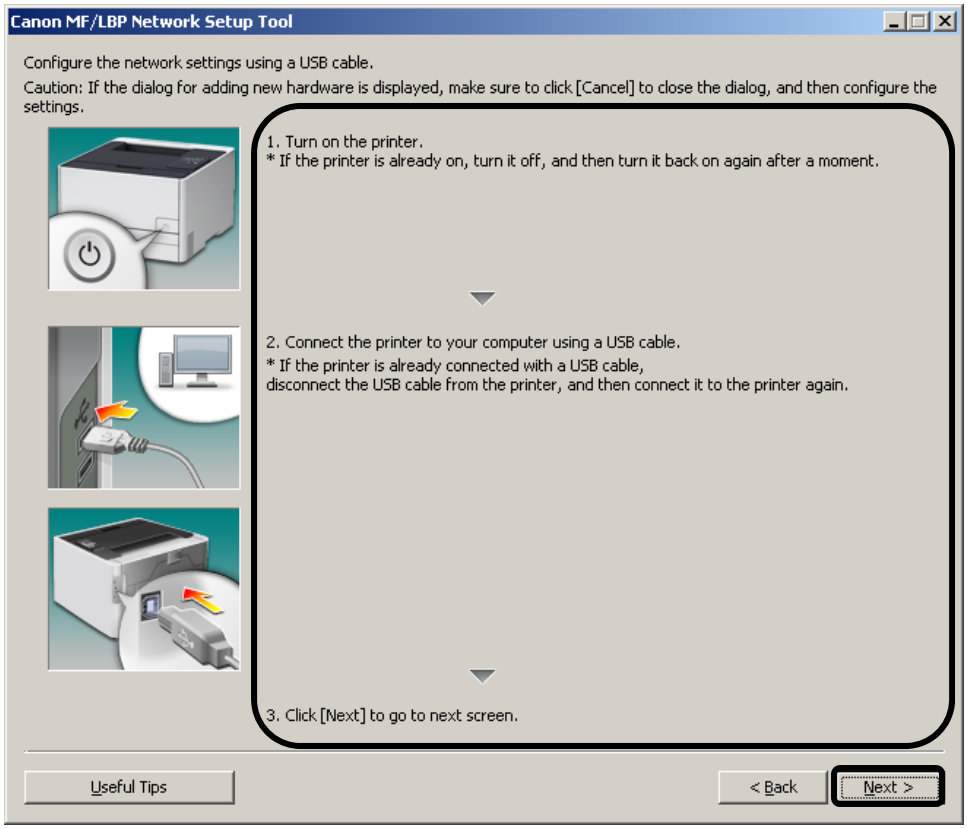

The screen below appears while **searching for your wireless network**.

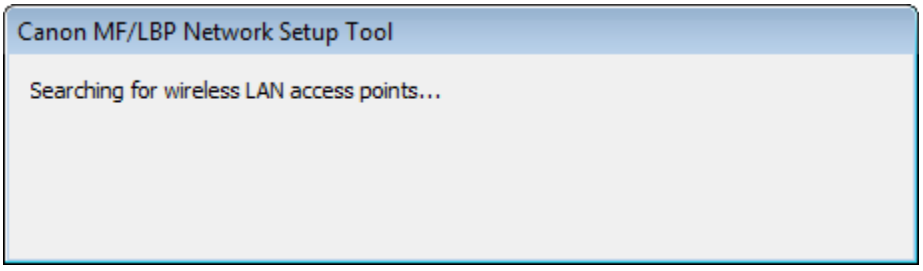

If the message shown below appears, read the message, and then click [OK].

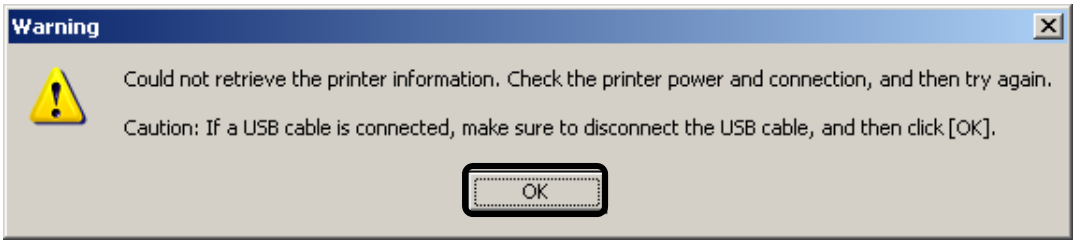

Make sure that the USB cable is connected to your computer and to the LBP7110Cw, and make sure that the printer is turned ON. Click [Next].

3) When a list of wireless networks appears, select your wireless network, and then click **[Next]**.

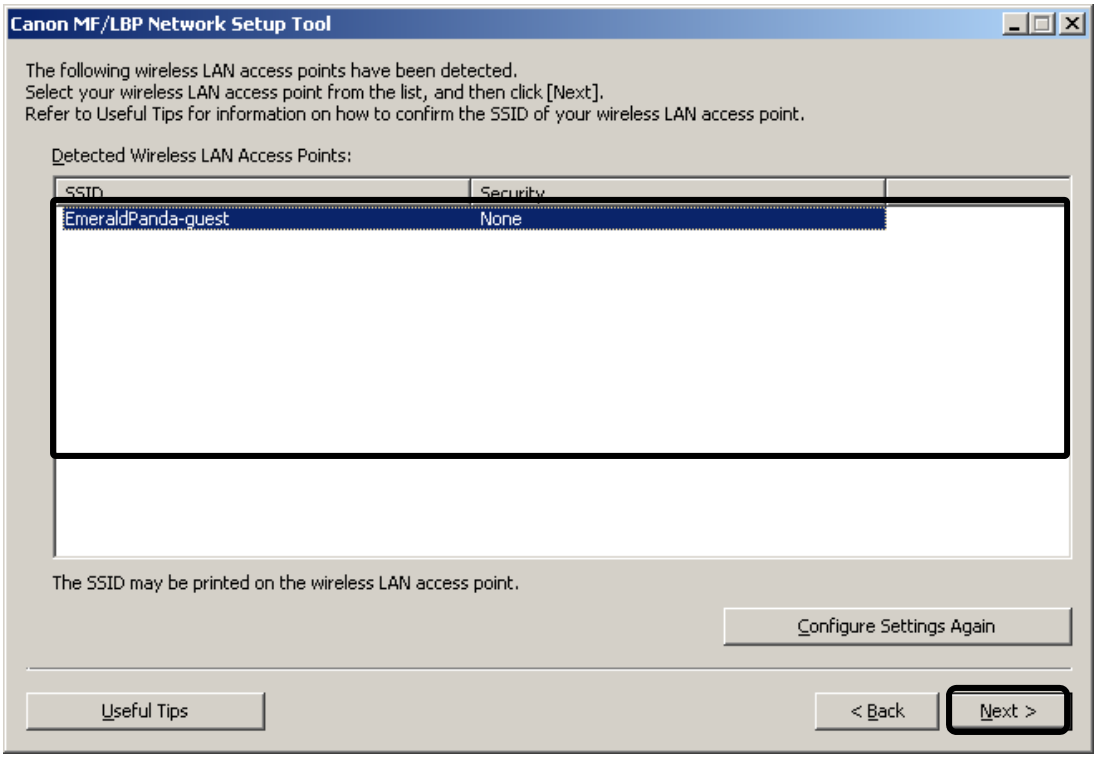

4) If your computer is already connected to the same wireless network as the printer, you do not have to enter your network key. If your computer is not connected to the same wireless network as the printer, enter the Network Key in the blank field, and then click [Next].

While the screen below appears, the Wi-Fi indicator on your printer blinks blue. When the printer is connected to the network, the Wi-Fi indicator turns solid blue.

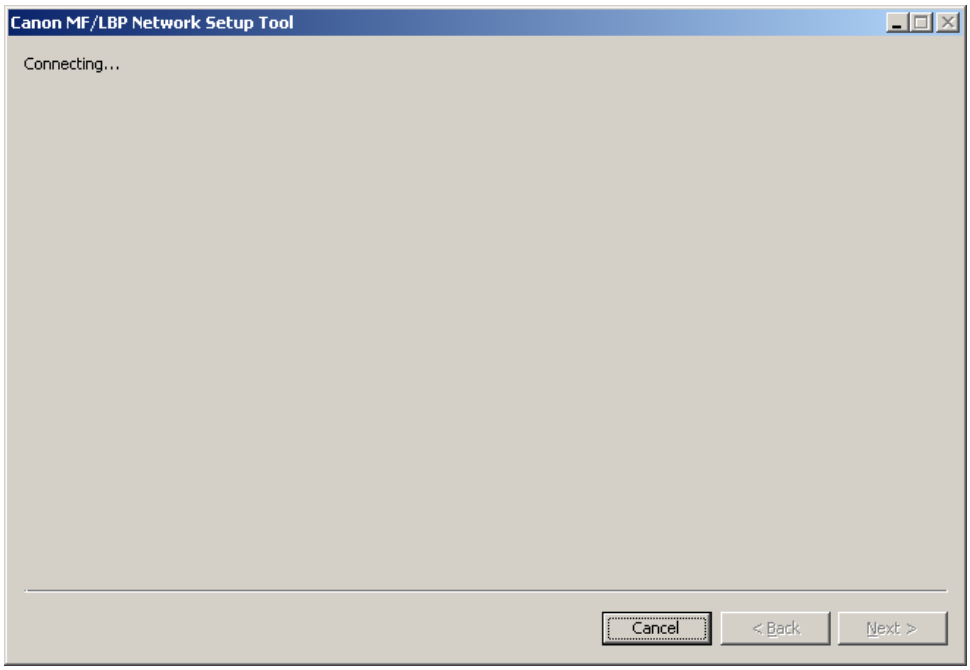

5) Disconnect the USB cable from your printer, and then click **[Next]**.

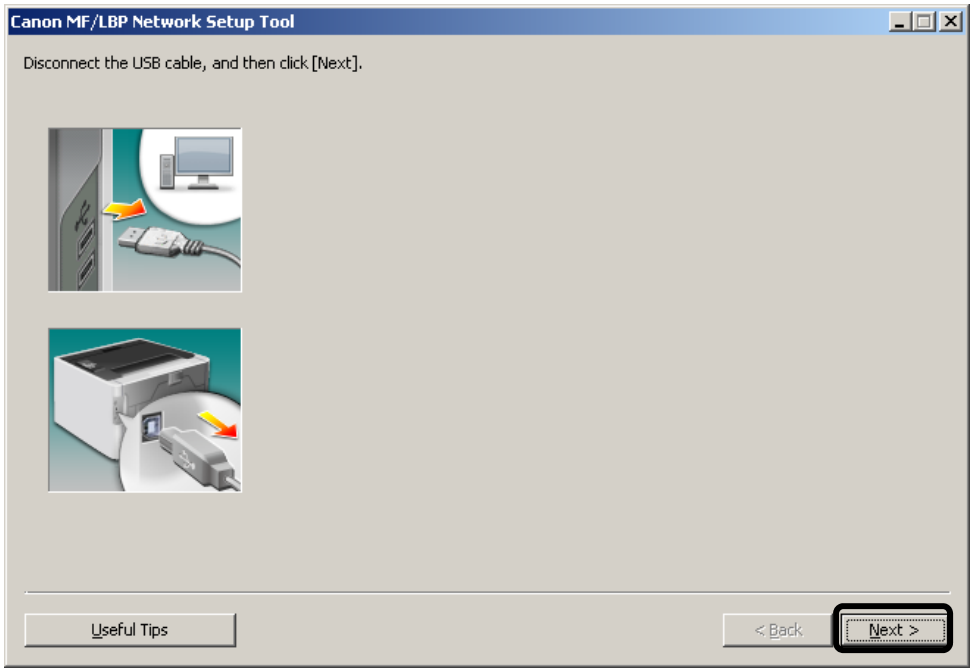

6) Click **[Exit]** to exit the Network Setup Tool.

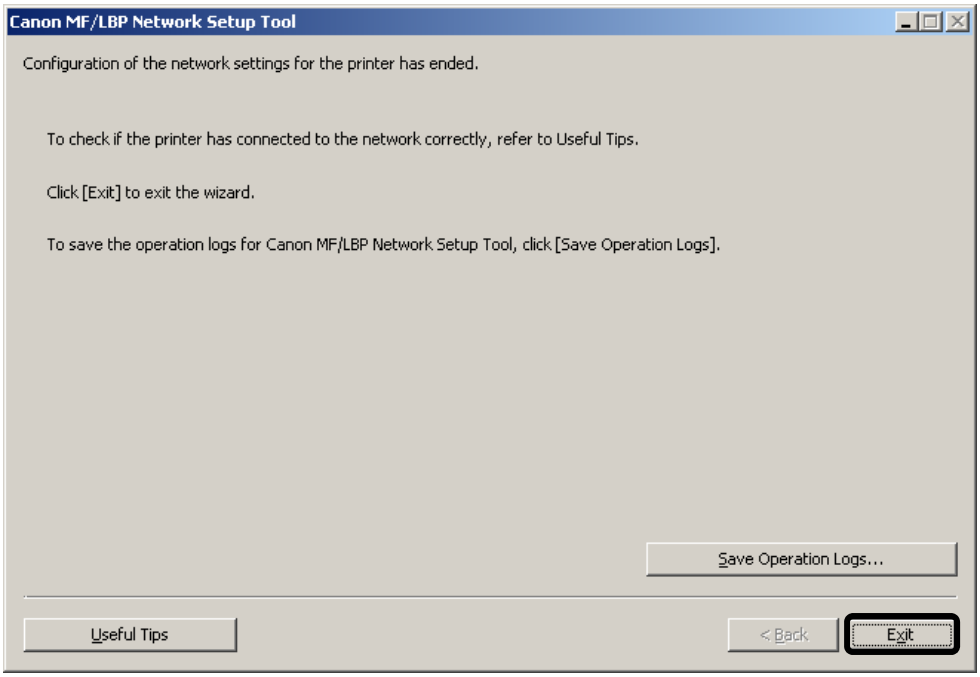

Completing the Wireless Set Up

1) Re-**open the LBP7110Cw Driver folder** on your desktop.

2) Open the **Driver folder.**

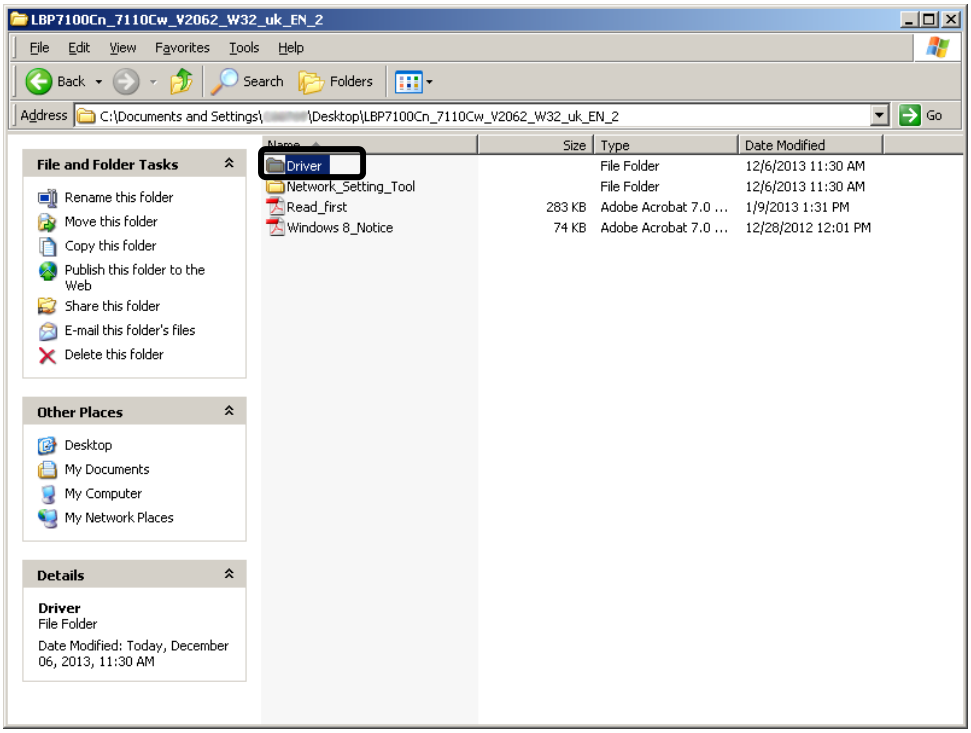

3) Double-click the **[Setup] icon.**

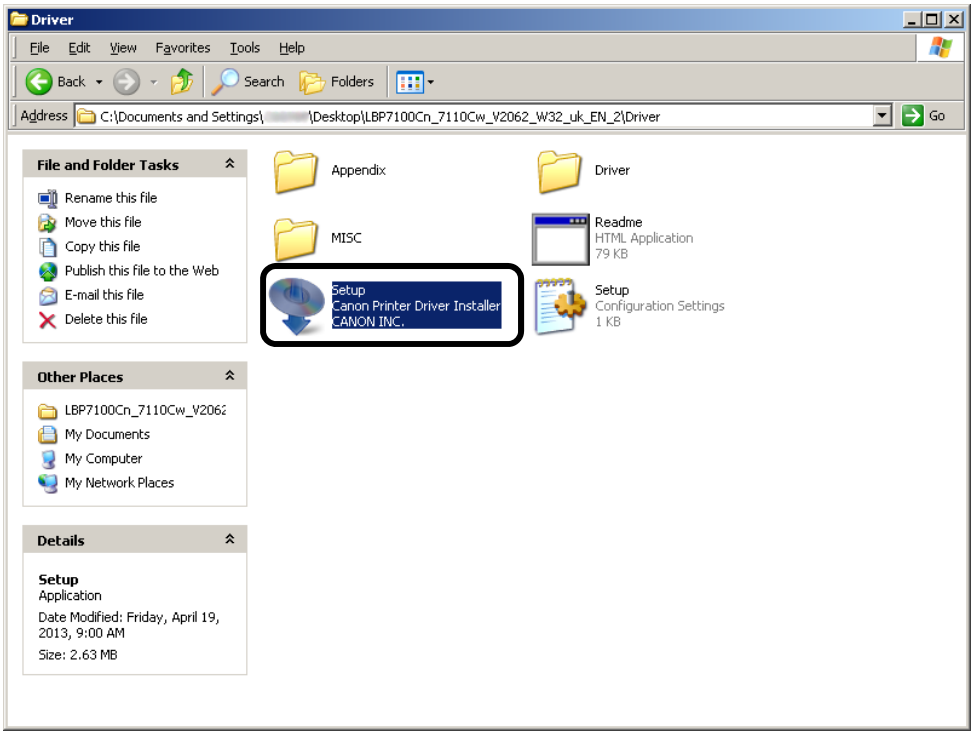

4) When the print driver Setup Wizard launches, click **[Next]**.

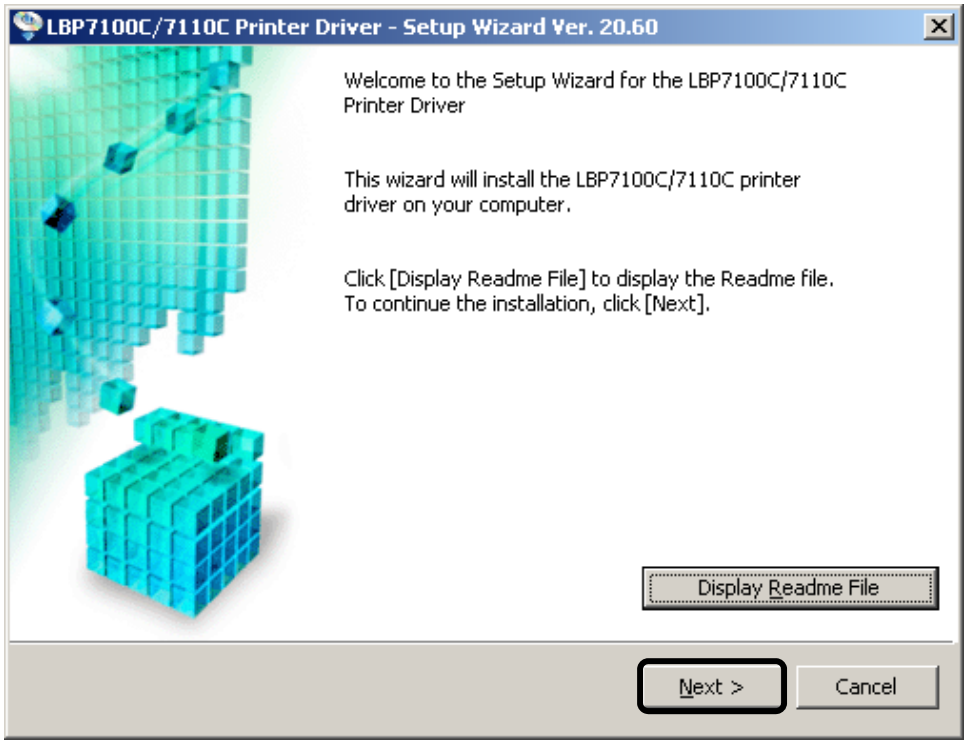

5) Click **[YES]** to accept the terms of the License Agreement.

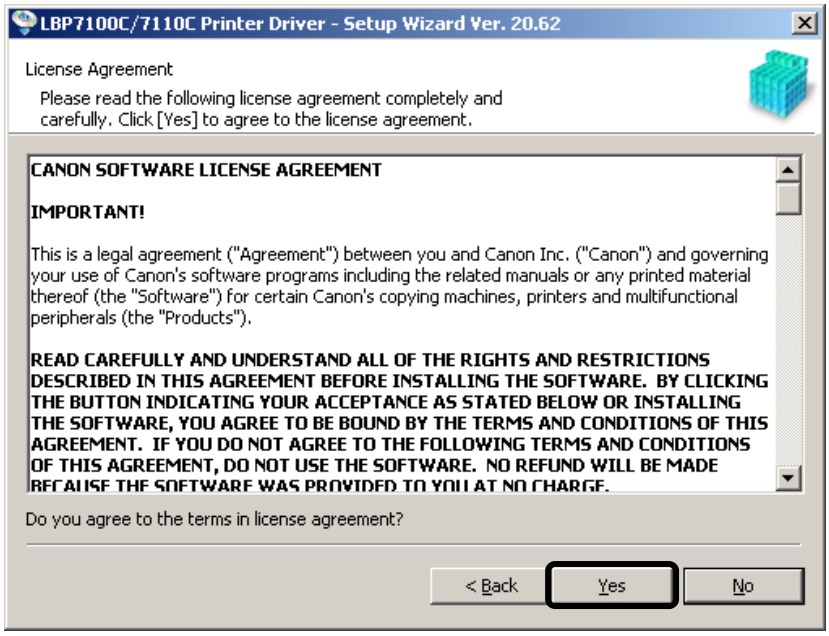

6) Select the **[Search for Network Printers to Install]** radio button, and then click [Next].

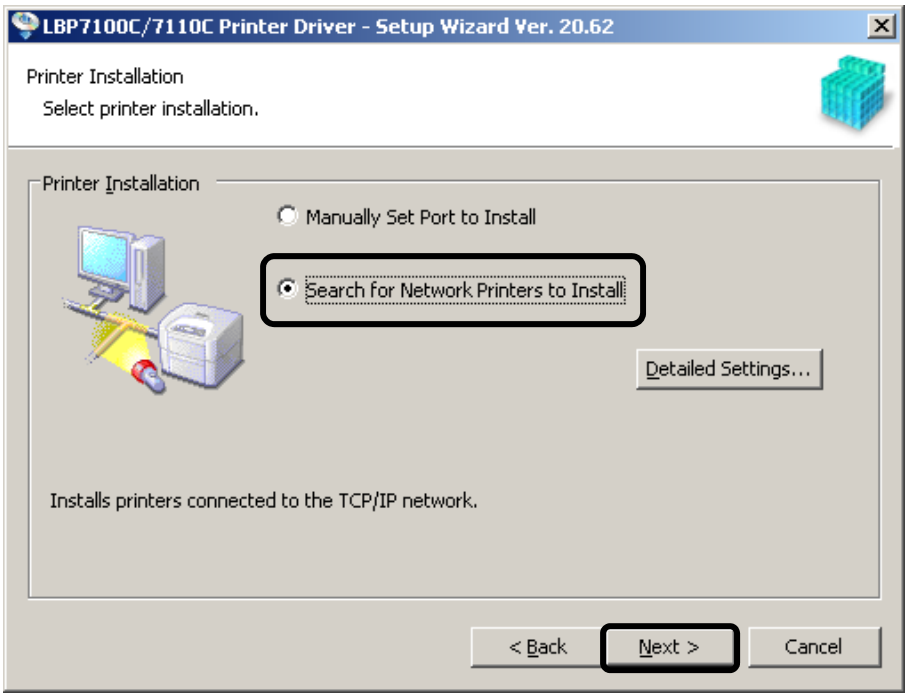

7) Make sure that **[Add Printers]** is selected, and click **[Next]**.

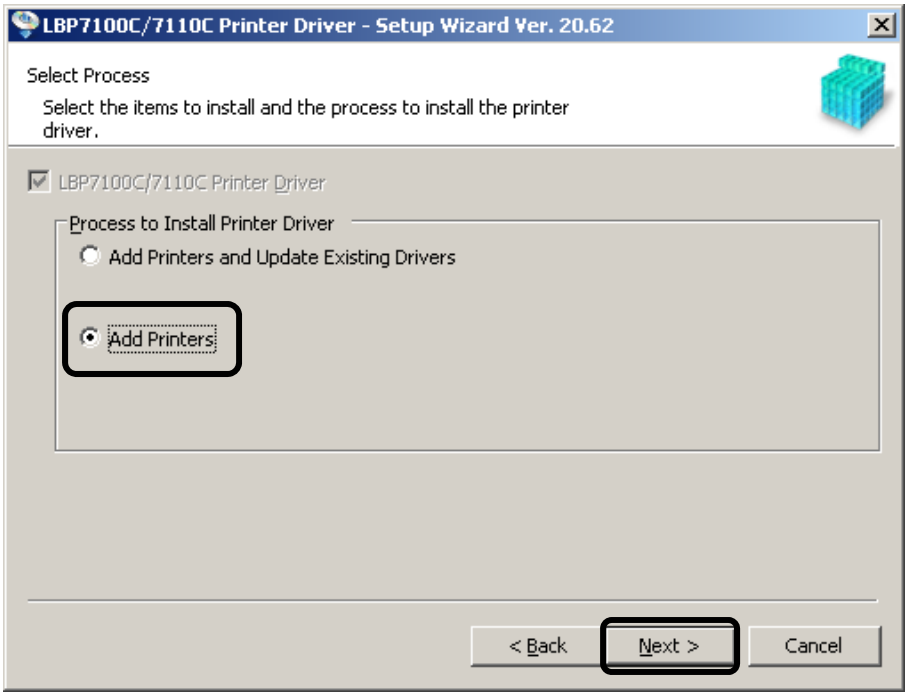

Your computer searches for the LBP7110Cw printer.

8) Select the LBP7110Cw printer from the Printer List, and then click **[Add]**.

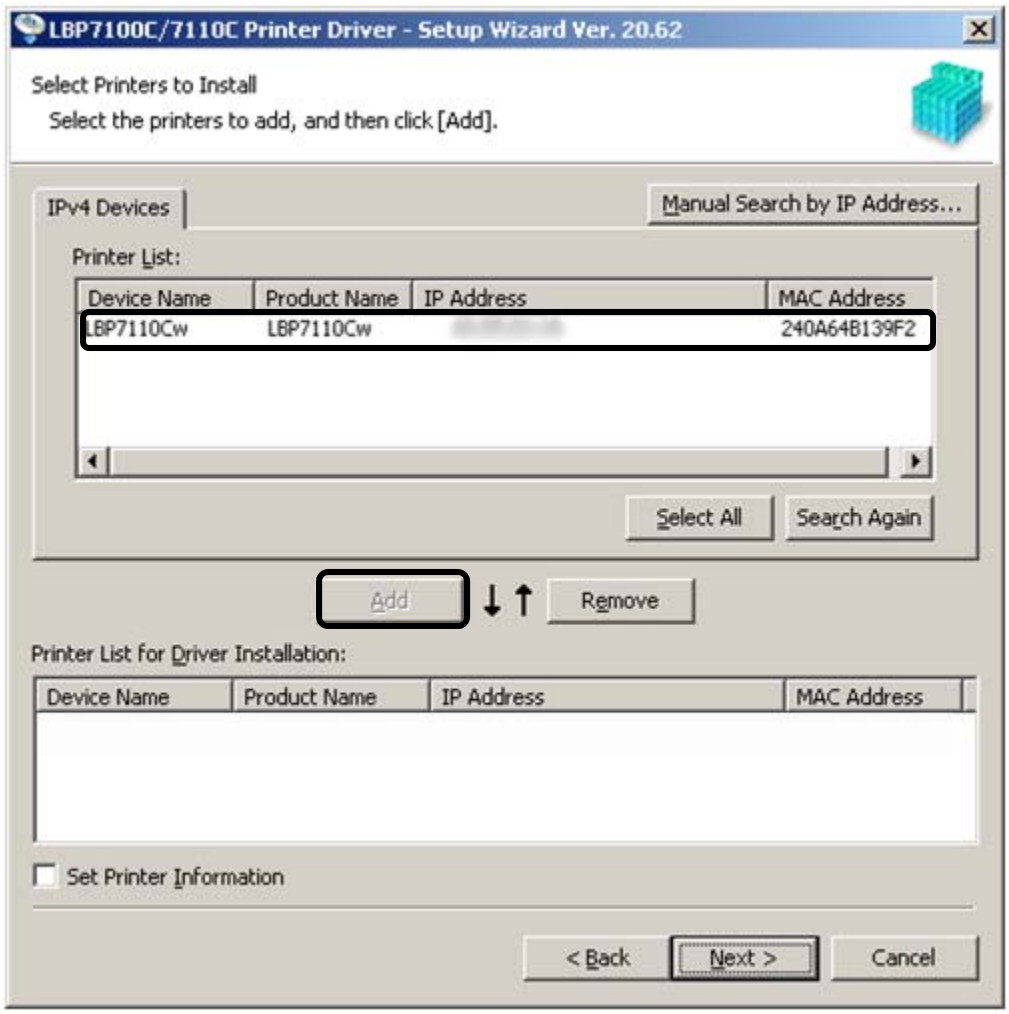

9) Once the printer appears in the Printer List for Driver Installation, click **[Next]**.

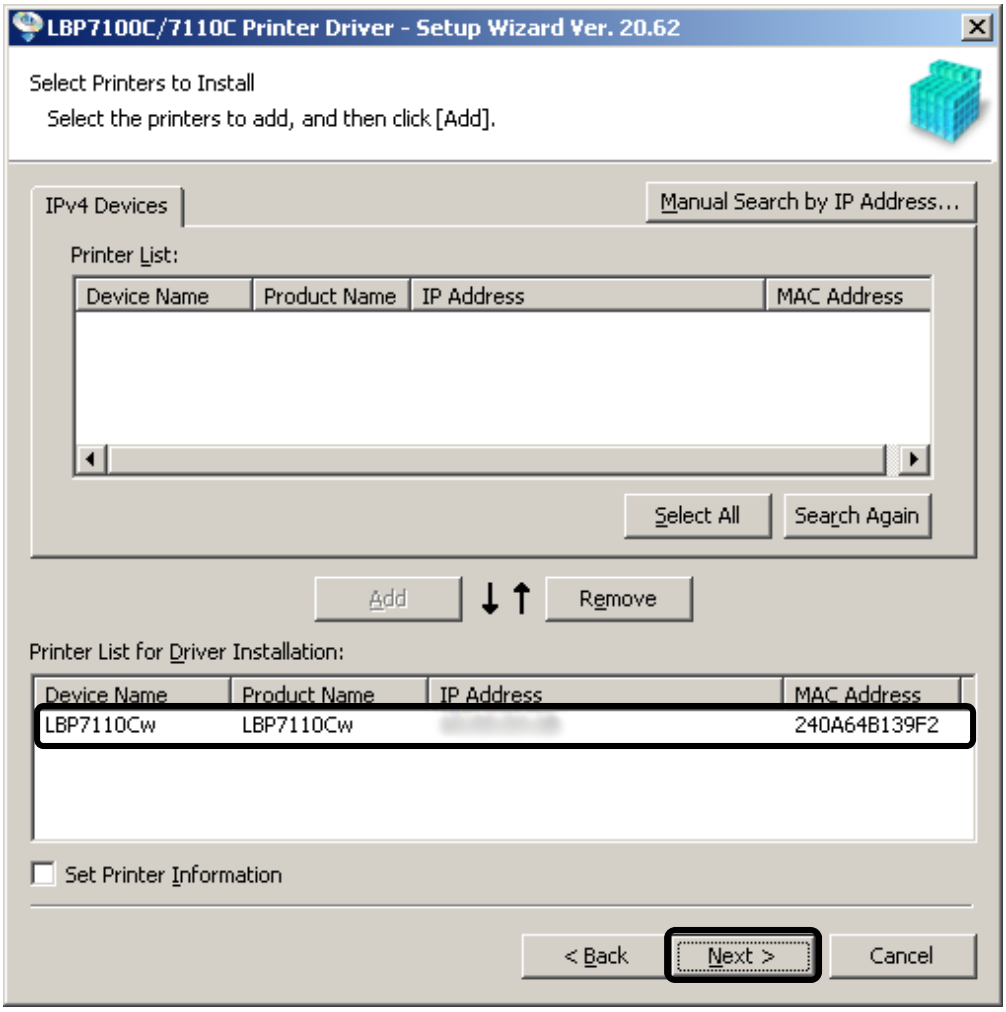

10) Click **[Start]** to install the driver.

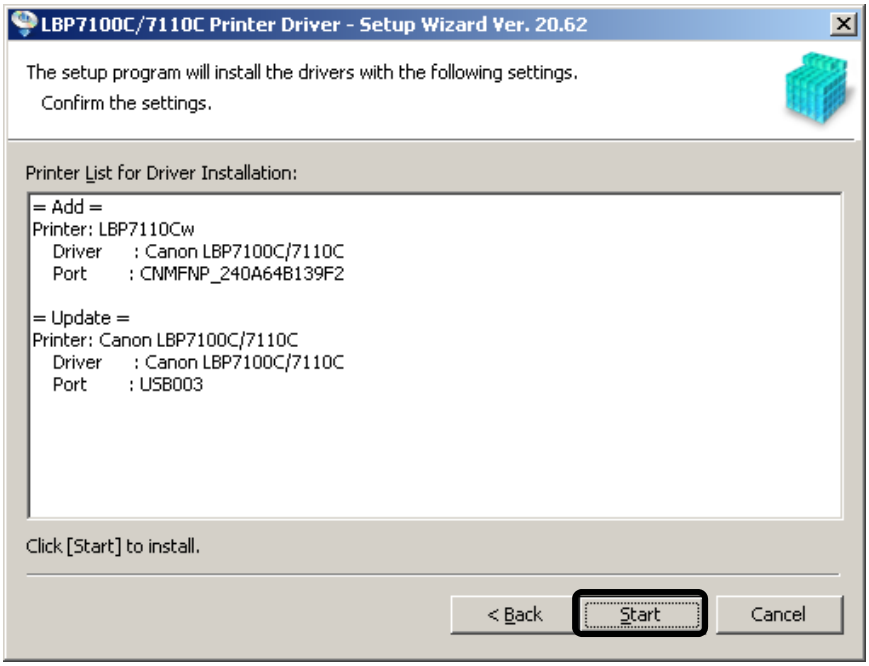

11) Click **[Yes]** to continue.

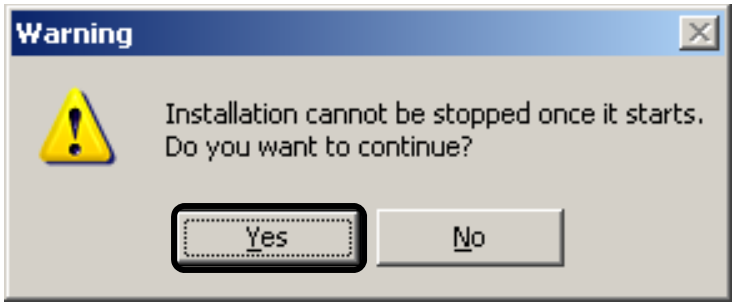

12) **Please wait** until the driver installs.

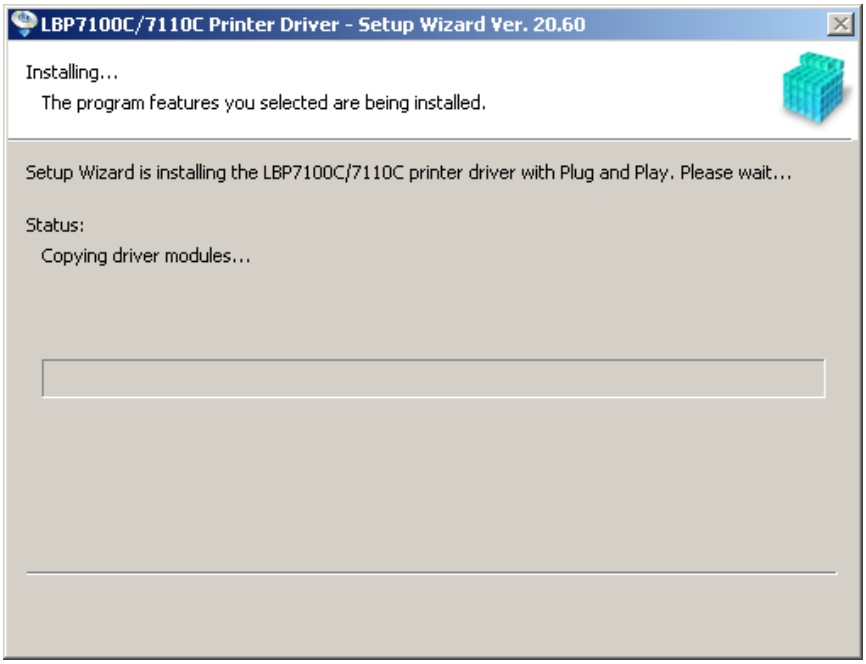

13) **Select [Restart My Computer Now**], and then click [Restart].

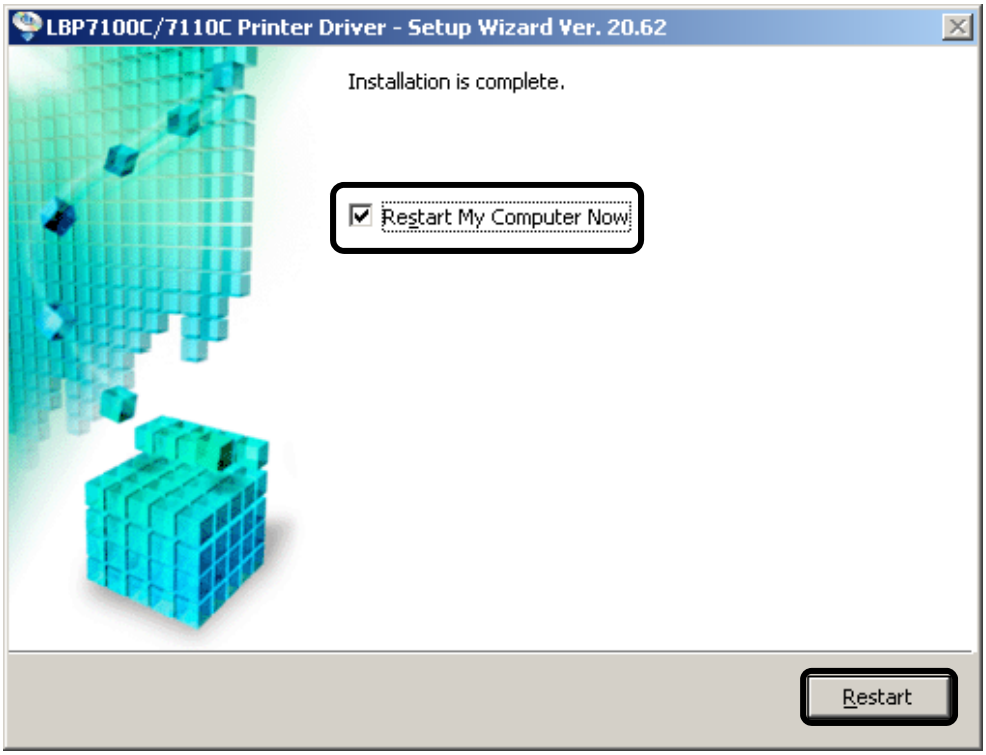

If you need further assistance in setting up your printer, please contact us at **1-800-OK CANON (800-652-2666).**

To install the Color imageCLASS LBP7110Cw driver with the included User Software CD

First, you must choose your installation method:

- **WPS ROUTER**, If your router has a button that looks like this:

  Continue to page 33 *(Preferred Method)*

- **Non-WPS Router**

WPS Router Instructions

1) Insert **User Software CD** that was included in the box.
2) Click **Easy Installation**.

3) You will see the below screen, click **Start**

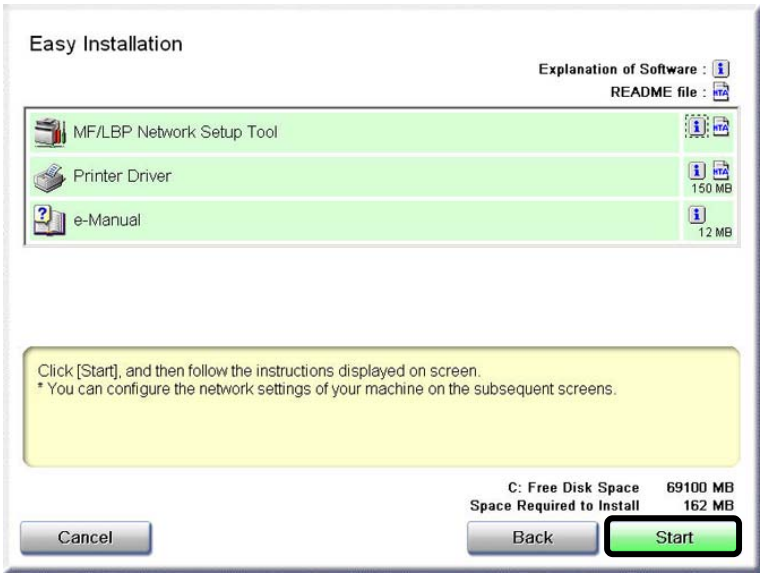

4) Click **[Yes]** to accept the terms of the License Agreement.

5) Select the **[Wireless LAN Connection]** radio button, and then click **[NEXT].**

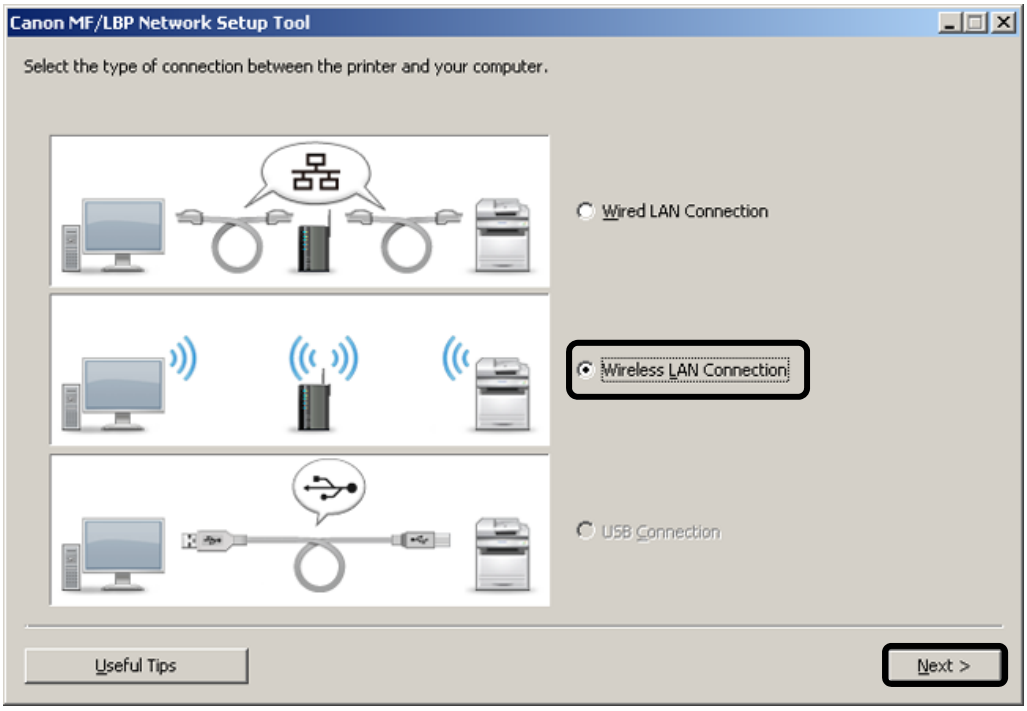

6) Select the **[Yes, I want to configure network settings]** radio button, and then click **[Next].**

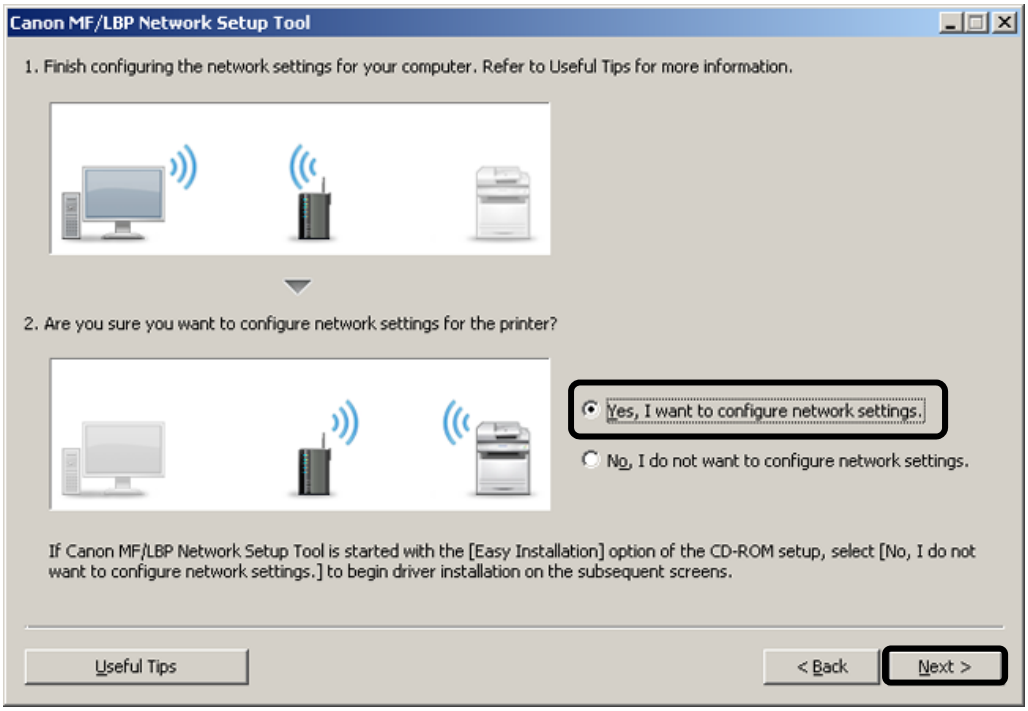

7) Select the **[Easy Setup]** radio button, and then click **[Next]**.

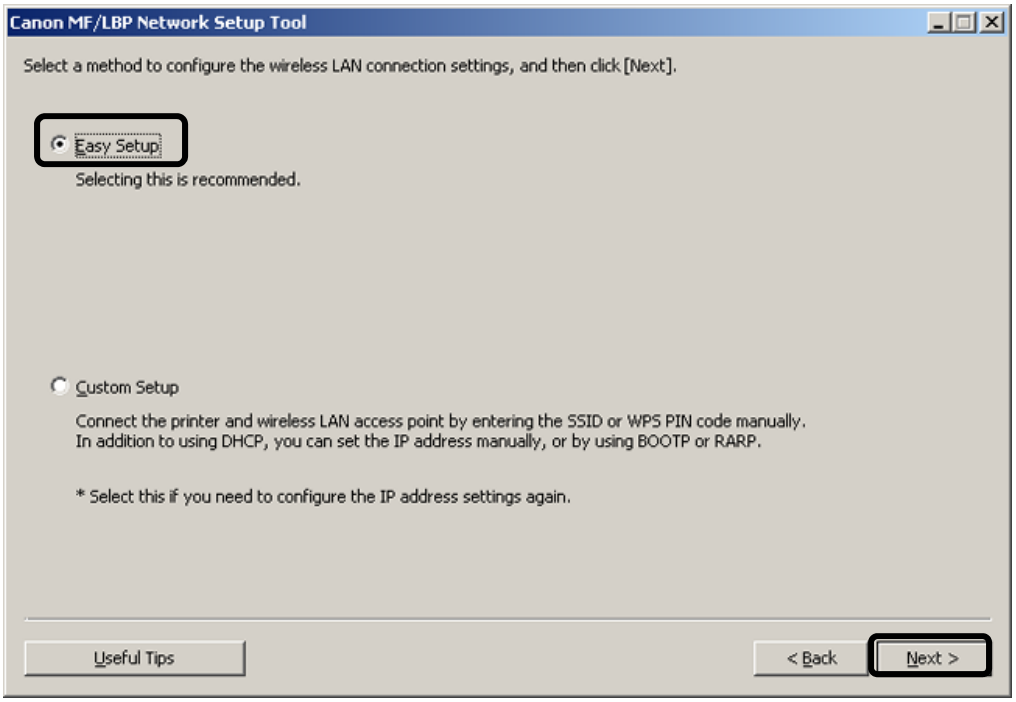

8) Select **[My wireless LAN access point has a WPS button]**, and then click **[Next].**

If your router does not have a WPS button, follow the instructions on "Non-WPS Supporting Router Instructions" on page 46.

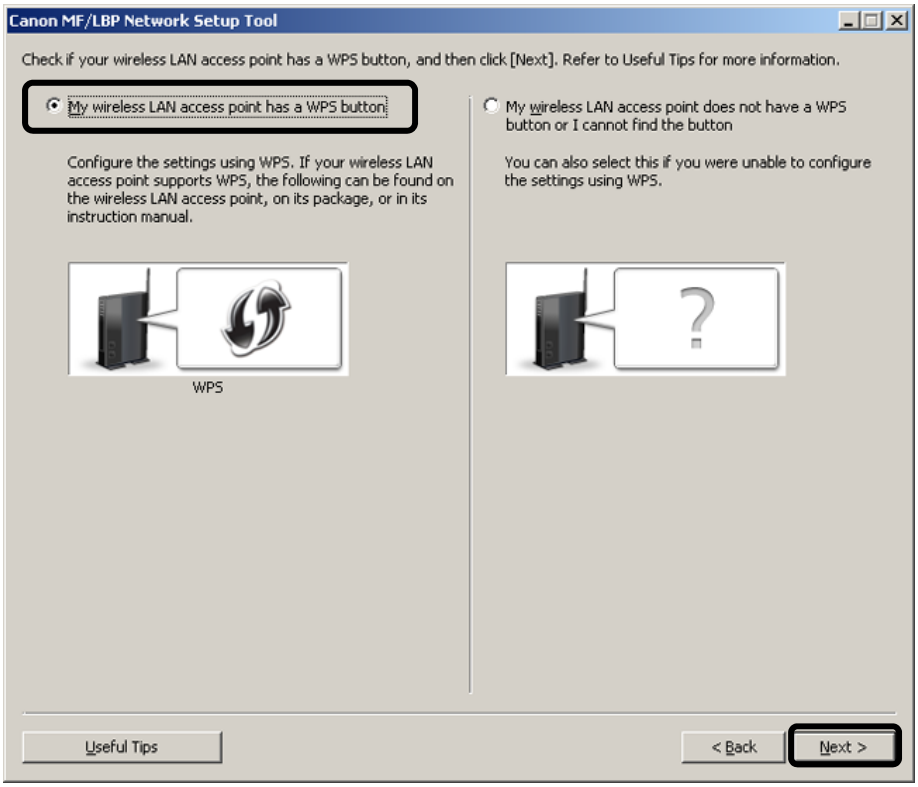

9) Follow the instructions on the screen, as shown below, and then click **[Next].**

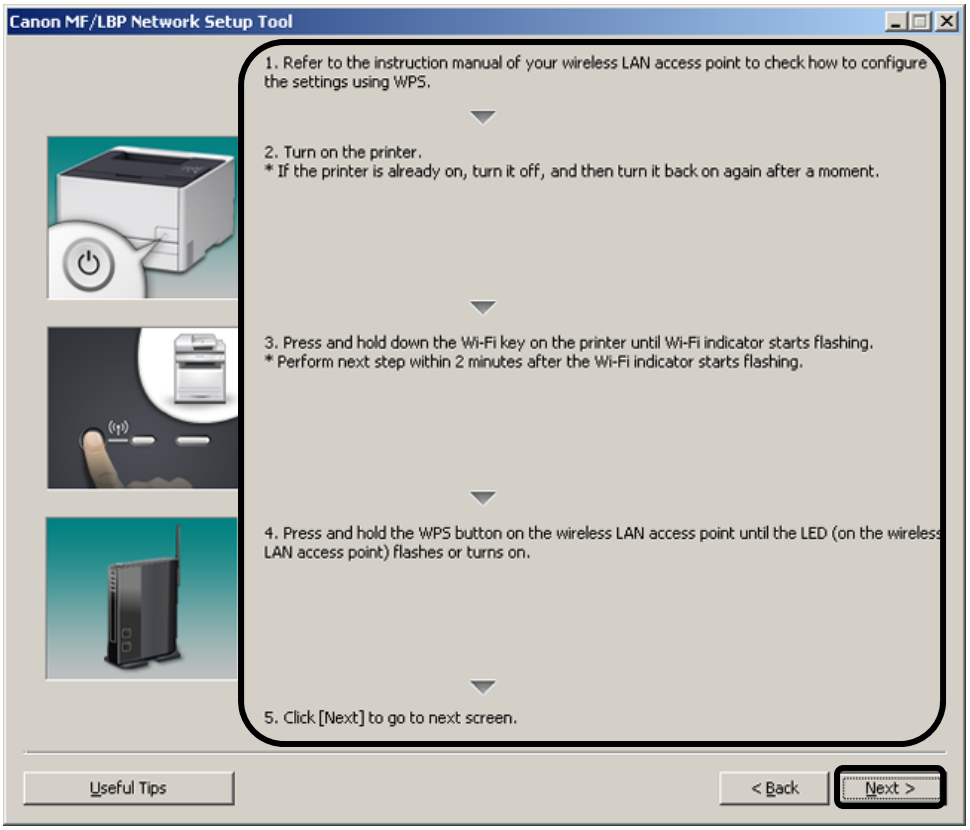

10) When the Wi-Fi indicator turns **solid blue**, the printer is connected wirelessly. Click **[Next]**.

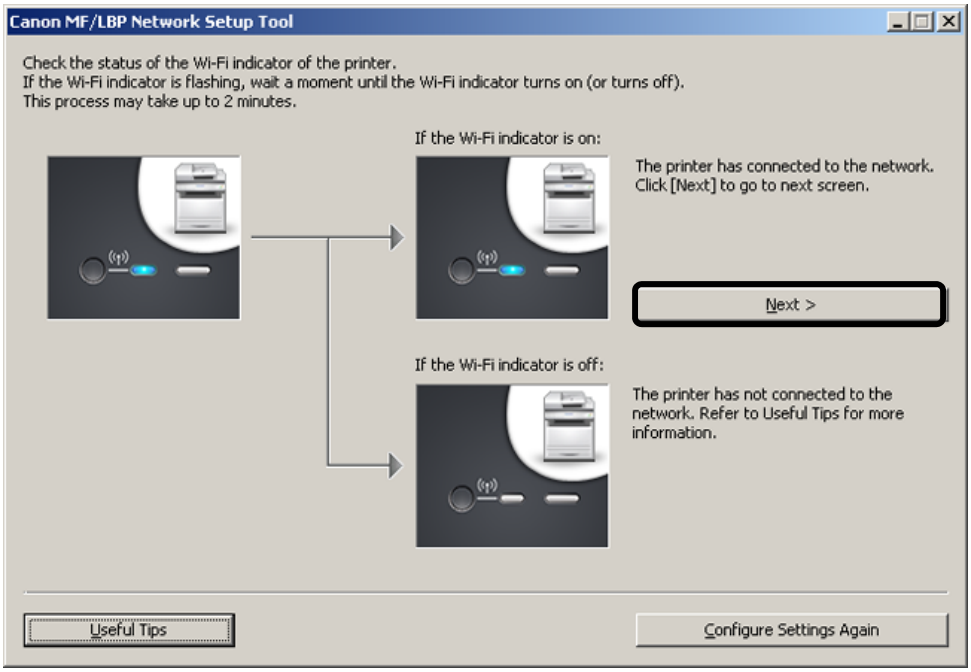

11) Click **[Next]** to begin wireless driver installation.

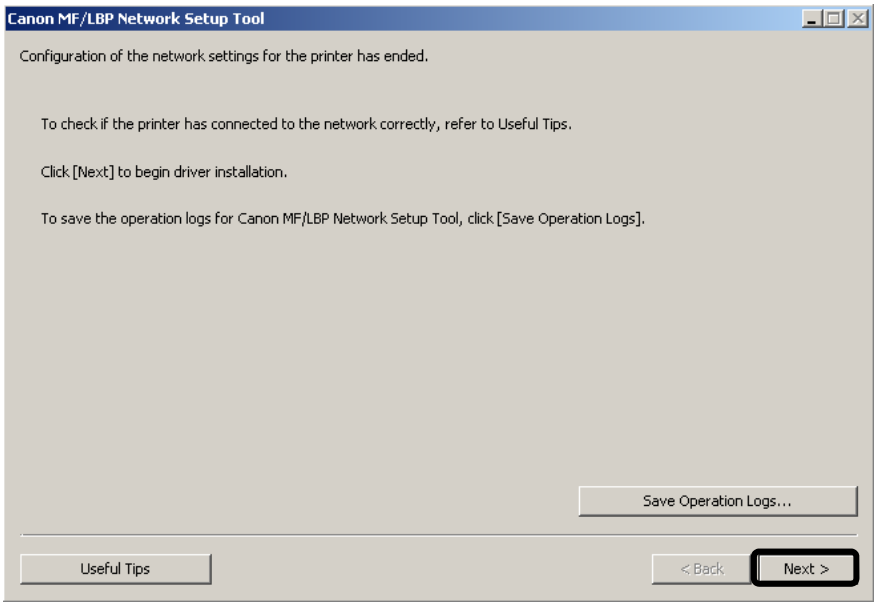

12) When the Print Driver Setup Wizard launches, click **[Next]**.

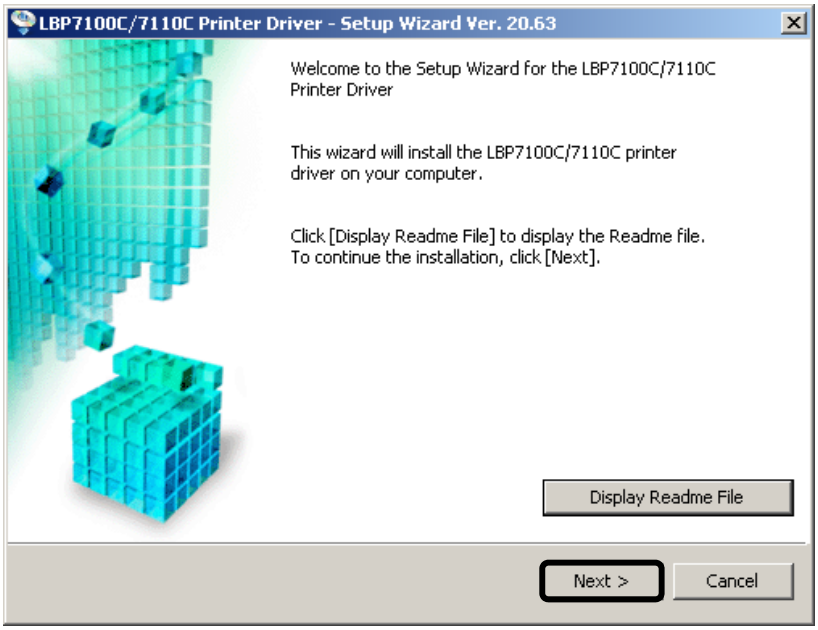

13) Select the **[Search for Network Printers to Install]** radio button, and then click **[Next]**.

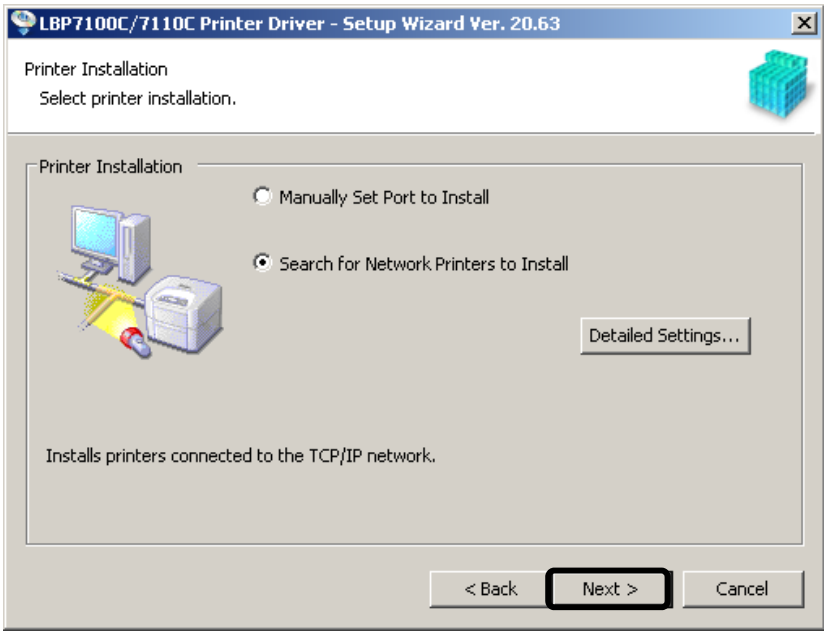

Your computer searches for the LBP7110Cw printer.

14) Select the **LBP7110Cw** printer from the Printer List, and then click **[Add]**.

*If you do not see the printer in the Printer List, be sure your computer is connected to the same wireless router as the printer. To verify which access point the printer is connected to, press the "Go" button on the printer for 5 seconds to print out the User Data List. Once they are connected to the same wireless router, click **[Search Again]**.*

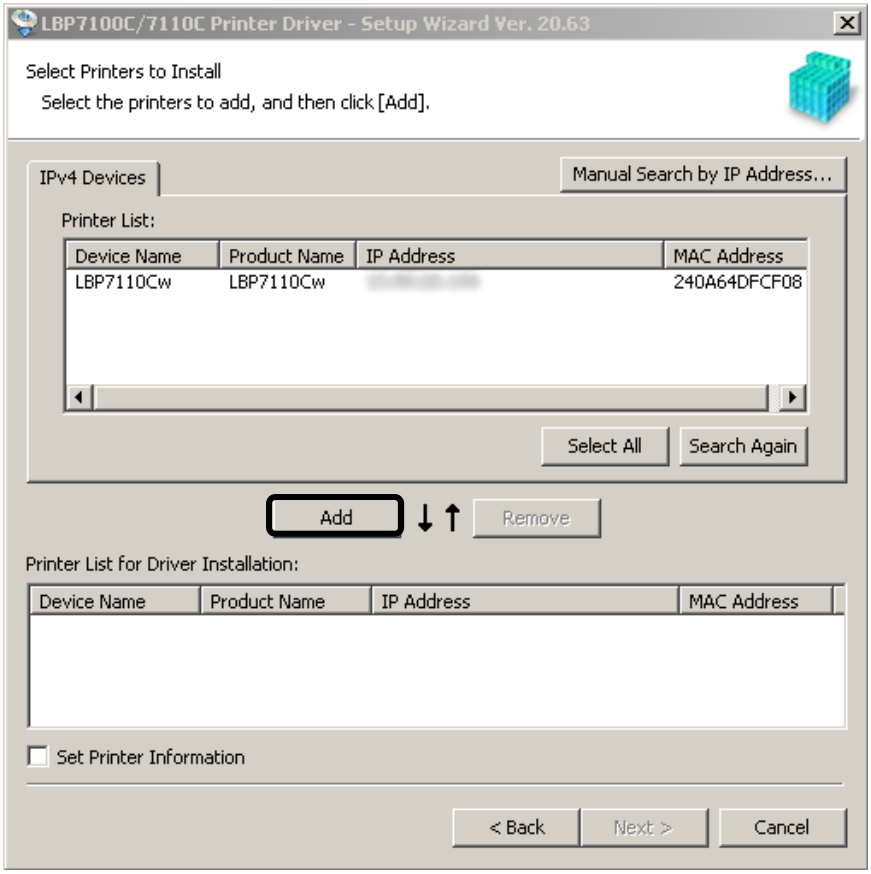

15) Once the printer appears in the Printer List for Driver Installation, click **[Next]**.

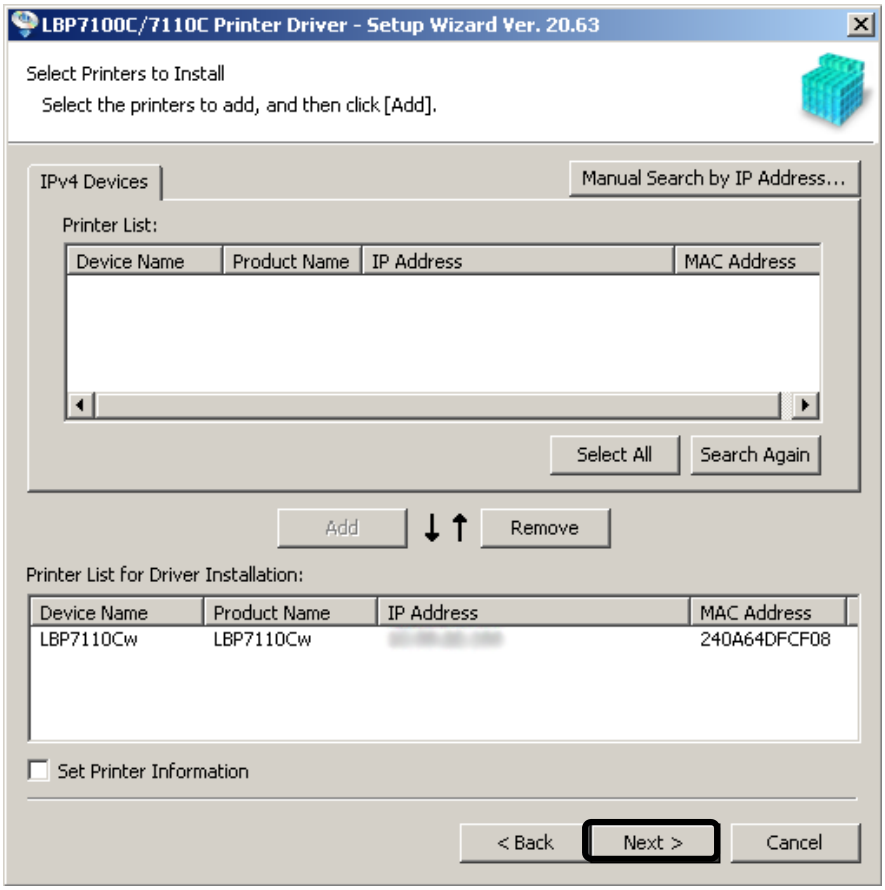

16) Click **[Start]** to install the driver.

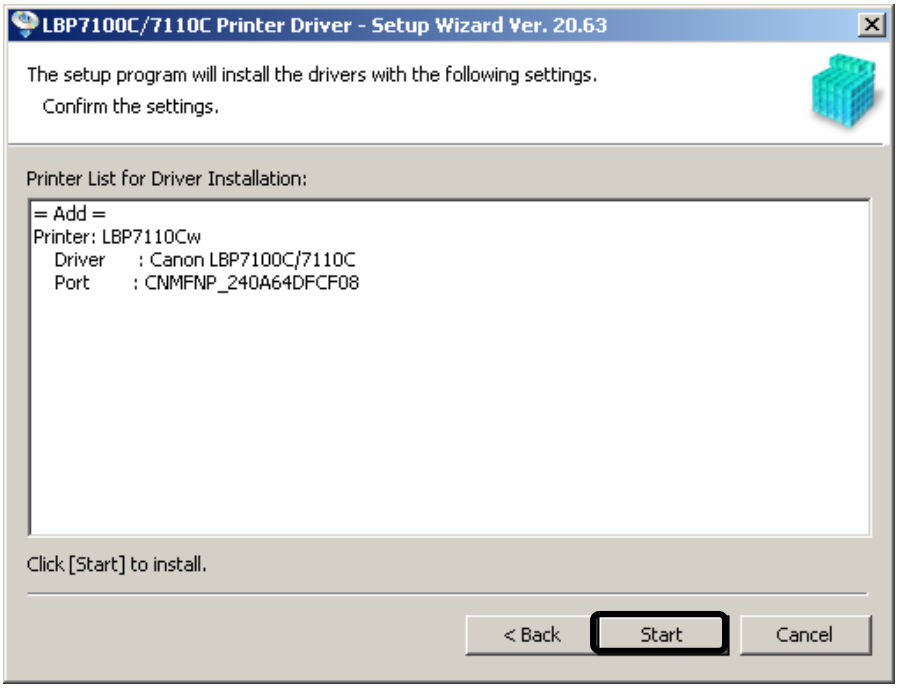

17) Click **[Yes]** to continue.

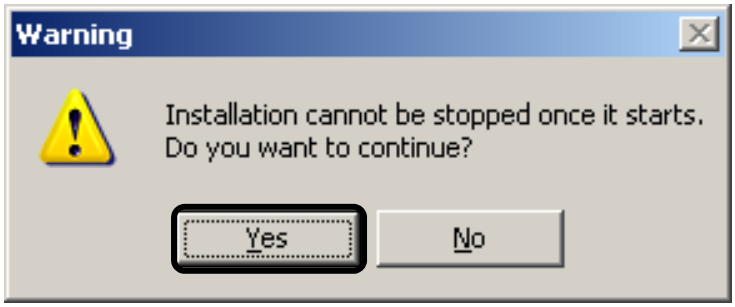

18) **Please wait** until the driver installs.

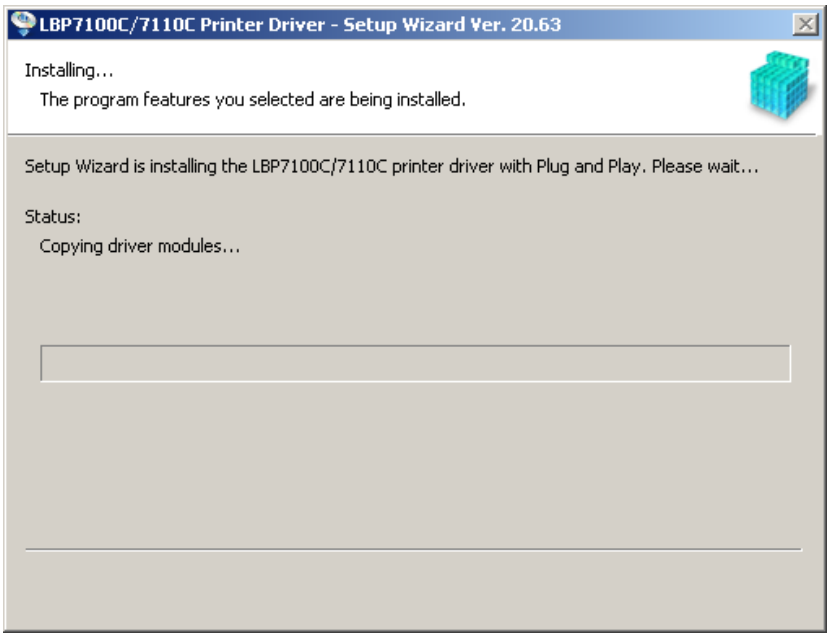

19) Select **[Install]** to install the e-manual.

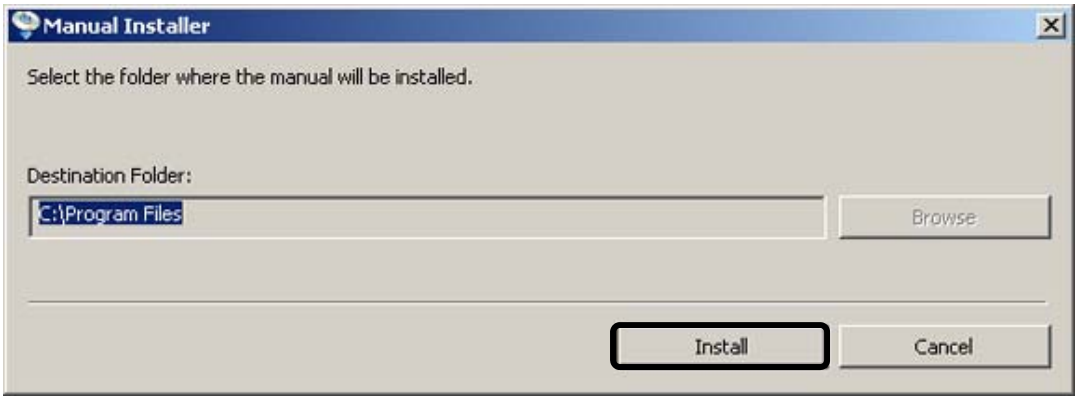

20) **Please wait** while manuals install.

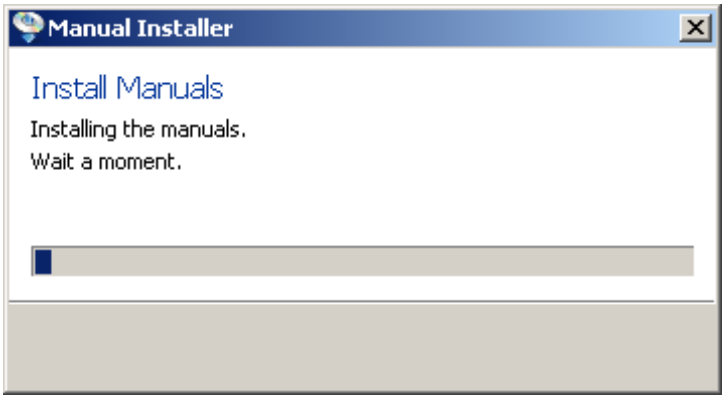

21) Press **[Exit].**

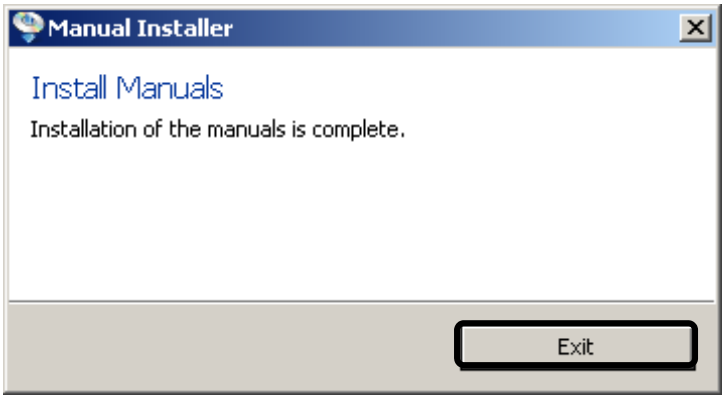

22) Click **[Next]** to continue.

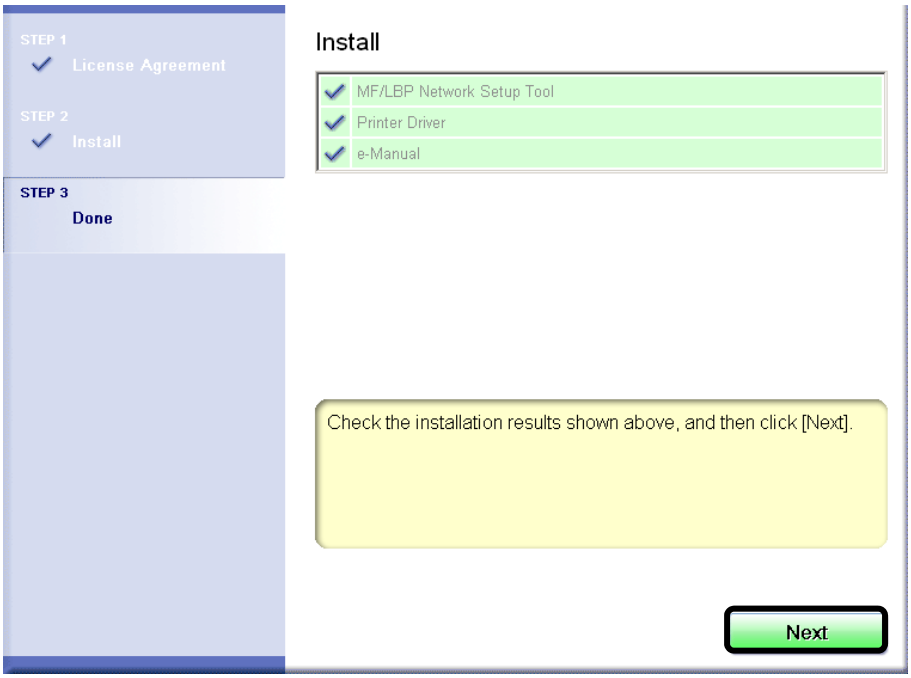

23) Make sure **Restart Computer Now** is selected, click **[Restart].**

Congratulations! You can now print wirelessly to your **LBP7110Cw**.
If you need further assistance in setting up your printer, please contact us at **1-800-OK CANON (800-652-2666).**

Non-WPS Router Instructions

To setup the LBP7110Cw wirelessly with a Non-WPS Router, you must install the printer driver first.

1) Insert **User Software CD** that was included in the box.
2) Click **Easy Installation**.

3) You will see the below screen, click **Start**

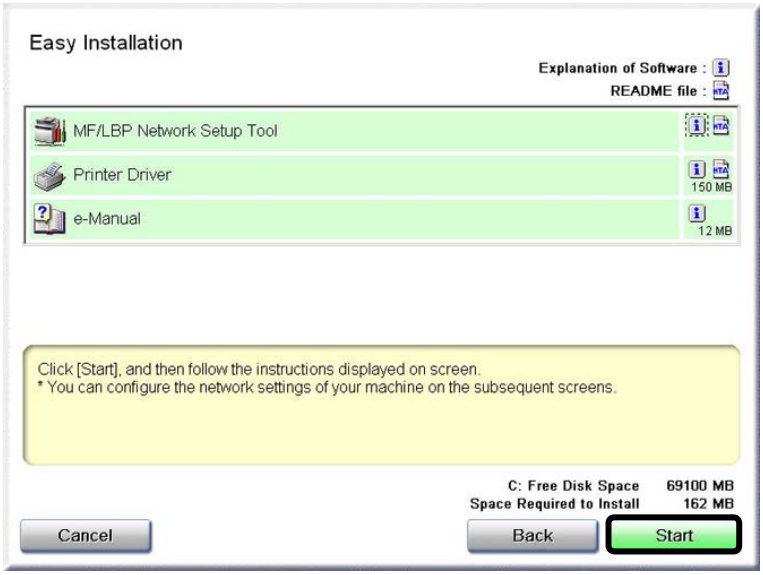

4) Click **[Yes]** to accept the terms of the License Agreement.

5) Select the **[USB Connection]** radio button, and then click **[NEXT].**

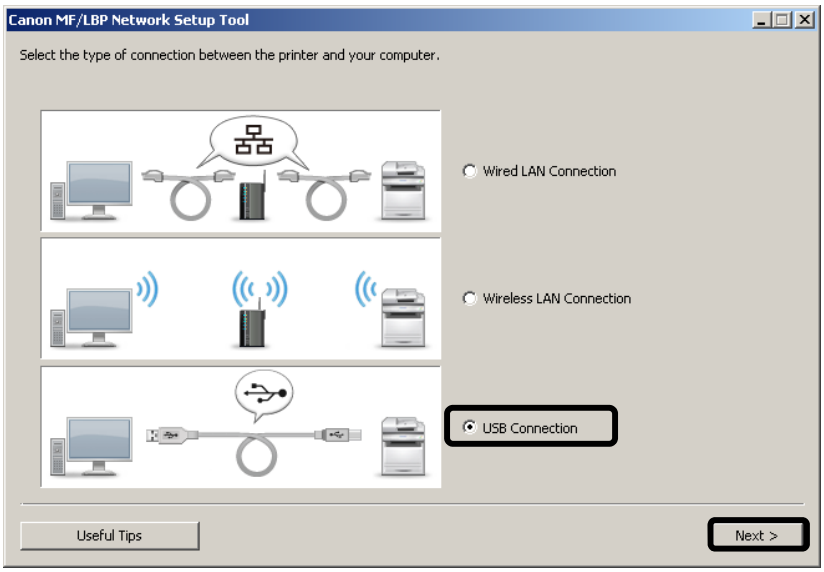

6) Click **[Next]** to begin driver installation.

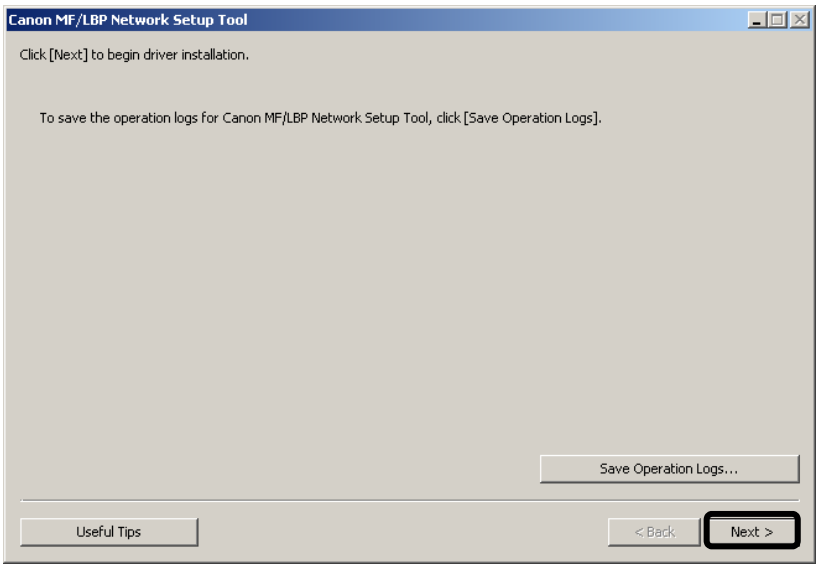

7) When the Print Driver Setup Wizard launches, click **[Next]**.

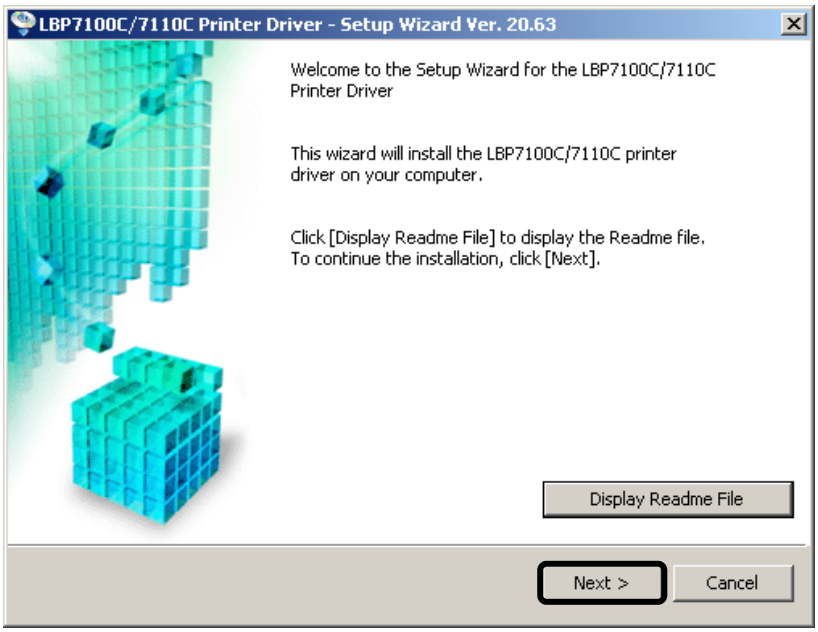

8) Select the **[Install with USB Connection]** radio button, and then click **[Next]**.

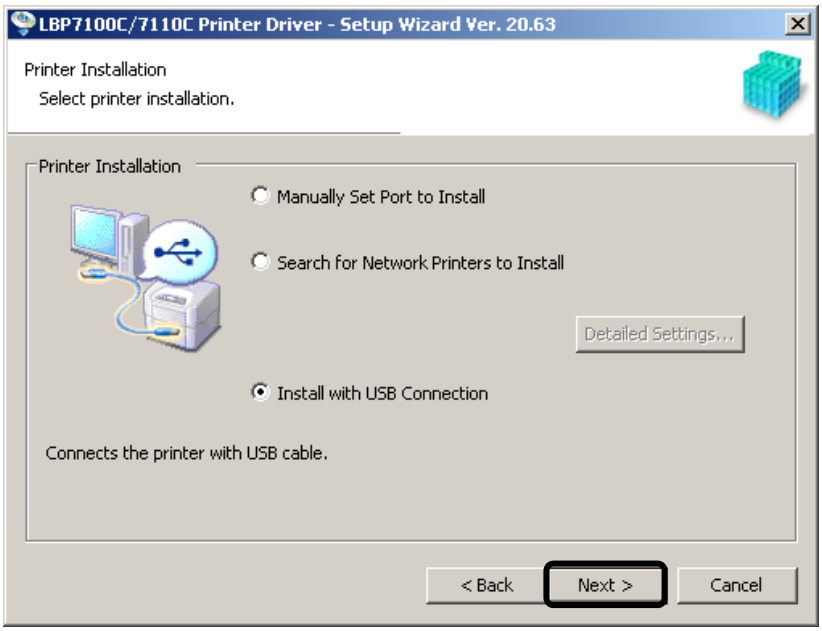

9) Click **[Yes]**.

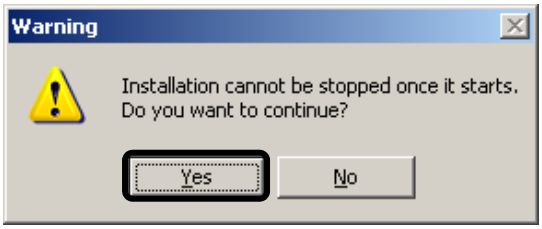

10) You will see the below message, **please wait** while the driver is installed.

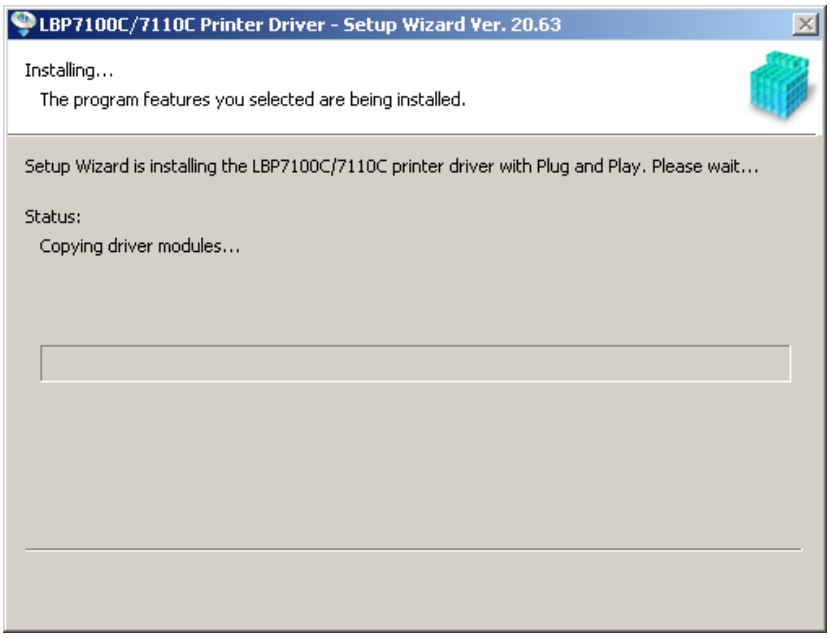

11) If the screen below appears, **make sure that the printer is ON** and the **USB cable is connected to the computer and printer**.

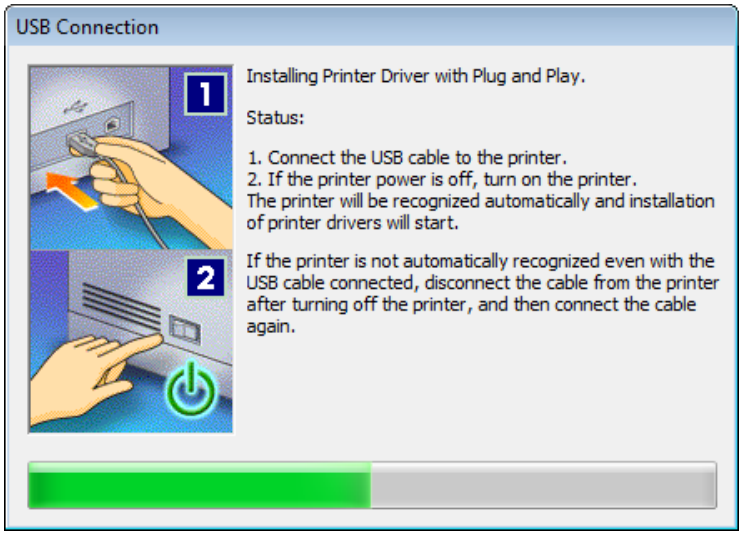

12) If you see this message, follow the on screen instructions, then, click **[Retry].**

*If the message reappears, **try a different USB port** on the computer.

13) Select **[Install]** to install the e-manual.

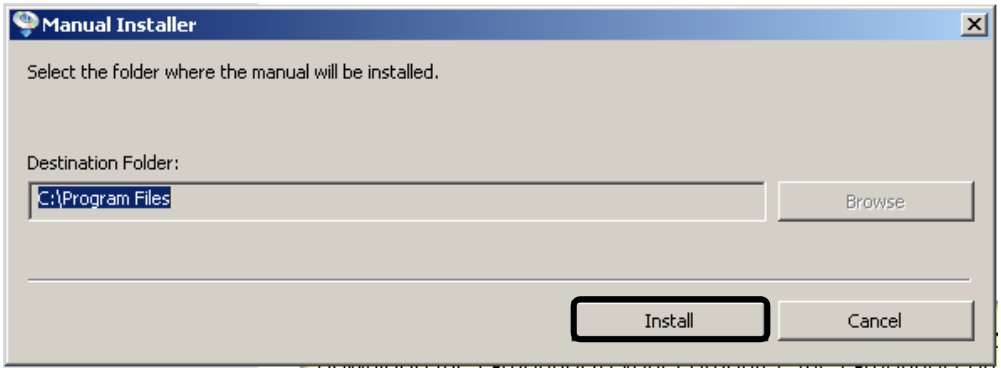

14) **Please wait** while manuals install.

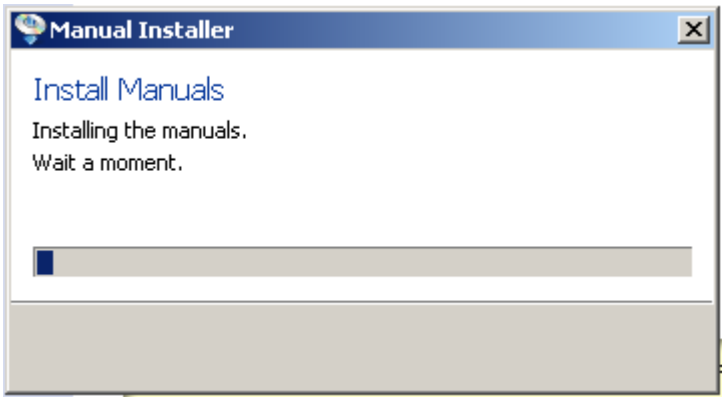

15) Press **[Exit]**

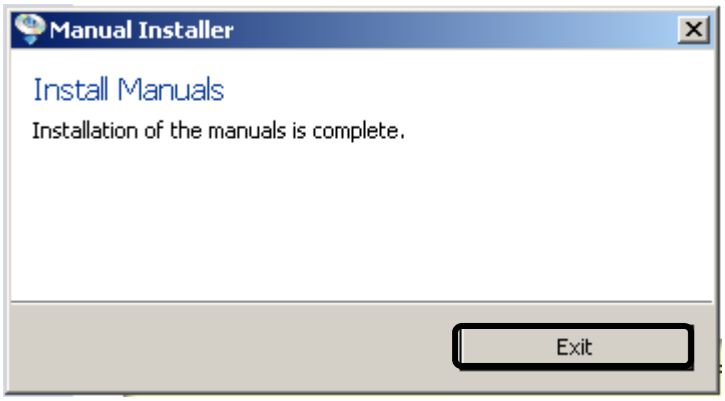

16) Click **[Next]** to continue

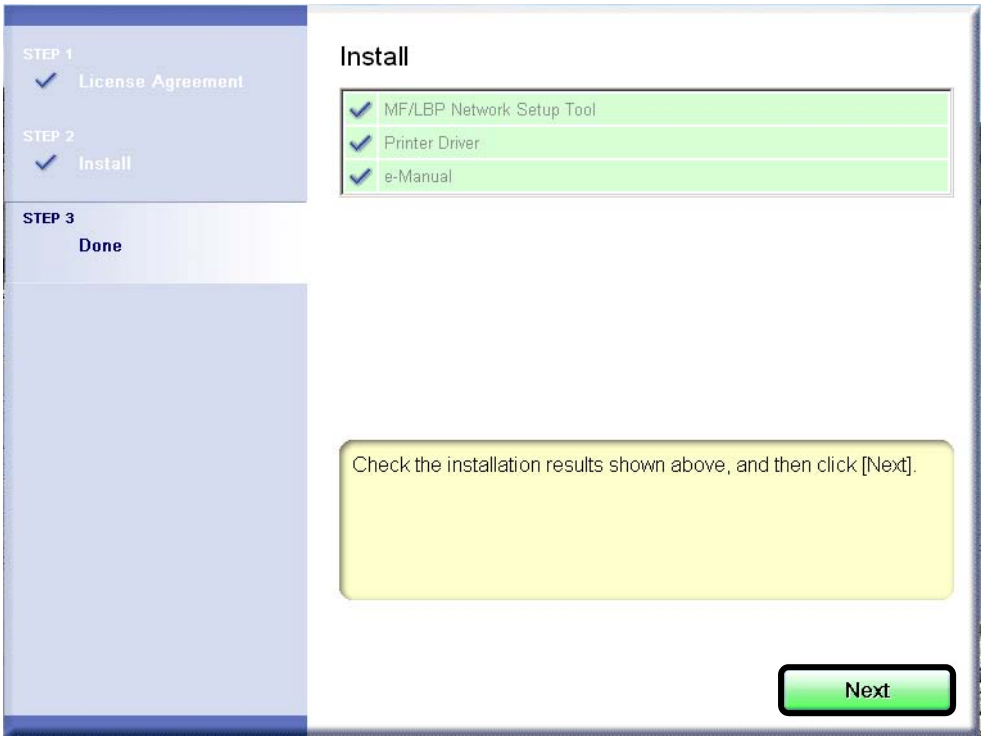

17) Click **[Exit]** and then eject the CD.

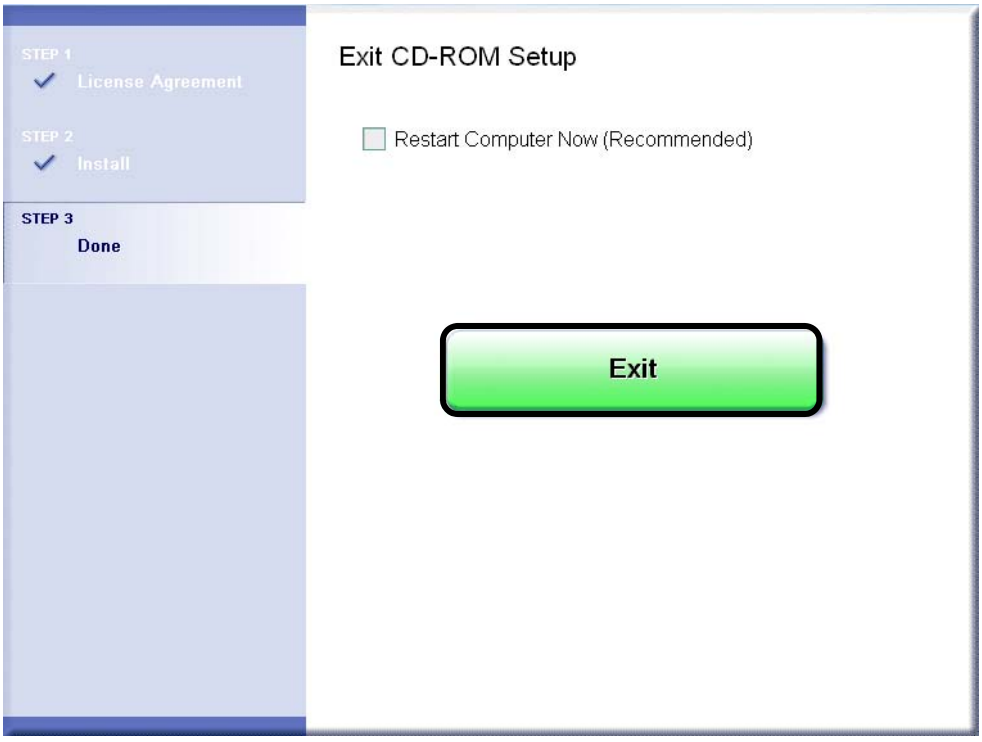

Follow the procedure below to set up your printer wirelessly.

18) Insert User Software CD.
19) Click **Easy Installation**.

20) You will see the below screen, click **Start**

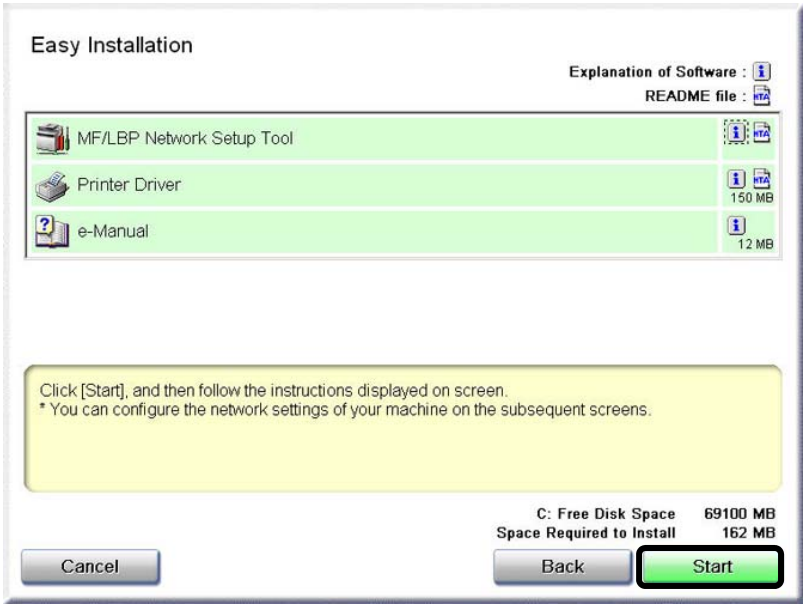

21) Click **[Yes]** to accept the terms of the License Agreement.

22) Select the **[Wireless LAN Connection]** radio button, and then click **[NEXT].**

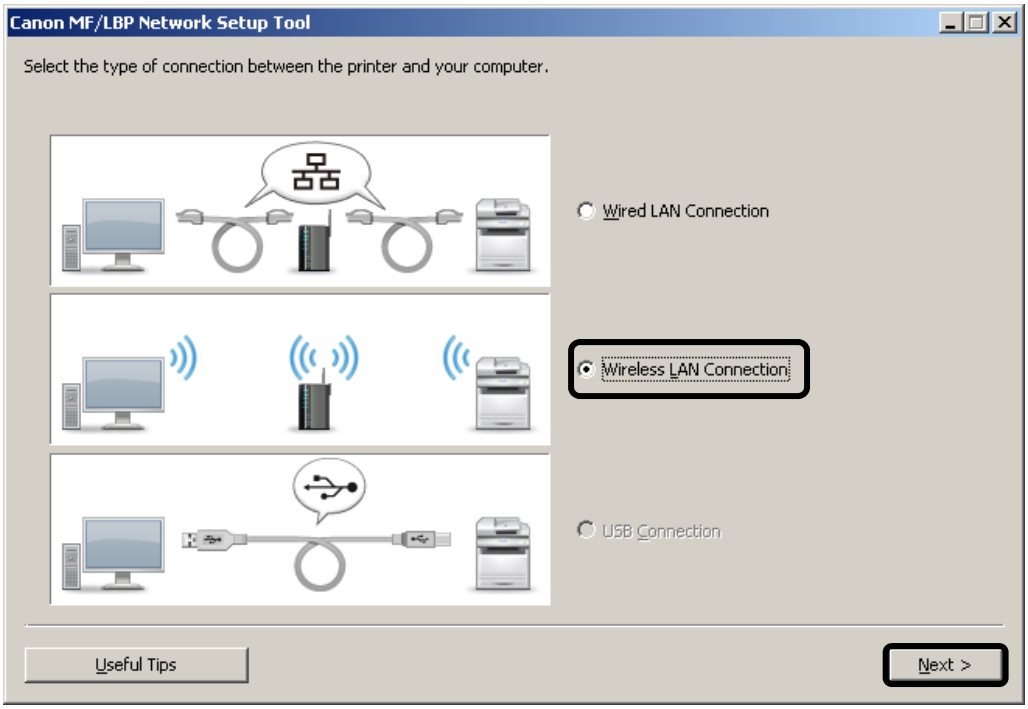

23) Select the **[Yes, I want to configure network settings]** radio button, and then click **[Next].**

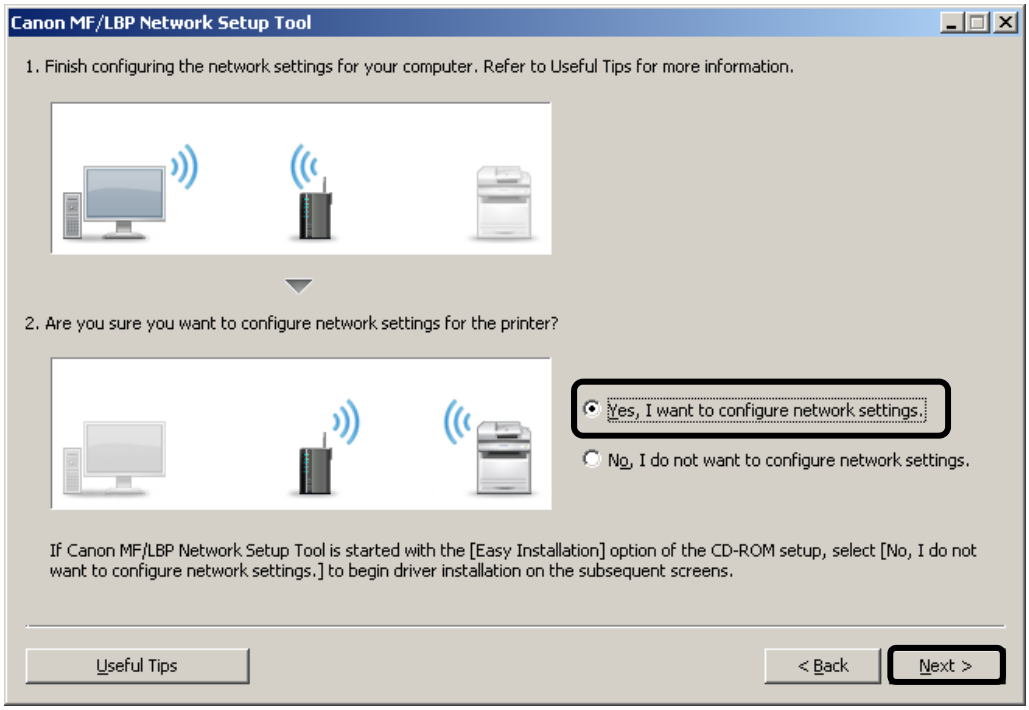

24) Select the **[Easy Setup]** radio button, and then click **[Next]**.

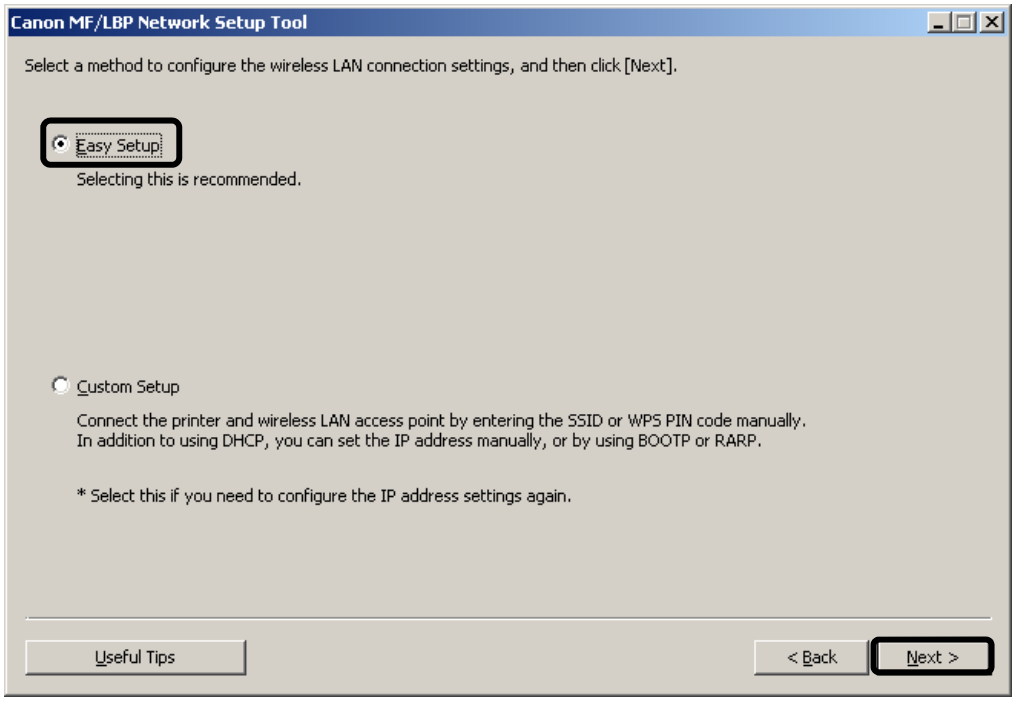

25) Check to see if your wireless router has a WPS button, and select the appropriate radio button, as shown in the screen below.

Select **[My wireless LAN access point does not have a WPS button or I cannot find the button.]** if:

*You are not sure which connection method to use (Or refer to Useful Tips)

* Your router does not have a WPS button

Then click [Next]

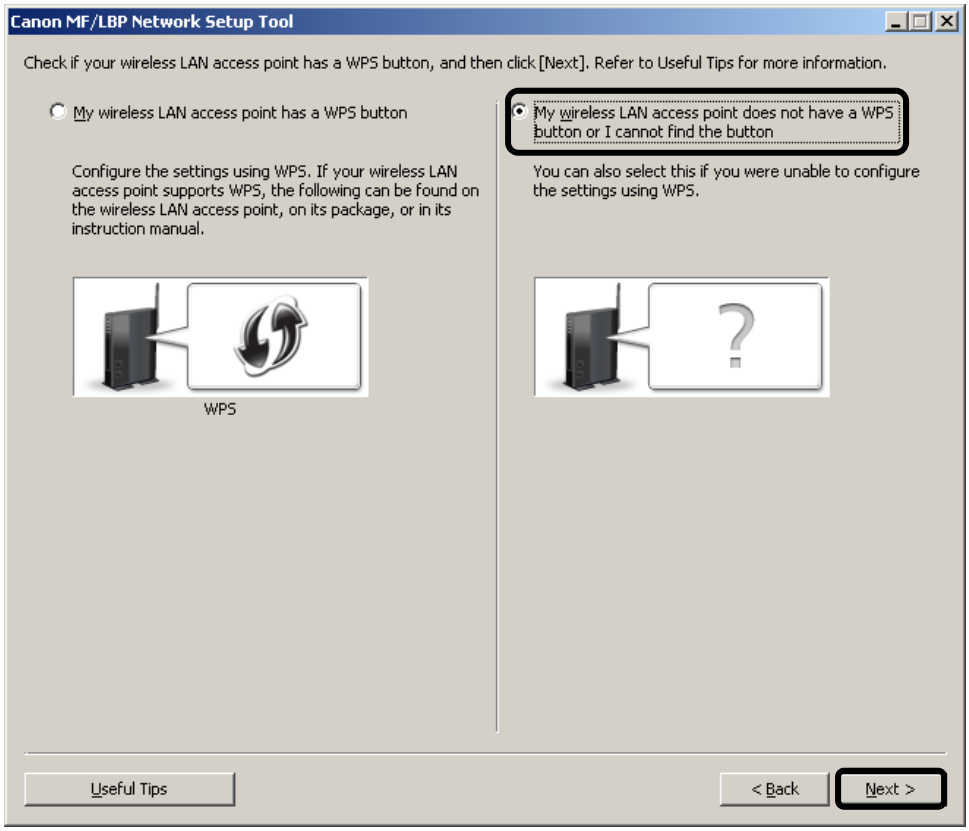

*If your router has a WPS button continue to page 33

26) Follow the instructions on the screen, as shown below, and then click **[Next].**

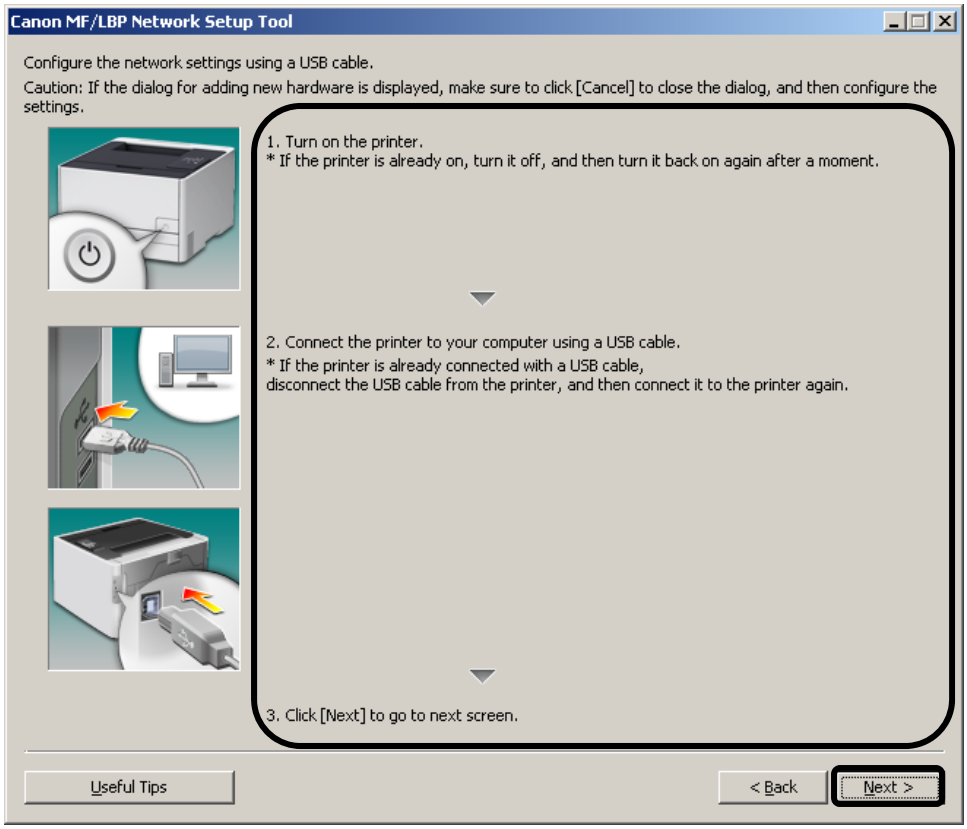

The screen below appears while **searching for your wireless network**.

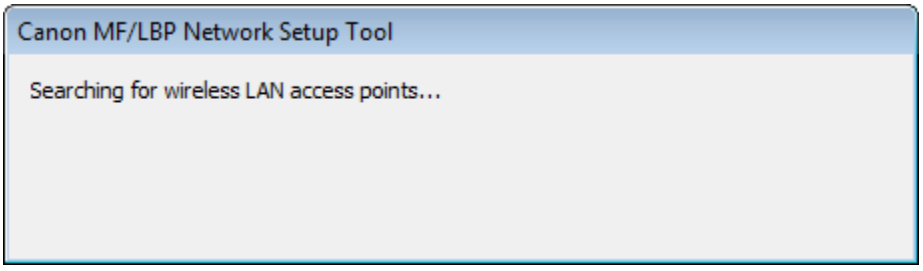

If the message shown below appears, read the message, and then click **[OK]**.

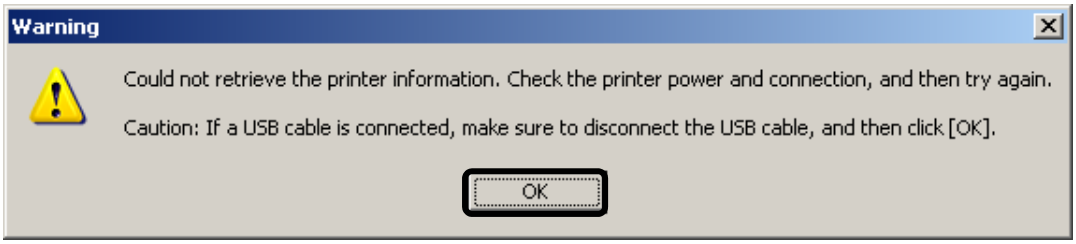

Make sure that the USB cable is connected to your computer and to the LBP7110Cw, and make sure that the printer is turned ON. Click **[Next]**.

27) When a list of wireless networks appears, select your wireless network, and then click **[Next]**.

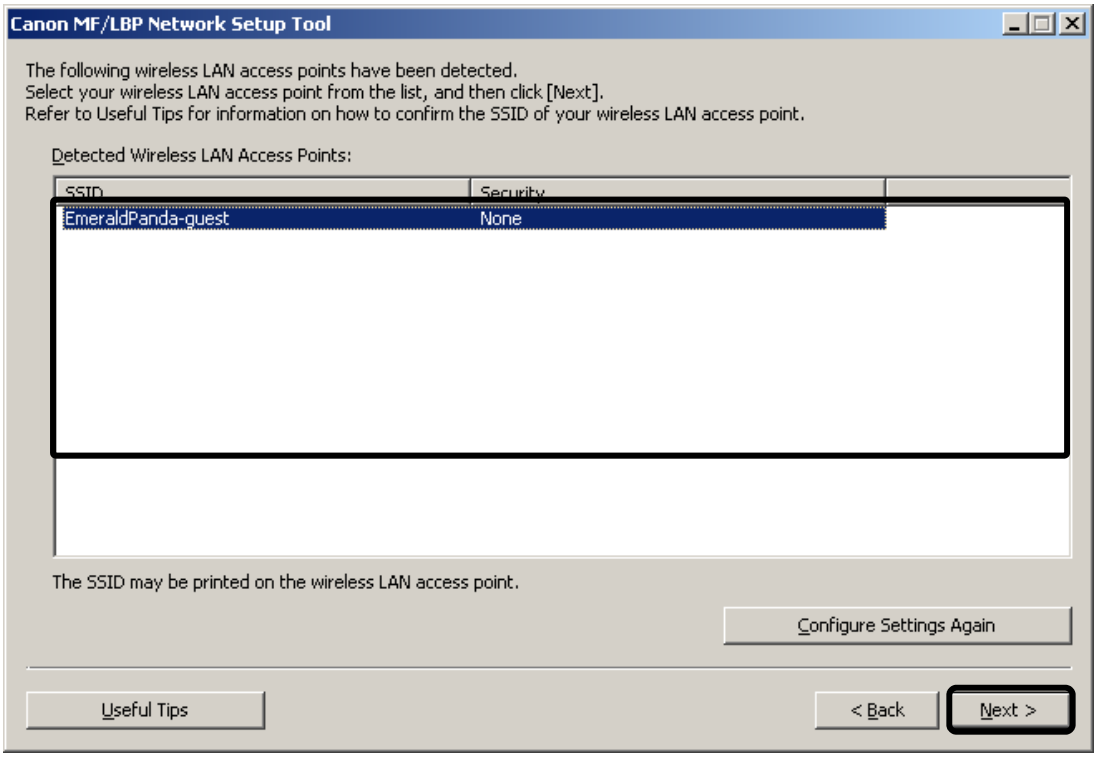

28) If your computer is already connected to the same wireless network as the printer, you do not have to enter your network key. If your computer is not connected to the same wireless network as the printer, enter the Network Key in the blank field, and then click **[Next]**.

While the screen below appears, the Wi-Fi indicator on your printer blinks blue. When the printer is connected to the network, the Wi-Fi indicator **turns solid blue**.

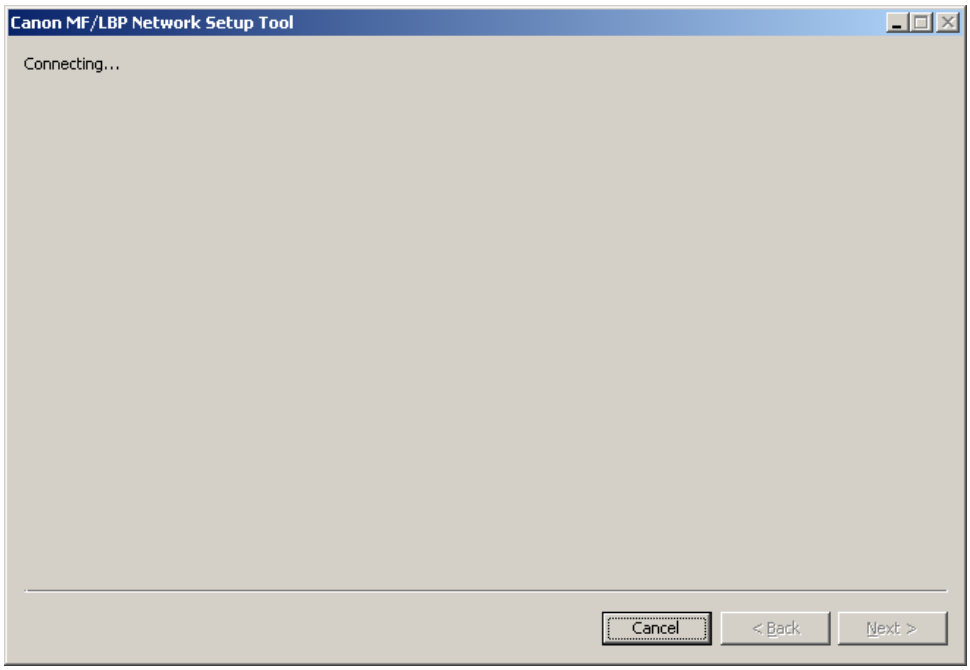

29) Disconnect the USB cable from your printer, and then click **[Next]**.

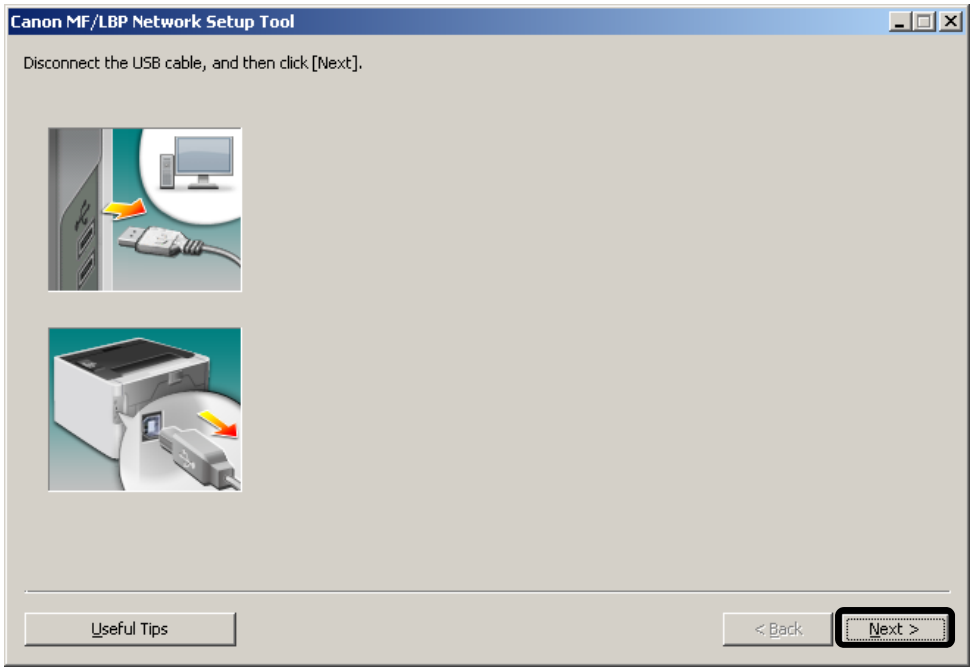

30) Click **[Next]** to begin wireless driver installation

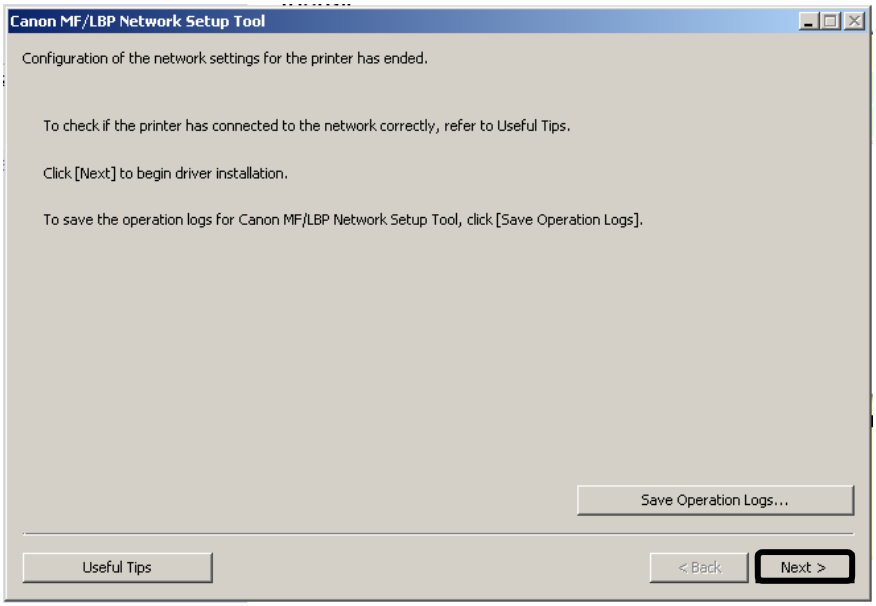

31) When the Print Driver Setup Wizard launches, click **[Next]**.

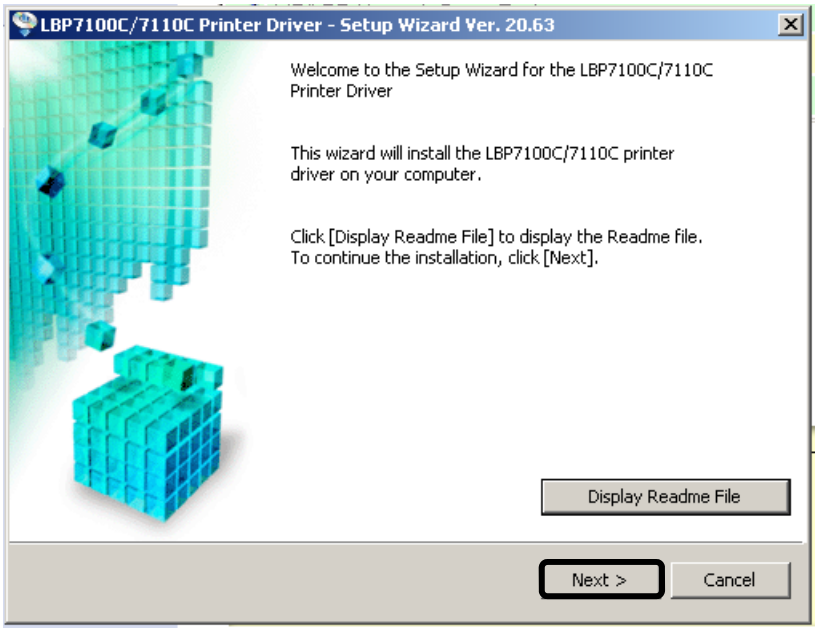

32) Select the **[Search for Network Printers to Install]** radio button, and then click **[Next]**.

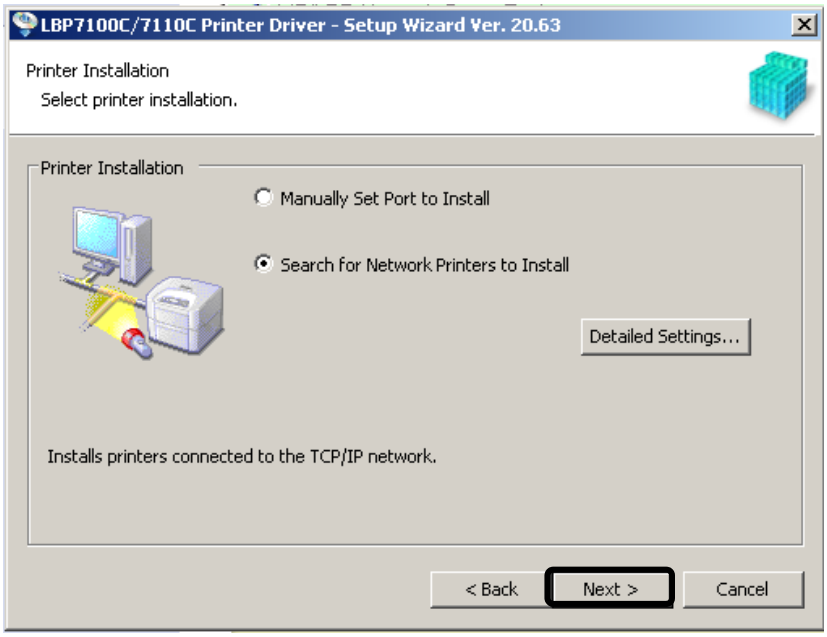

33) Make sure that **[Add Printers]** is selected, and click **[Next]**.

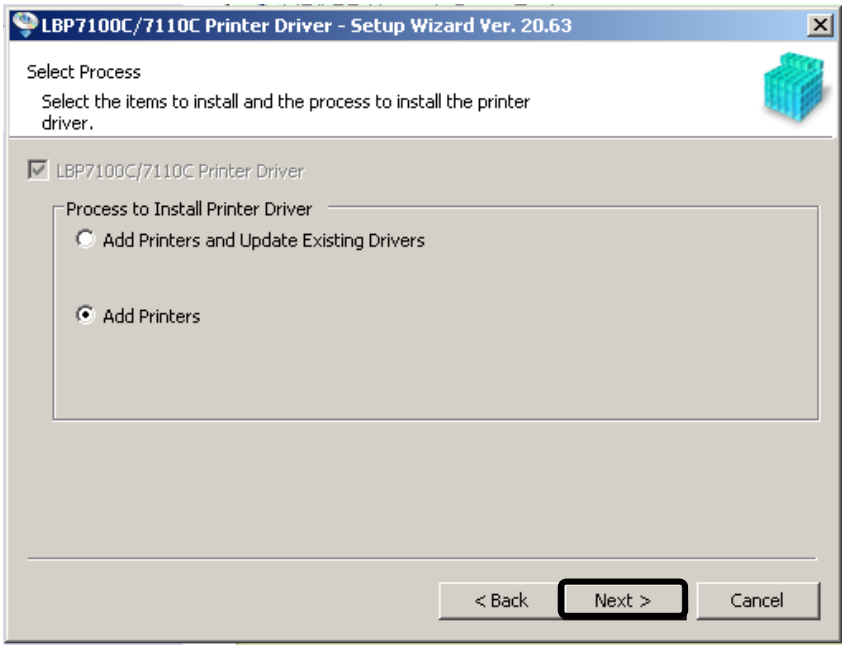

Your computer searches for the LBP7110Cw printer.

34) Select the LBP7110Cw printer from the Printer List, and then click **[Add]**.

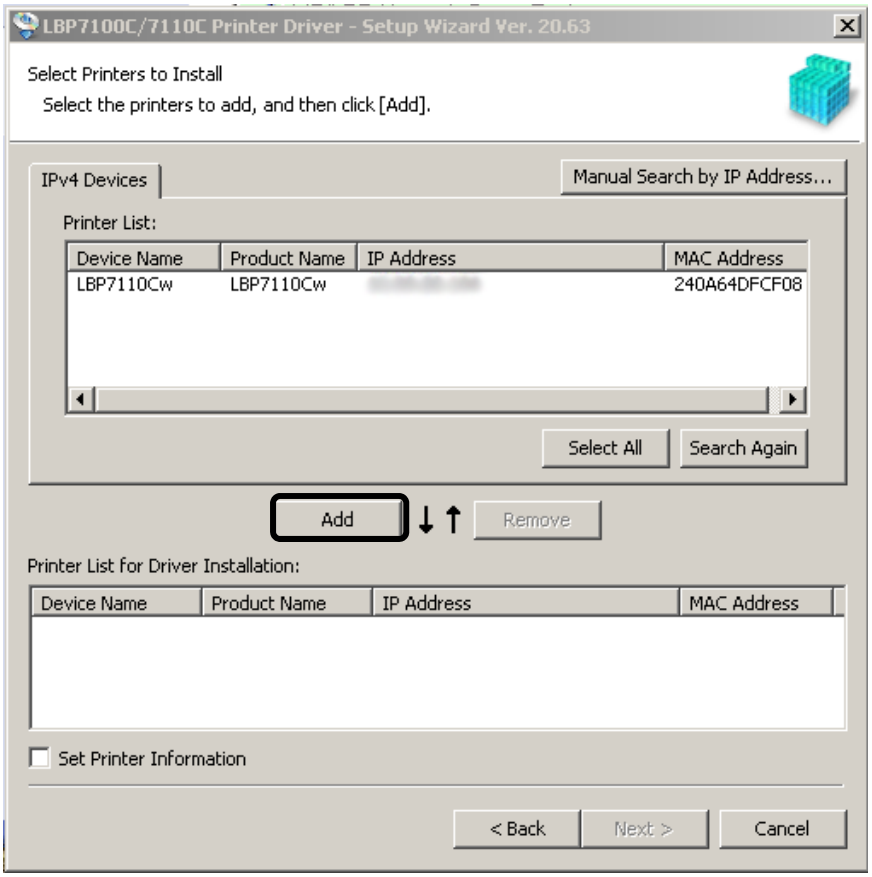

35) Once the printer appears in the Printer List for Driver Installation, click **[Next]**.

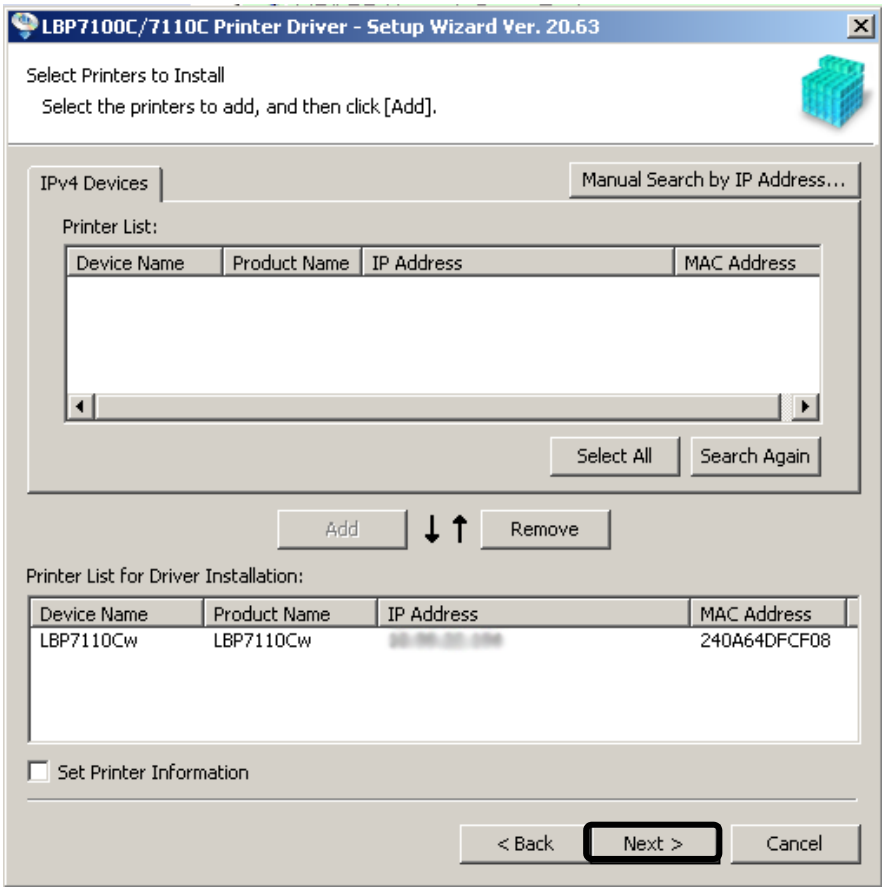

36) Click **[Start]** to install the driver.

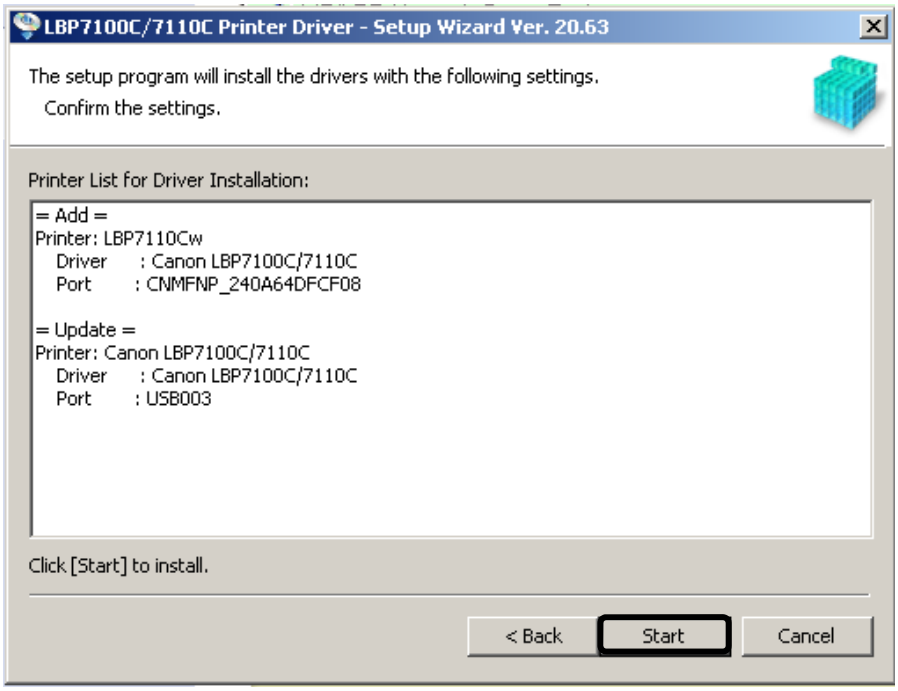

37) Click **[Yes]** to continue.

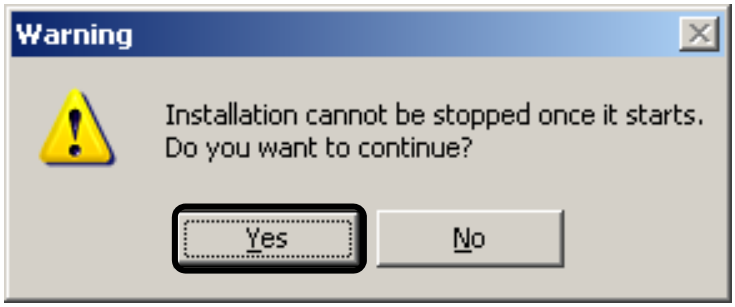

38) **Please wait** until the driver installs.

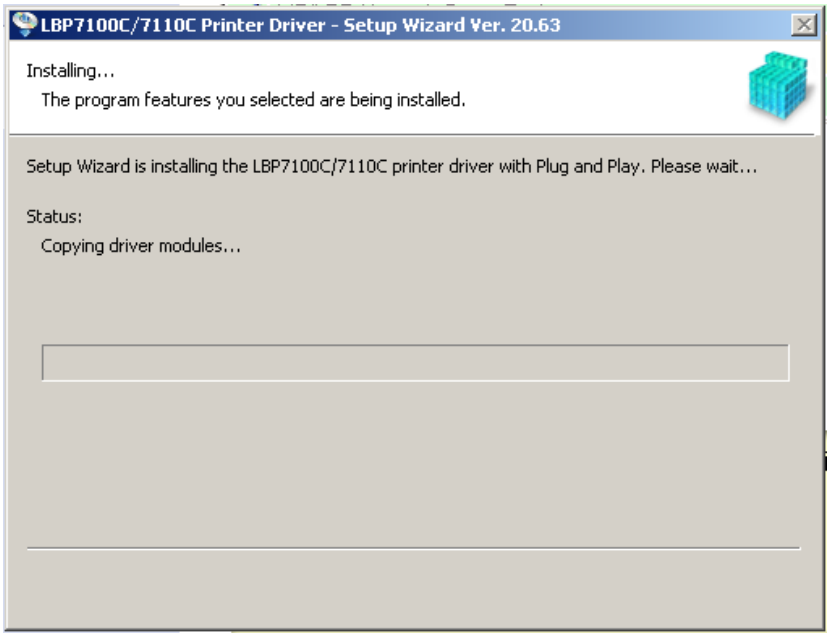

39) Select **[Install]** to install the e-manual.

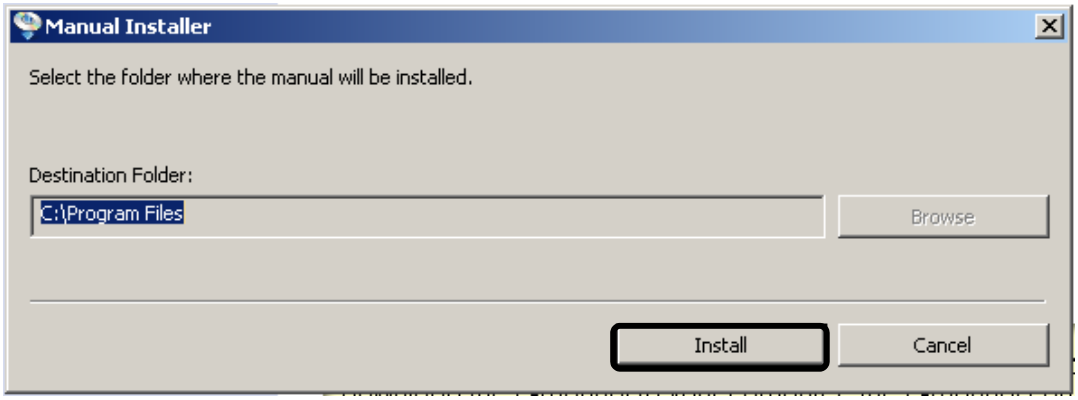

40) **Please wait** while manuals install.

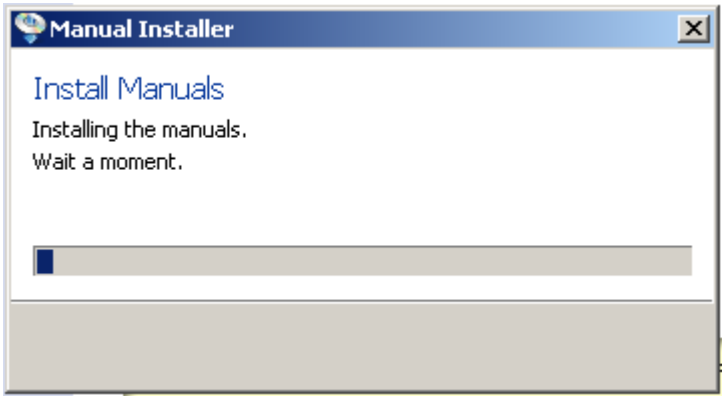

41) Press **[Exit]**

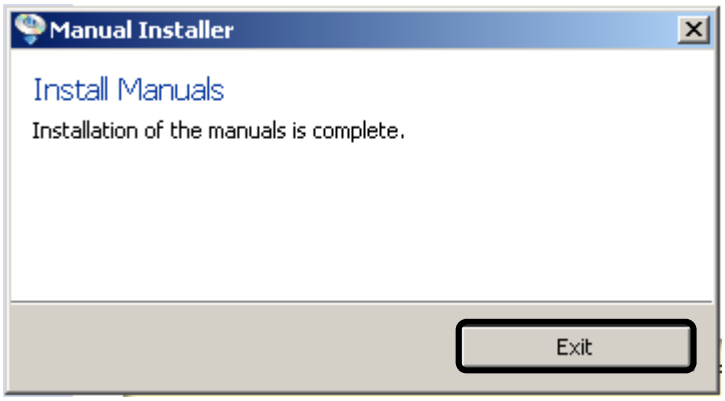

42) Click **[Next]** to continue

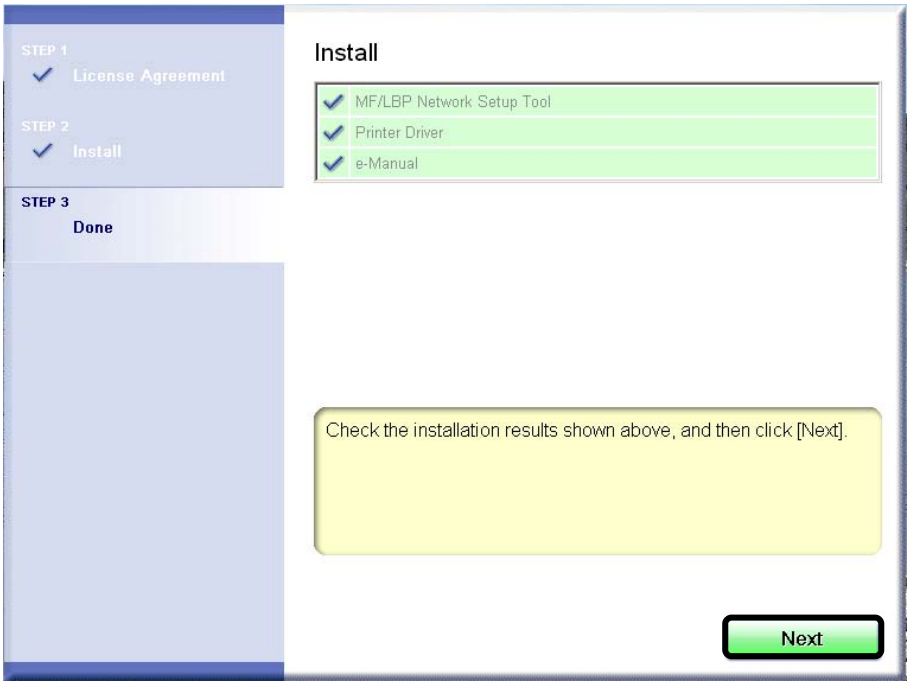

43) Make sure Restart Computer Now is selected, click **[Restart]**

Congratulations! You can now print wirelessly to your **LBP7110Cw**.

You may see two options appear when printing from an application. If you want to print wirelessly choose the one labeled **LBP7110Cw**. To print via USB connection (USB Cable must be connected to computer and printer) choose Canon LBP7100C/7110C.

If you need further assistance in setting up your printer, please contact us at **1-800-OK CANON (800-652-2666).**