Setting Up Your MX892 In Default Mode (Tel Priority Mode) Without An Answering Machine DSL/Cable Modem Connection

Next ▶

Fax Easy Setup

Click **Next** to step through this image-friendly version of **Fax Easy Setup**.

If you started **Fax Easy Setup**, on the fax machine's operation panel, and prefer to go through this image-friendly version…

Step 1

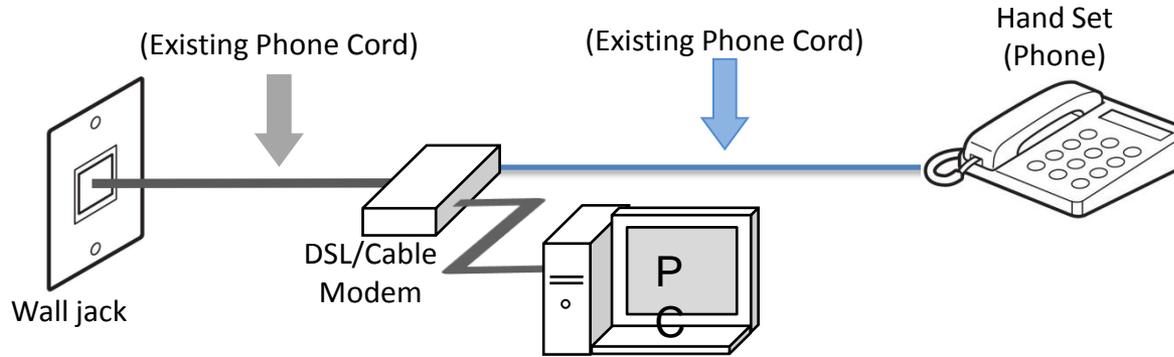Press the **FAX** button at any screen to go to fax standby mode.

Step 2

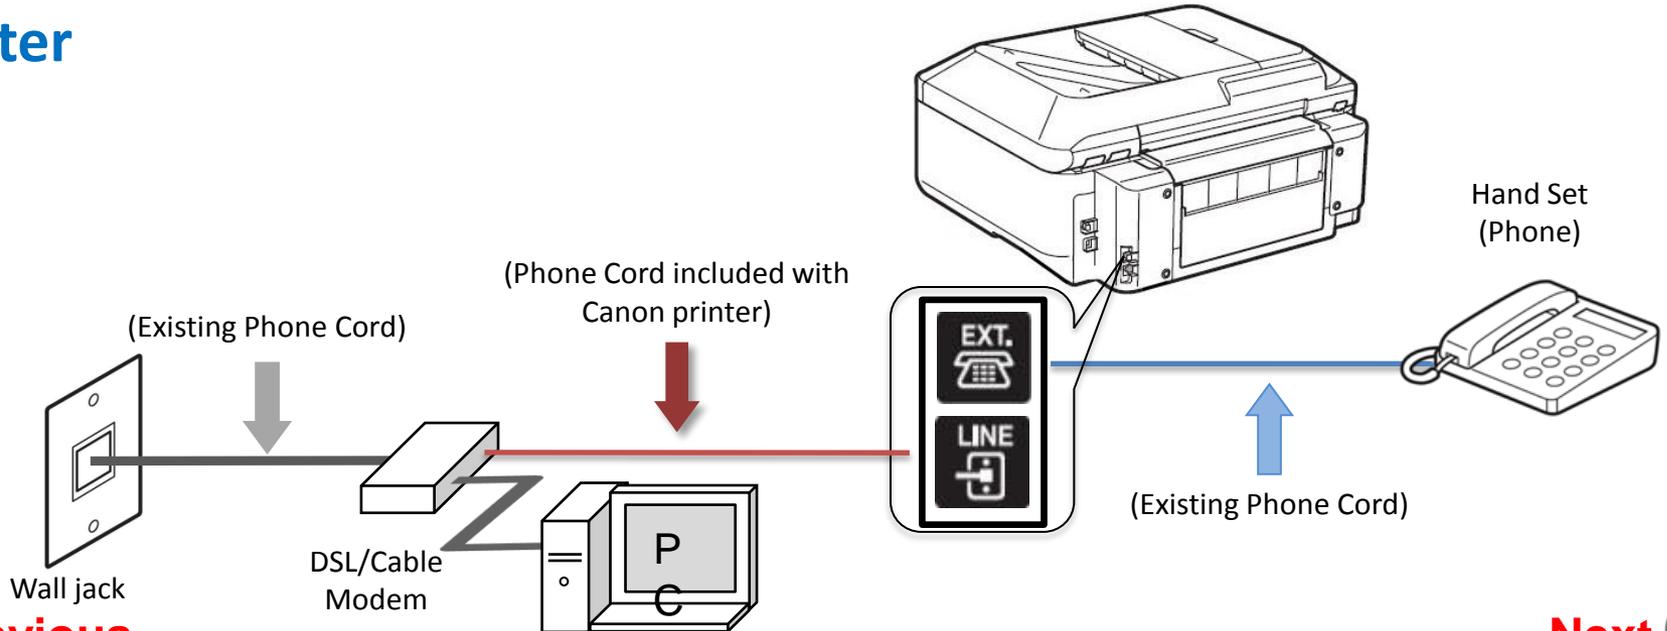Click **Next** to proceed through the setup.

Connecting The Phone Lines
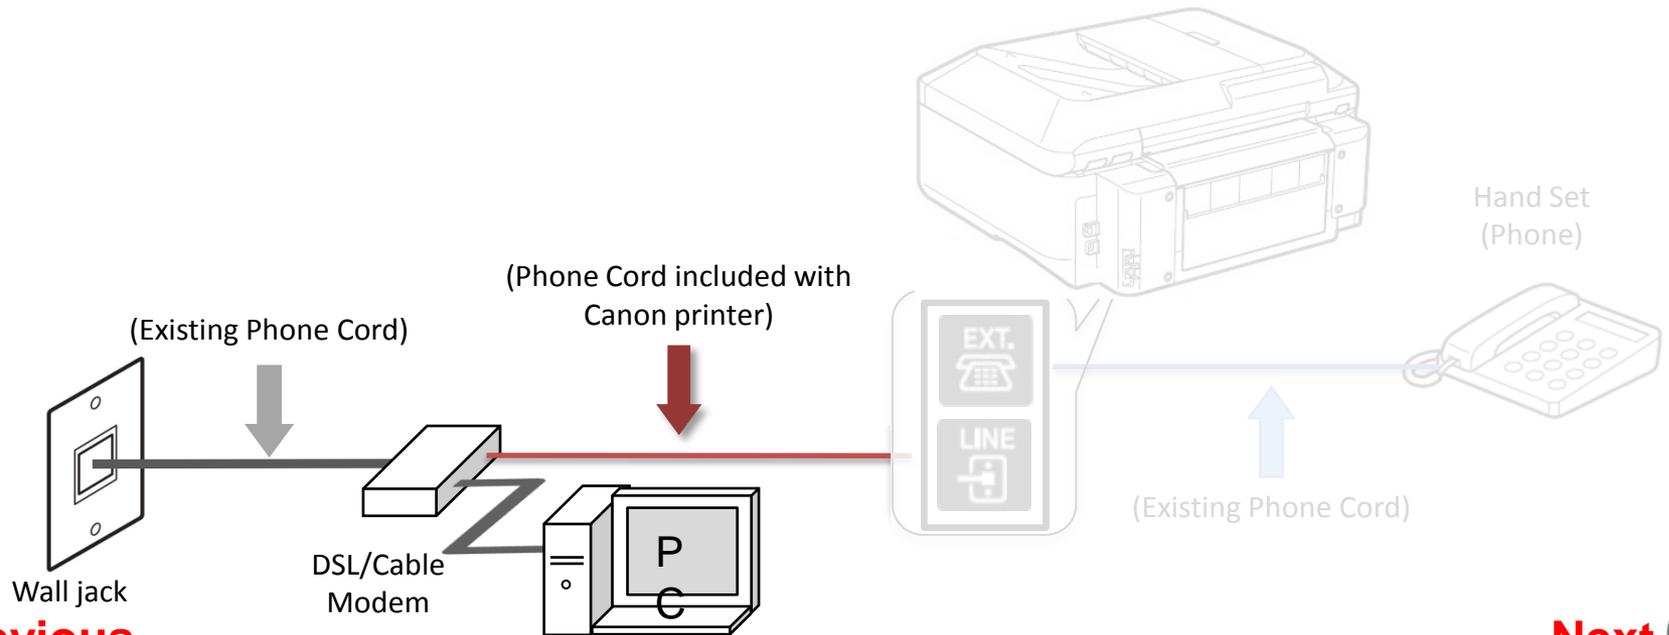
Fax to Phone Line Connection

Before

(Existing Phone Cord)   (Existing Phone Cord)   Hand Set (Phone)

Wall jack

DSL/Cable Modem

PC

After

Hand Set (Phone)

(Phone Cord included with Canon printer)

EXT.

LINE

(Existing Phone Cord)

(Existing Phone Cord)

Wall jack

DSL/Cable Modem

PC

Previous

Next

Fax to Phone Line Connection

- Plug the provided phone cord into the DSL/Cable Modem.

(Existing Phone Cord)

(Phone Cord included with Canon printer)

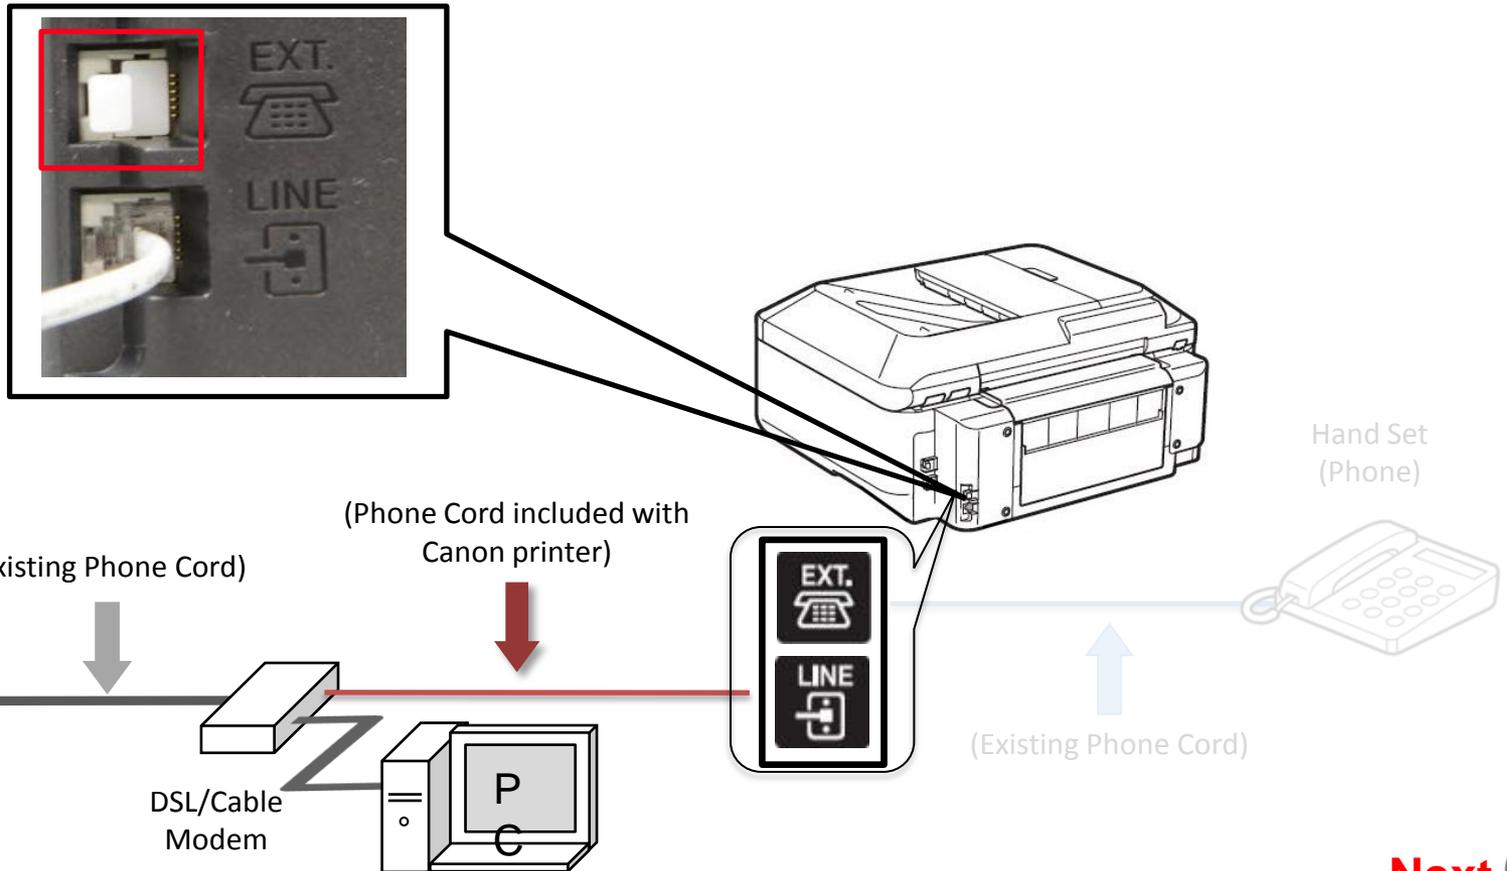Hand Set (Phone)

EXT.

LINE

(Existing Phone Cord)

Wall jack

DSL/Cable Modem

PC

Fax to Phone Line Connection

- Plug the provided phone cord into the "LINE" jack on the rear of the multifunction.

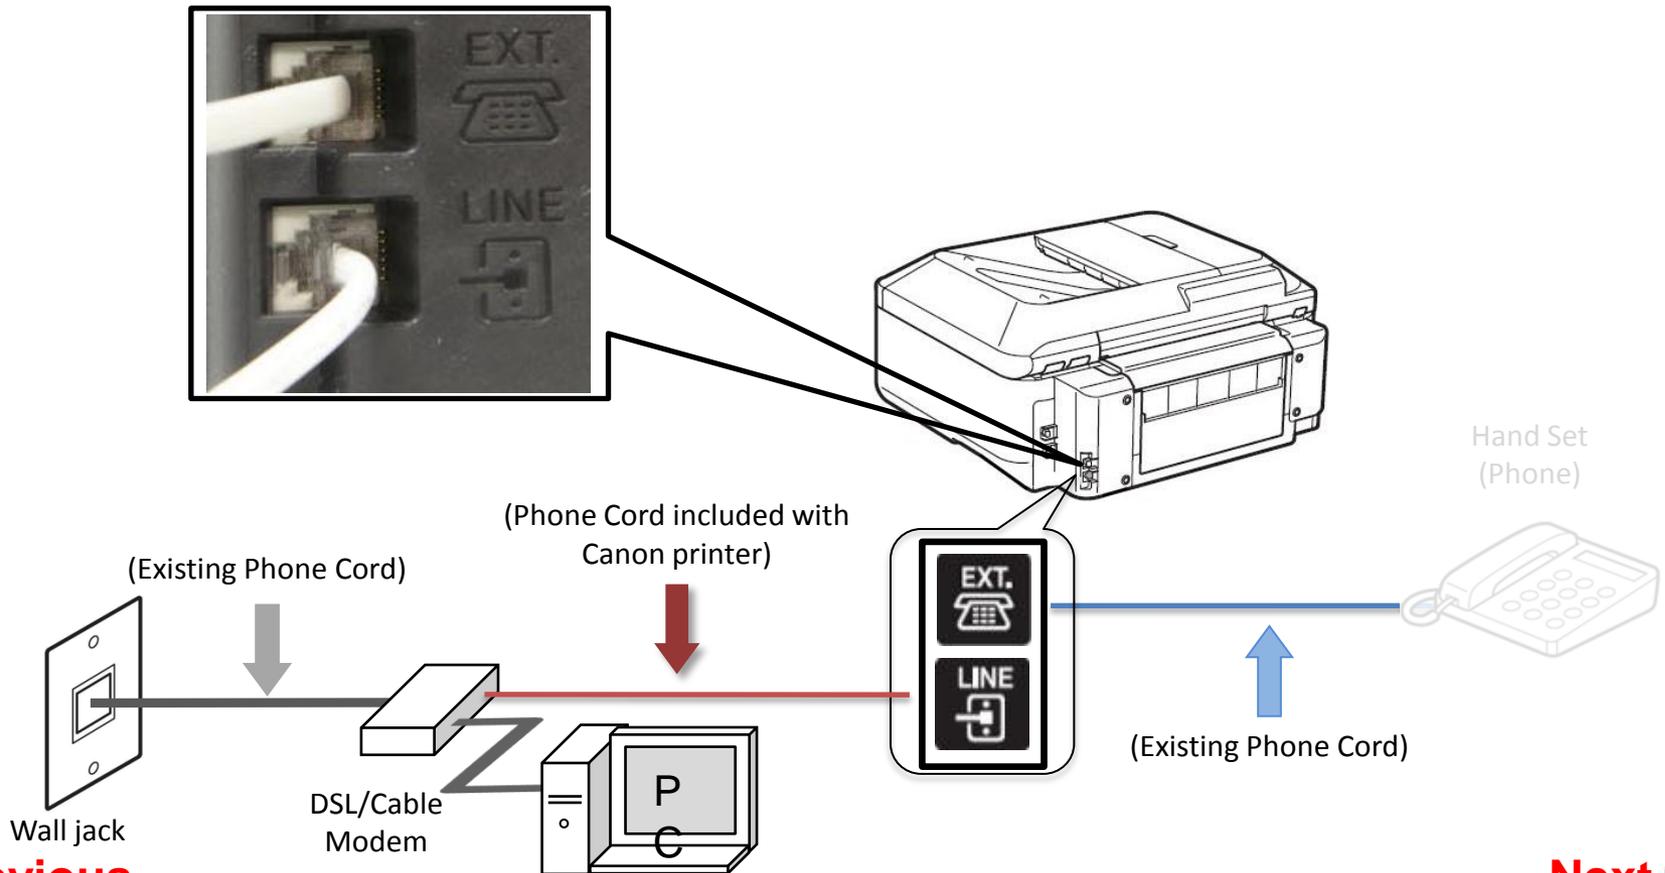(Phone Cord included with Canon printer)

(Existing Phone Cord)

Hand Set (Phone)

(Existing Phone Cord)

Wall jack

DSL/Cable Modem

PC
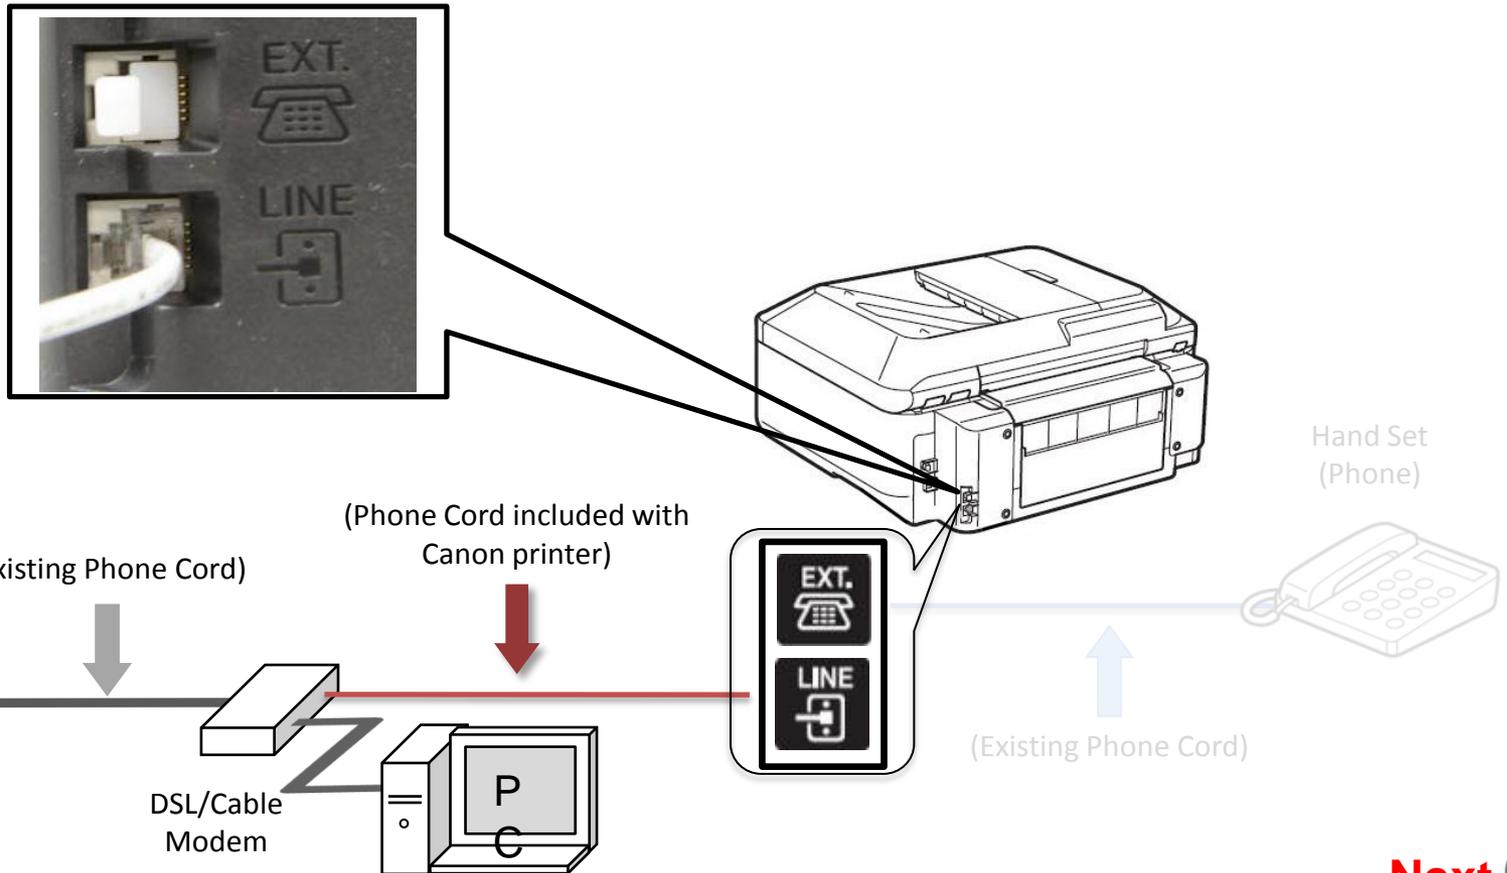
Fax to Phone Line Connection

- Remove the white plug from the upper jack labeled "EXT."

(Phone Cord included with Canon printer)

(Existing Phone Cord)

Hand Set (Phone)

Wall jack

DSL/Cable Modem

PC

(Existing Phone Cord)

Fax to Phone Line Connection

- Plug the second phone cord into the "EXT." jack located on the rear of the multifunction.

EXT.

LINE

Hand Set
(Phone)

(Phone Cord included with
Canon printer)

(Existing Phone Cord)

(Existing Phone Cord)

EXT.

LINE

Wall jack

DSL/Cable
Modem

PC

Fax to Phone Line Connection

- Plug the existing phone cord into the phone

Hand Set (Phone)

(Phone Cord included with Canon printer)

(Existing Phone Cord)

(Existing Phone Cord)

Wall jack

DSL/Cable Modem

PC
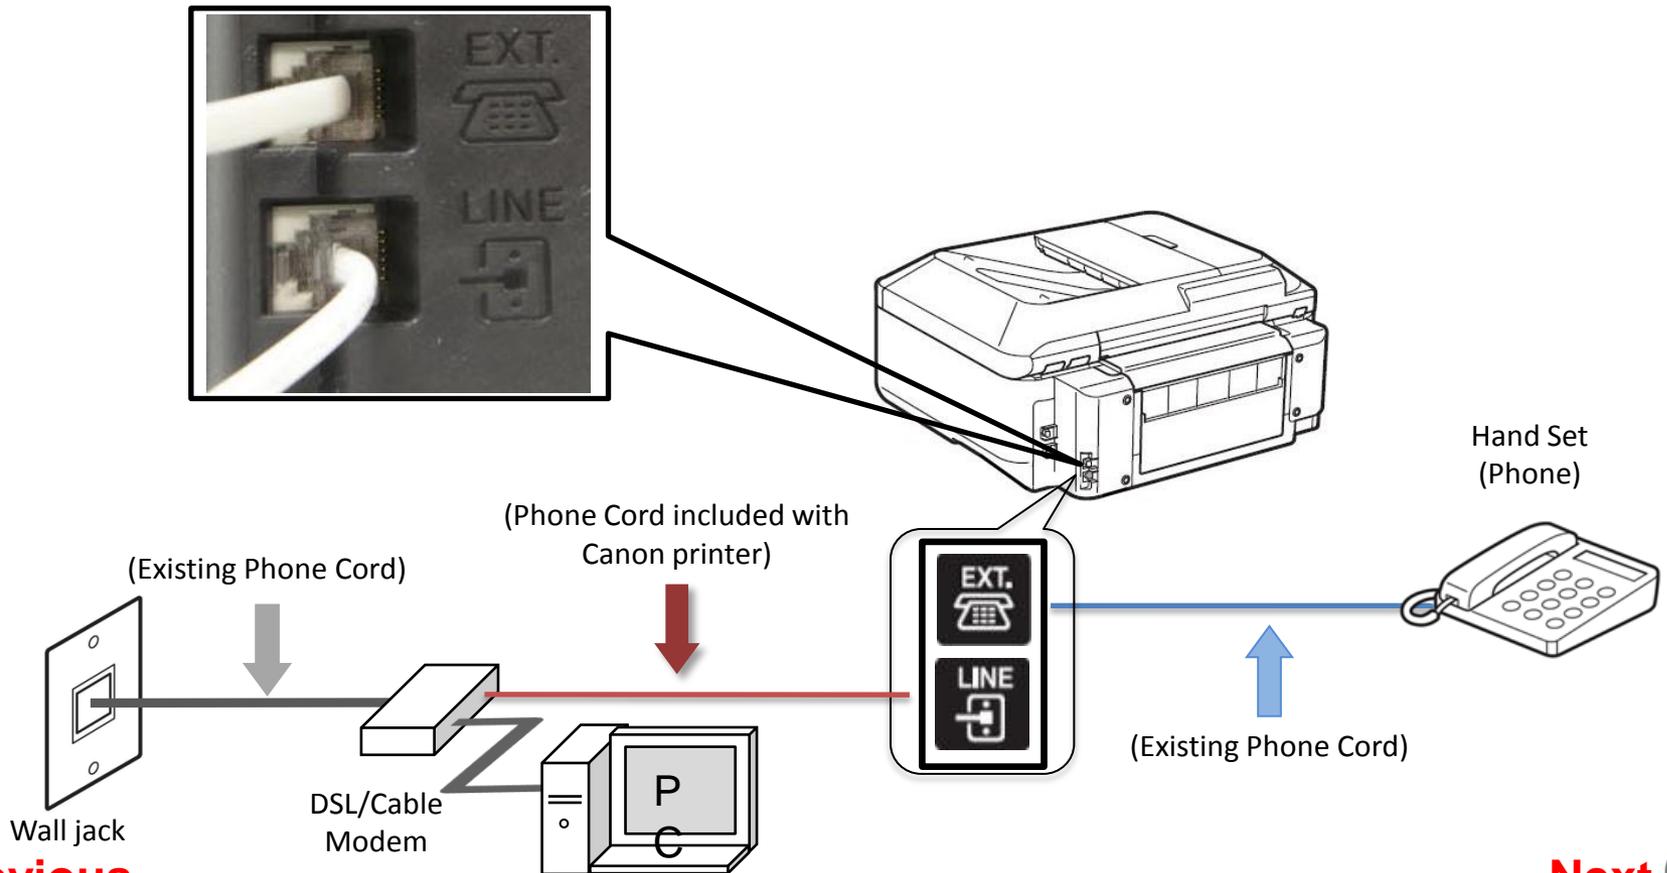
Setting Up The Receive Mode

Step 1

Turn on the MX892 by pressing the **ON** button if the machine is not powered on already.

Step 2

Press the **FAX** button.

Step 3

The fax standby screen will appear.

Step 4

Press the center **FUNCTION** button.

Step 5

The **Receive mode settings** screen will appear.

Step 6

Use the **UP** or **Down** button to highlight "Tel priority mode".

Step 7

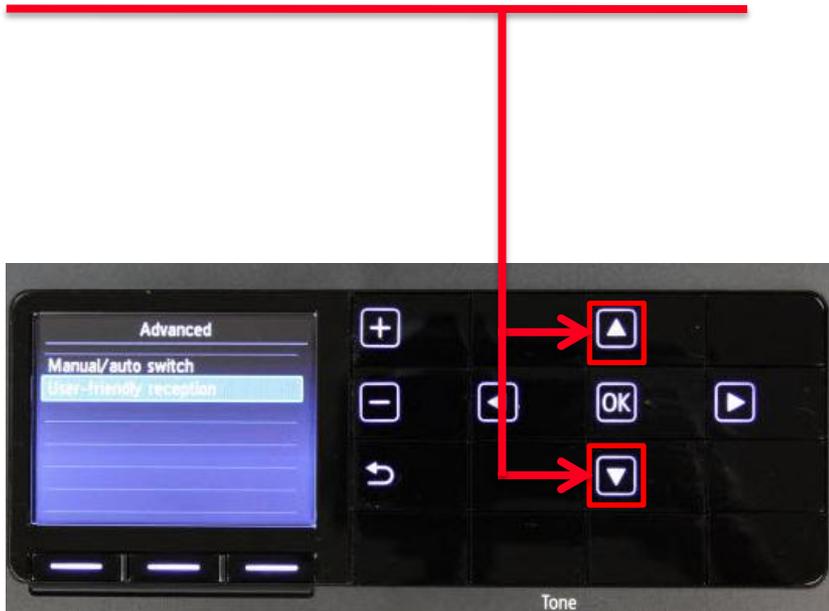Press the right **FUNCTION** button under the **Advanced** label.

Step 8

The **Advanced** screen will appear.

Step 9

Use the **UP** or **DOWN** button to select "User-friendly reception".

Step 10

Press the **OK** button.

Step 11

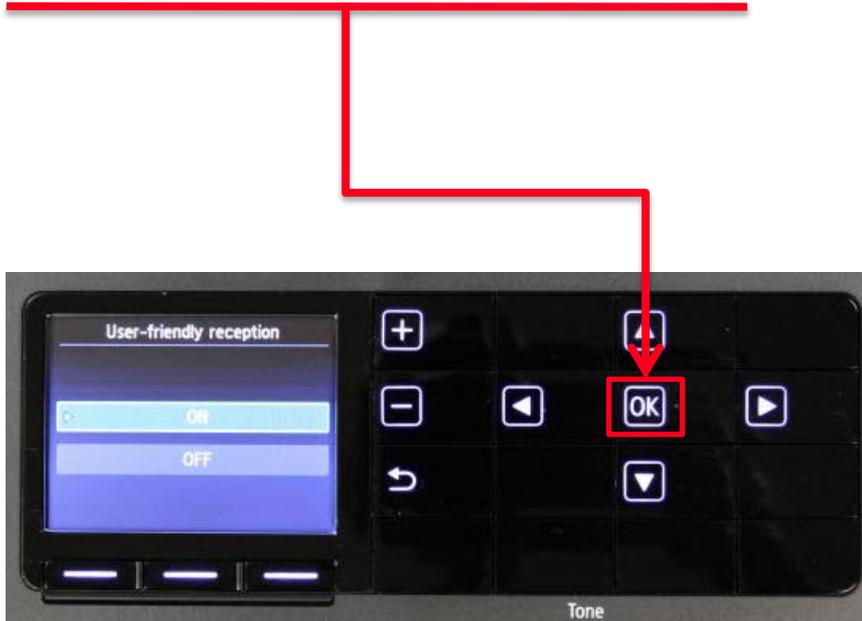The **User-friendly reception** screen will appear.

Step 12

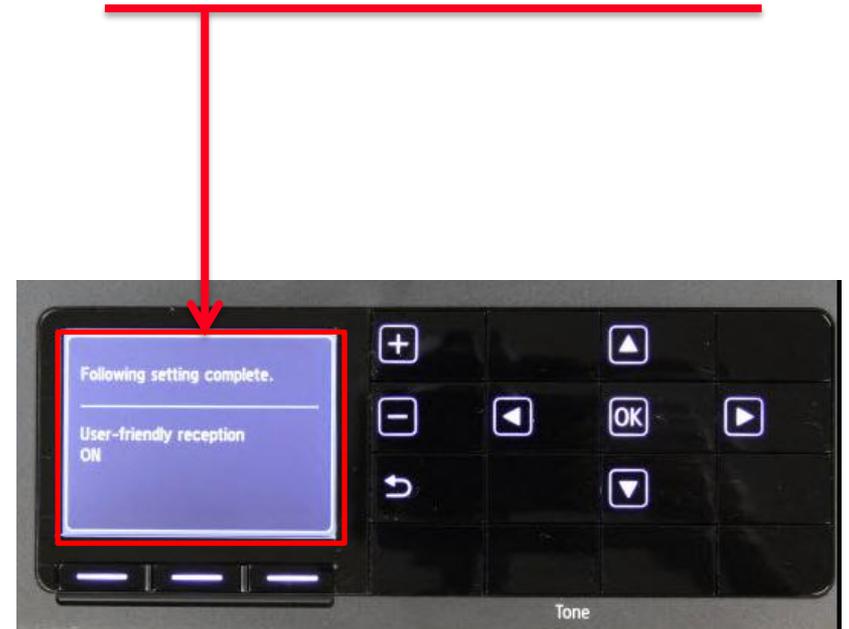Use the **UP** or **DOWN** button to select "ON".

Step 13

Press the **OK** button.

Step 14

The screen will quickly flash "User-friendly reception ON".

Step 15

The screen will return to the **Advanced** window.

Step 16

Press the **Back** button to return to **Receive mode settings** window.

Step 17

Confirm "TEL priority mode" is highlighted and then press the **OK** button.

Step 18

You will return to the "Fax standby screen" and the receive mode will appear on the screen.

Receiving A Fax

To receive a fax:

- Pick up the handset on the phone connected to the MX892.

- Listen for fax tones.

- When the tones stop hang up the handset.

- The MX892 will receive the fax document.

IMPORTANT: In order to receive a fax, you must pick up the handset on a phone that is connected to the multifunction.

Previous