





Printing Images to a Wireless Printer Using an Infrastructure Connection

To connect in camera access point mode, see “Using Camera Access Point Mode to Establish a Connection” (p.46).

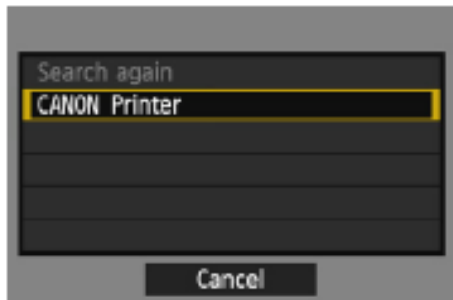


1 Select the printer to connect to.

- When a list of detected printers is displayed, select the printer to connect to and press <SET>.
- ▶ Some printers may make a beeping sound.
- When 16 or more printers are detected or search takes over 3 minutes, you can select [Search again].

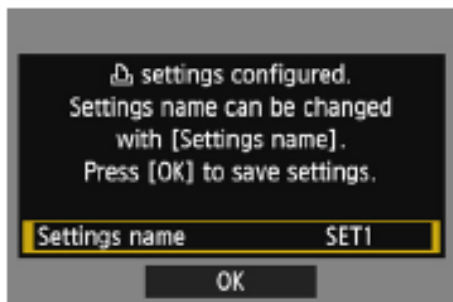

2 Perform further settings.

- To finish settings in this stage, press the <▲▼> key to select [OK], then press <SET> to go to step 3.
- To change the name of the settings, select [Settings name] and press <SET>.
- ▶ The virtual keyboard is displayed (p.14). Up to 30 characters can be entered for a settings name.

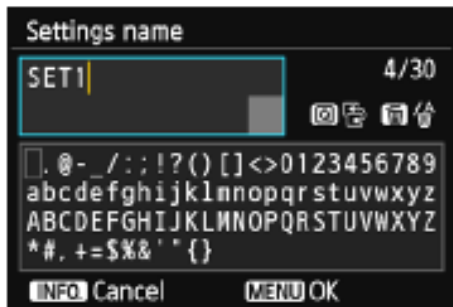




3

Save the settings.

- Select [OK] and press < (SET) > to save the settings.
- ▶ The [Connection] screen will be displayed.

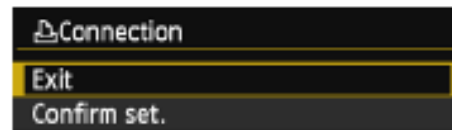

The settings for networking with the printer are now complete.

Printing



Play back an image.

- Press the <▶> button.
- ▶ An image is displayed and the <🖨> icon appears on the upper left of the screen indicating that the printer is connected.
- For further operations, refer to "Printing Images" in the Camera Instruction Manual.
- You can also perform what is described in "Direct Printing of Print-Ordered Images" in the Camera Instruction Manual.