



Getting Your Printer Back On Your Network After A Router Or Network Change

PIXMA iP8720

Mac OS

Getting Your Printer Back On Your Network After A Router Or Network Change

PIXMA iP8720

Mac OS

Preparing to Connect My Printer to the Network	3
Network Requirements	3
Notes on Wireless Connection	4
Installing the Drivers & Software	5

Important

If any of the following situations exist


- You have replaced your Router or Access Point
- You want to use a different wireless network
- Router settings have been changed.

Please complete the following steps to apply the new configuration settings to your printer.

Preparing to Connect the Multifunction To the Network

Network Requirements



Before connecting the machine to the network, make sure that configuration of the computer and access point or router is complete, and that the computer is connected to the network.

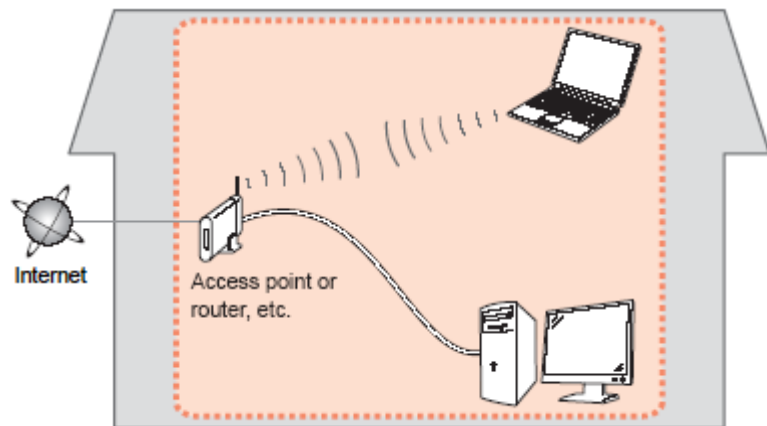

Wireless Connection

Before connecting the machine to the network, the computer needs to be connected to the network. Make sure that configuration of the computer and access point or router is complete.

Preparing to Connect the Multifunction To the Network

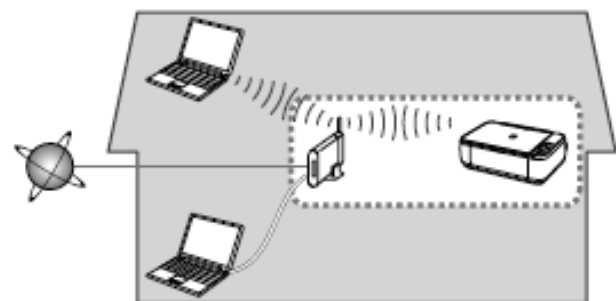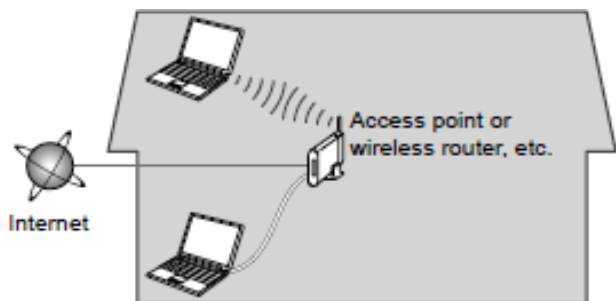

An "Ad-hoc connection," which establishes a direct connection to the computer over a wireless connection without using an access point, is not supported.

Notes on Network Connection

- The configuration, router functions, setup procedures and security settings of the network device vary depending on your system environment. For details, refer to your device's instruction manual or contact its manufacturer.
- In an office setup, consult your network administrator
- If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.
- Place the machine and computer on the same network segment.

Installing the Drivers & Software

Software Installation

To use the machine by connecting it to a computer, software including the drivers needs to be copied (installed) to the computer's hard disk. Installation time varies depending on the computer environment or the number of application software to be installed.

IMPORTANT


- Log on as the administrator (or a member of the Administrators group).
- Quit all running applications before installation.
- Do not switch users during the installation process.
- Internet connection may be required during the installation. Connection fees may apply. Consult the internet service provider.
- If the firewall function of your security software is turned on, a warning message may appear that Canon software is attempting to access the network. If such a warning message appears, set the security software to always allow access.

Installing the Drivers & Software

When you reinstall your printer on your network because of a router or network change, you follow the same procedure as for a first time install. A step-by-step walk through of the wireless setup is built into the installation routine of the software for your PIXMA.


To begin the reinstall of your PIXMA iP8720 to your wireless network, you must first download the software to your computer. [Click here to access the IJ Setup site.](#) Read the **Product Setup** instructions, then click **Download**. Double-click the downloaded file to start the install procedure.

If the following screen appears, click **Start Setup Again**

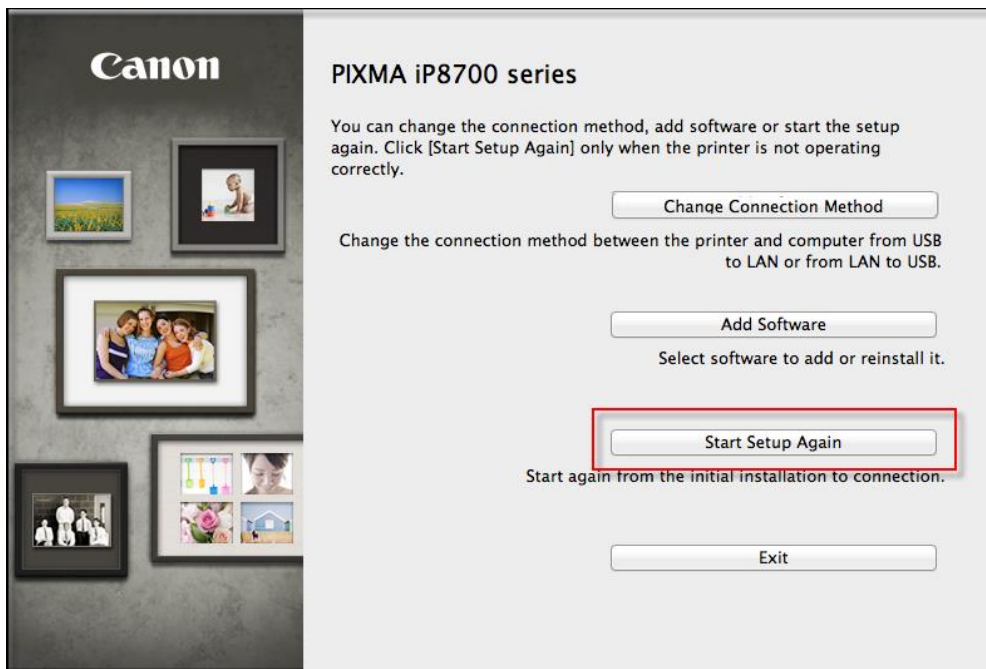

Installing the Drivers & Software

After starting the setup, follow on-screen instructions until the **2-1 Printer Setup** screen. Click **Connect to the Network**

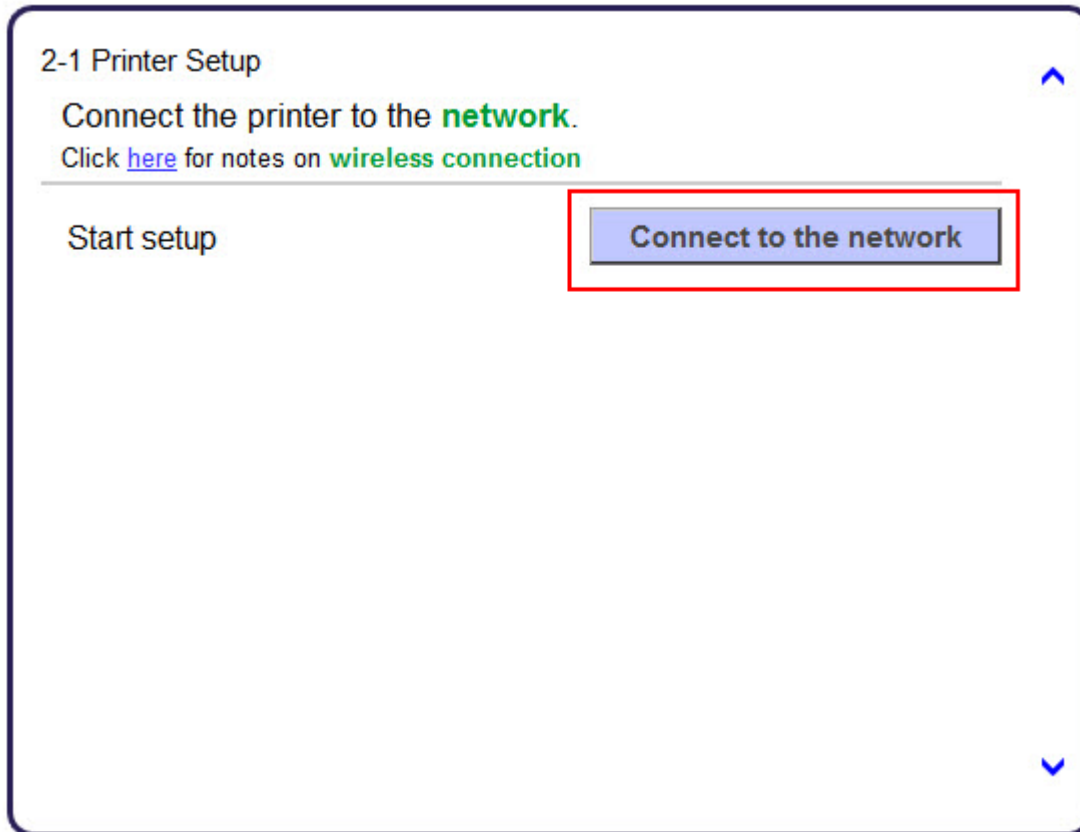

Installing the Drivers & Software

Select **Cableless setup** on the **3-1 Setup Procedure Selection** screen.

3-1 Setup Procedure Selection ▲

Check the following and select the most suitable connection method.

Connect to **WPS-compatible Access Point** WPS

Setting the Access Point Information to the Printer Directly from Computer, without Operating the Access Point **Cableless setup**

Cableless setup may take some time. Internet connection may become temporarily unavailable during setup.
Cableless setup is not available on Windows XP. Perform setup with another connection method.

Connect Using Other Methods Other setup


▼

Installing the Drivers & Software

Continue to follow on-screen instructions.

As directed in the **4-1 Connection via Cableless setup** screen, hold down the **Wi-Fi** button on the printer until the **POWER** lamp flashes twice, then release the **Wi-Fi** button

4-1 Connection via Cableless setup

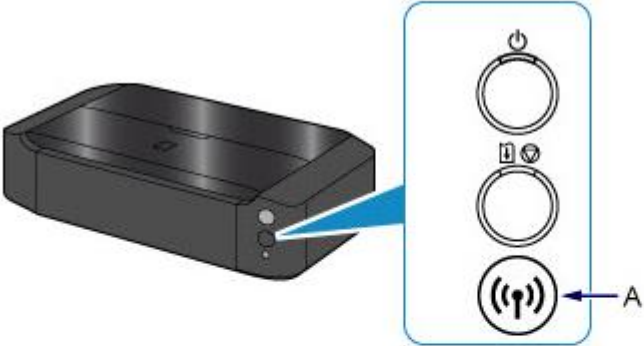


The diagram shows a side view of a printer. A blue callout box highlights three buttons on the front panel. From top to bottom: a power button with a power symbol, a Wi-Fi button with a Wi-Fi symbol, and a button labeled 'A' with a Wi-Fi symbol. A blue arrow points from the callout box to the Wi-Fi button on the printer.

1. Hold down the **Wi-Fi** button (A) on the printer until the (white) **POWER** lamp flashes 2 times, then release the **Wi-Fi** button after the second flash.

Installing the Drivers & Software

Carefully follow the instructions on the **Connection via Cableless setup** screen. (4-2). Click **Next**

4-2 Connection via Cableless setup



1. Make sure that the (blue) **Wi-Fi** lamp flashes quickly and the (white) **POWER** lamp is lit as shown in the illustration above.

2. Click "Next," then follow the instructions on the next screen to proceed with setup.

Start Again Back **Next**

Installing the Drivers & Software

Continue following on-screen instructions. On the **Software Installation List**, select *software to install and click **Next**.

***MP Drivers** is required and cannot be deselected. We recommend installing **My Image Garden** and **Quick Menu** to take full advantage of the printer's features. It is not necessary to re-install **My Image Garden** and **Quick Menu** if they were installed originally

Software Installation List

The selected software will be installed. Make sure that the software you want to install is selected, and then click [Next].

You need to install all the software below to use all functions of this printer.


<input checked="" type="checkbox"/>	Printer Driver	100 MB	Drive Macintosh HD 967022 MB free space
<input type="checkbox"/>	User's Manual	100 MB	
<input type="checkbox"/>	My Image Garden	680 MB	Total used space: 179 MB
<input type="checkbox"/>	Quick Menu	25 MB	
<input checked="" type="checkbox"/>	Canon IJ Network Tool	20 MB	
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			
<input type="checkbox"/>			

Installation may take some time depending on your network environment.

Installing the Drivers & Software

Continue following on-screen instructions.


When the **Setup Completion** dialog box appears, click **OK**.

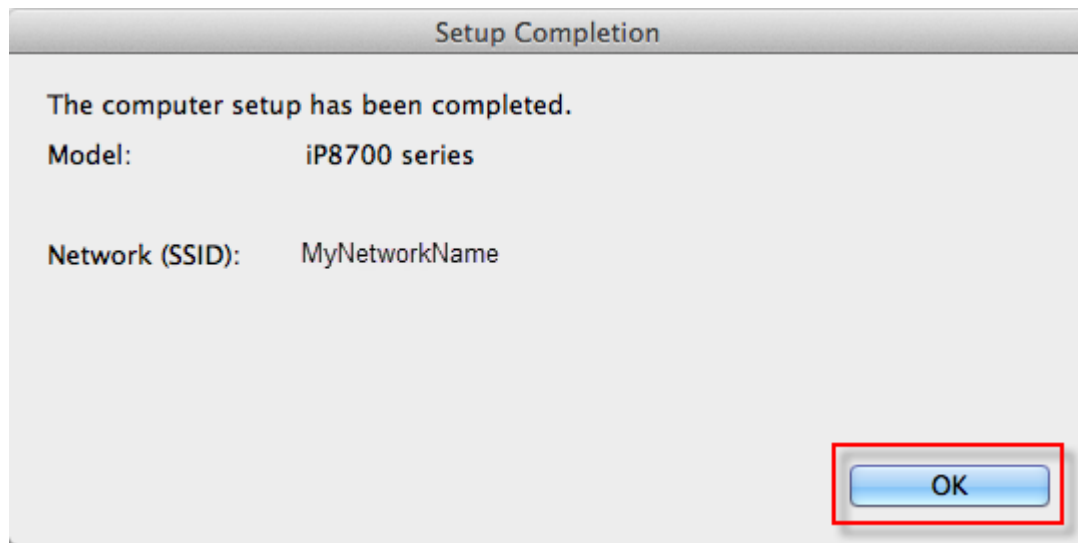

Installing the Drivers & Software


Continue following on-screen instructions.

When the **Add Printer** screen appears, click **Add Printer**.

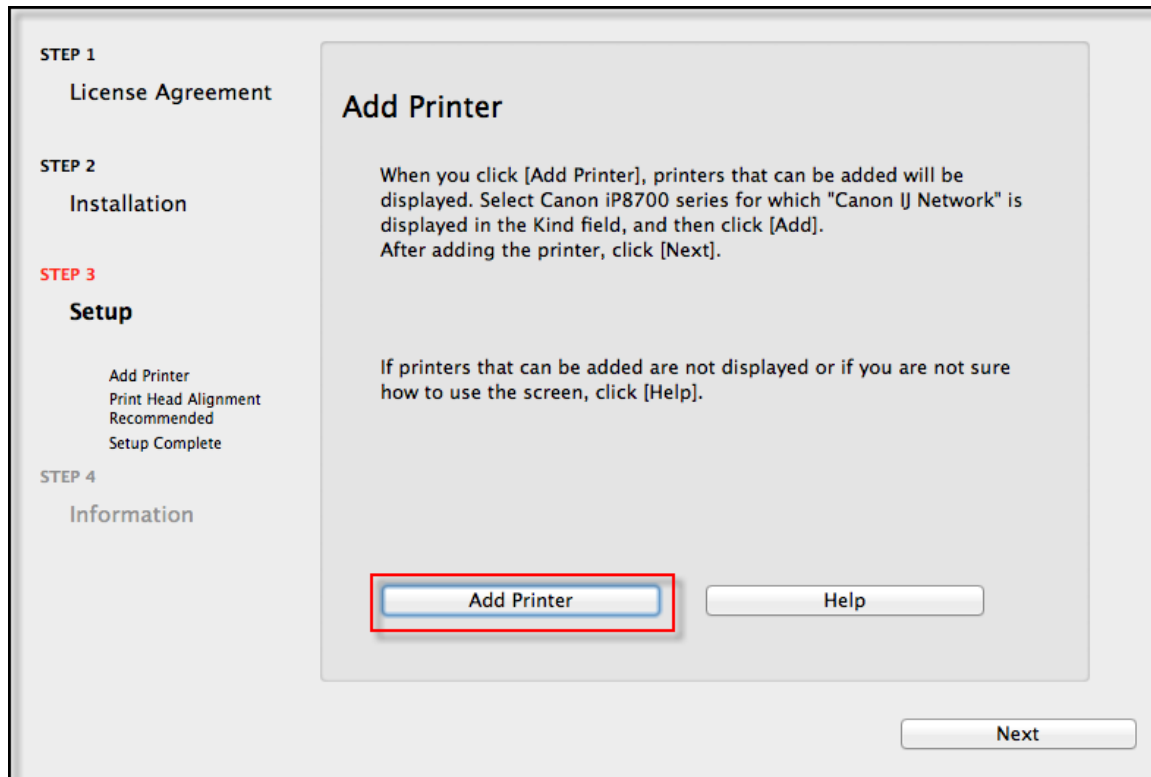

Installing the Drivers & Software


Select **Canon iP8700 series** with **Canon IJ Network** as **Kind**, then click **Add**.

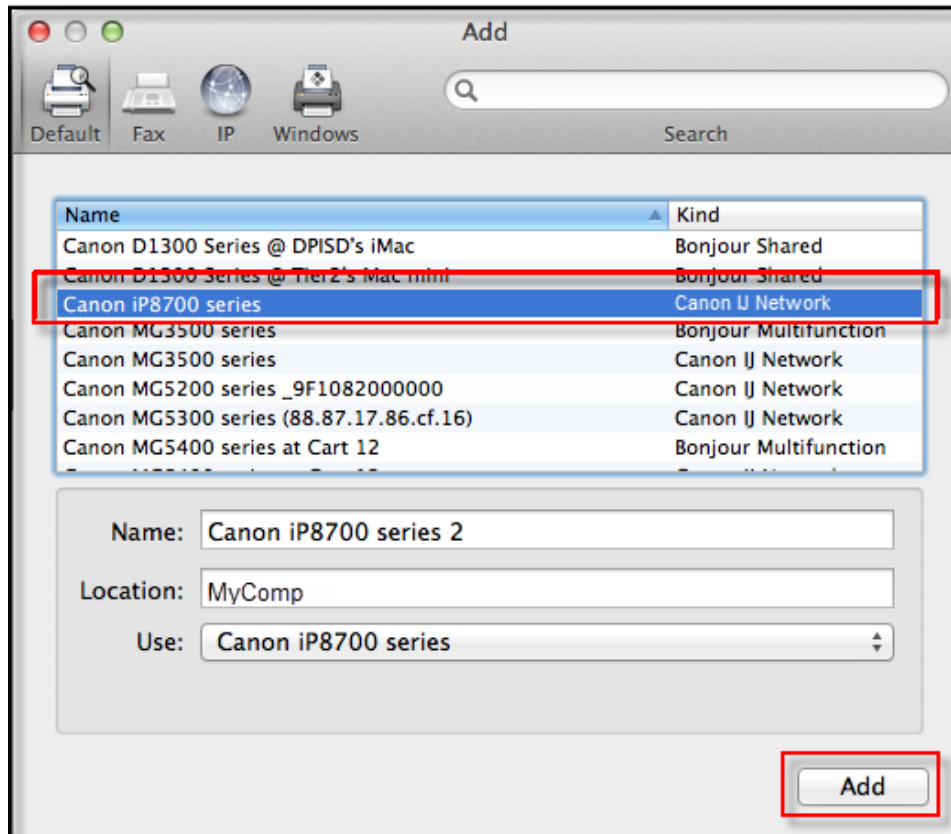

Installing the Drivers & Software

Continue following on-screen instructions.

When the **Add Printer** screen appears, click **Next**.

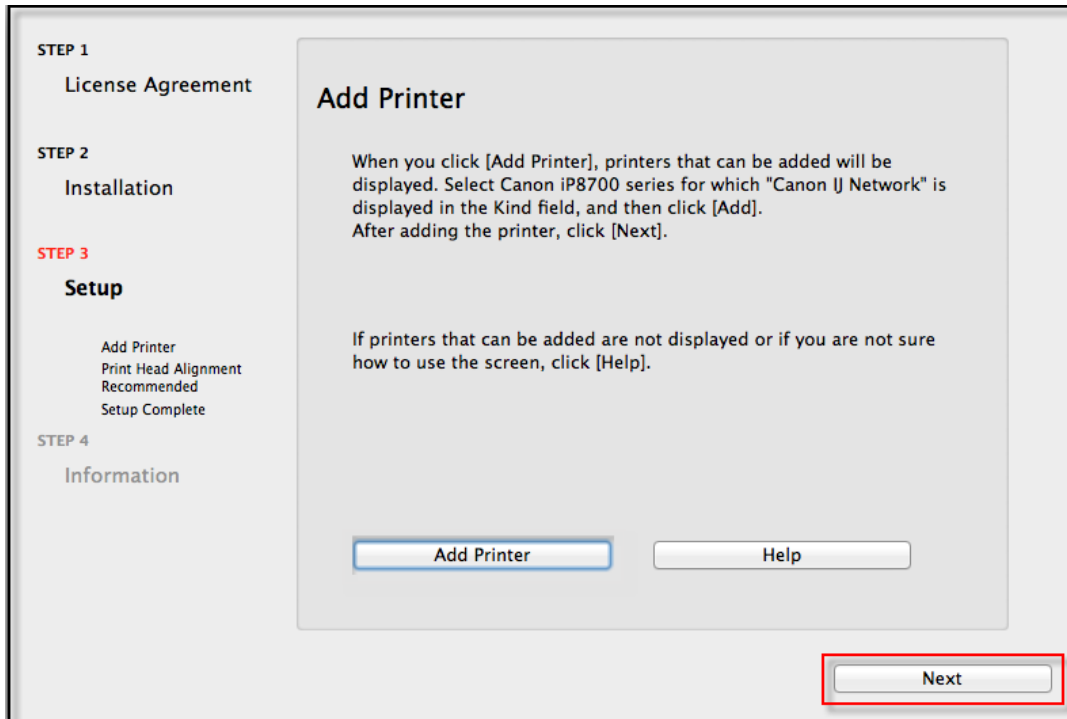

At this point, setup of the printer and network is complete. Continue to follow any remaining on-screen instructions to finish and exit the setup program