

Installing Your Multifunction to Your Network

PIXMA MG7720

Mac OS

Setup and Installation

Setup and Installation

The instructions contained in this document apply equally to first-time installations, adding the printer to additional computers in the Wireless Network and for re-installations after a Router or Network change.

To use the machine wirelessly with a computer, the printer must be connected to the Wireless LAN and software including the drivers needs to be copied (installed) to the computer's hard disk. Installation time varies depending on the computer environment or the number of application software to be installed.


IMPORTANT

- Log on as the administrator (or a member of the Administrators group).
- Quit all running applications before software installation.
- Do not switch users during the installation process.
- Internet connection may be required during the installation. Connection fees may apply. Consult the internet service provider.
- It may be necessary to restart your computer during the installation process. Follow the on-screen instructions.
- . The installation resumes once your computer has restarted.
- If the firewall function of your security software is turned on, a warning message may appear that Canon software is attempting to access the network. If such a warning message appears, set the security software to always allow access.


Prior to installing drivers and printer software, the printer must be connected to the Wireless LAN.

Start Cableless setup on the Printer


- 1. If the **HOME** button is lit, tap it.
- 2. Flick the touchscreen left or right, then tap **LAN settings**.

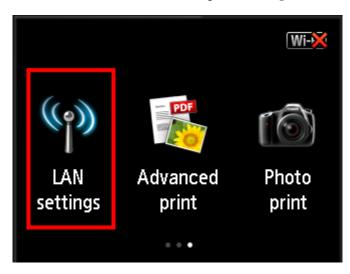

3. Tap Wireless LAN setup.

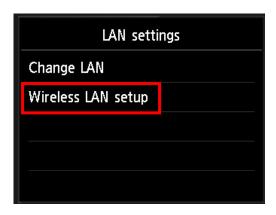

4. Tap Cableless setup.

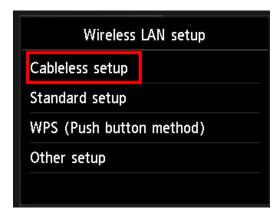

5. Tap **OK**.



6. Continue to the remainder of the setup beginning on the next page to set up the connection with the Wireless Network and computer, and to install drivers and Software applications


To use the machine wirelessly with a computer, the printer must be connected to the Wireless LAN and software including the drivers needs to be copied (installed) to the computer's hard disk. Installation time varies depending on the computer environment or the number of application software to be installed.

A number of warning messages may appear during installation. Check each message, and then click **Open** or **Always Allow**.

To continue with the setup, go to the <u>Mac OS Setup page</u>, read the information* then click the **Download** button on that page.

*Note the instruction that if the setup does not start automatically after download, to execute (double-click) the downloaded .dmg file.


Click **Next** on the helper tool screen.

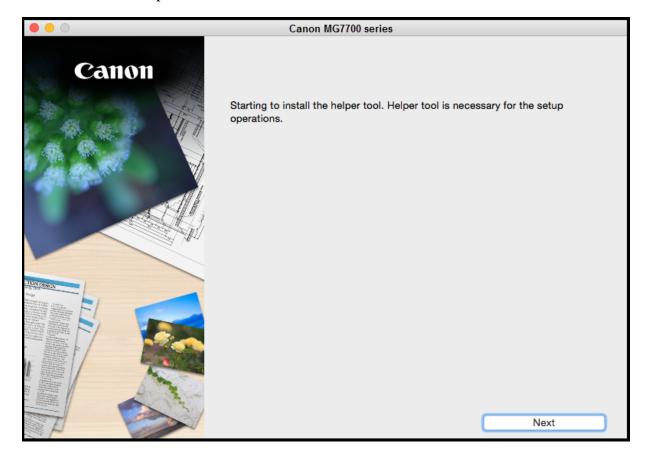


Enter your Password and click **Install Helper**.




Click **Start Setup** on the **Start Setup** screen.

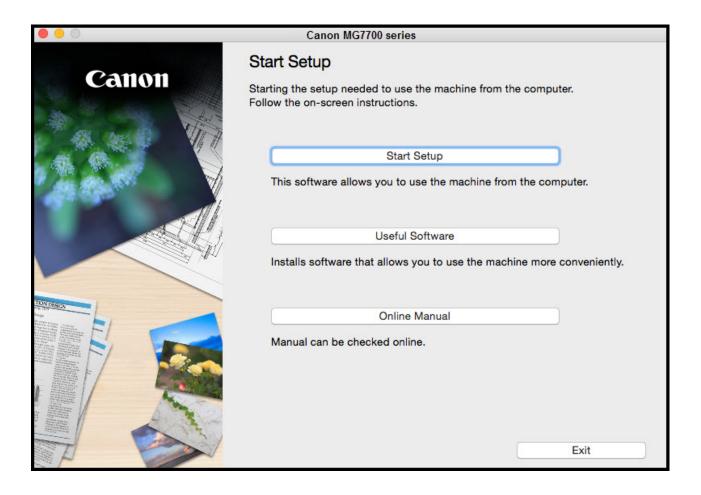


Continue following on-screen instructions until the **Select Connection Method** screen appears. Be sure to select **Wireless LAN Connection**, then click **Next**..

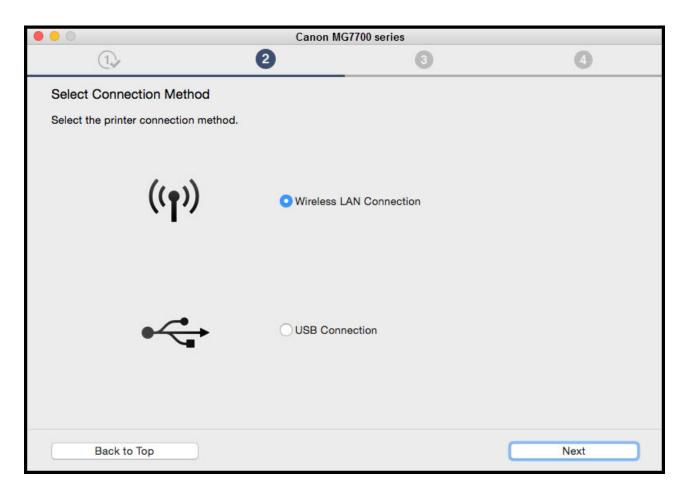


Select Connect via wireless router (recommended) then click Next.

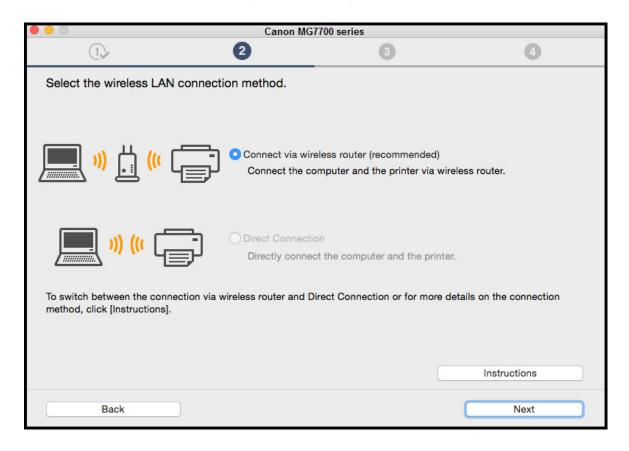


On the **Printers on Network List** verify your printer is selected by checking the listing in the **Serial Number** column. This will show the last 5 digits of the printer's serial number. The serial number is found on a sticker on the back of the printer near the bottom. Click **Next**.

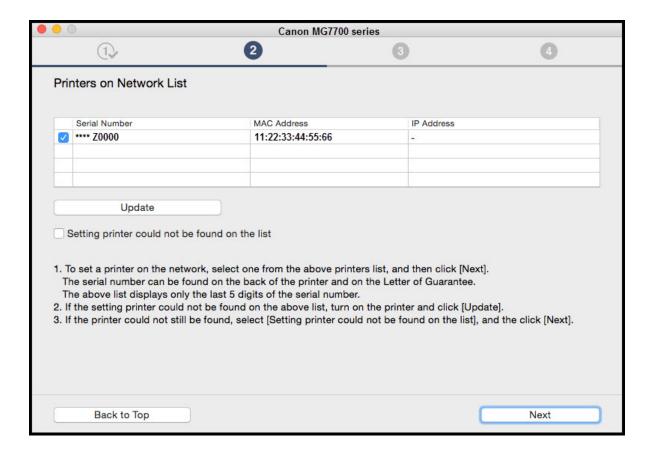

Click **Next** on the **Connection Completed** screen.

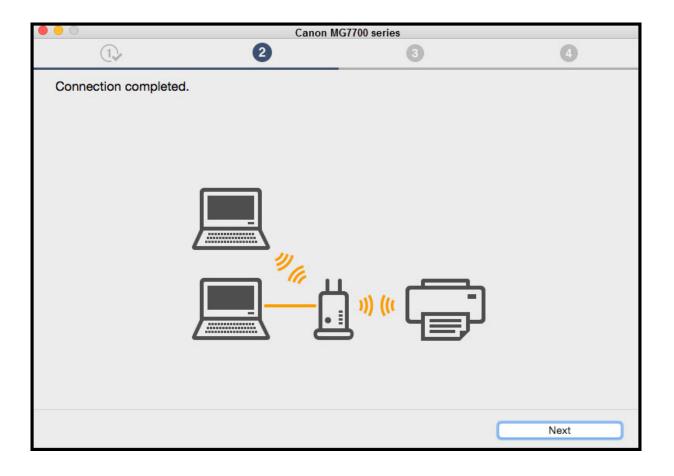


Select the MG7700 series and click Next on the Select the printer to be used screen.

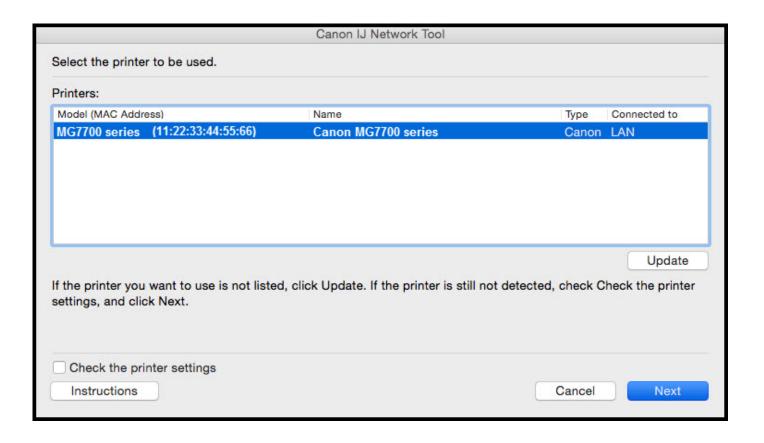


Click **Add Printer** on the **Add Printer** screen.



On the Add screen, select the MG7700 series with Canon IJ Network listed in the Kind column. Click Add.

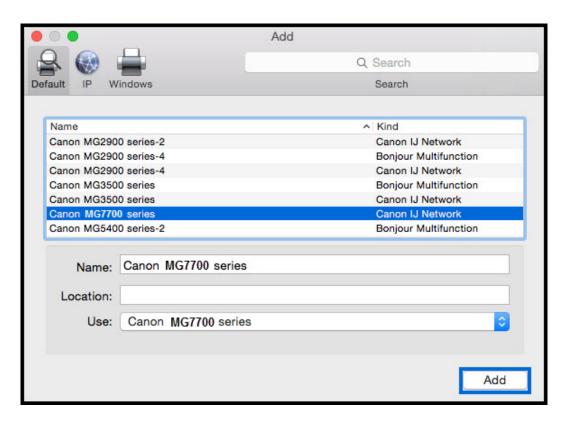


Click **Next** on the **Add Printer** screen.

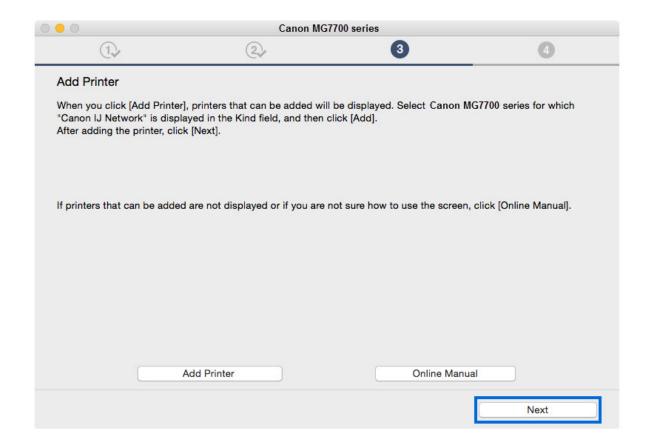


Installing the Drivers & Software

Continue to follow on-screen instructions. Click **Next** on the **Setup Complete** screen.

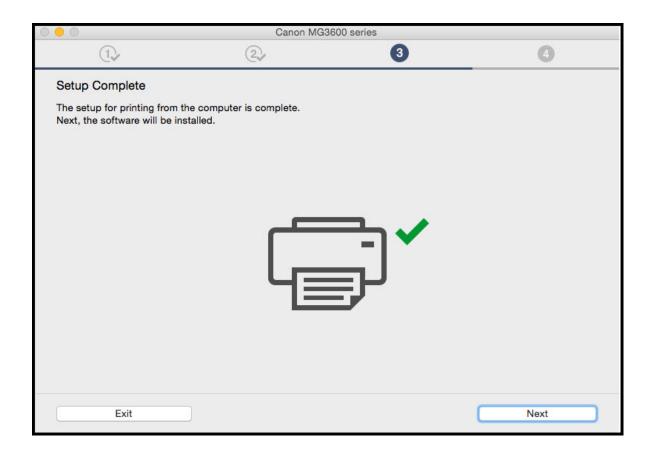

Installing the Drivers & Software

Continue to follow the on-screen instructions. On the **Software Installation List**, select any of the optional software to install and click **Next**.

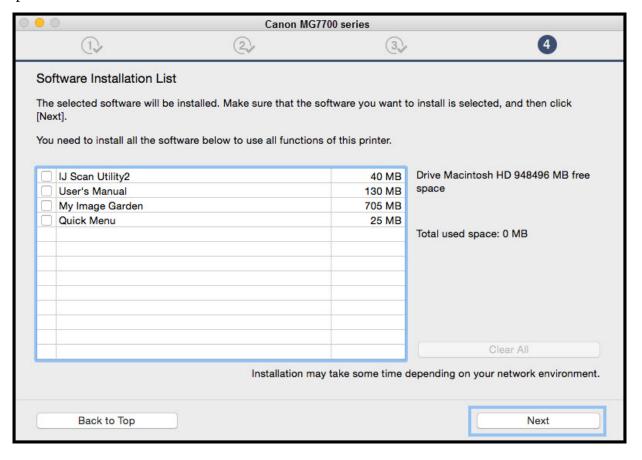

Installing the Drivers & Software

At this point the connection has been established and Drivers and Software have been installed. Please follow any remaining instructions to finish and exit the setup. Click **Exit** when the **Installation completed successfully** screen appears.

On the printer, tap **OK** on the touchscreen when the **Cabless setup is completed** message appears.

